
Joseph Wardrobe

Assembly Instructions - Please keep for future reference

331/7422

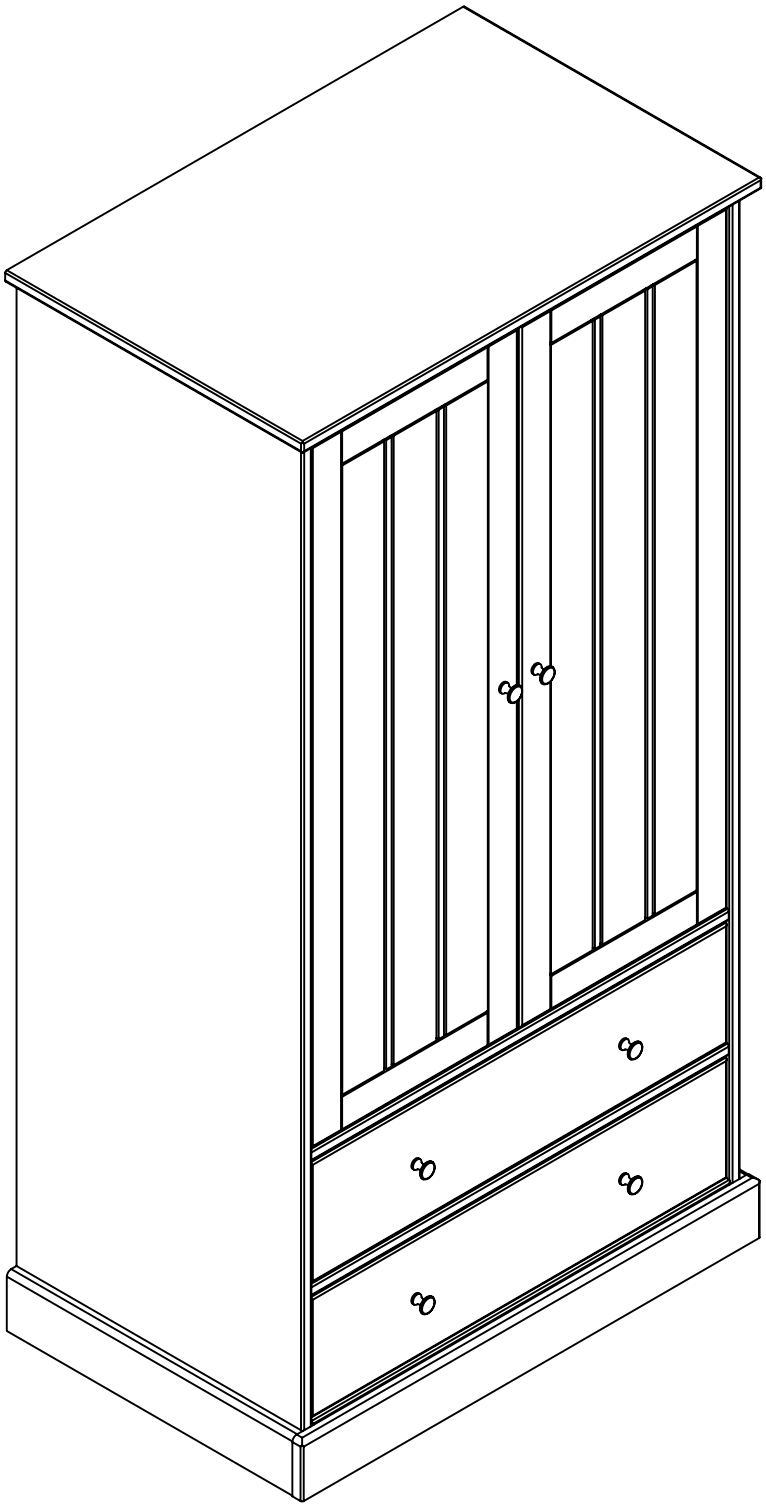

Dimensions

Width - 85cm
Depth - 55cm
Height -170cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts,call the
Customer Helpline: Argos = 0345 6400 800

Issue 1 - 27/11/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• During assembly keep children and animals away from the work area due to possible risk of injury and small parts could choke if swallowed.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torgue setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure that all bolts and fittings are tightend properly.

Warnings

• Do not use this item if any components are missing or damaged.


• Assembly to be carried out by a competent adult only.
• Make sure you have enough space to layout the parts before starting.

• Retailer:Argos Ltd.MK9 2NW


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400 800**


Please check you have all the panels listed below

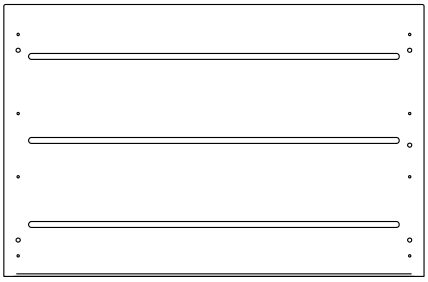

1 Top panel ×1 (85 × 55cm)

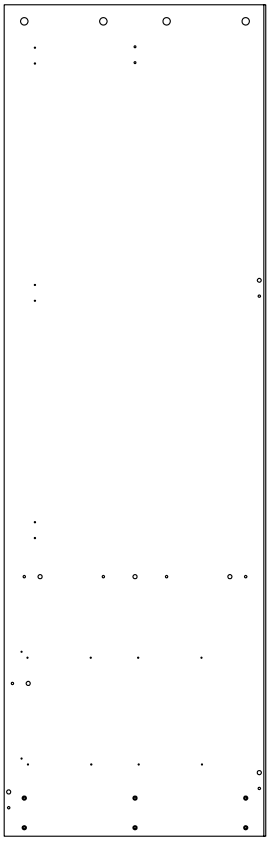


2 Side Panel, Left ×1(168.2 x 52.9cm)

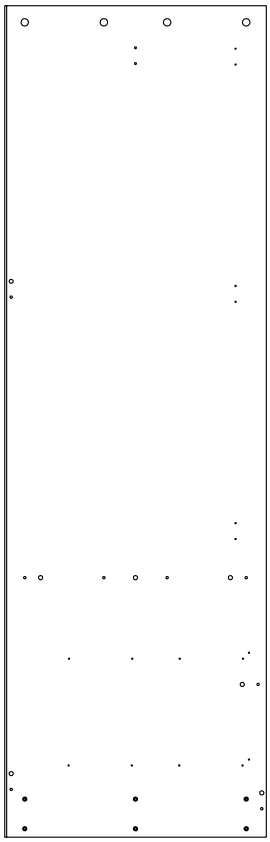


3 Side Panel, Right ×1 (168.2 x 52.9cm)




4 Cross bar, top ×1 (77.4 × 4.5cm)




5 Cross bar, bottom ×2 (77.4 × 5.7 cm)




6 Front right leg ×1 (77.4 × 5.7 cm)

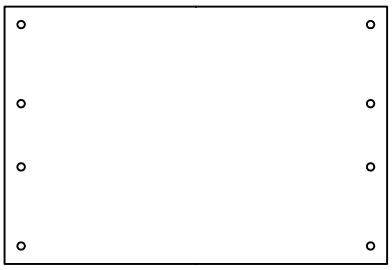

7 Shelf ×1 (77.4 × 52.1cm)



8 Front plinth ×1 (84.8 × 9.5cm)



9 Side plinth ×2 (52.9 × 9.5cm)




Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400 800**

Please check you have all the panels listed below



10 Back panel ×2 (160.9 × 39.75cm)




11 Drawer front x2 (77 x 19.2cm)




12 Drawer side left ×2 (45 × 14cm)



13 Drawer side right ×2 (45 × 14cm)




14 Drawer back ×2 (72.5 × 13.7cm)




15 Drawer bottom rail ×2 (43.8 × 5.7cm)



16 Drawer bottom ×2 (73.6 × 44.9cm)

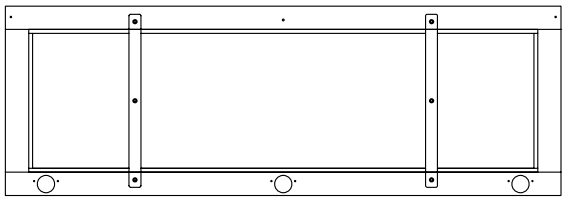

17 Door, panel ×2 (112.4 × 38.3cm)

















18 Cross bar, middle ×1 (77.4 × 5.7cm)




Components - Fittings


Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

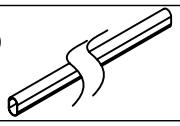A  Large locking pin x 26	B  Large locking nut x 26	C  D8*30 wooden dowel x 20
D  Ø3.5*30 screw x 20	E  hanger rail support x 2	F  L=765mm hanging rail x 1
G  D35 cross plate x 6	H  D35 door hinge x 6	I  Ø3.5*15 screw x 40
J  M3.0*15 screw x 34	K  Runner outside left x 2	L  Runner outside right x 2
M  Runner Inside left x 2	N  Runner Inside right x 2	O  handle x 6
P  screw for handle x 6	Q  Magnet part 1 x 2	R  Ø3.0*12 screw x 4
S  Ø3.0*12 screw for Magnet x 4	T  Magnet part 2 x 4	U  Wall strap x 1
V  L=1608mm Plastic bar x 1	W  D4*9 washer x 1	X  D12 locking pin x 10
Y  D12 locking nut x 10	Z  Ø3.5*25 screw x 12	AA  Ø3.5*15 screw x 32


Tools required


Phillips screwdriver (medium & large)


Flatblade screwdriver (medium)


Small hammer


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Insert Large Locking pins (A) into Top panel [1].

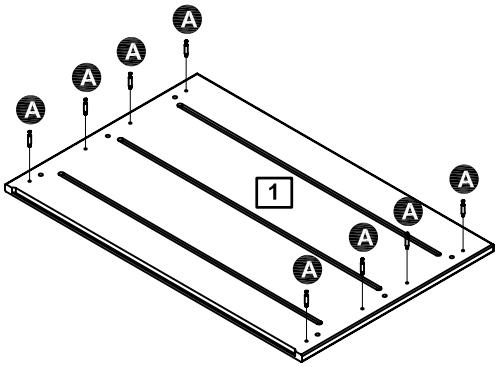



Step 2


a. Insert Wooden dowels (C) into Side panel [3]


b. Insert Large locking pins (A) into Side panel [3]

c. Fix Hanging rail support (E) to Side panel [3] by using Screw (I).

d.Fix Cross plate (G) to Side panel [3] by using Screw (I).

e. Fix Runner ouside, right (L) to Side panel [3] by using Screw (AA).

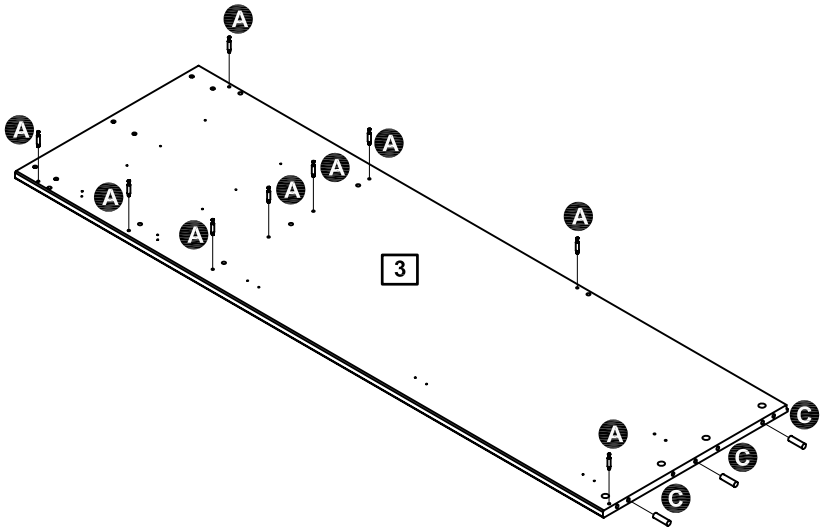

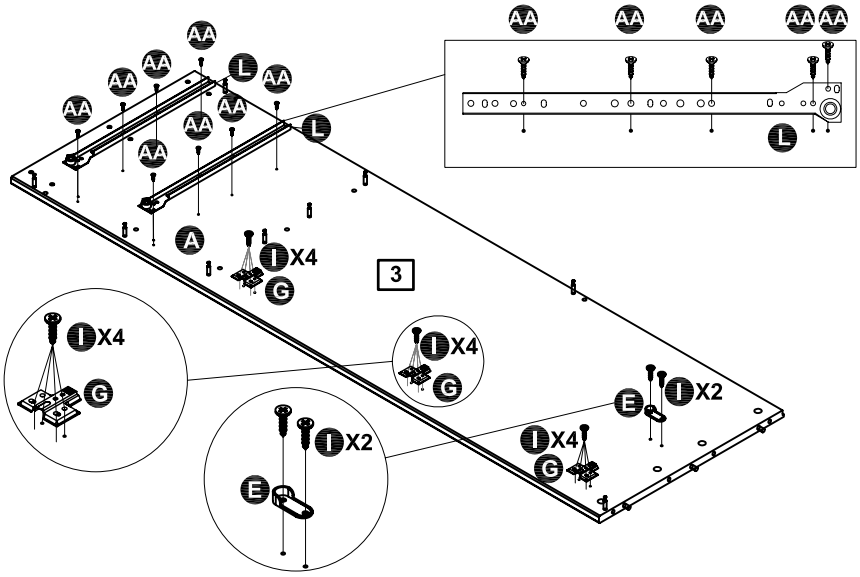


Assembly Instructions

Step 3

a. Insert Wooden dowels C into Side panel 2


b. Insert Large locking pins A into Side panel 2

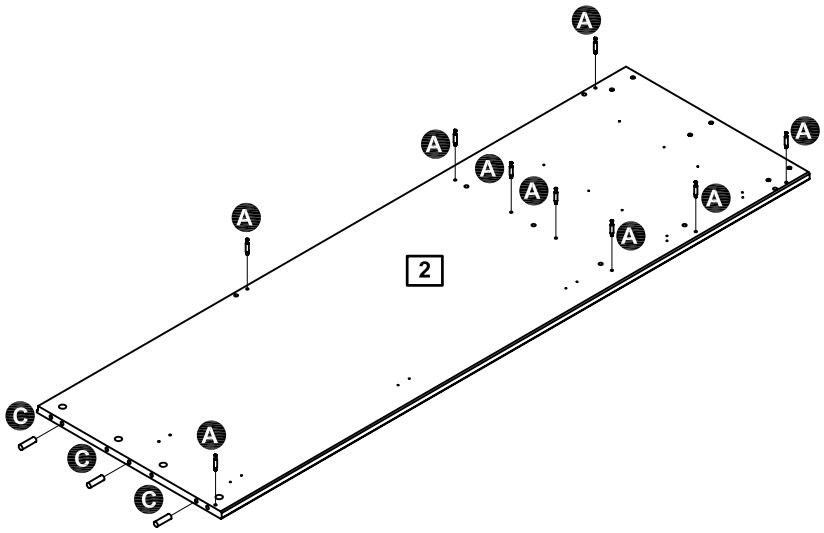

c. Fix Hanging rail support E to Side panel 2 by using Screw I .

d.Fix Cross plate G to Side panel 2 by using Screw I .

e. Fix Runner ouside, left K to Side panel 2 by using Screw AA.

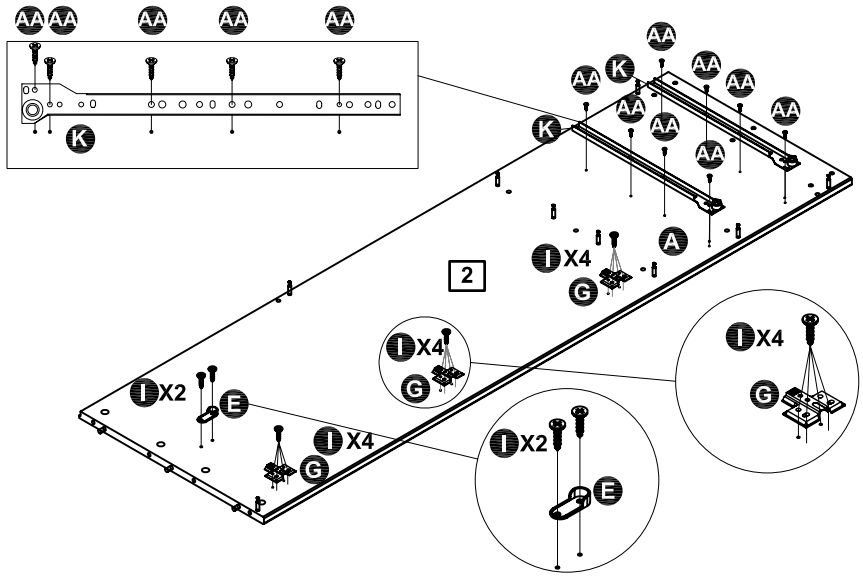


Assembly Instructions

Step 4

a. Insert Wooden dowels into Corss bar 18 and Cross bar 5 and Cross bar 6 and Shelf 7.


b. Fix Magnet part 1 Q to Cross bar 4 by Screw R .

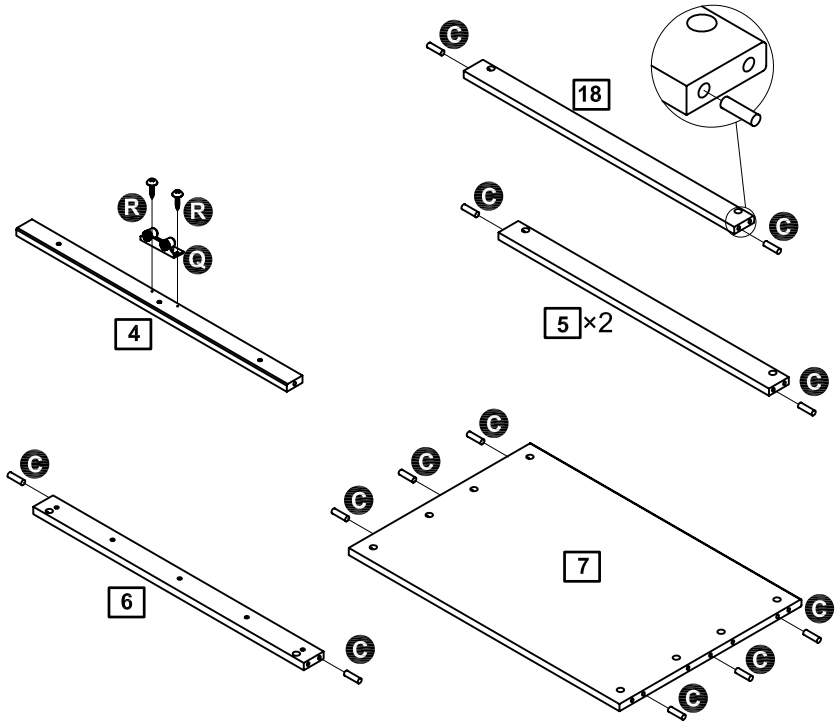


Step 5

a. Fix Door hinge H to Door panel 17 by using Screw I.

b. Fix Magnet part 2 T to Door panel 17 by using Screw S.

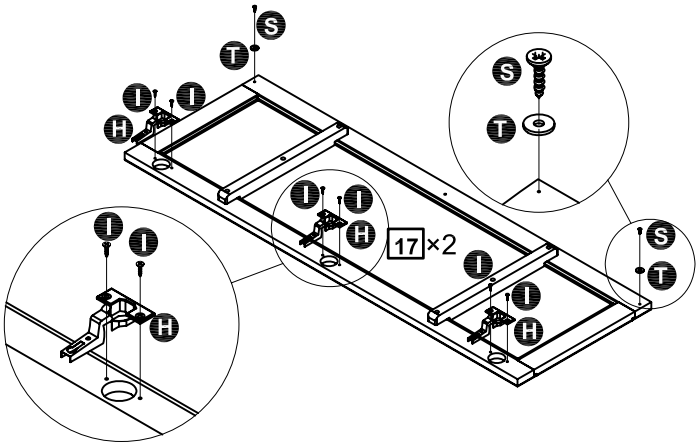


c. Insert Small locking pin X to Drawer front 11.

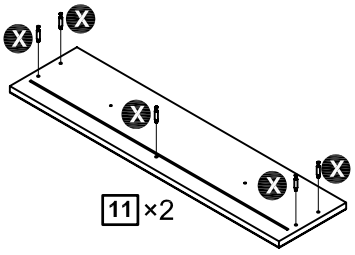

d. Fix Runner inside left M to Drawer side left 12 by Screw AA.

e. d. Fix Runner inside right N to Drawer side right 13 by Screw AA.

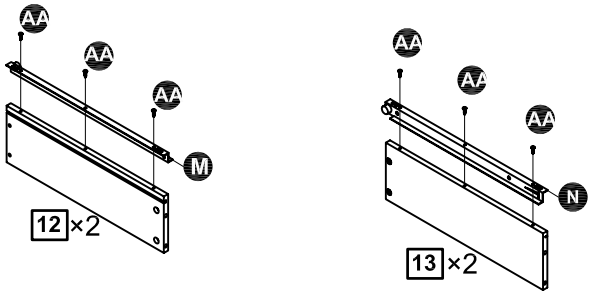



Assembly Instructions

Step 6

a. Attach Drawer side 12 13 and Drawer bottom rail 15 to the Drawer front 11 , insert Small locking nuts Y into sides. and use a screw driver to turn locking nuts Y clockwise to lock.


b. Slide Drawer bottom 16 to the gooves.



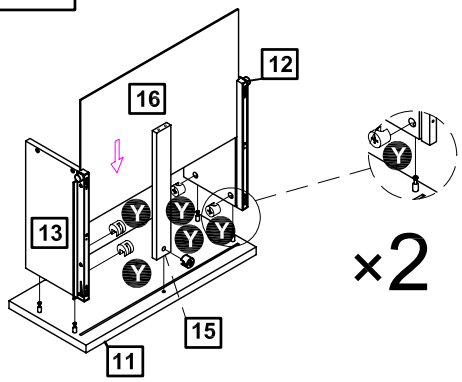


Step 7

a. Attach Drawer back 14 to the drawer unit and fix by Screw Z .

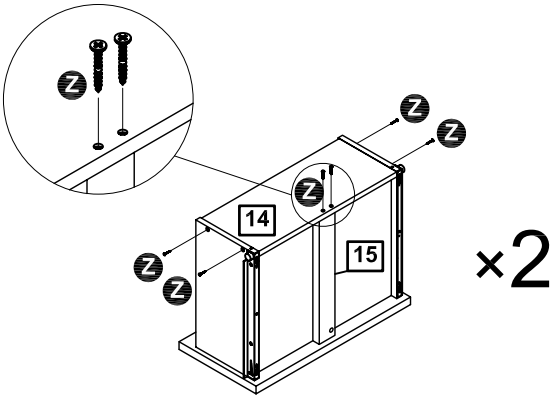

b. Fix Handles O to the drawer by screw P.

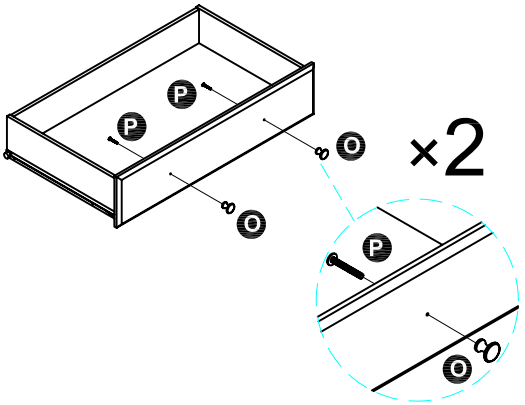



c. Repeat steps in Setp 6 & 7for the other drawer.

Assembly Instructions

Step 8


a.Attach Cross bar [4] ,Cross bar [5] x2, Shelf [7] Cross bar [6] ,Cross bar [18] to Side panel [2] , insert Large locking nuts (B) and use Screw driver turn clock wise to lock.



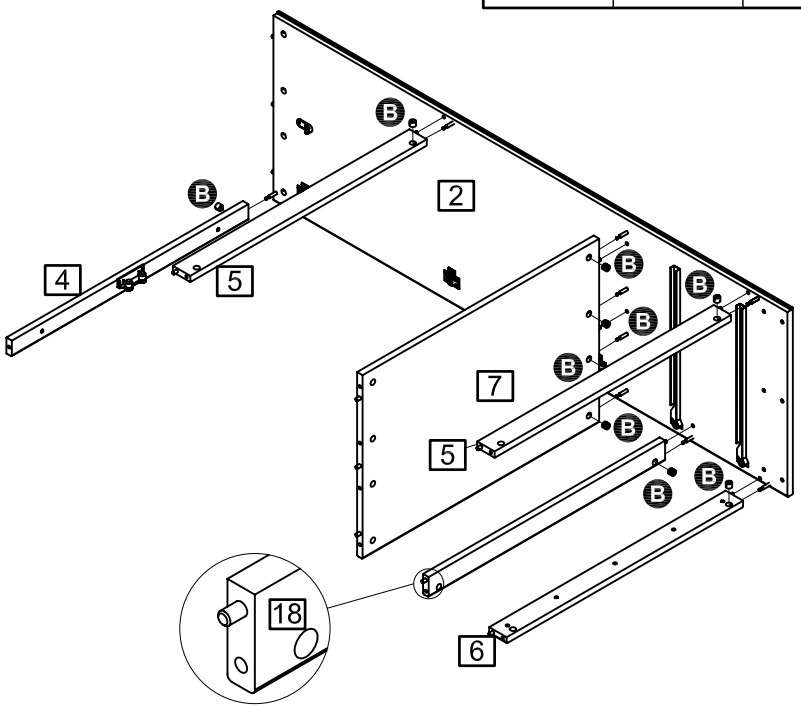


Step 9

Attach Side panel [3] to the unit, insert Large locking nuts (B) and use a screw driver turn clock wise to lock.

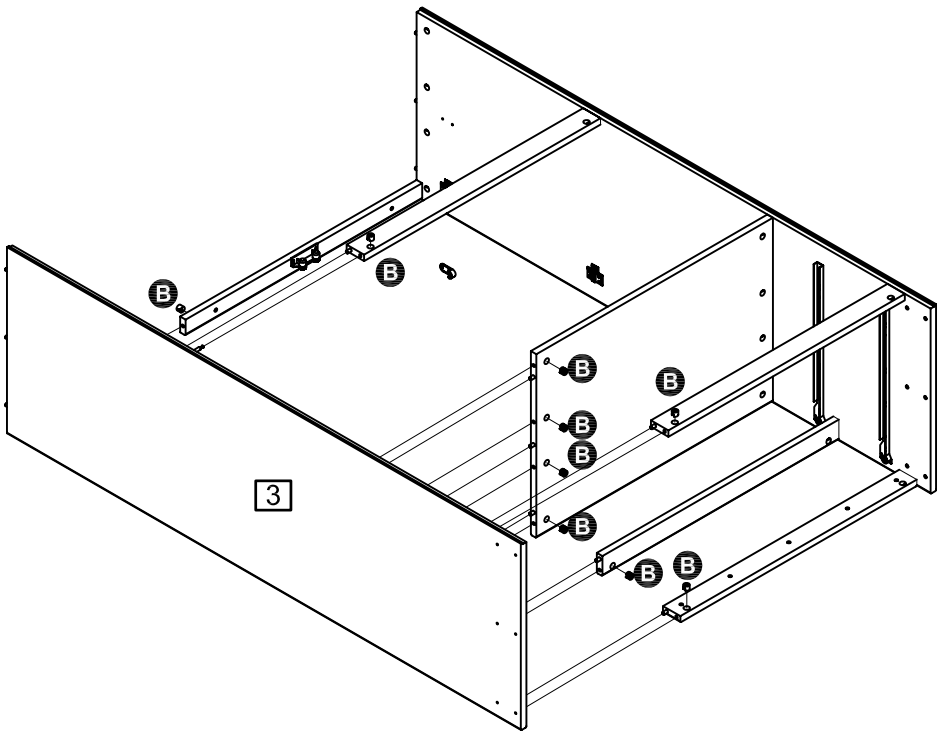


Step 10

Attach Front plintch [8] and Side plinth [9] to the unit, fix by Screw (D).

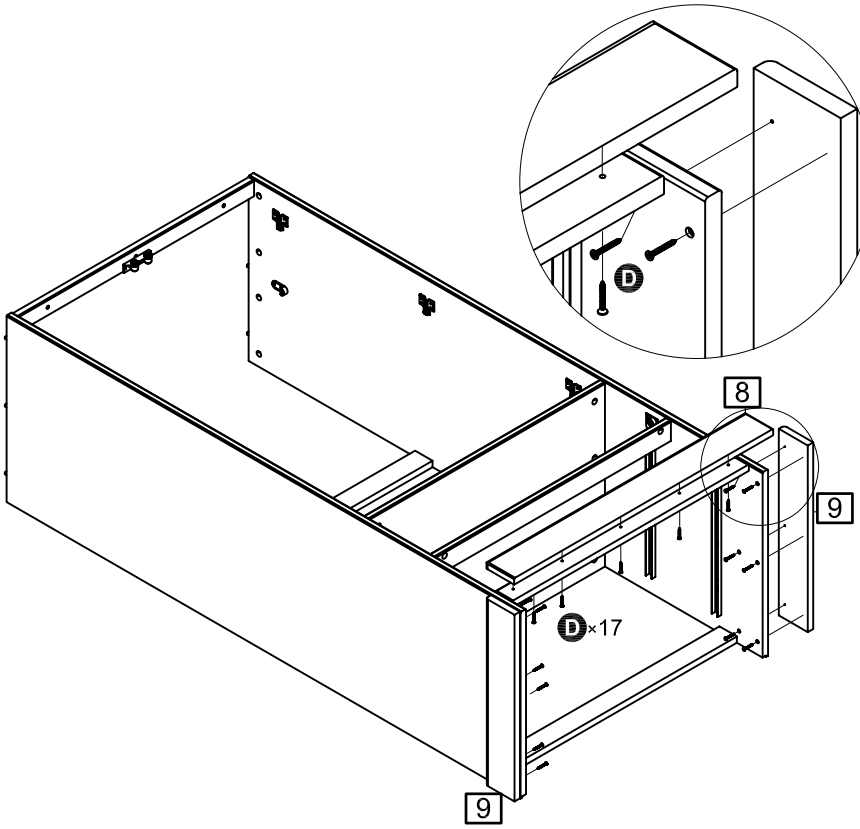

Step 11


Attach Top panel [1] to the unit, insert Large locking nut (B) and use screw driver turn clock wise to lock. Use Screw (D) to fix Top panel as show on picture.

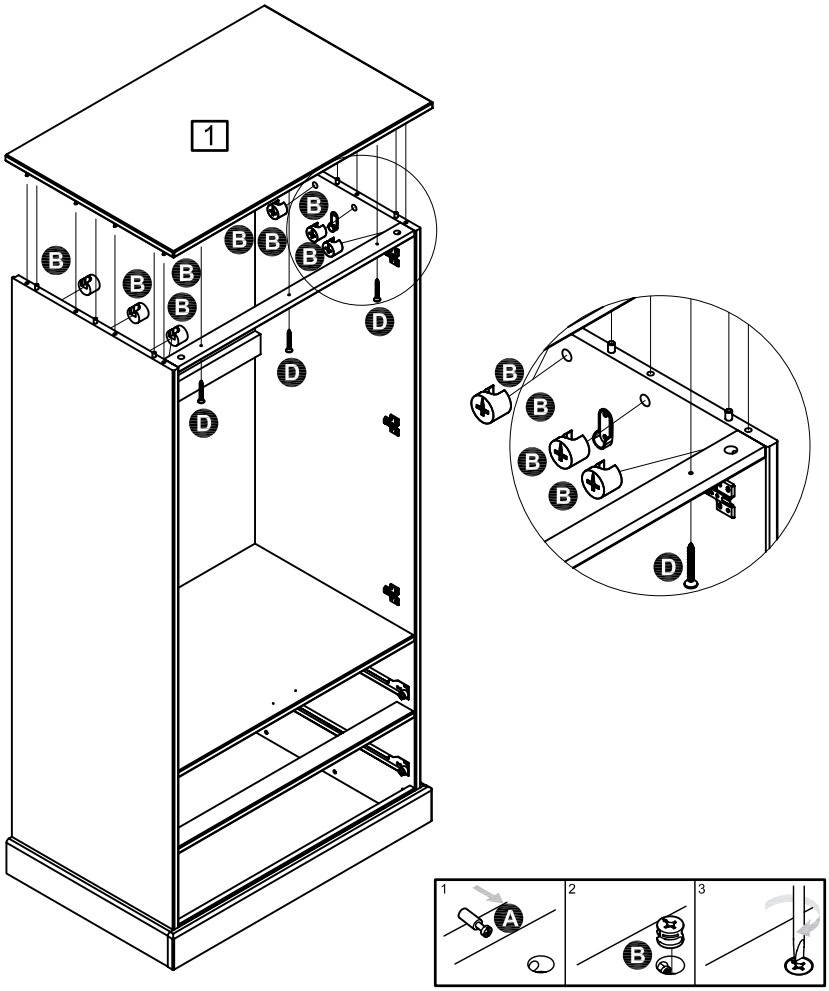

Assembly Instructions

Step 12

a. Joint 2 Back panel 10 to Plastic bar V and then fix them to the unit by Screw J .
b. Fix wall strap U by 1 washer W and 1 screw J

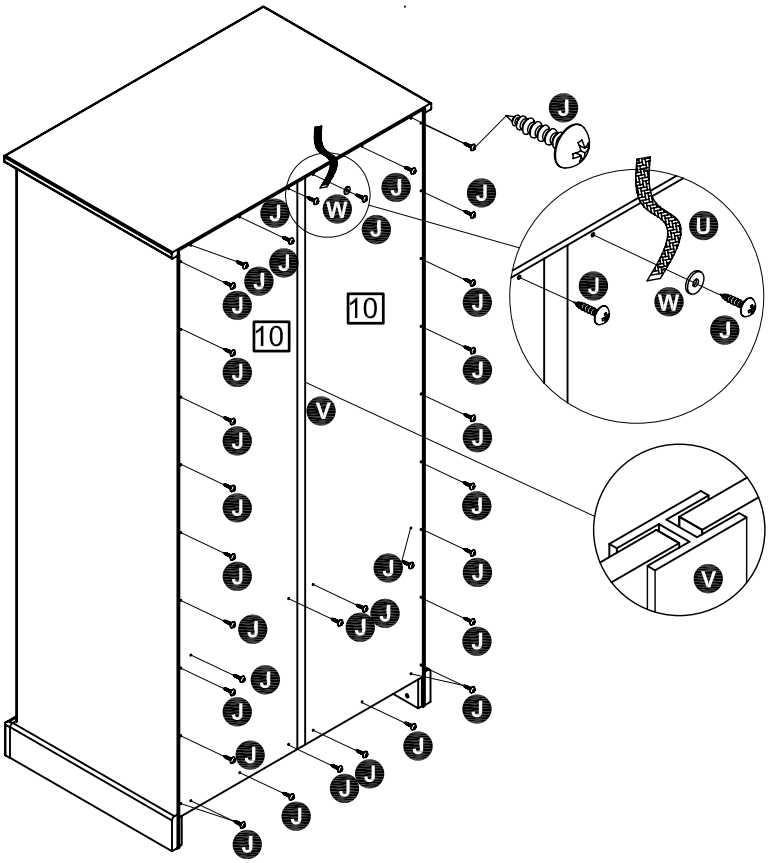


Step 13

a. Install hanging rail F to the unit.

b. Fix Magnet part 1 Q to the Shelf by Screw R as show on picture.


c.Slide drawers to the unit.

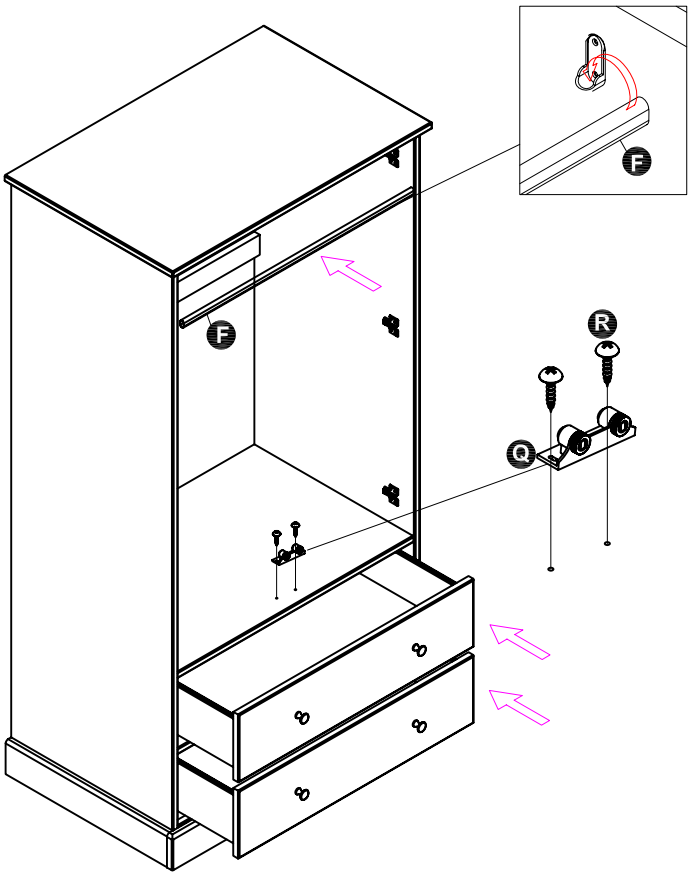

Assembly Instructions

Step 14

a. With help, slot Door hinges H onto Cross Plate G
b. Tighten screw shown to lock hinges in position
c. repeat a.b for opposite door.
d. fix 2 Handles O onto the Doors by 2 Screw P

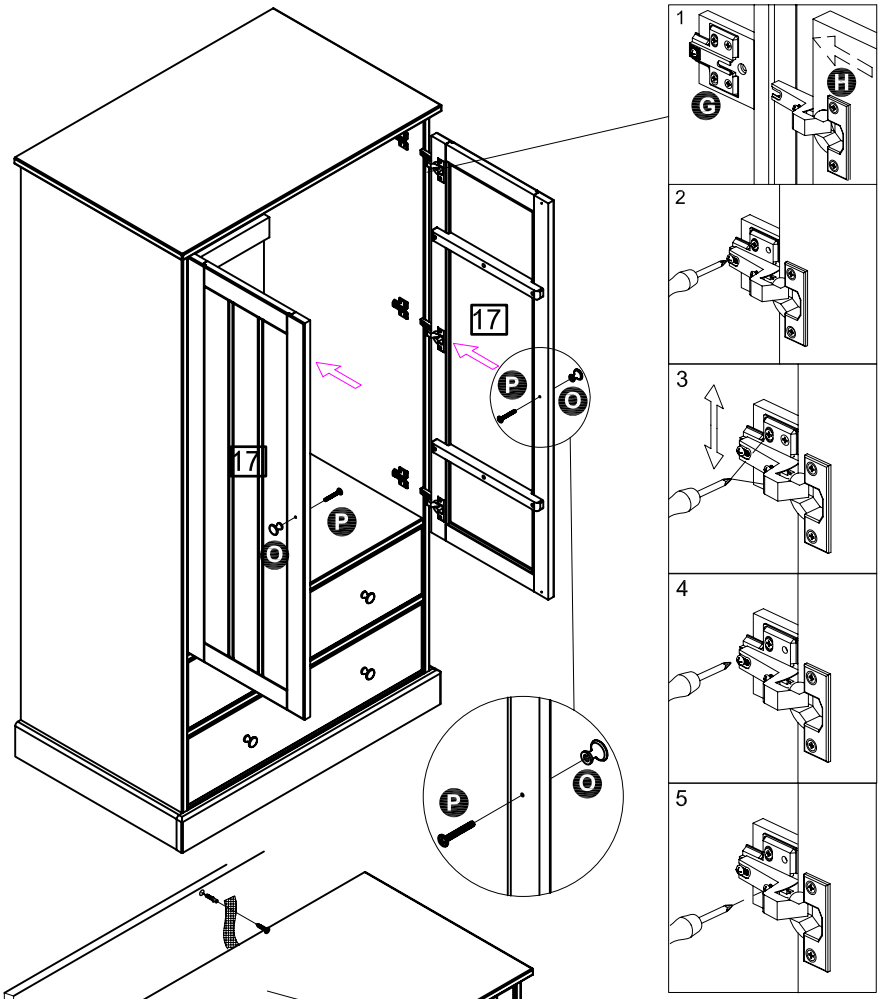

Step 15

Fixing to wall

It is recommended that the wardrobe is fixed to a wall.

With help, move the Bookcase into position.

Warning: The wardrobe is heavy. Lift with care.


Mark fixing hole on wall and remove Wardrobe.

Drill hole and insert wall plug.

Warning: Before drilling, check wall for hidden pipes and cables.

Reposition Bookcase and fix wall strap using screw.

Assembly is complete.

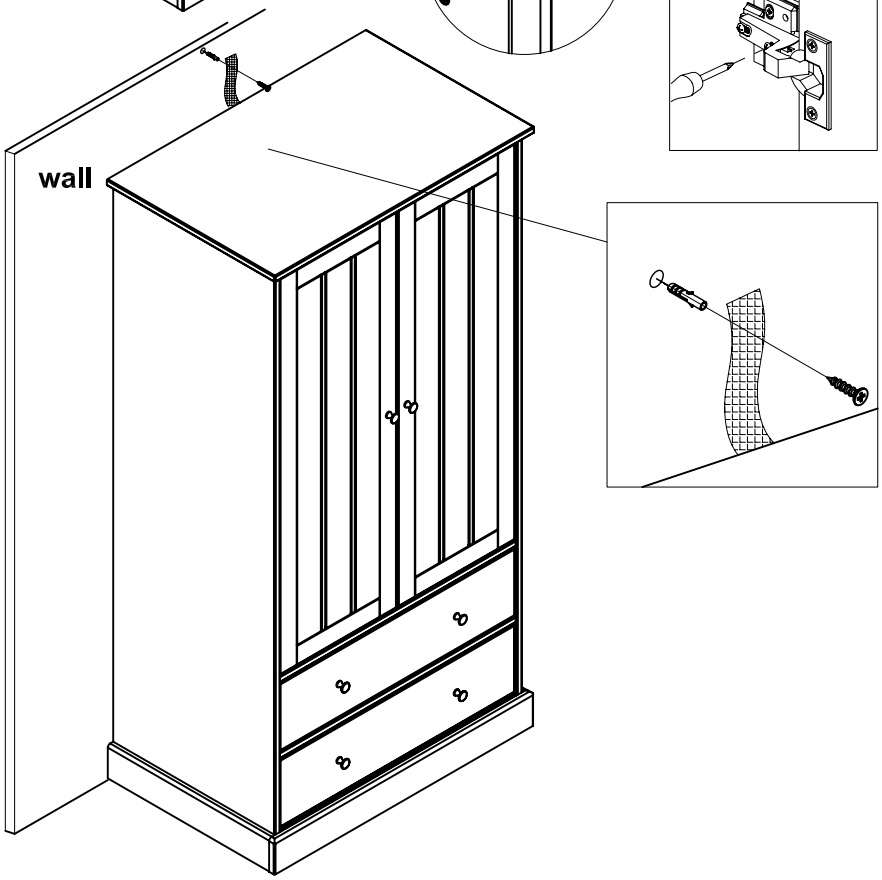

If you need help or have damaged or missing parts,call the **Customer Helpline: 03456 400800 Retailer:Argos**
Address: 489-499 Avebury Boulevard Saxon Gate West, Central Milton Keynes Bucks, MK9,2NW

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: **When drilling into walls always check that there are no hidden wires or pipes etc.**

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

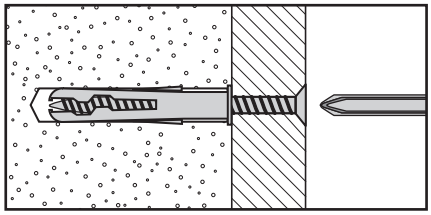


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

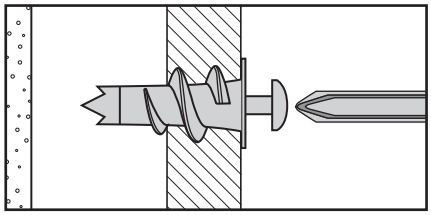


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

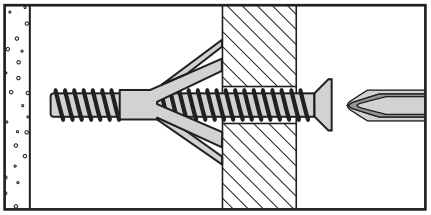


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

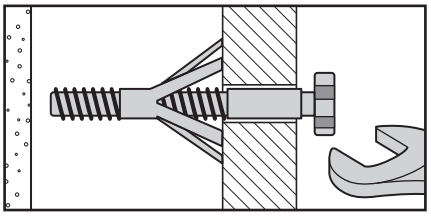


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

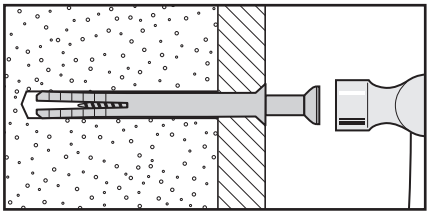

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

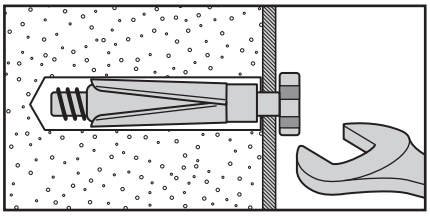

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.