
Bamboo Clothes Rail

Assembly Instructions - Please keep for future reference | 339/2155

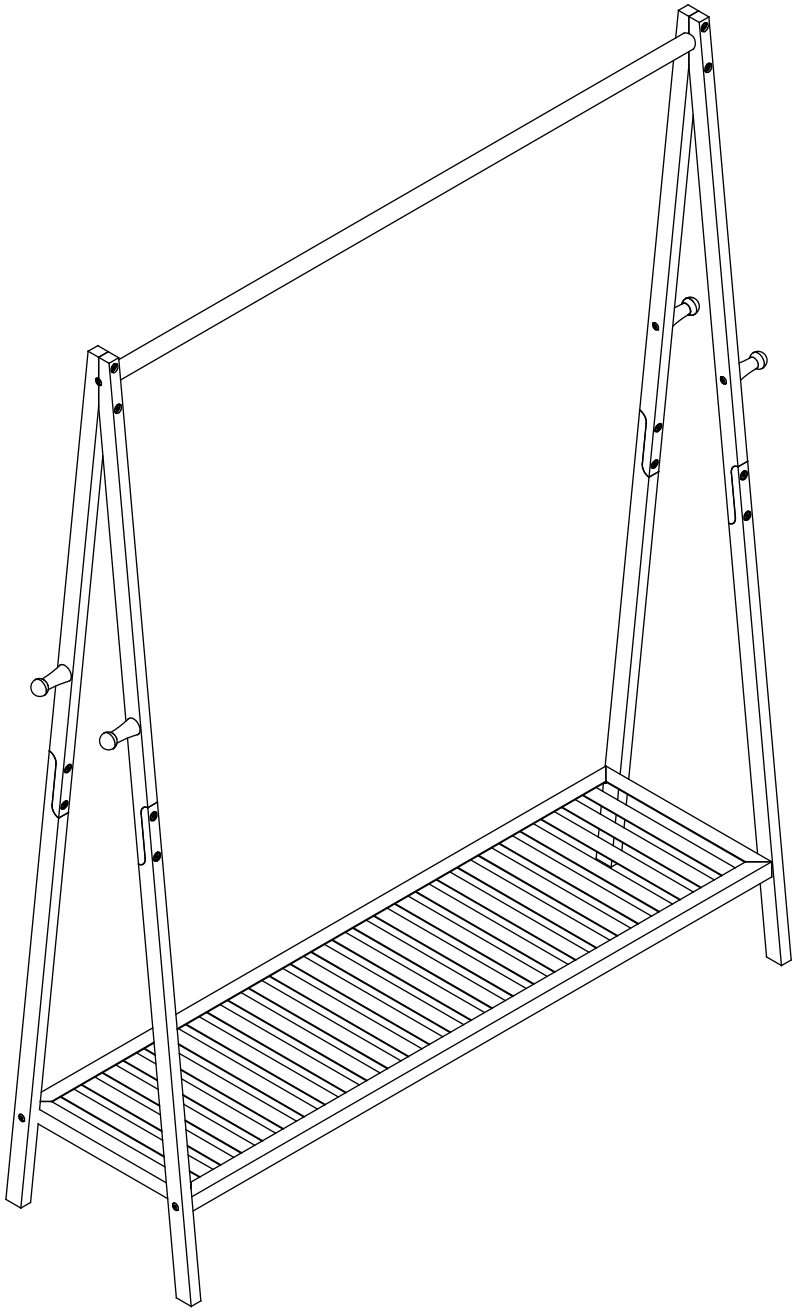

Dimensions

Width - 115cm
Depth - 35.5cm
Height - 148.5cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**

Issue 1 - 11/10/2014

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Pls do not stand or put weight on the product during assembly, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers **for inserting screws,** as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800**


Please check you have all the parts listed below

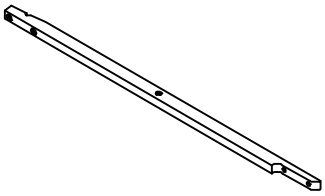


1 Top Leg x 4

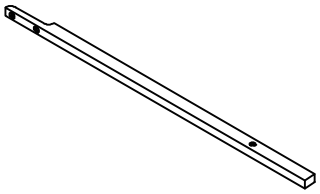


2 Bottom Leg x 4

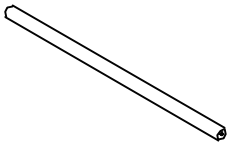

3 Rail x 1

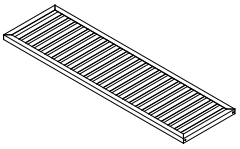

4 Shelf x 1






5 Peg x 4


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

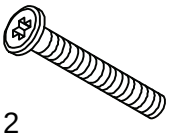
A  Wrench x 1	**B**  Bolt x 8 (M6 x 20mm)	**C**  Bolt x 2 (M6 x 30mm)
D  Bolt x 2 (M6 x 50mm)	**E**  Rivet nut x 12	**F**  Screw x 4 (M4.8 x 40mm)
G  Screw x 2 (M4.5 x 50mm)	**H**  Allen key x 1	**I**  Bolt x 4 (M6 x 30mm)
J  Nut x 4	**K**  Spring washer x 4	

Tools required



Phillips screwdriver (medium)

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


Step 1

Building the legs

Insert rivet nuts Ⓔ and bolts Ⓑ into leg 1 and 2.

Use Allen key Ⓗ and Phillips screwdriver to lock bolts and rivet nuts together.

Repeat with the remaining three legs.

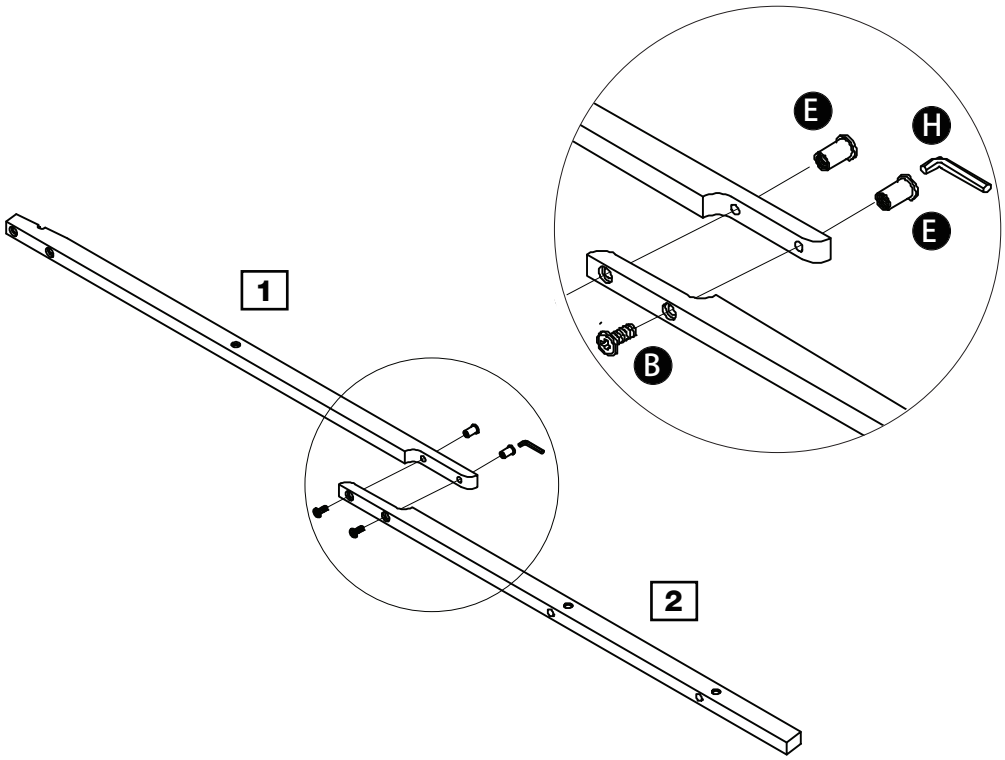


Step 2

Assembling the leg frames

Insert bolts Ⓒ and Ⓓ into leg 1 as shown.Insert rivet nuts into the other leg. Use Allen key Ⓗ and a Phillips screwdriver to lock the bolts and rivet nuts together.

Repeat with the other leg frame.

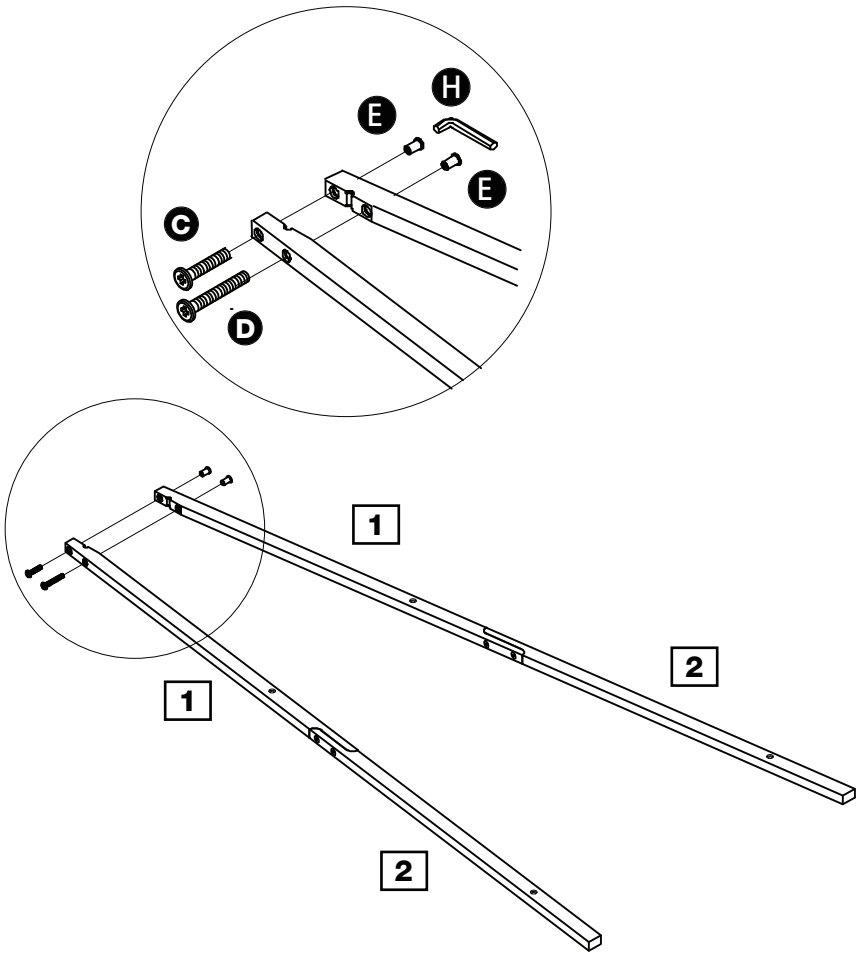

Assembly Instructions

Step 3


Assemble the rail and shelf to side stretchers

Attach rail 3 to one leg frame with bolts G.
Attach shelf to the assembly with bolts F,spring washers K and nuts J.

Fasten the bolts G and F spring washers K,nuts J using Allen key H and wrench A.

Attach the other leg frame to the assembly as shown.


Carefully turn clothes rail up.

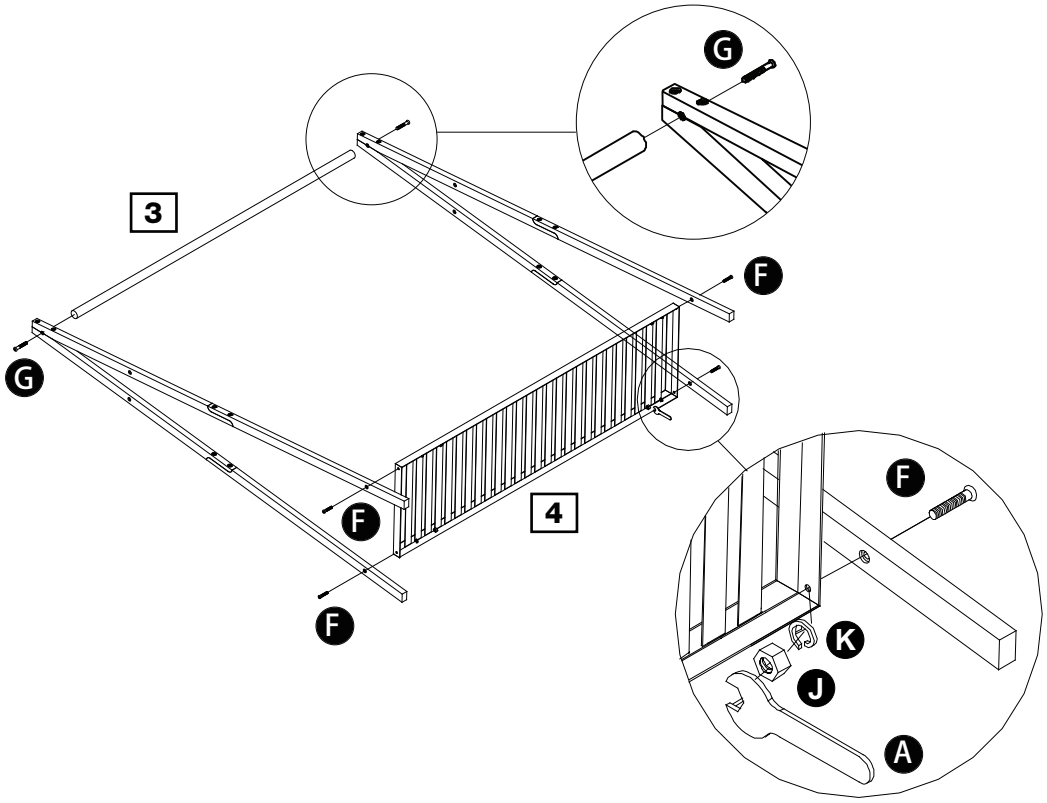

Step 4


Assemble pegs 5 to the legs with bolts F and fasten using Allen key H.

Assembly is complete.

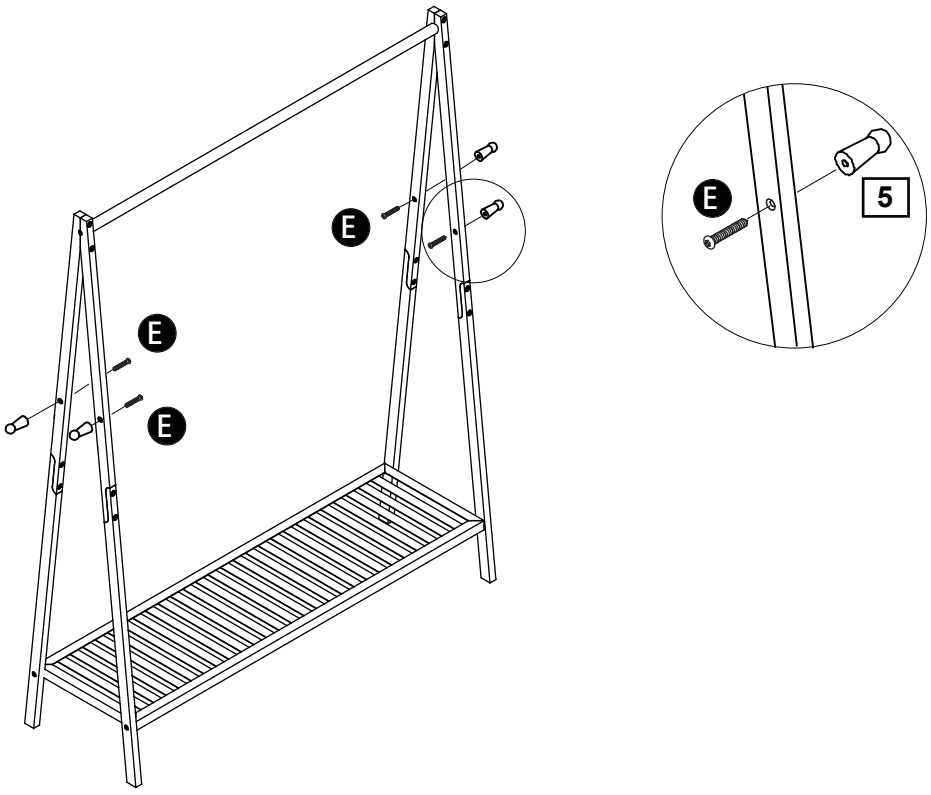

Assembly Instructions

Note :
Due to the inherent nature of this design, please do not exceed the maximum load shown here.

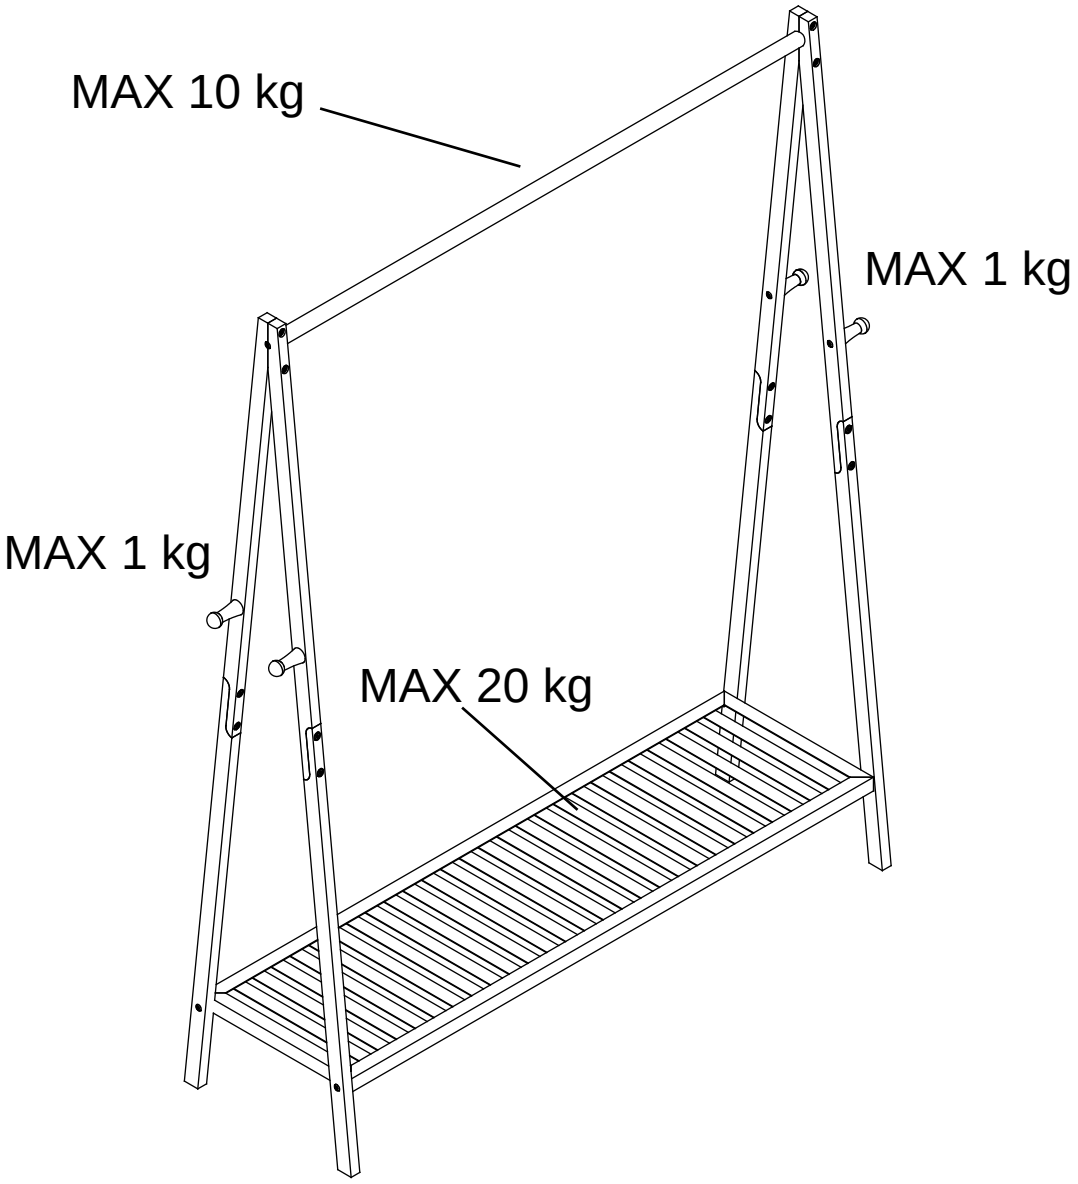

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**
Argos Ltd MK9 2NW