
Wimbourne - 3 Door Centre Mirror Gents

Assembly Instructions - Please keep for future reference

346/0575

346/5817

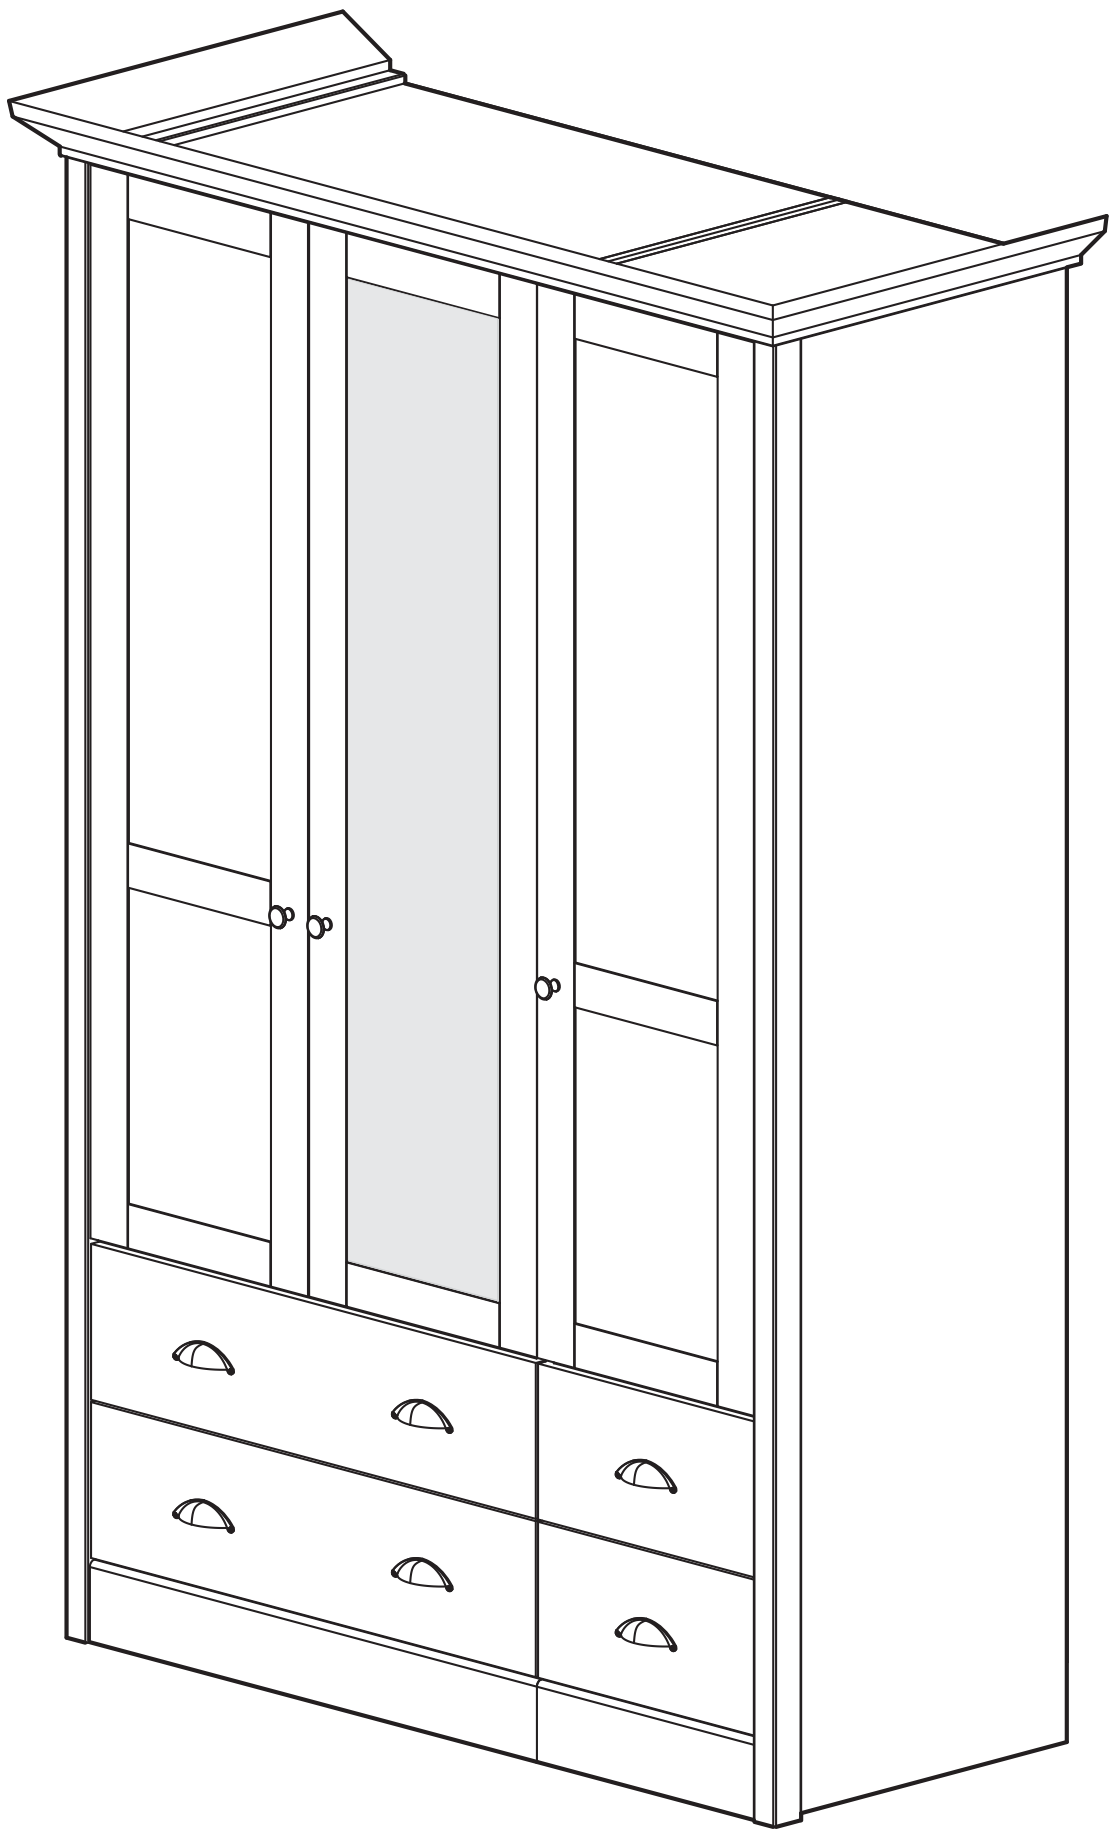

Dimensions

Width - 132.6cm

Depth - 61cm

Height - 198cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 6403030

BK04100 - Issue 1 - 05/12/2014

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.


• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

• Due to difference in floor levels, doors may not be aligned. Adjustment may be necessary.

• To prevent bowing of shelves do not over load, and always distribute weight evenly.

• If a residual aroma is experienced with your new furniture after the packaging is removed simply ensure the room is well ventilated and this will assist a speedy removal

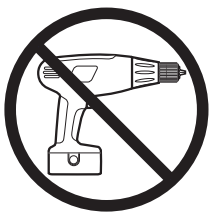

• We do not recommend the use of power drill/ drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

• It is essential that this unit be fixed to a wall with the fittings provided.

• Please retain the product label on the back of the unit, as this information will help support any queries.

Care and maintenance - Non compliance with this information may affect your guarantee

• Dust with a clean cloth or, if required a slightly damp cool cloth. Do not use household cleaners, abrasives or polishes as permanent damage may occur.

• Your furniture is finished to the required colour. Avoid exposure to strong sunlight as this can change the colour. Change in appearence may also occur if items are permanently left on a surface.

• Do not drag the furniture or lift it by its top.

• Avoid sharp objects, contact with water and direct heat on all surfaces

• From time to time check that there are no loose screws on this unit.

• Doors should be secured or removed before moving.

• You should get assistance when moving or lifting your furniture. Furniture consisting of more than one unit should be disassembled before attempting to move it.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6403030**


Please check you have all the panels listed below

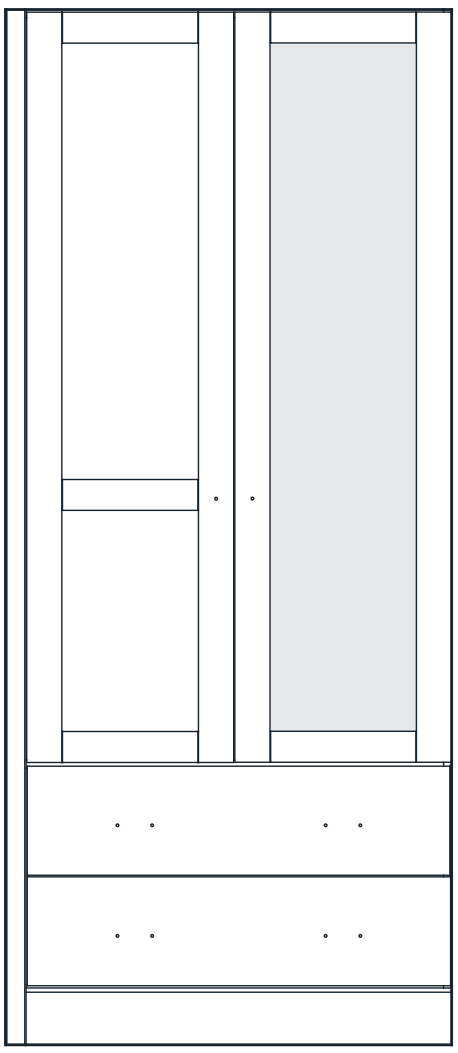

1 Double wardrobe (191 x 82.3 x 57.6 cm)

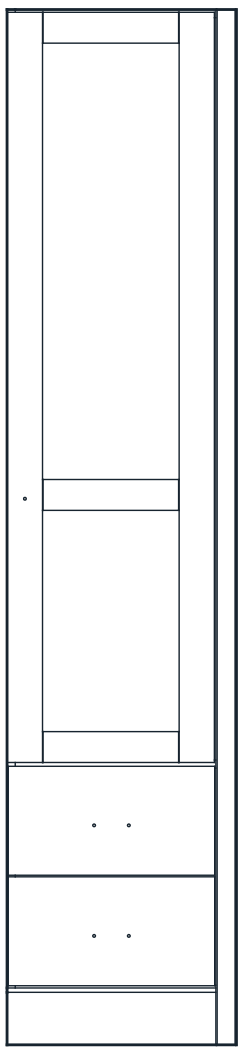

2 Single wardrobe (191 x 42.3 x 57.6 cm)






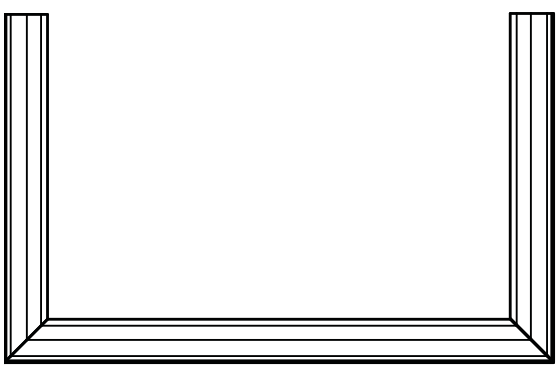


3 Cornice section (132.6 x 11cm)




Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

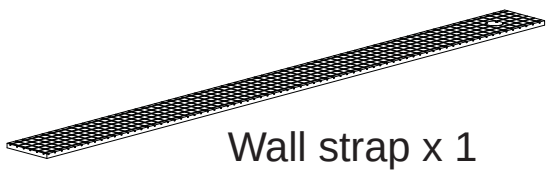A  15mm Screw x 1	**B** 15mm Washer x 2 	**C**  Wall strap x 1
D  18mm Conecting bolt x 2	**E**  Threaded sleeve x 2	**F**  20mm Cornice screw x 7


The following components are pre-fitted and are illustrated for reference only.

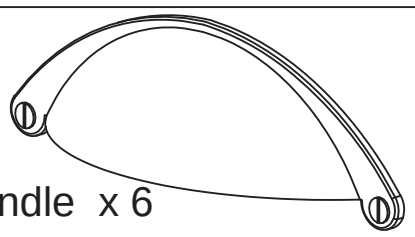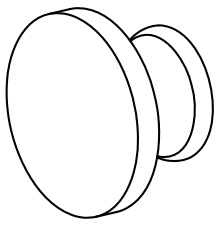 Cup handle x 6	Knob Handle x 3 	 Handle screw x 9

Tools required




Phillips screwdriver
(medium)

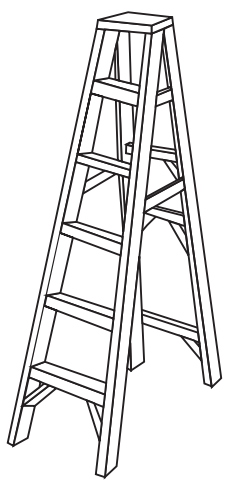

Step ladder
(or equivalent)

Ruler - Use this ruler to help correctly identify the screws

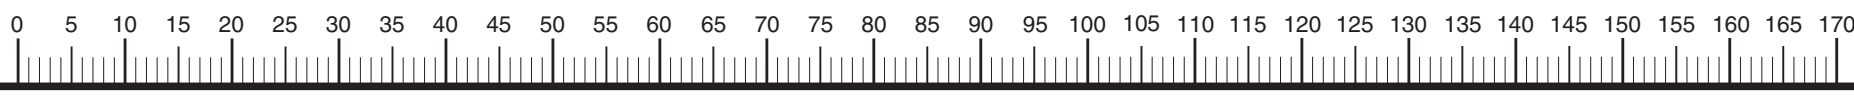

Assembly Instructions

Step 1

Position and connect the units


a: Before connecting the units you will first need to remove all doors and drawers.

Loosen but do not remove bolt B in the centre of the hinge back plates which are attached to the wardrobe side panel.

Slide the door off the back plates allowing bolt B to go through the key hole.

Pull the drawers out to full extension and tilt upwards to allow you to lift it off the runners.

a:

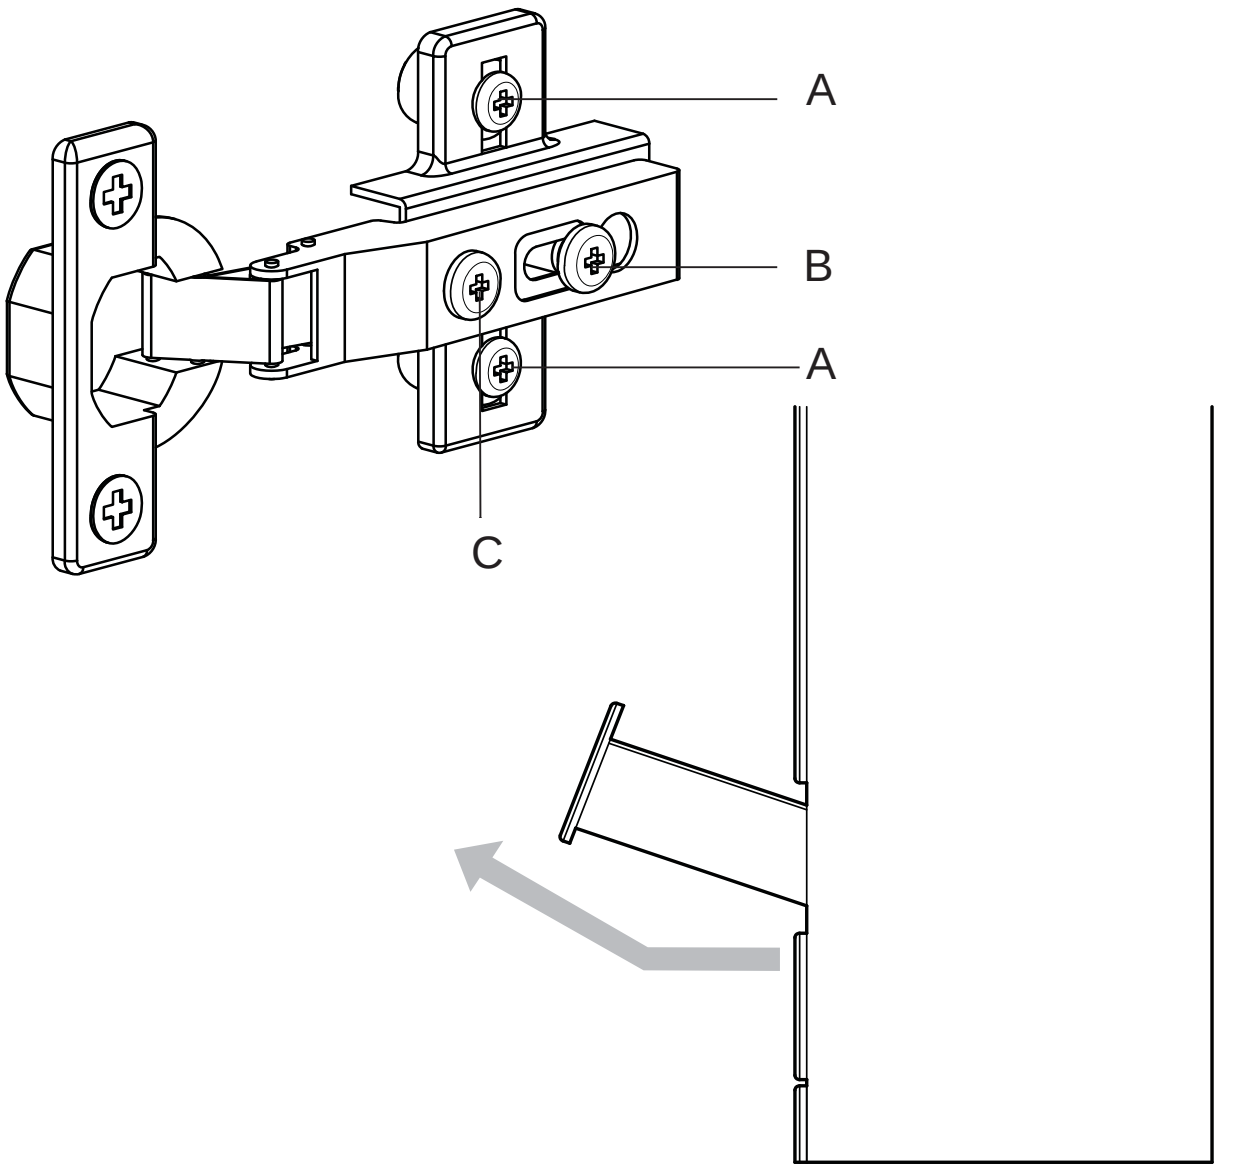

b: Position the double wardrobe [1] in the required position [please note it will be hard to move once connected]. Once in place position the single wardrobe [2] along side so the the front edges are aligned.


To fix the two units together you will need two 18mm connecting bolts Ⓓ and two Threaded sleeves Ⓔ.


Thread 18mm connecting bolt Ⓓ through the top hole inside the double wardrobe then screw threaded sleeve Ⓔ through from inside single wadrobe.

Repeat for bottom hole

b:

WARNING: Help may be required for this step.

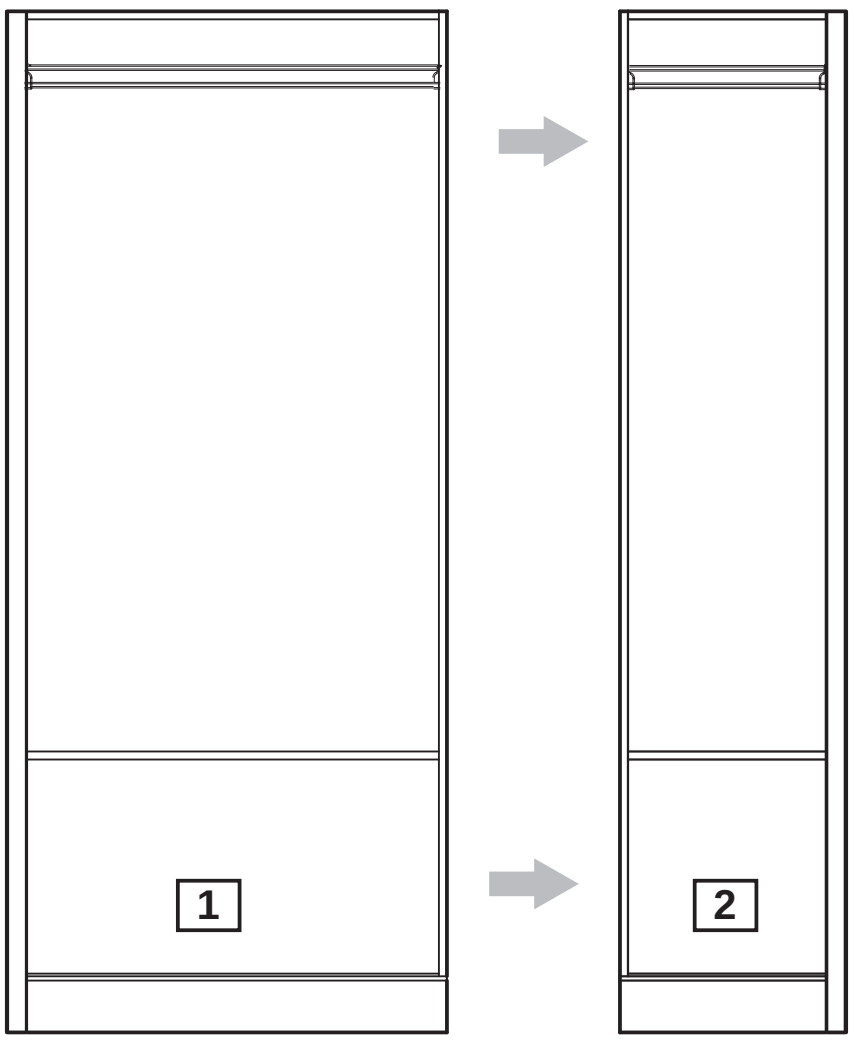

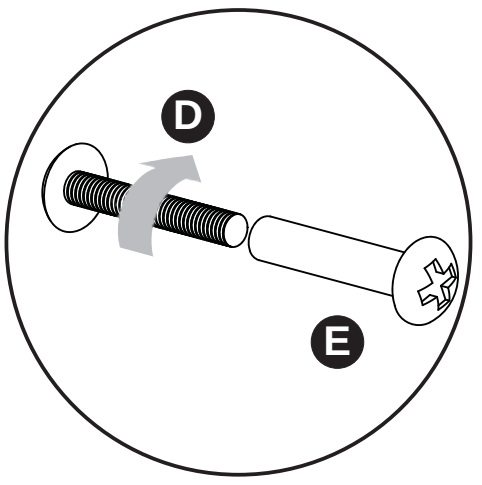


Assembly Instructions

Step 2

Re-fitting the doors
Starting from the top, slide the keyhole shaped groove in the hinge over bolt B on the hinge plate.

Once located tighten bolt B and move on to the next hinge.

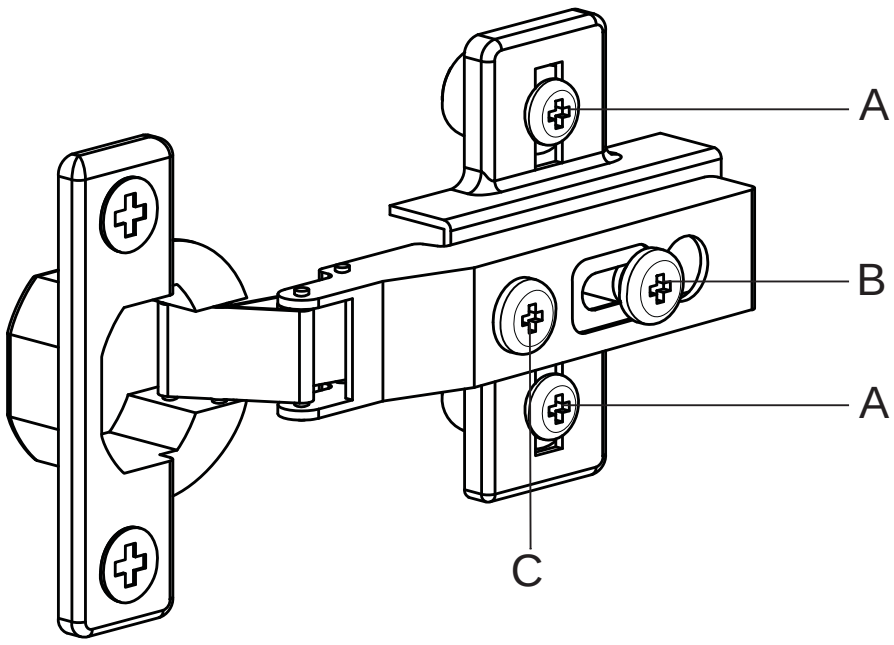


Step 3

Remove and replace handles

a: The handles are fitted to the inside of the unit, using a Philips screwdriver unscrew the handle screws in each handle and remove both the handle screw and the handle.

a:

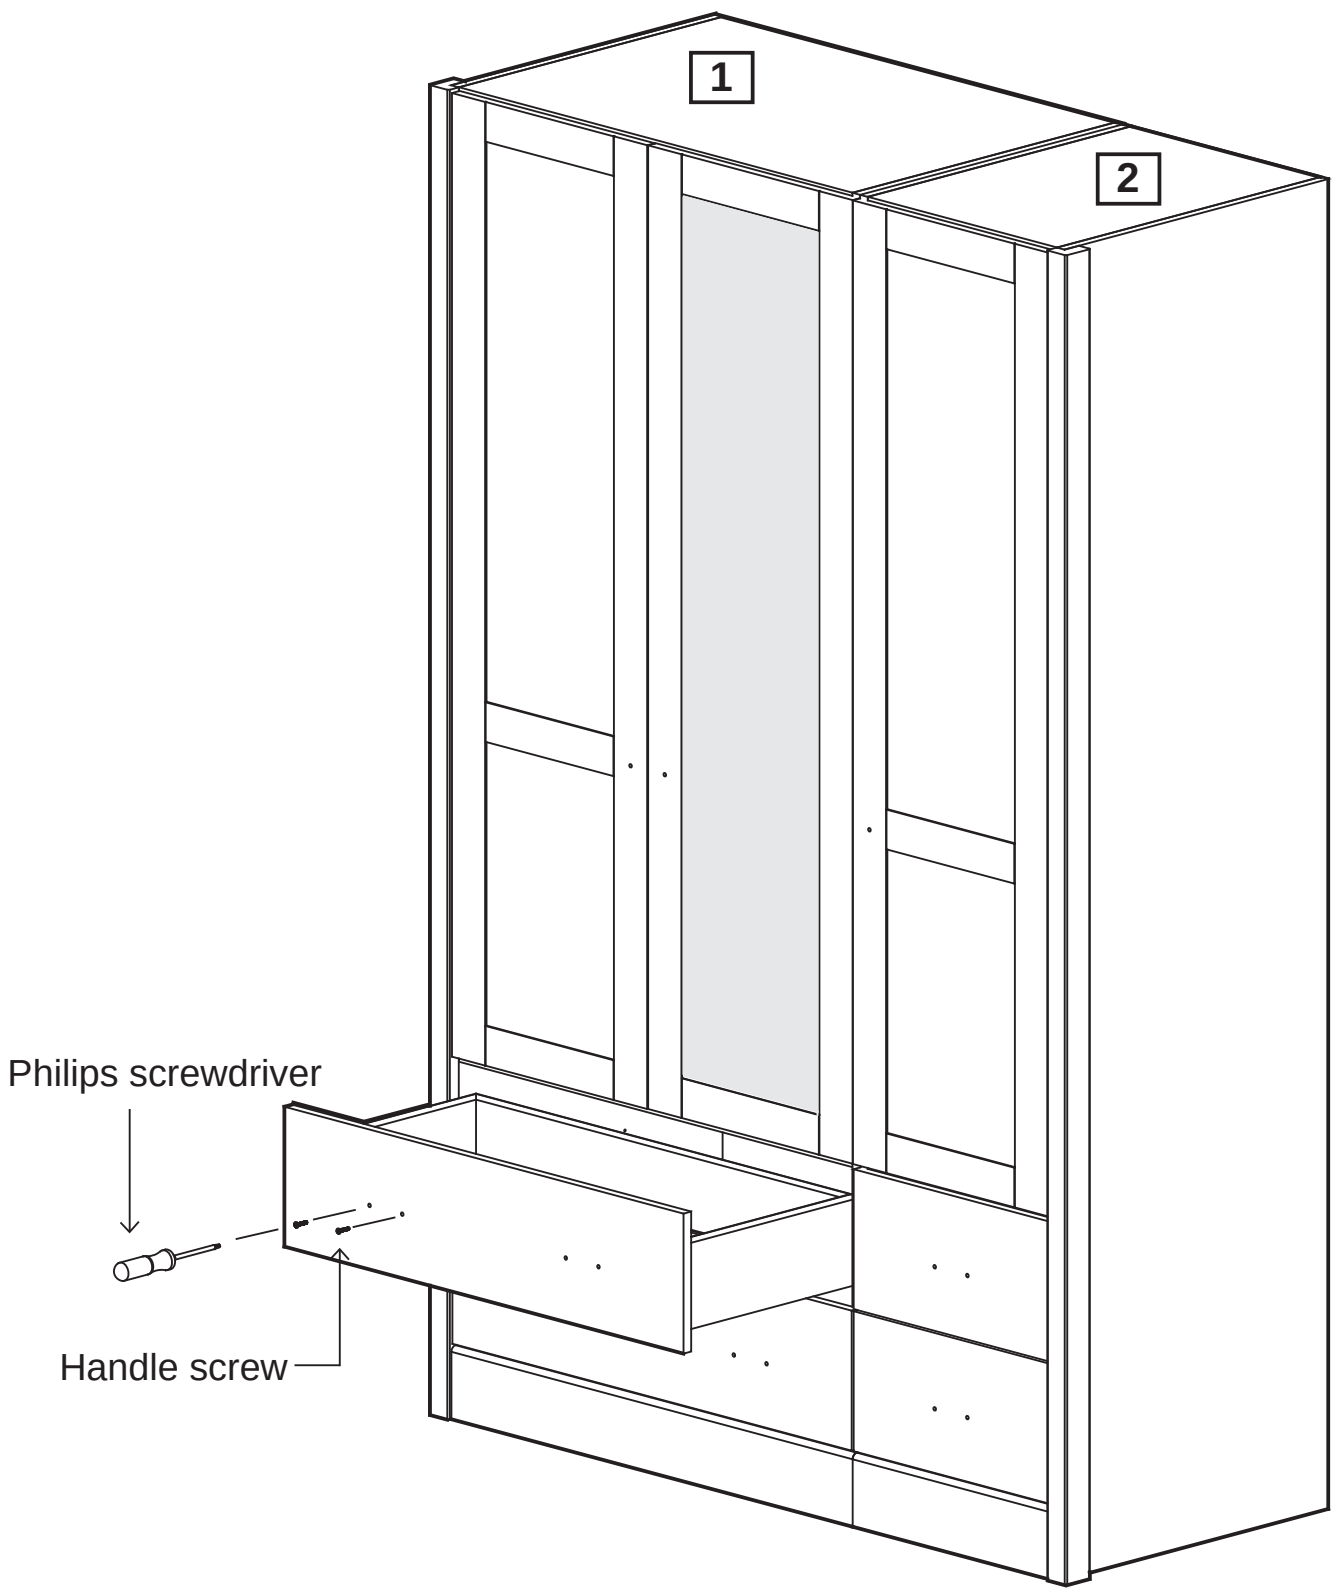



Assembly Instructions

Step 3 - continued

b: Replace the handle on the front of the unit. Fix in position by screwing the handle screw into each handle from inside the unit using a Philips screwdriver.

b:

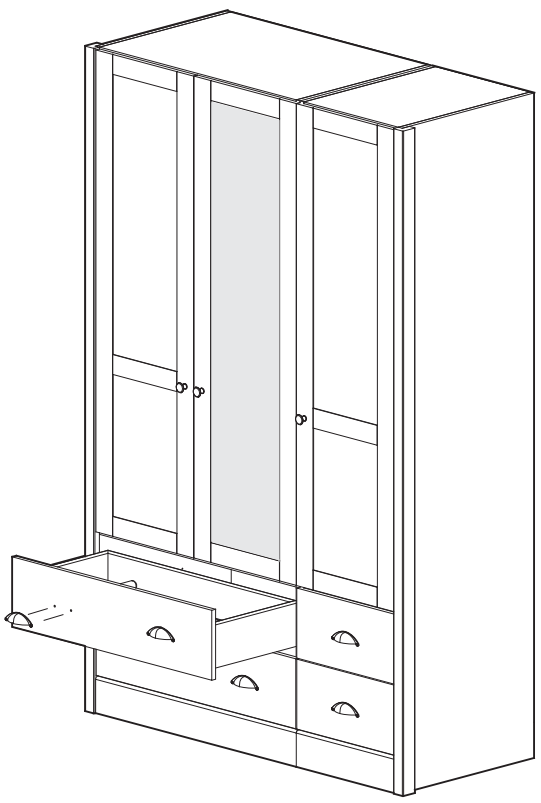

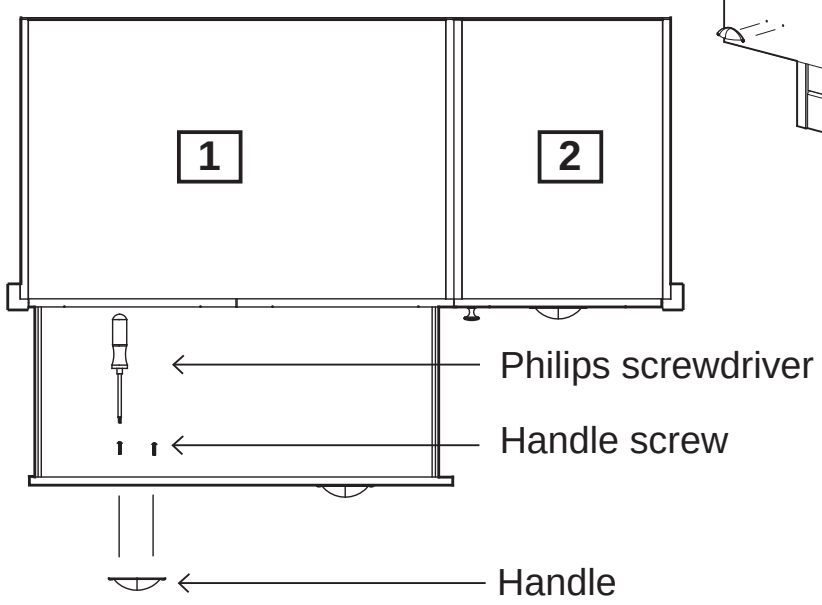

Step 4


Assemble Cornice


a: Place the cornice on top of the robe, you may need to use step ladders to do this. Position the cornice being careful to ensure that the back edges of the cornice are flush with the back of the robe and that the overhang on each side is equal. Once the position is correct, screw down firmly with a philips screwdriver and the 20mm cornice screws (F).

Note: There are not any pre drilled in the top of the robes for this.

WARNING: Help may be required for this step.

a:

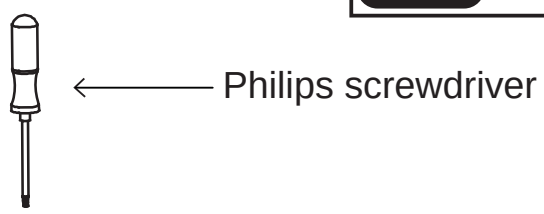

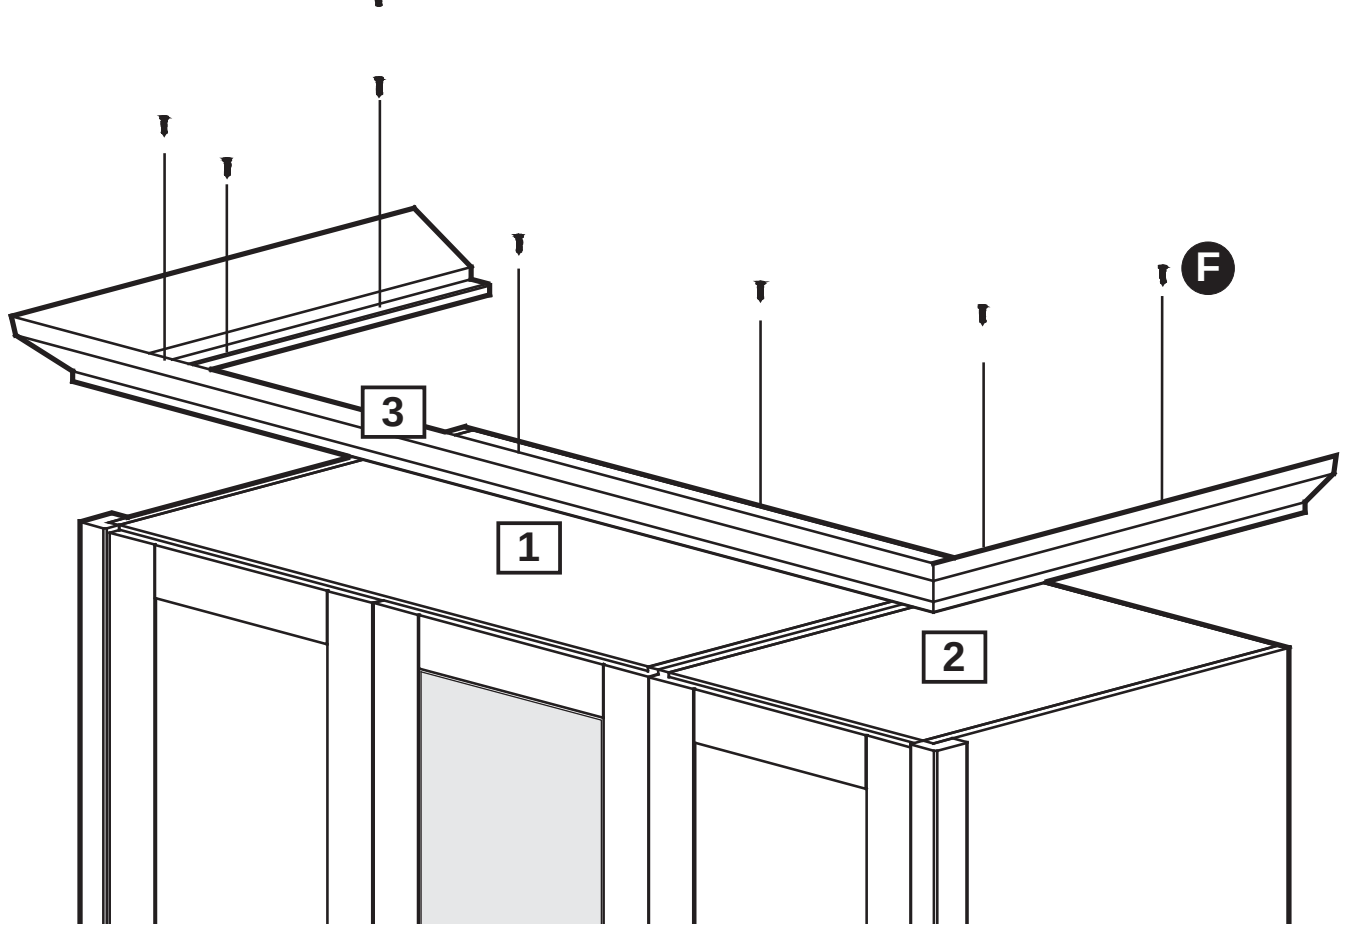

Assembly Instructions


Step 5


Fixing to wall

It is recommended that the wardrobe is fixed to a wall.

Fix wall strap **C** to the top of wardrobe using 15mm screw **A** and 15mm washer **B**.

Warning: The 15mm screw **A** is for fixing the wall strap **C** to furniture only. In addition to this you will need to choose a screw or fitting which is suitable for securing the wall strap **C** to the type of walls you have. If you are unsure about what type of screw to use seek professional help.

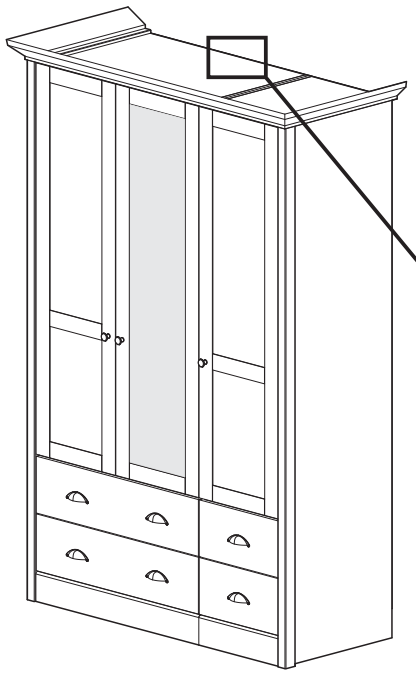

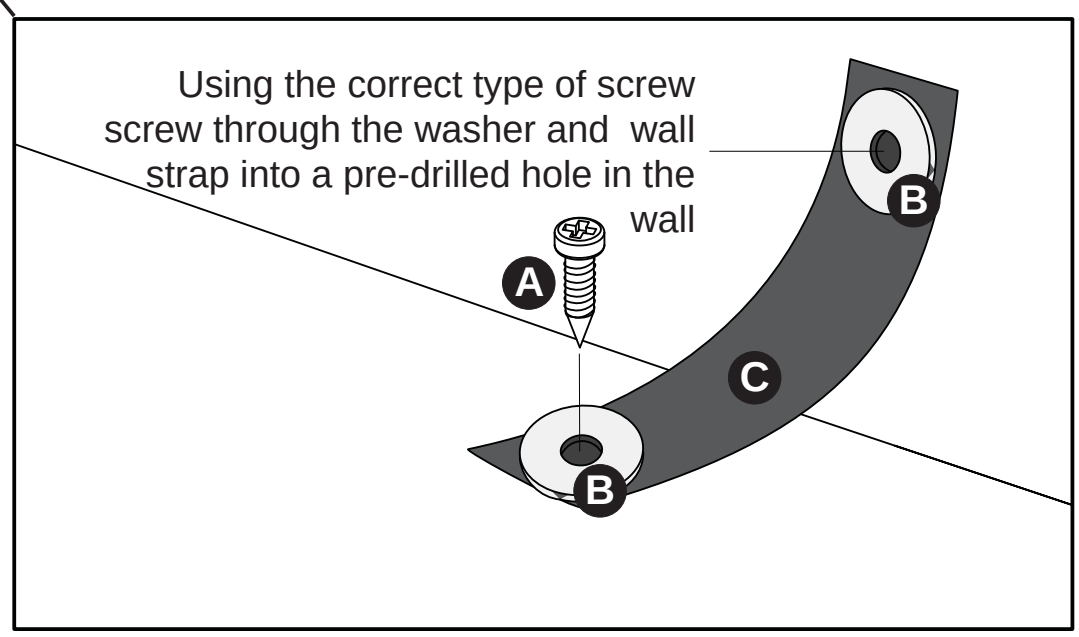

Step 6


Adjusting doors


1. To adjust the height / level of the door loosen all screw ‘A’s on all hinge plates, level the door height and retighten all screw ‘A’s.

2. To adjust the gap between the doors loosen screw ‘B’, then turn screw ‘C’ clockwise to close the gap or anticlockwise to increase the gap. Re-tighten screw ‘B’ to lock position.

3. To adjust the distance away from the unit loosen screw ‘B’, this allows the hinge arm to slide back and forth. Adjust as required then re-tighten screw ‘B’.

Assembly is complete.

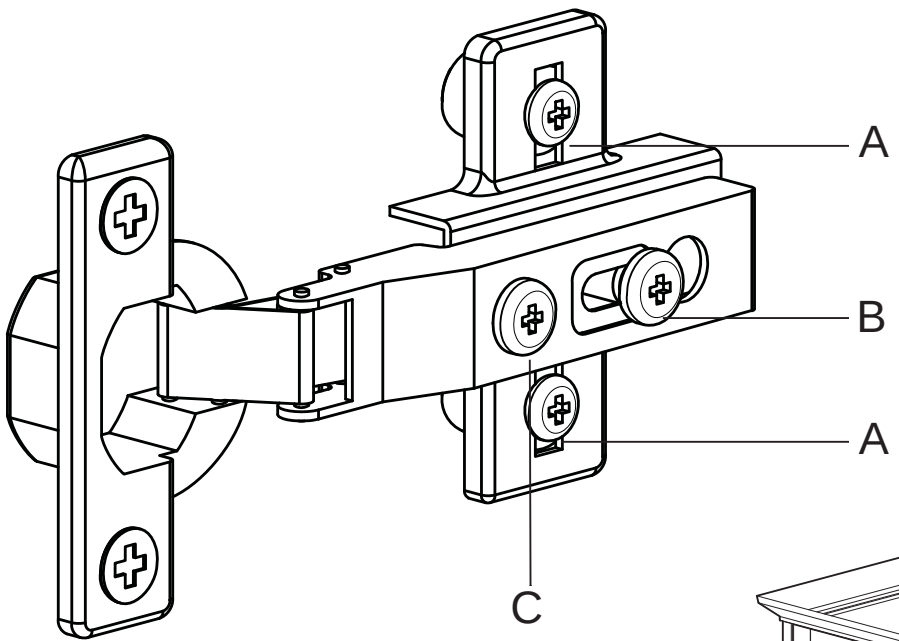

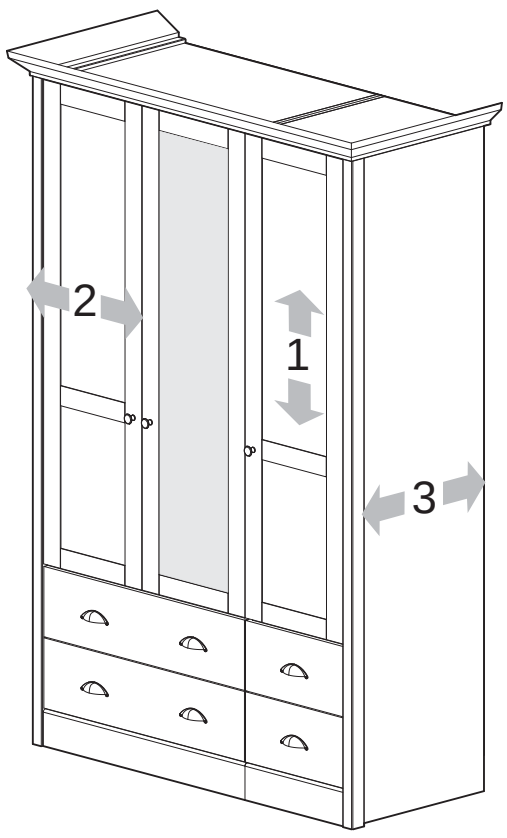

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 6403030