
Sandford Tall Cabinet

Assembly Instructions – Please keep for future reference | 356/4086

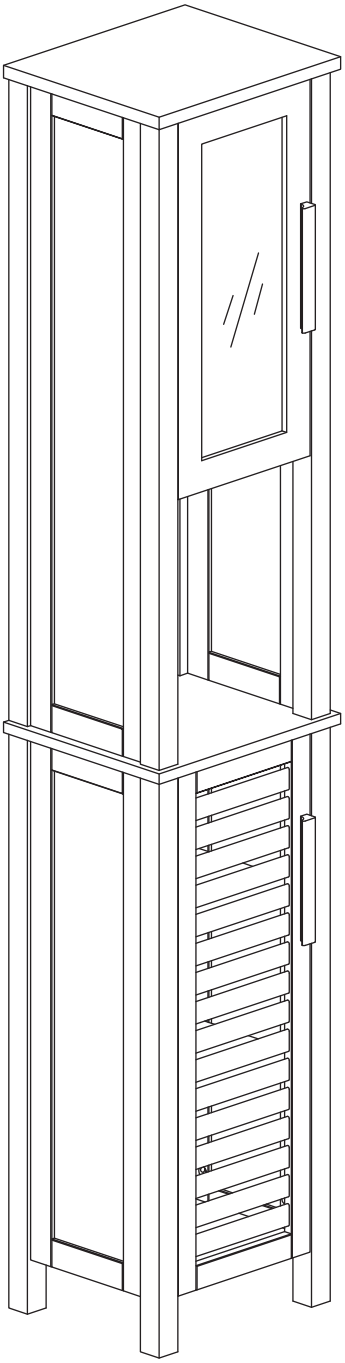

Dimensions

Width - 35cm
Depth - 30cm
Height - 180cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800

Issue 1 - 09/29/14

Safety and care advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the panels, this could cause damage.

• Assemble the unit as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• ***Note:*** Only apply the glue once you are sure of the assembly.

• The wall plugs supplied are suitable for solid walls only. It is important that the correct type of fixing is used for your wall, seek professional advice if in doubt.

• Parts of the assembly will be easier with 2 people.

• If using power tools, please follow the safety instructions supplied with the tools.



• We do not recommend the use of power drill/ drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.

• ***Warning:*** Before drilling, check the wall for hidden pipes and cables.

• Dispose of all packaging carefully and responsibly.

Glue safety - Take care when using glue, please follow the advice below

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately. If possible show product information or label to the medical advisor.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as a reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the Customer Helpline:08456 400800

Please check you have all the panels listed below




1 Under left front leg

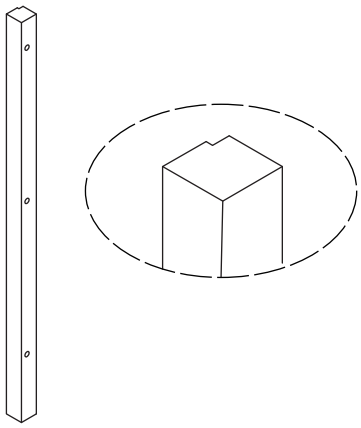

2 Under left back leg




3 Under right front leg

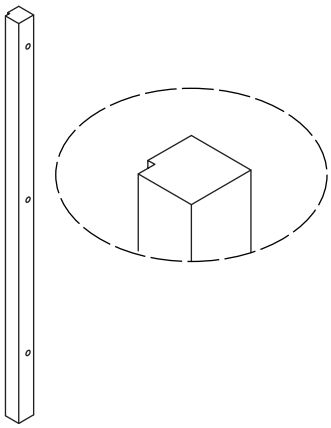


4 Under right back leg




5 Upper left & right front leg x 2

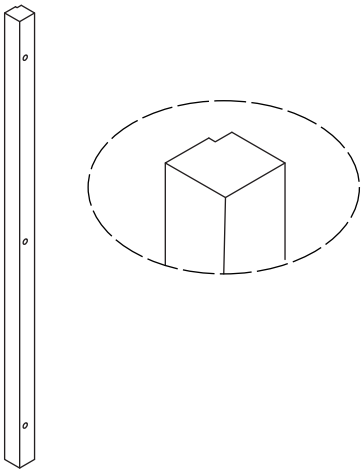


6 Upper left & right back leg x 2



7 Under door panel

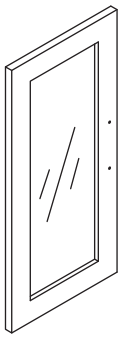

8 Upper door panel




9 Small wood block x 4


Components - Panels

If you have damaged or missing components, call the Customer Helpline:08456 400800


Please check you have all the panels listed below




10 Under left side panel




11 Under right side panel




12 Upper left side panel




13 Upper right side panel

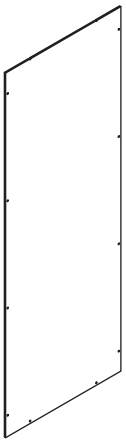


14 Under back panel

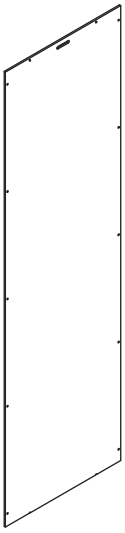


15 Upper back panel

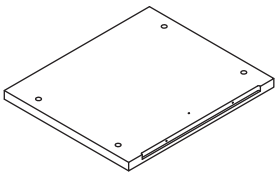


16 Top panel

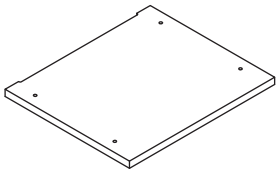


17 Middle fixed shelf

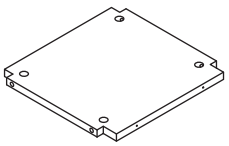

18 Bottom panel

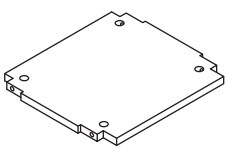

19 Shelf












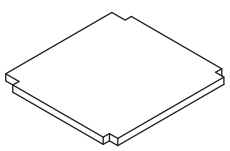


20 Adjustable shelf x 3


Components - Fittings


Please check you have all the fittings listed below

Note:The quantities below are the correct amount to complete the assembly .In some cases more fittings may be supplied than are required.


A  Locking Pin x 36	B  Locking Nut x 44	C  Curved hinge x 4
D  Φ4 x 12mm Screw x 16	E  Φ3 x 12mm Screw x 25	F  Metal Support x 12
G  Φ4 x 25mm Screw x 8	H  Wooden handle x 2	I  Φ4 x 25mm Screw x 4
J  Cam cap x 40	K  Screw cap x 4	L  Pin x 4
M  Wall strap x 1	N  Φ4 x 35mm Screw x 1	O  Wall plug(for solid wall only) x 1

Tools required


Phillips screwdriver (medium & large)



Flatblade screwdriver (medium)

6mm Suitable drill bit (for use with wall plug)

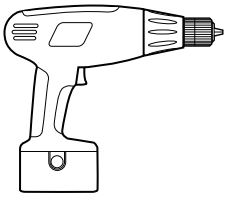

Hammer Drill (Only for dril hole on the wall)


Small hammer


Ruler/tape measure

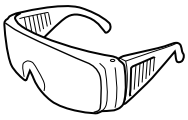
Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Assembling under legs & under side panels

a:

Screw locking pin Ⓐ into under left front leg 1 and under left back leg 2.


Screw locking pin Ⓐ into under left side panel 10.

Attach under left front leg and under left back leg onto under left side panel,Insert locking nut Ⓑ into under left side panel , and tighten the locking nut to secure the unit.


Repeat the above step a to assembly other under side unit as shown.


b:

Use 25mm screw Ⓖ to fix small wood block 9 onto the under left unit as shown.

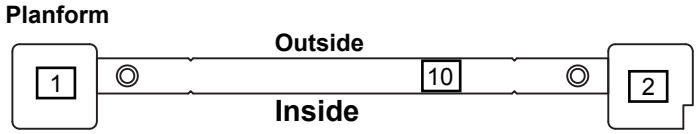


a:

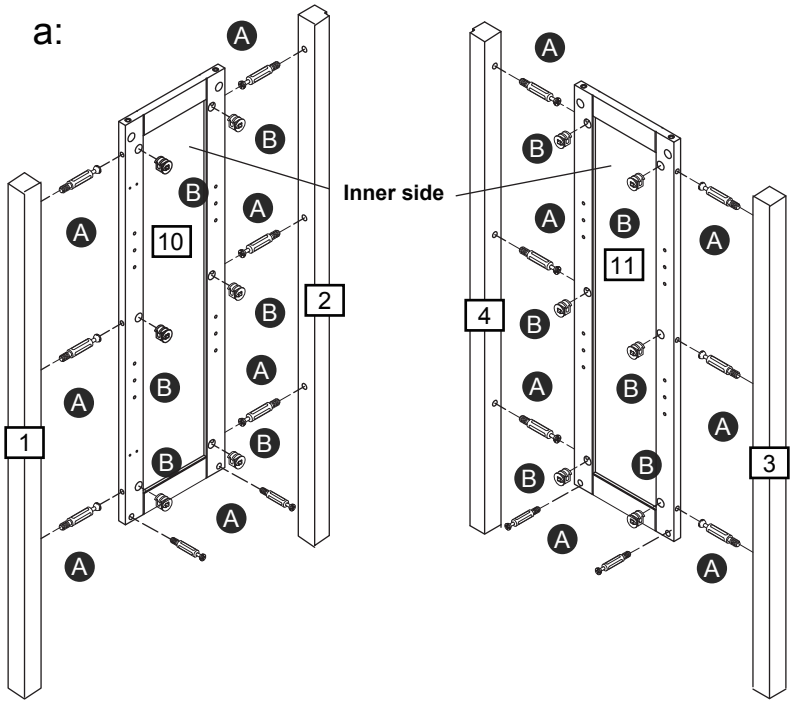

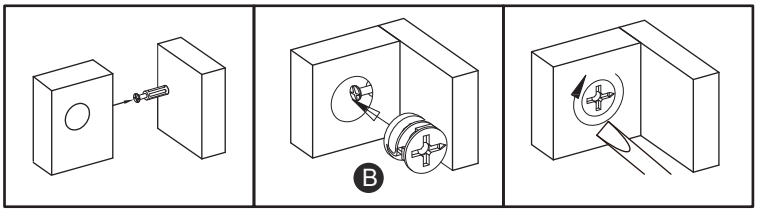

b:

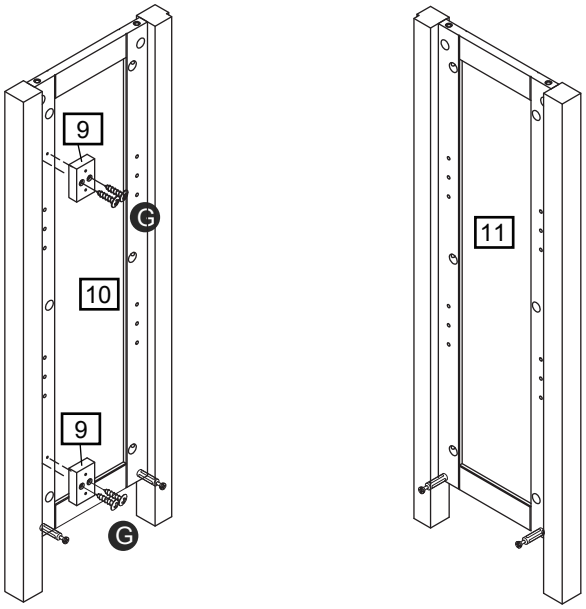

Assembly Instructions

Step 2


Assembling under unit

NOTE:It would be useful to ask someone to help you at this stage.

a:
Attach under left side panel [10] and under right side panel [11] to bottom panle [18] .

Insert locking nut (B) into bottom panel [18] and tighten it to secure the unit.


a:

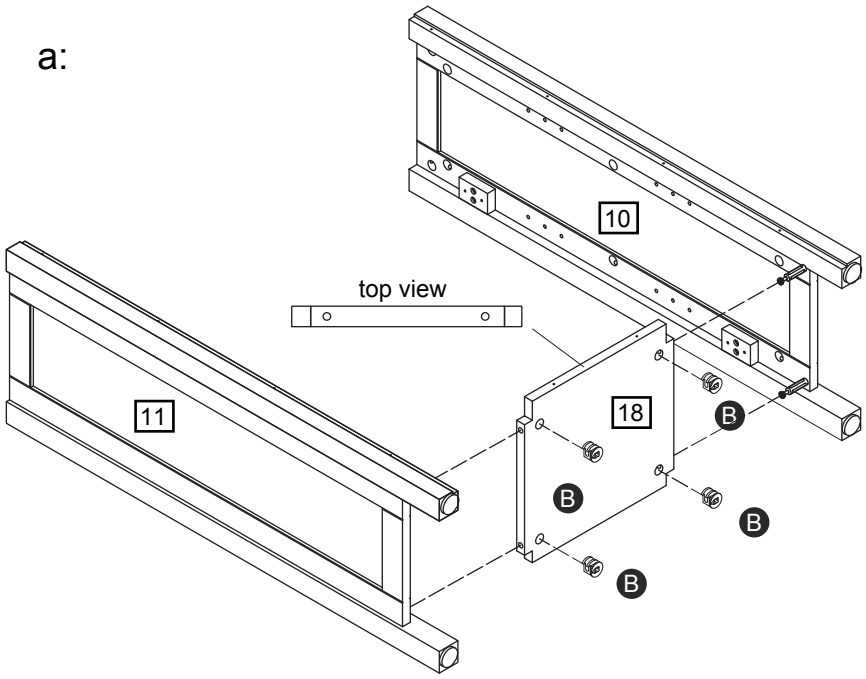

b:
Insert pins (L) into the under side unit and make sure shorter part facing down, insert locking nut (B) into it, tighten locking nuts clockwise to secure it.

Carefully put middle fixed shelf [17] onto the under unit.

b:

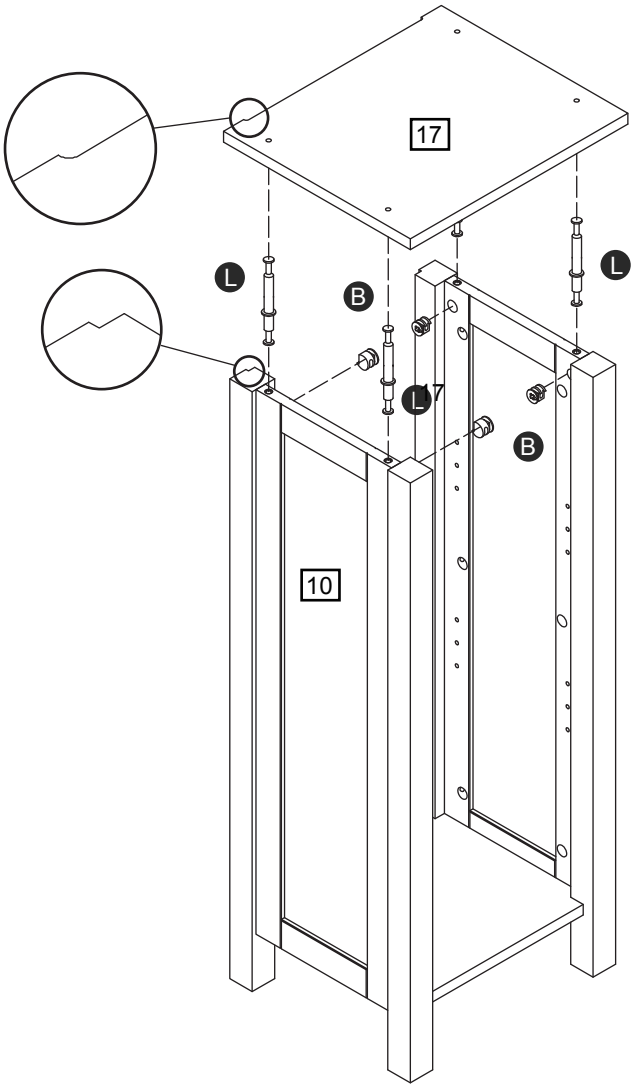

Assembly Instructions

Step 3

Assembling Upper legs and upper side panels

NOTE:It would be useful to ask someone to help you at this stage.


a:
Screw locking pin Ⓐ into upper left front leg 5 and upper left back leg 6.


Attach upper left front leg and upper left back leg onto upper left side panel 12 ,Insert locking nut Ⓑ into upper left side panel , and tighten the locking nut to secure the unit.


Repeat the above step a to assembly other upper side unit as shown.

b:
Use 25mm screw Ⓖ to fix small wood block 9 onto the upper left unit as shown.


a:

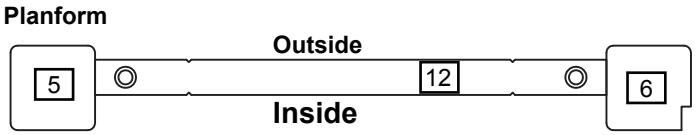

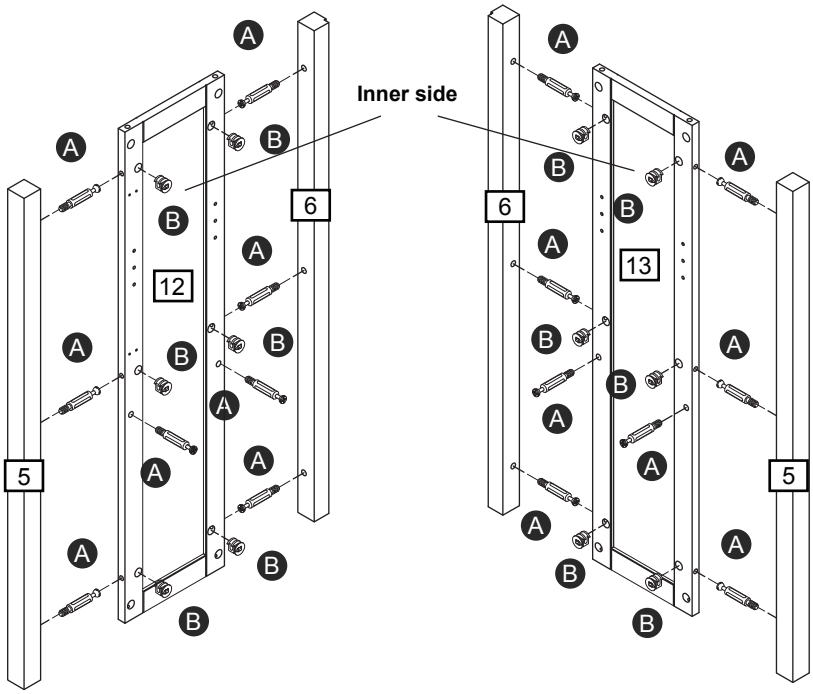

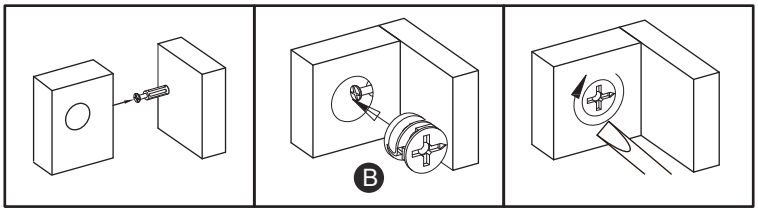

b:

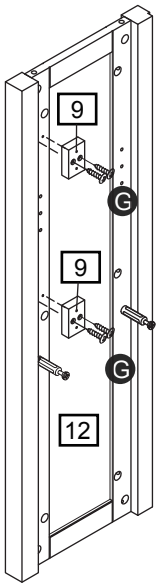

Step 4


Assembling upper unit

NOTE:It would be useful to ask someone to help you at this stage.

a:

Attach the upper left & right side unit to the fixed shelf 19.Insert the locking nut B into the fixed shelf, tighten the locking nuts clockwise to secure the unit.

a:

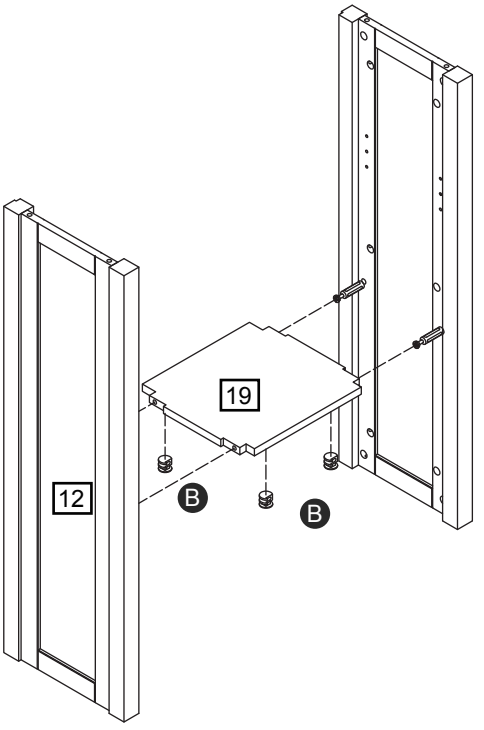


b:

Screw locking pin A onto top panel 16, and fix wall strap M with 12mm screw E as shown.

Carefully place the top panel 16 onto the unit.Insert locking nut B into upper left side panel and upper right side panel.

Tighten the locking nut to secure the unit.

b:

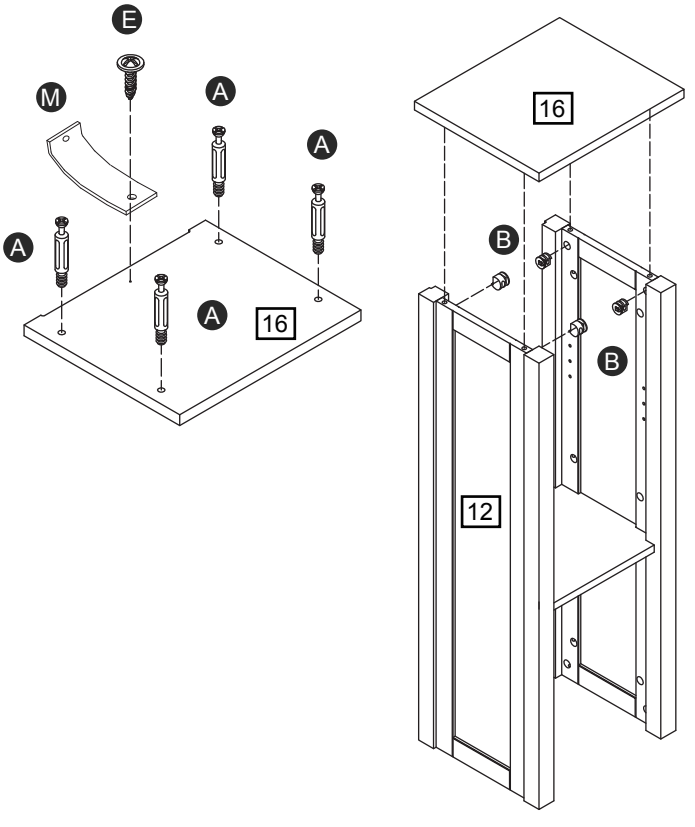

Assembly Instructions

Step 5

Assembling the upper unit and under unit


NOTE:It would be useful to ask someone to help you at this stage.

a:
Carefully attach the upper unit to the under unit as shown, insert the locking nut Binto the upper unit, tighten locking nuts clockwise to secure it.


b:
Use 12mm screw E to fix the upper and under back panels 15 14 to the unit as shown.

Pls make sure the wall strap go through the hole of upper back panel as shown.

a:

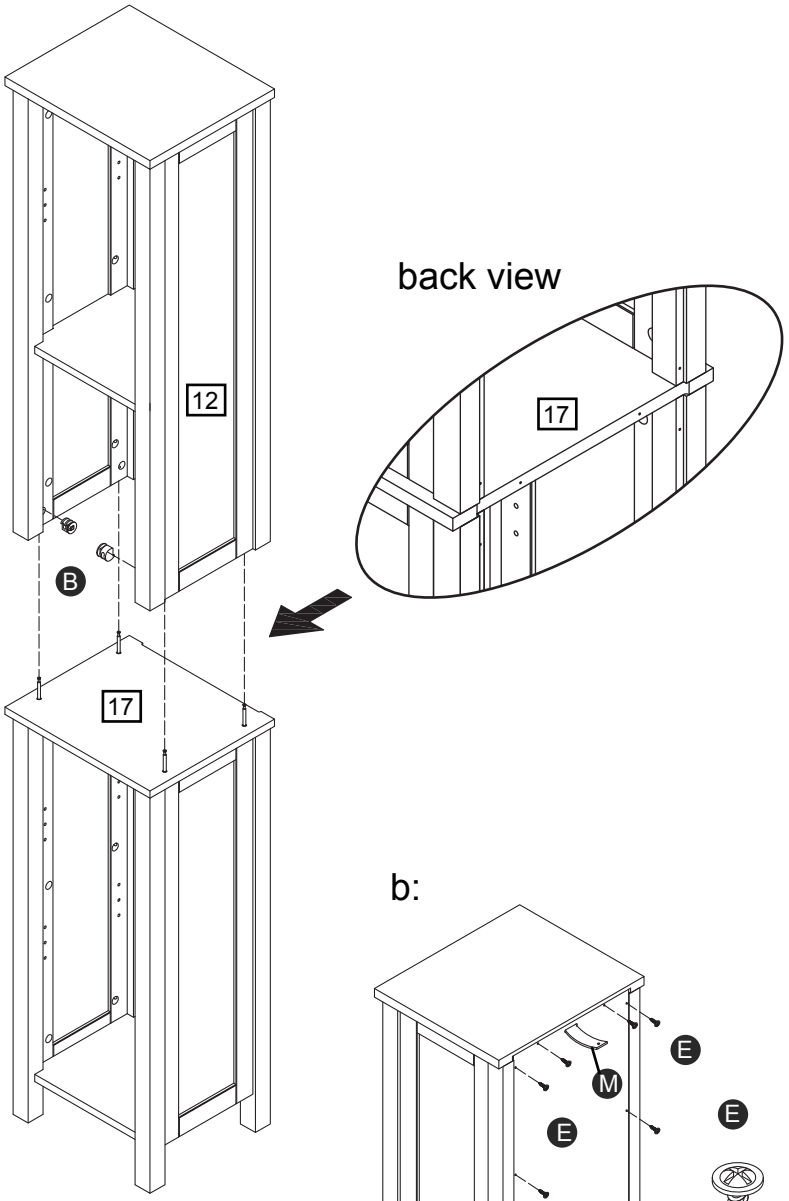

b:

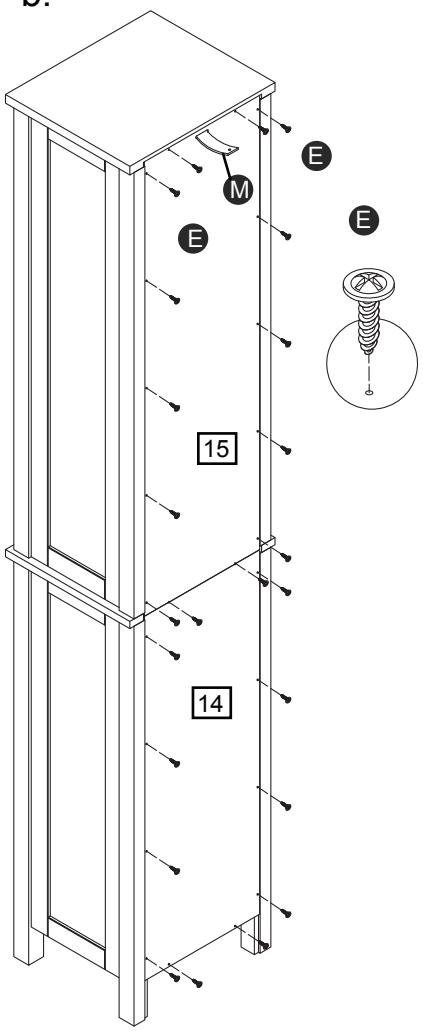

Assembly Instructions

Step 6

Assembling door panel


NOTE:It would be useful to ask someone to help you at this stage.

a:


Use 12mm screws Ⓓ to fix curved hinge Ⓒ onto door panels [7] [8].

Use 25mm screws Ⓘ to fix handles Ⓗ onto doors .

a:

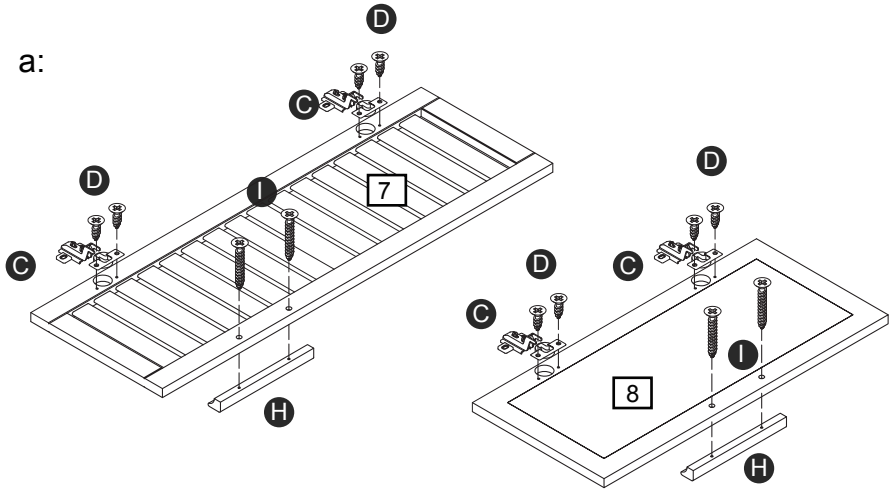

b:

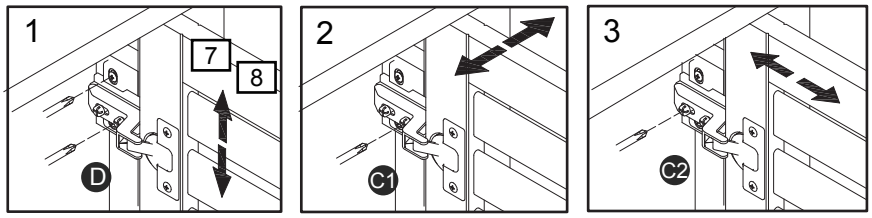

b:


Carefully attach door panels [7] [8] to the unit by fixing curved hinge onto the side panels with 12mm screws Ⓓ .

Adjust the door up or down, left or right, in or out if needed as shown:

1. Loosen two screws Ⓓ and adjust the door up or down, then fix screws Ⓓ again.
2. Loosen screw Ⓒ1 and adjust the door left or right, then fix screw Ⓒ1 again.
3. Loosen screw Ⓒ2 and adjust the door in or out, then fix screw Ⓒ2 again.

Use cam caps Ⓙ to cover the visible cams

Use screw caps Ⓚ to cover the visible screws

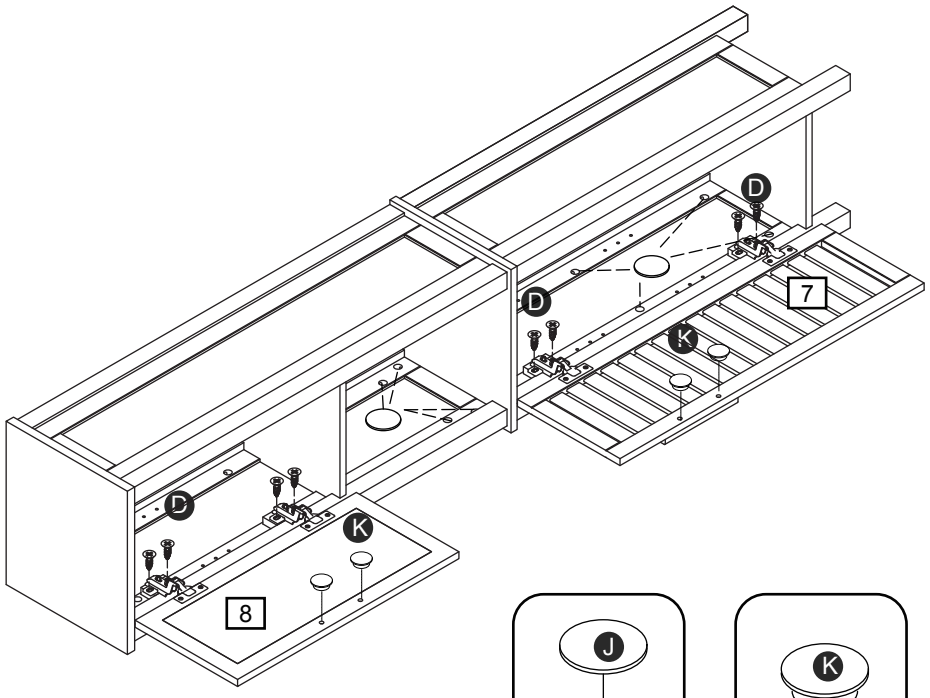

Assembly Instructions

Step 7


Assembling door panel

NOTE:It would be useful to ask someone to help you at this stage.

Insert metal support (F) into left & right side panels.Carefully put the adjustable shelf panel [20] on it.

Use 35mm screw (N) and wall plug (O) to fix the unit on the wall via strap (M) as shown.

After above assembly, please double check and make sure all screws are firmly fixed before use.

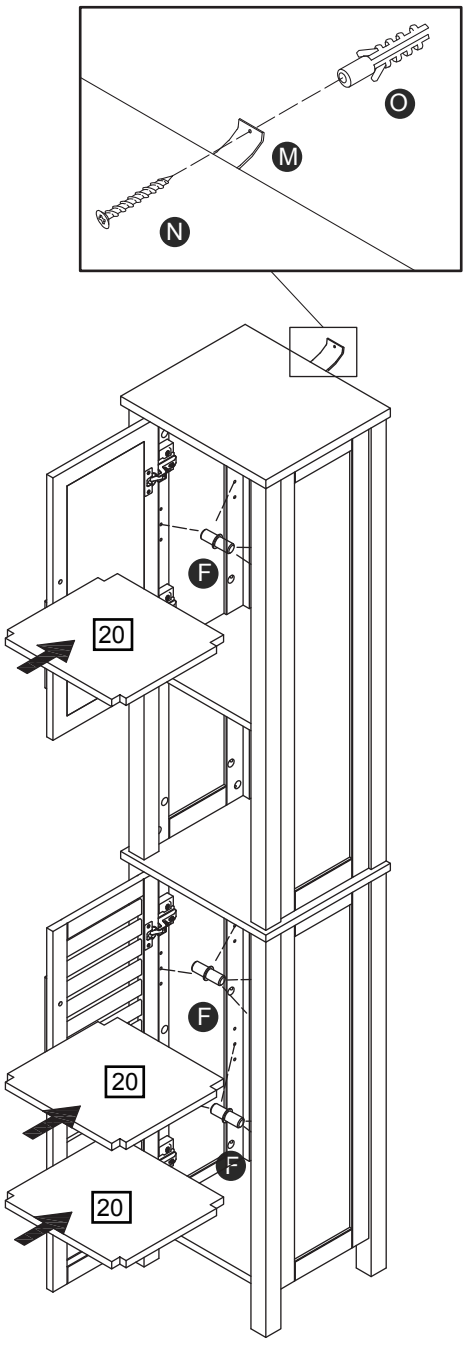

NOTE:If you have damaged or missing components, call the Customer Helpline:08456 400800
Argos LTD,489-499 Avebury Boulevard,
Central Milton Keynes, MK9 2NW

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: **When drilling into walls always check that there are no hidden wires or pipes etc.**

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: General rule: ⚠ Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

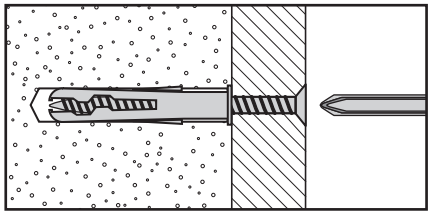


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

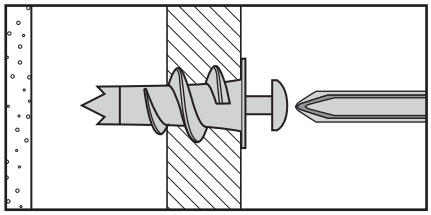


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

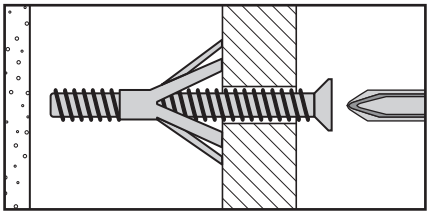


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

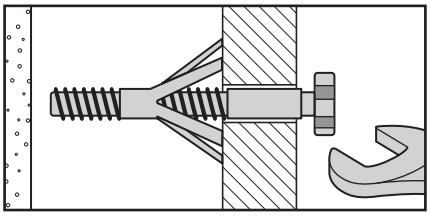


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

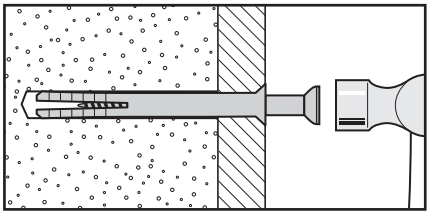

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

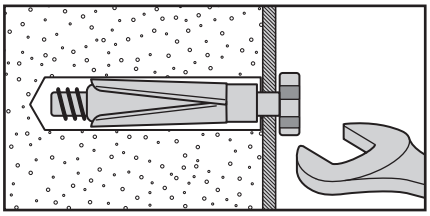

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

⚠ Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

SAFETY WARNING INFORMATION

Keep these instructions for future use:

WARNINGS

*Do not place very hot or very cold items against or in close proximity to glass surface unless an adequately thick insulating material is used to prevent such items from coming into contact with the glass.

*Do not strike the glass with hard or pointed items.

* Do not sit or stand upon horizontal glass surfaces.
*When cleaning glass panels or mirrors use a damp or leather with washing up liquid or soft soap if necessary do not use washing powders or any other substance containing abrasive since these substances scratch glass.

*It is essentail that this unit is fixed to a wall with the fixings provided.

BS7449 : 1991

Catalogue Number: 356/4086(D)

Manufacture date: Nov. 12th, 2014

Retailer: **Argos**

Retailer address: **489-499 Avebury Boulevard**
Saxon Gate West
Central Milton Keynes
Bucks, MK9 2NW

This unit contains film backed mirror of nominal thickness of 3 mm

This unit contains safety film backed mirror of a nominal thickness of 3 mm, which is not required to be classified to BS6206 Class C.

If a glass is chipped or broken replace with glass of the type described on this label. Consult the manufacturer, retailer, or agent with regard to obtaining a manufacturing specification and shape for replacement glass quoting the model number, and batch number or date of manufacture.