
Osaka 3 Drawer Chest

Assembly Instructions - Please keep for future reference

White 2283935

Black 2487865

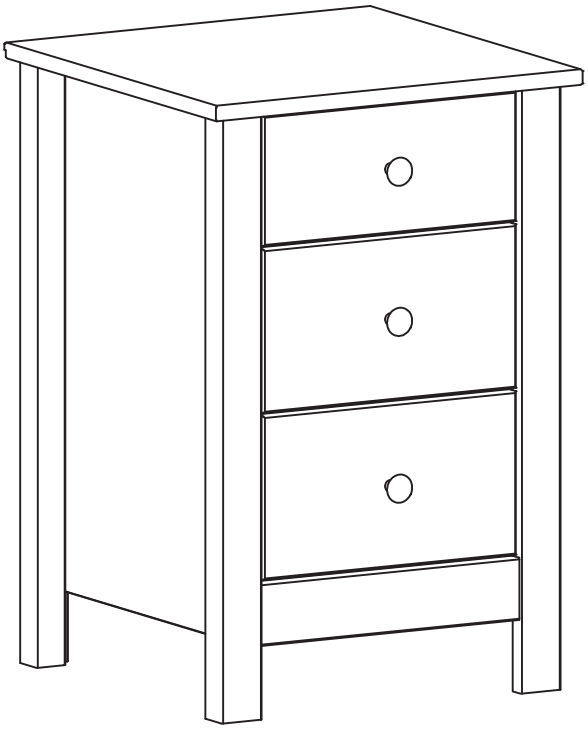

Dimensions

Width : 40.0 cm
Depth : 40.0 cm
Height: 59.6 cm

Assembly Instructions - Please keep for future reference

If you need help or have damaged or missing parts, call the **Argos Customer Helpline: 0845 640 30 30**

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Argos Customer Helpline: 0845 640 30 30**


Please check you have all the panels listed below

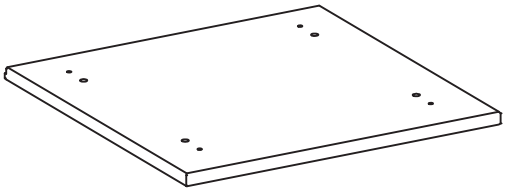

1 Top
(40 cm x 40 cm)

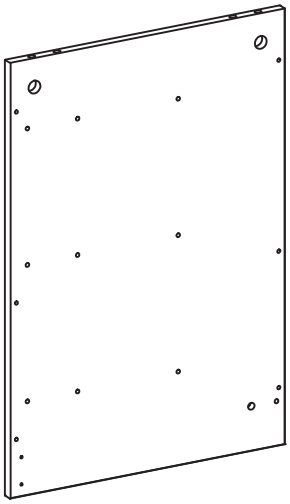

2 Side, left
(51,1 cm x 35 cm)

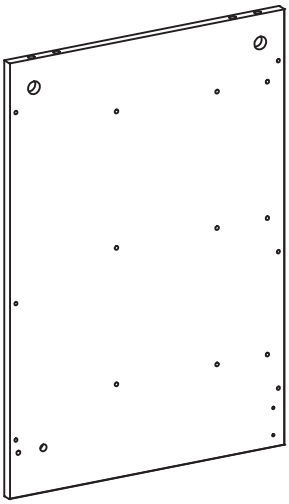


3 Side, right
(51,1 cm x 35 cm)




4 Post x 4
(58,1 cm x 4,4 cm)




5 Front rail
(28,2 cm x 6 cm)




6 Back rail
(28,2 cm x 7 cm)

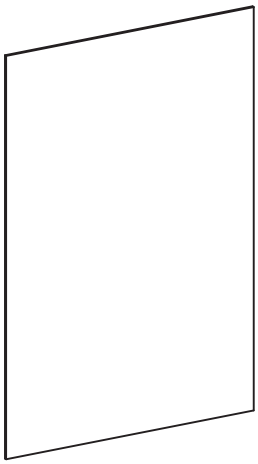


7 Back
(47,3 cm x 31,5 cm)

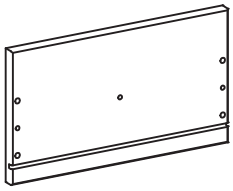

8 Drawer front x 2
(27,6 cm x 15,7 cm)

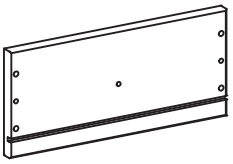


9 Drawer front
(27,6 cm x 12,5 cm)

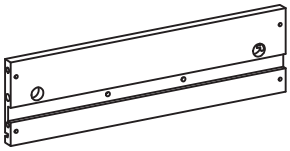

10 Drawer side, right/left x 6
(35 cm x 9,8 cm)



11 Drawer back x 3
(24,9 cm x 9,8 cm)




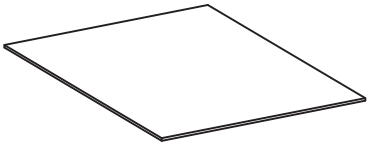


12 Drawer bottom x 3
(25,9 cm x 34,7 cm)

Components - Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

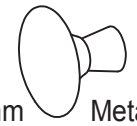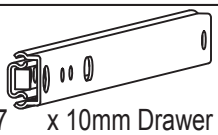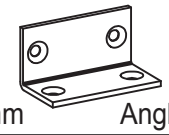Aa  ø7.8 x 40mm Wooden dowel x 6	**Ab**  ø6 x 30mm Wooden dowel x 12	**Bp**  ø3 x 35mm Screw x 12
Ca  ø15 x 10.5mm Cam x 12	**Cb**  ø5 x 8, cc34mm Bolt x 12	**Di**  1.2 x 15mm Nail x 25
Fi  Back fitting w. ø3.5 x 15mm Screw x 6	**Ge**  ø27 x 24mm Metal Knob x 3	**Hd**  M4 x 20mm Screw x 3
Hk  M4 x 9mm Screw x 6	**Jb**  ø4 x 25mm Screw x 12	**Kb**  ø5.8 x 8mm Screw x 18
Ko  ø4,2 x 9,5mm Screw x 8	**Sk**  245 x 17 x 10mm Drawer runner x 6	**Vl**  44 x 23 x 23mm Angle x 2

Tools required



Phillips screwdriver
(Medium & large)




Hammer



Flatblade screwdriver
(Medium)


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


Step 1


Assembly of the chest.

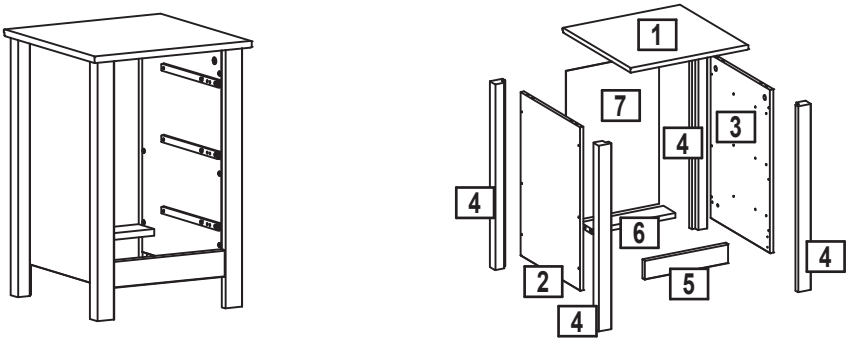

Step 1.1


Screw the bolts Cb into the holes indicated on the top 1.

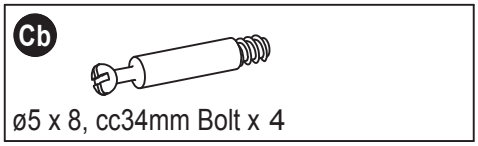


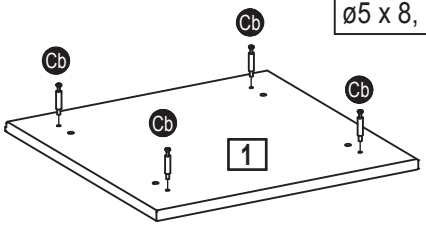

Step 1.2

Fix the posts 4 onto the sides 2 and 3 using screws Jb into the holes indicated.
The top of the posts 4 and the sides 2 and 3 must be flush.

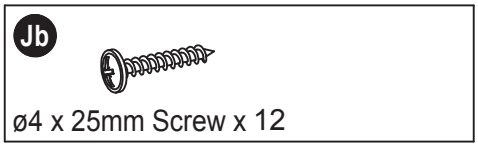


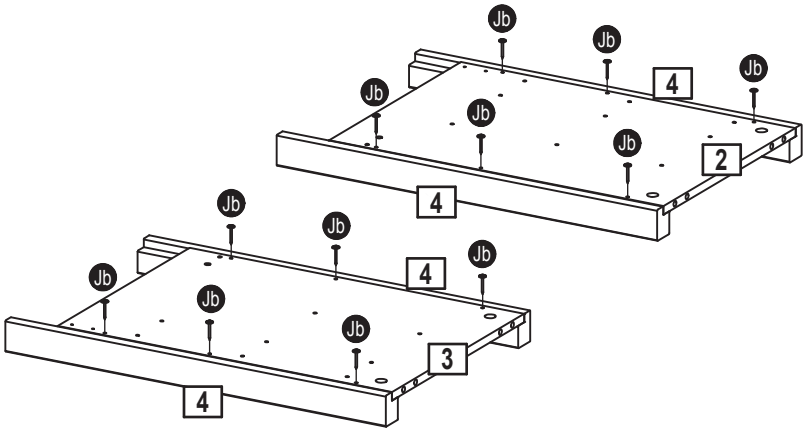


Step 1.3

Knock the dowels Aa into the holes indicated on the sides 2 and 3 using a small hammer.

Screw the bolts Cb into the holes indicated on the sides 2 and 3.



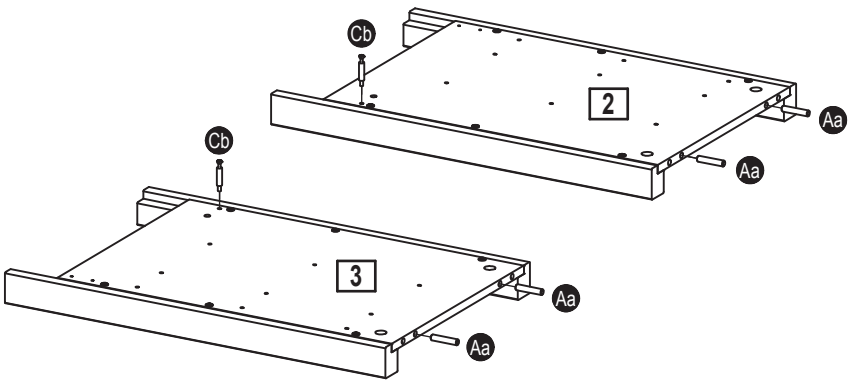

Assembly Instructions


Step 1.4

Slide the top of the drawer runners Sk backwards. You can identify the front end of the drawer runner Sk by the two M4 holes. See details.

Fix the front end of the drawer runners Sk to the sides 2 and 3 using screws Kb through the holesnumber 1 and 7 as indicated.

See details.

Kb	Sk
ø5.8 x 8mm Screw x 12	245 x 17 x 10mm Drawer runner x 6

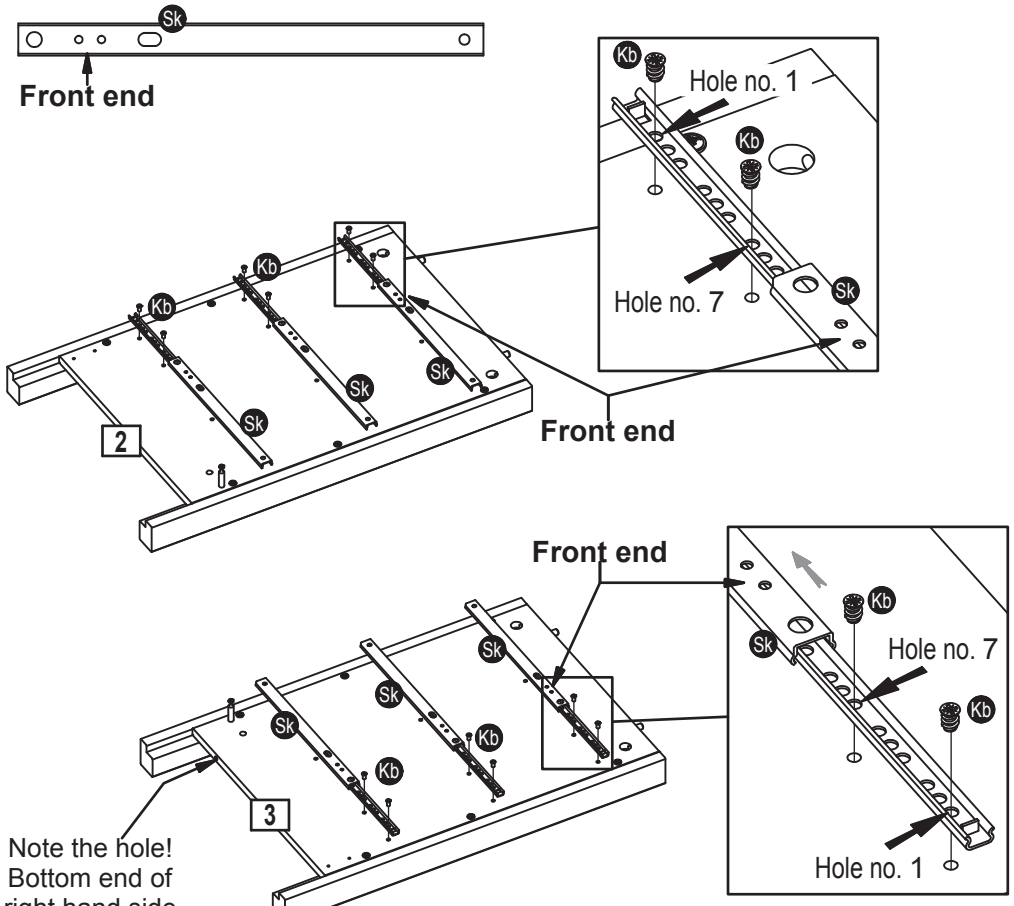


Step 1.5

Slide the top of the drawer runners Sk forwards.

Fix the back end of the drawer runners Sk to the sides 2 and 3 using screws Kb through the holes indicated.

See details.

Kb
ø5.8 x 8mm Screw x 6

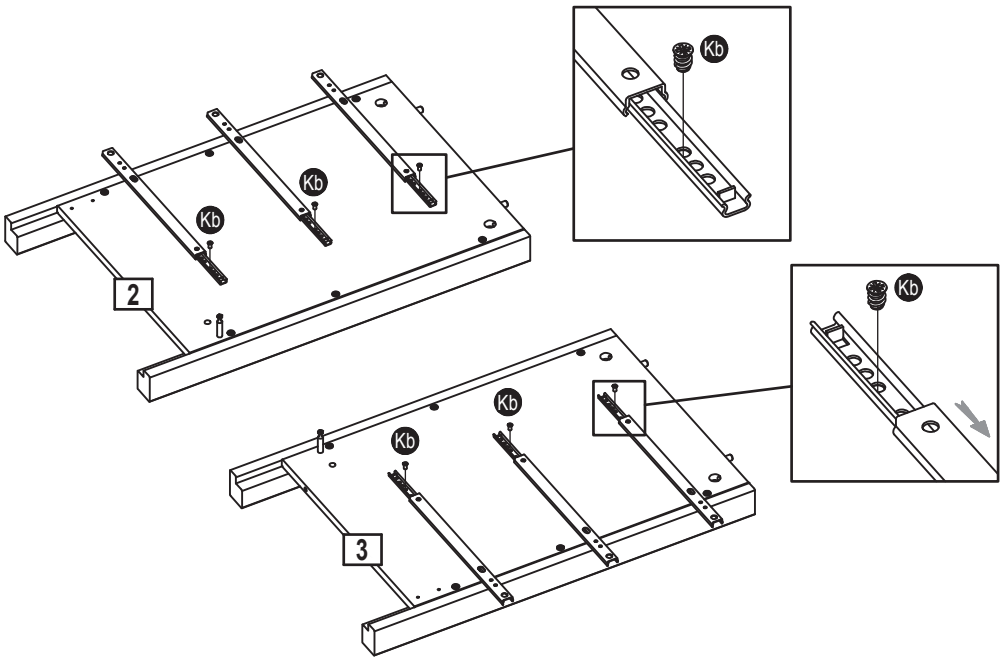

Assembly Instructions

Step 1.6


Fix the angles Vl using screws Ko into the holes indicated on the front rail 5.

Ko





ø4,2 x 9,5mm Screw x 4

Vl

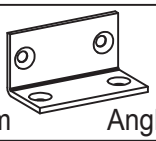

44 x 23 x 23mm Angle x 2

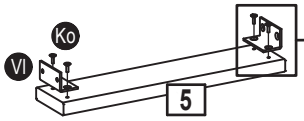

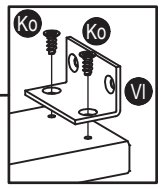


Step 1.7

Knock the dowels Aa into the holes indicated on the back rail 6 using a small hammer.

Aa



ø7.8 x 40mm Wooden dowel x 2



Step 1.8

Place the sides 2 and 3 onto the back rail 6.


Push cams Ca into the holes indicated on the back rail 6.
Arrows pointing towards the sides 2/3.


Turn the cams Ca to the right to fix the sides 2 and 3.

Ca



ø15 x 10.5mm Cam x 2

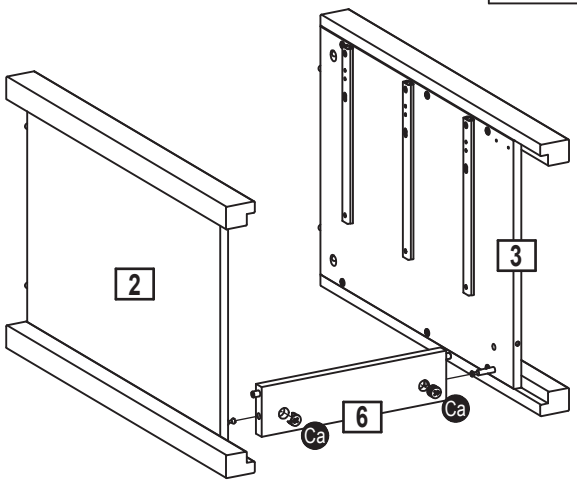

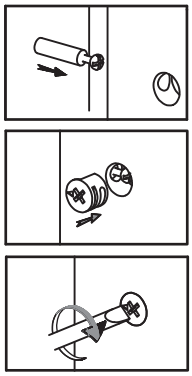

Step 1.9

Place the top 1 onto the sides 2 and 3.


Push cams Ca into the holes indicated on the sides 2 and 3.
Arrows pointing towards the top 1.

Turn the cams Ca to the right to fix the top 1.

Ca



ø15 x 10.5mm Cam x 4

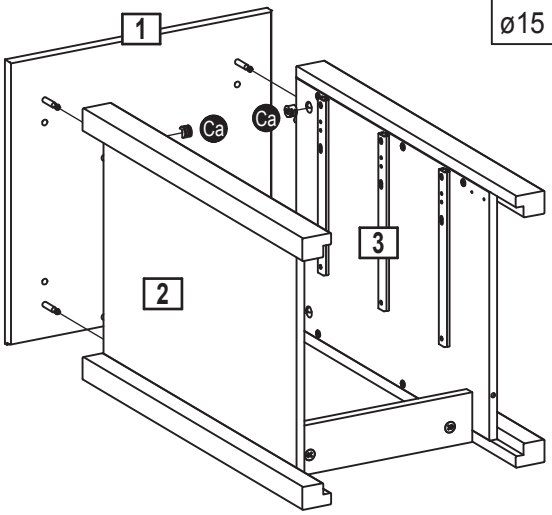

Assembly Instructions

Step 1.10

Place the front rail 5 as shown.


Fix the angles VI to the sides using screws Ko.

See detail.

Ko



ø4,2 x 9,5mm Screw x 4

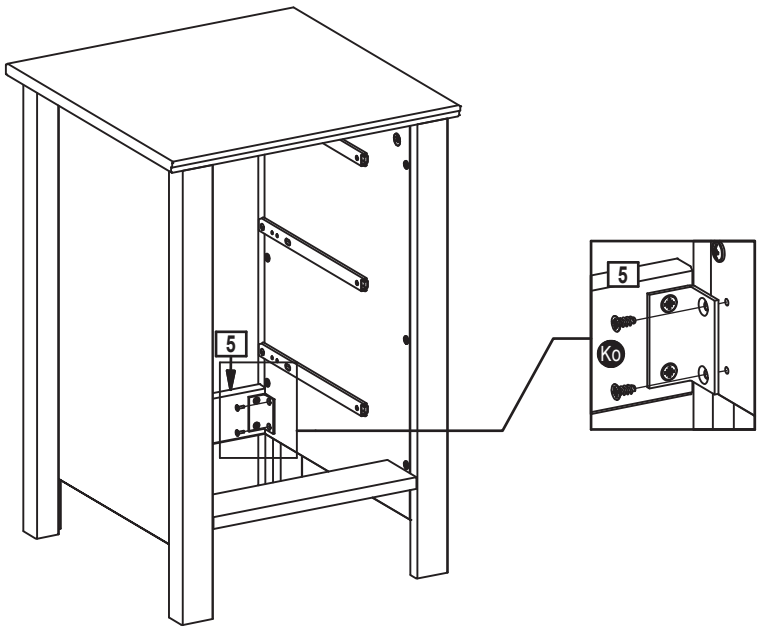

Step 1.11

Place the back 7 into the rabbet on the top 1 and onto the posts 4.

Important!
Make sure the angle between the top 1 and the posts 4 is 90° when the back 7 is attached.

Fix the back 7 to the top 1 and the posts 4 and the back rail 6 using nails Di.

Use a small hammer.

Di




1.2 x 15mm Nail x 14

Assembly Instructions

Step 2

Assembly of the drawers.



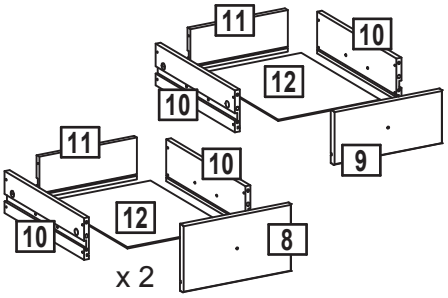

x 2


Step 2.1

Fix the drawer sides 10 to the drawer back 11 as shown, using screws Bp.

Bp



ø3 x 35mm Screw x 12

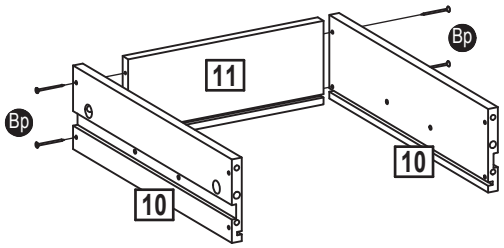

x 3


Step 2.2

Knock the dowels Ab into the holes indicated on the drawer sides 10 using a smal hammer.

Ab




ø6 x 30mm Wooden dowel x 12

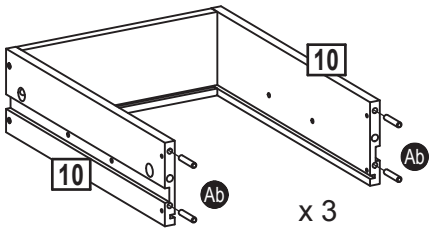

x 3

Step 2.3

Slide the drawer bottom 12 into the drawer sides 10.

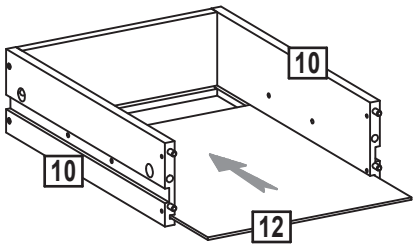


x 3


Step 2.4


Screw the bolts Cb into the holes indicated on the drawer fronts 8 and 9.

Cb



ø5 x 8, cc34mm Bolt x 6

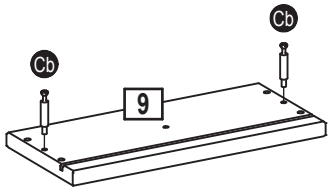

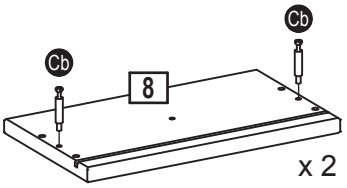


x 2

Assembly Instructions

Step 2.5

Push the drawer fronts [8] and [9] onto the drawer sides [10].


Place cams (Ca) into the holes indicated. Arrow pointing towards the front. Turn the cams (Ca) to the right to fix the fronts.

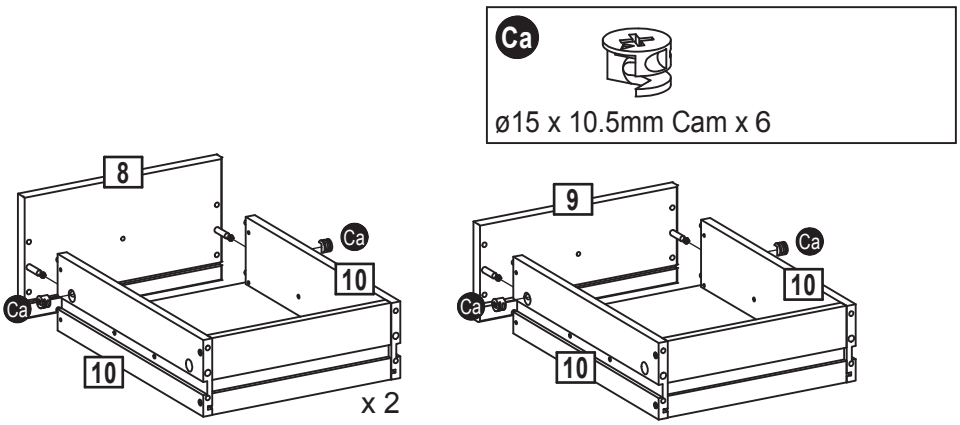

Step 2.6


Important!
Make sure the angle between the drawer front [8]/[9] and the drawer sides [10] is 90° before the drawer bottom [12] is fixed using (Fi) as shown.

To adjust the angle between the drawer sides and the fronts push the fitting (Fi) sidewards. See details.

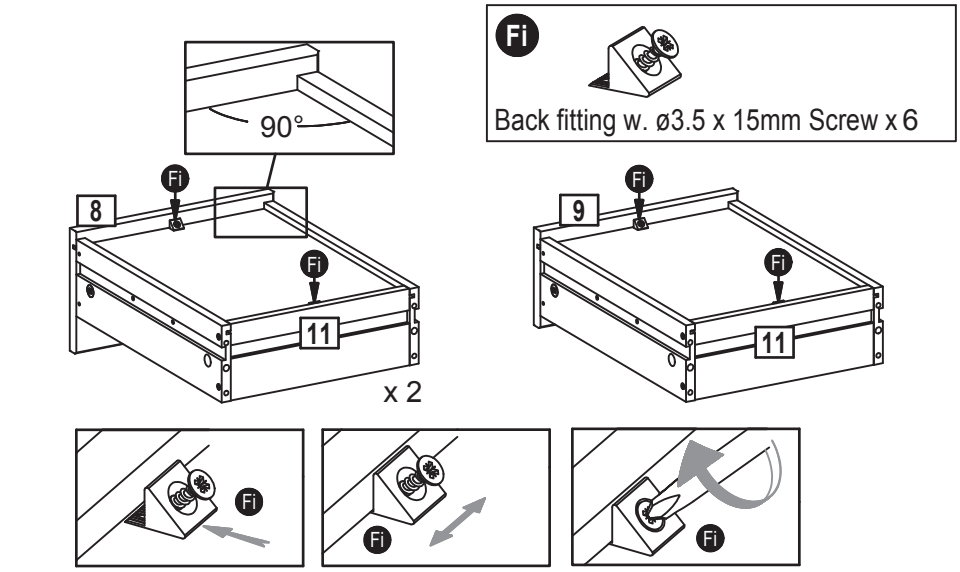

Step 2.7

Fix the metal knobs (Ge) to the drawer fronts [8] and [9] using screws (Hd).

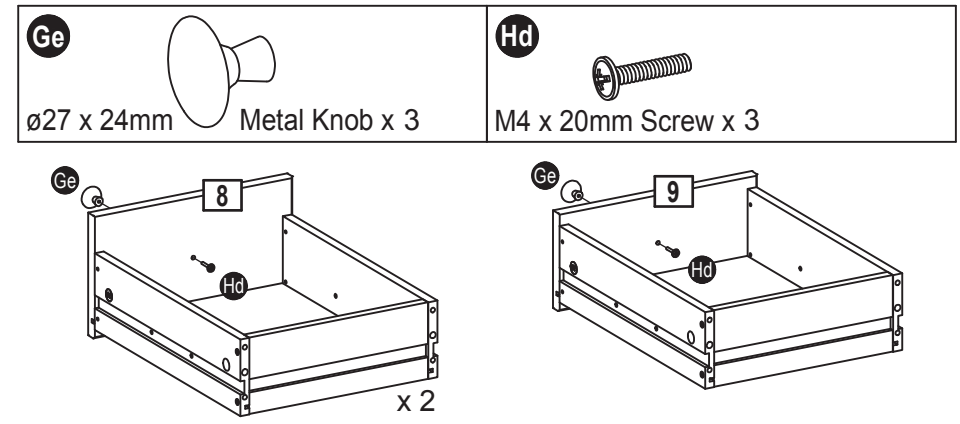


Step 2.8

Pull out the drawer runners. Slide the drawers onto the runners.

Fit and fix the lower drawer first and work your way up.

Fix drawers to the drawer runners using screws (Hk).

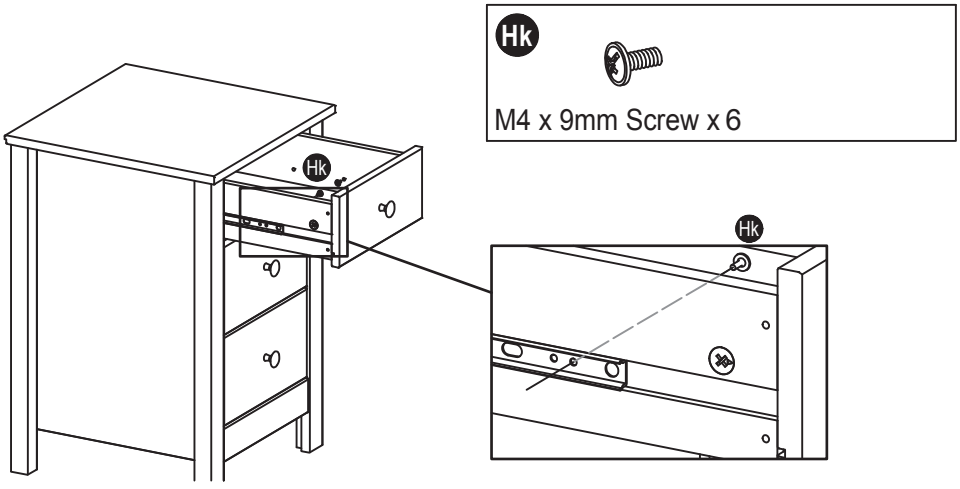


Osaka 4+2 Drawer Chest

Assembly Instructions - Please keep for future reference

White 2377889

Black 2278342

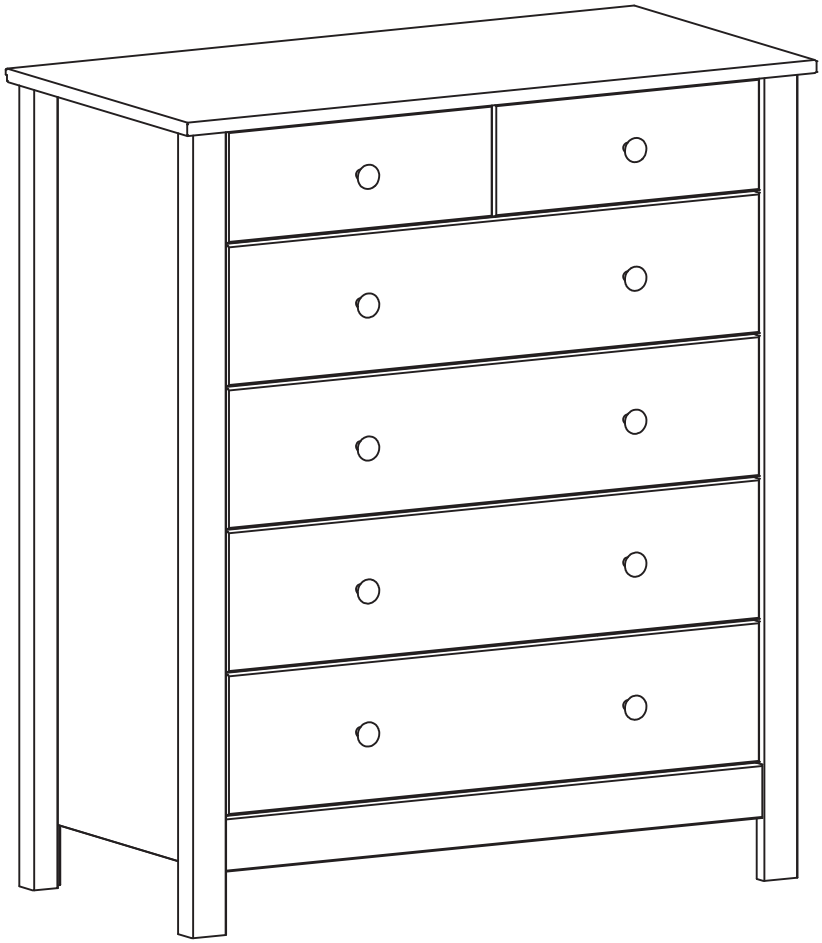

Dimensions

Width : 80.1 cm
Depth : 40.0 cm
Height: 91.6 cm

Assembly Instructions - Please keep for future reference

If you need help or have damaged or missing parts, call the **Argos Customer Helpline: 0845 640 30 30**

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Argos Customer Helpline: 0845 640 30 30**


Please check you have all the panels listed below

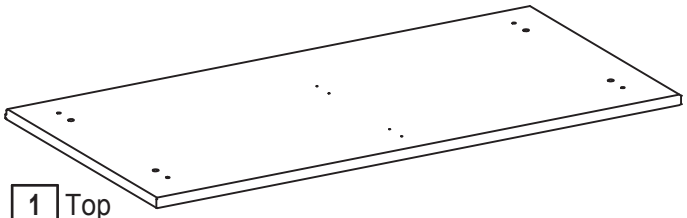

1 Top
(80,1 cm x 40 cm)

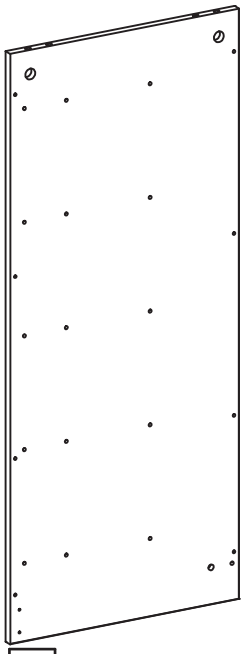


2 Side, left
(83,1 cm x 35 cm)

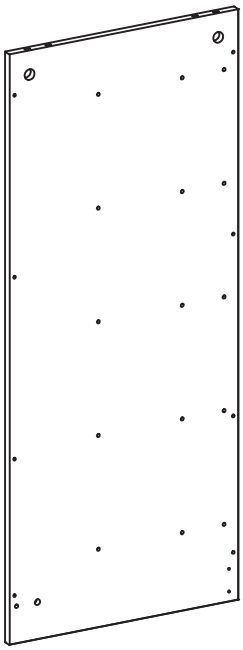


3 Side, right
(83,1 cm x 35 cm)




4 Post x 4
(90,1 cm x 4,4 cm)

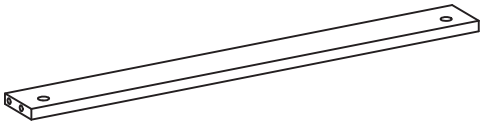


5 Back rail
(68,3 cm x 7 cm)

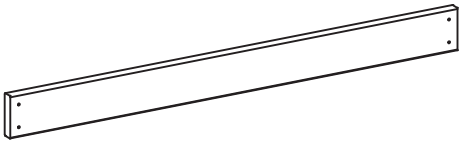


6 Front rail
(68,3 cm x 6 cm)

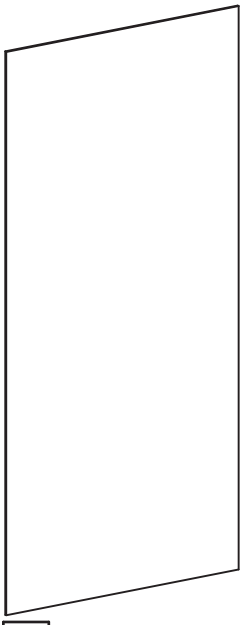


7 Back x 2
(79,3 cm x 35,5 cm)




8 H-profile
(75,5 cm x 1,7 cm)

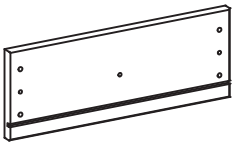

9 Drawer front x 2
(33,7 cm x 12,5 cm)

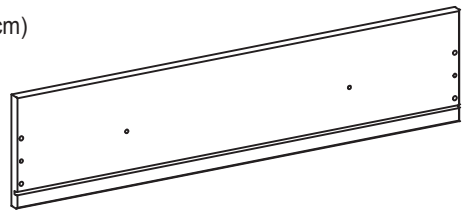


10 Drawer front x 4
(67,7 cm x 15,7 cm)

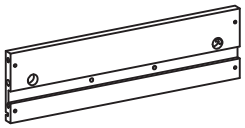


11 Drawer side, right/left x 12
(35 cm x 9,8 cm)



12 Drawer back x 2
(29,2 cm x 9,8 cm)

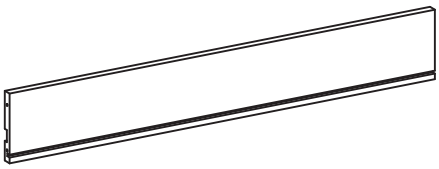

13 Drawer back x 4
(65 cm x 9,8 cm)

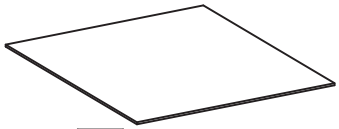

14 Drawer bottom x 2
(30,2 cm x 34,7 cm)










15 Drawer bottom x 4
(66,0 cm x 34,7 cm)

Components - Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

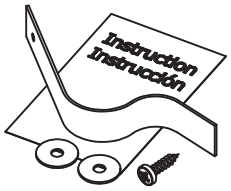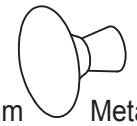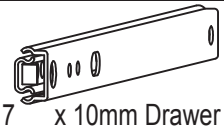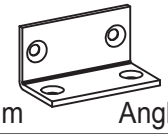Aa  ø7.8 x 40mm Wooden dowel x 6	**Ab**  ø6 x 30mm Wooden dowel x 24	**Bp**  ø3 x 35mm Screw x 24
Ca  ø15 x 10.5mm Cam x 18	**Cb**  ø5 x 8, cc34mm Bolt x 18	**Di**  1.2 x 15mm Nail x 25
Fh  Wall strap and instruction x 1	**Fi**  Back fitting w. ø3.5 x 15mm Screw x 12	**Ge**  ø27 x 24mm Metal Knob x 10
	Hd  M4 x 20mm Screw x 10	**Hk**  M4 x 9mm Screw x 12
Jb  ø4 x 25mm Screw x 16	**Je**  ø3.5 x 14mm Screw x 4	**Kb**  ø5.8 x 8mm Screw x 28
Kf  ø5.8 x 19mm Screw x6	**Ko**  ø4,2 x 9,5mm Screw x 8	**Nu**  ø18 x 9mm Spacer x 6
Sk  245 x 17 x 10mm Drawer runner x 12	**Vl**  44 x 23 x 23mm Angle x 2	**Wb**  Support for drawer runner x 2

Tools required



Phillips screwdriver
(Medium & large)




Hammer



Flatblade screwdriver
(Medium)


Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Assembly of the chest.

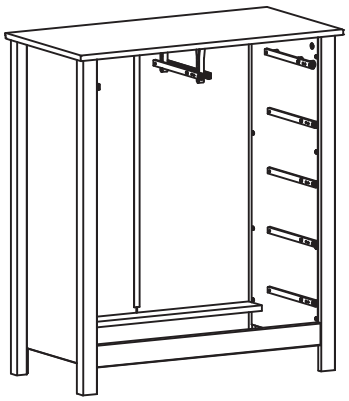

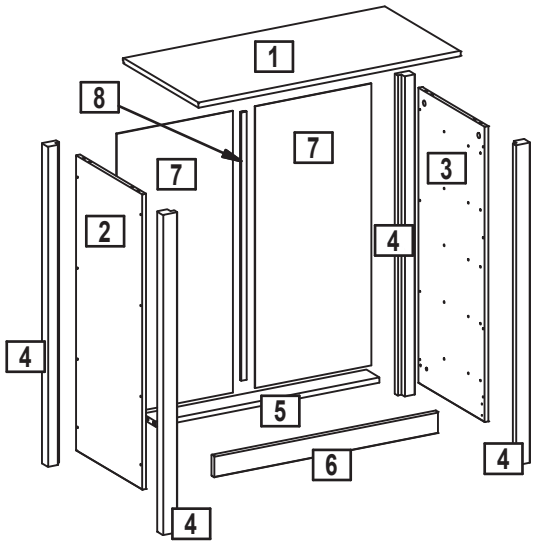



Step 1.1

Fix the posts 4 onto the sides 2 and 3 using screws Jb into the holes indicated.
The top of the posts 4 and the sides 2 and 3 must be flush.

Jb

ø4 x 25mm Screw x 16

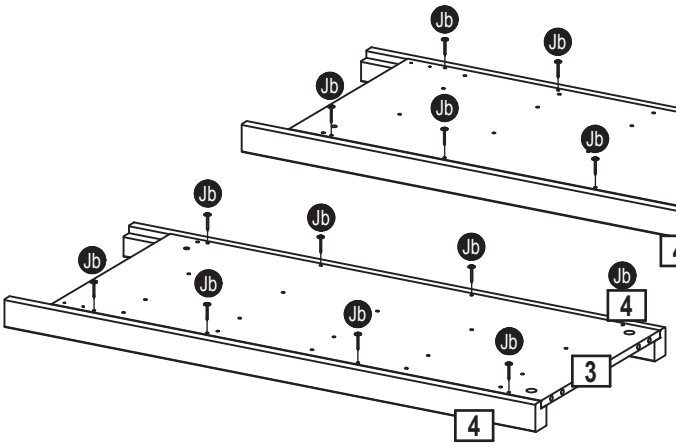

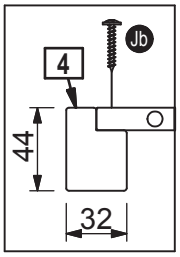


Step 1.2

Knock the dowels Aa into the holes indicated on the sides 2 and 3 using a small hammer.

Screw the bolts Cb into the holes indicated on the sides 2 and 3.

Aa	Cb
	
ø7.8 x 40mm Wooden dowel x 4	ø5 x 8, cc34mm Bolt x 2

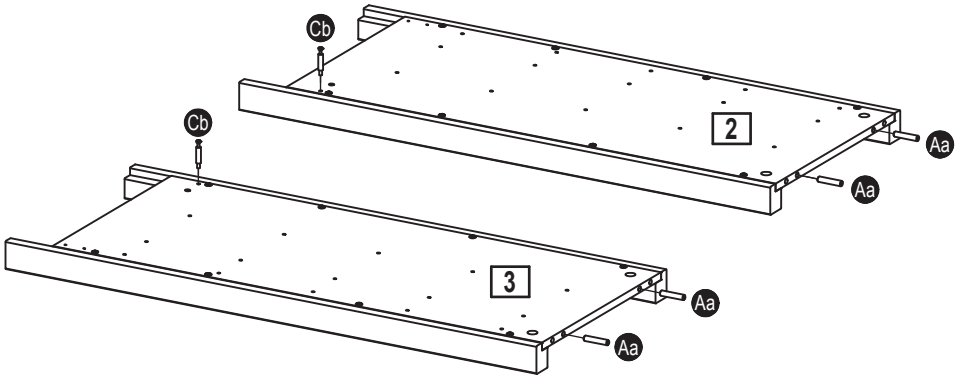

Assembly Instructions


Step 1.3


Slide the top of the drawer runners Sk backwards. You can identify the front end of the drawer runner Sk by the two M4 holes. See details.


Place the Spacers Nu as shown, and fix the front end of the upper drawer runners Sk to the sides 2 and 3 using screws Kf through the holes number 1 and 7 as indicated.

Fix the front end of the rest of the drawer runners Sk to the sides 2 and 3 using screws Kb through the holes number 1 and 7 as indicated.

See details.

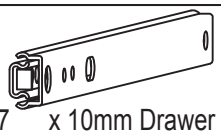Kb  ø5.8 x 8mm Screw x 16	Kf  ø5.8 x 19mm Screw x4
Nu  ø18 x 9mm Spacer x 4	Sk  245 x 17 x 10mm Drawer runner x 10



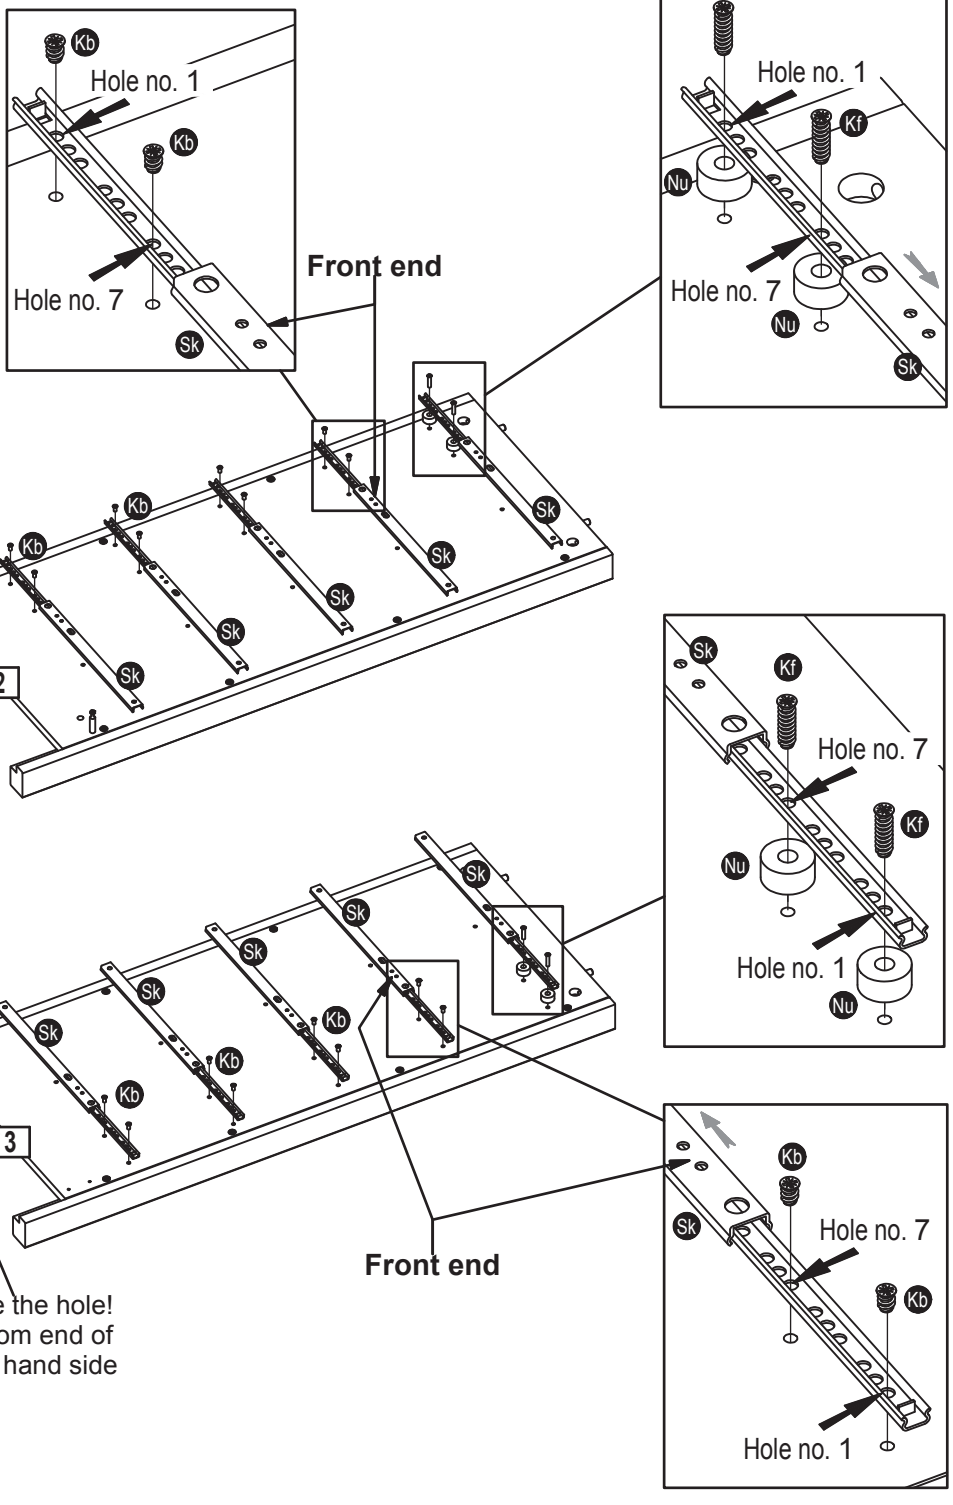

Assembly Instructions

Step 1.4


Slide the top of the drawer runners Sk forwards.

Place the Spacers Nu as shown, and fix the back end of the upper drawer runners Sk to the sides 2 and 3 using screws Kf through the holes indicated.

Fix the back end of the rest of the drawer runners Sk to the sides 2 and 3 using screws Kb through the holes indicated.

See details.


Kb	Kf
ø5.8 x 8mm Screw x 8	ø5.8 x 19mm Screw x2
Nu	
ø18 x 9mm Spacer x 2	

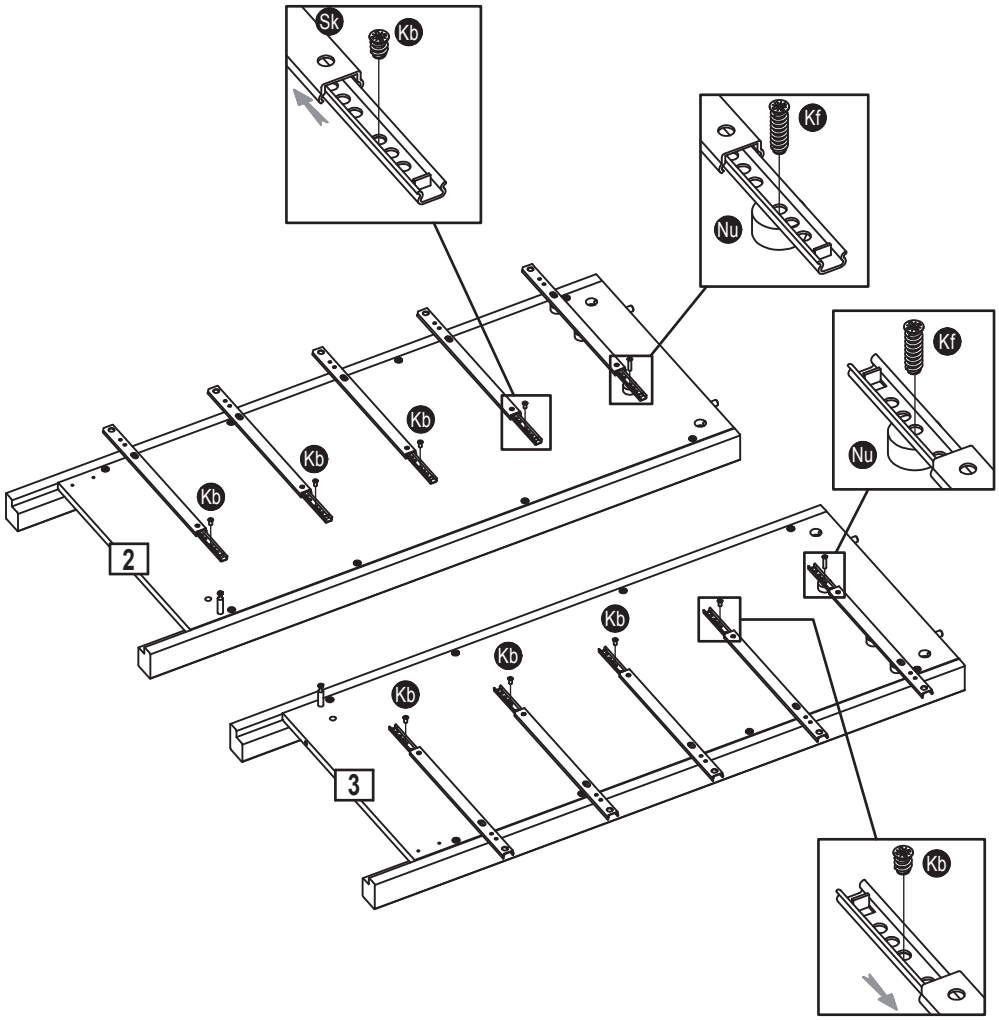


Step 1.5

Screw the bolts Cb into the holes indicated on the top 1.

Cb
ø5 x 8, cc34mm Bolt x 4

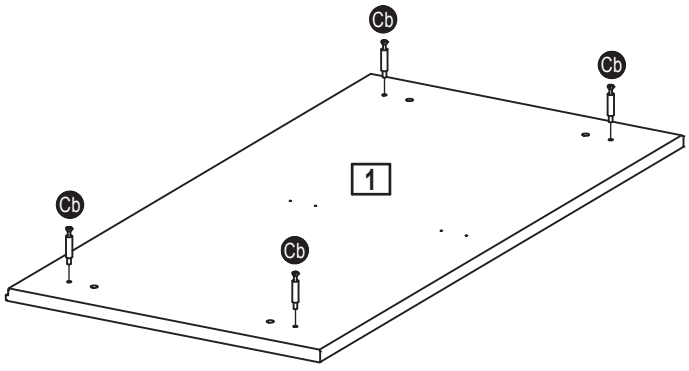

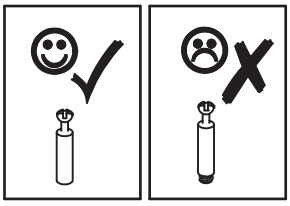


Assembly Instructions

Step 1.6

Fix the drawer runner supports Wb to the top 1 using screws Je into the holes indicated.

Je	Wb
ø3.5 x 14mm Screw x 4	Support for drawer runner x 2

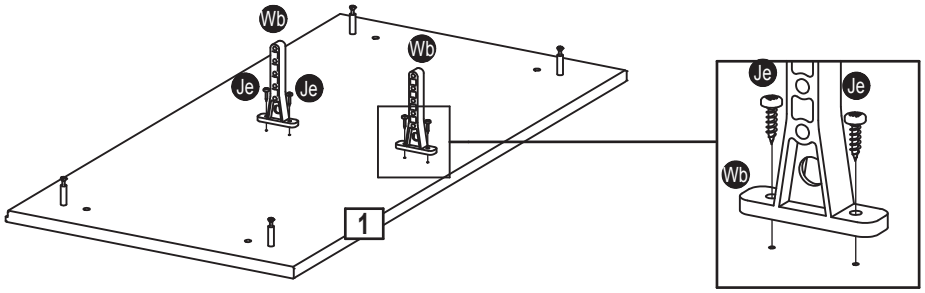


Kb	Sk
ø5.8 x 8mm Screw x 2	245 x 17 x 10mm Drawer runner x 2

Step 1.7

Slide the top of the drawer runners Sk backwards. You can identify the front end of the drawer runner Sk by the two M4 holes.

Fix the front end of the drawer runners Sk to the drawer runner support Wb using screws Kb through the holes number 2 as indicated.

See details.

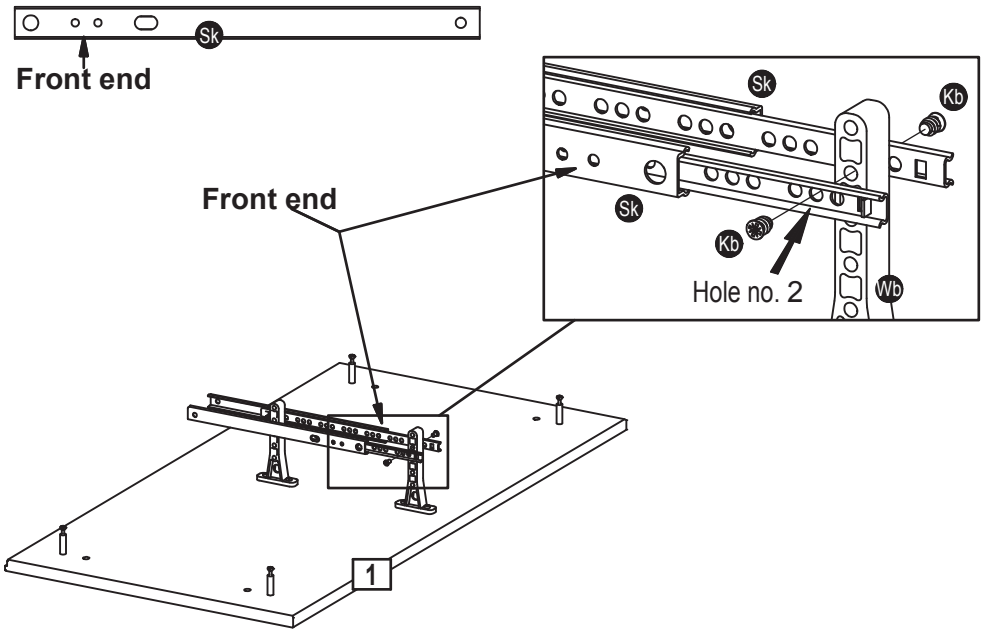


Step 1.8

Slide the top of the drawer runners Sk forwards.

Fix the drawer runners Sk to the drawer runner support Wb using screws Kb through the holes indicated.

See details.

Kb
ø5.8 x 8mm Screw x 2

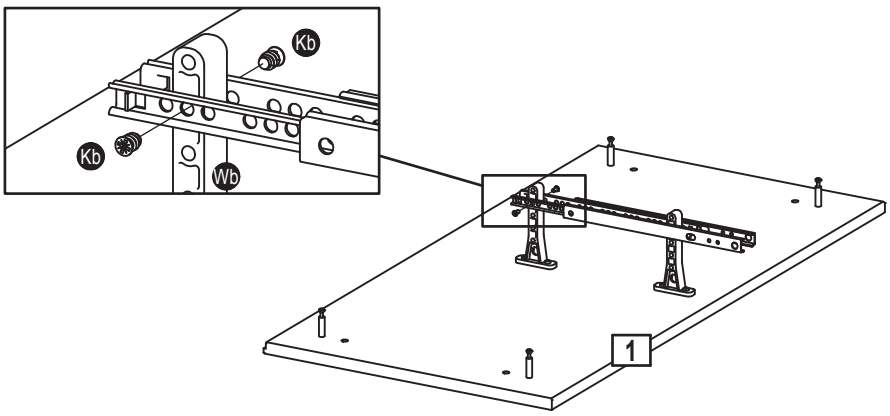

Assembly Instructions


Step 1.9

Knock the dowels Aa into the holes indicated on the back rail 5 using a small hammer.

Aa



ø7.8 x 40mm Wooden dowel x 2

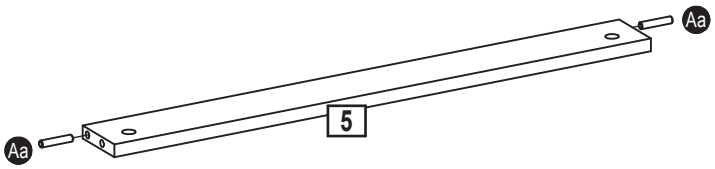


Step 1.10

Fix the angles Vl using screws Ko into the holes indicated on the front rail 6.


Ko

ø4,2 x 9,5mm Screw x 4

Vl

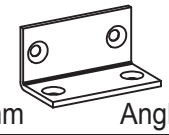

44 x 23 x 23mm Angle x 2

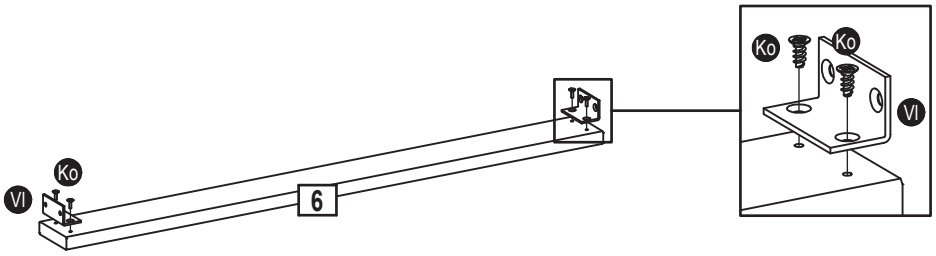

Step 1.11

Place the sides 2 and 3 onto the back rail 5.


Push cams Ca into the holes indicated on the back rail 5.
Arrows pointing towards the sides 2/3.


Turn the cams Ca to the right to fix the sides 2 and 3.

Ca



ø15 x 10.5mm Cam x 2

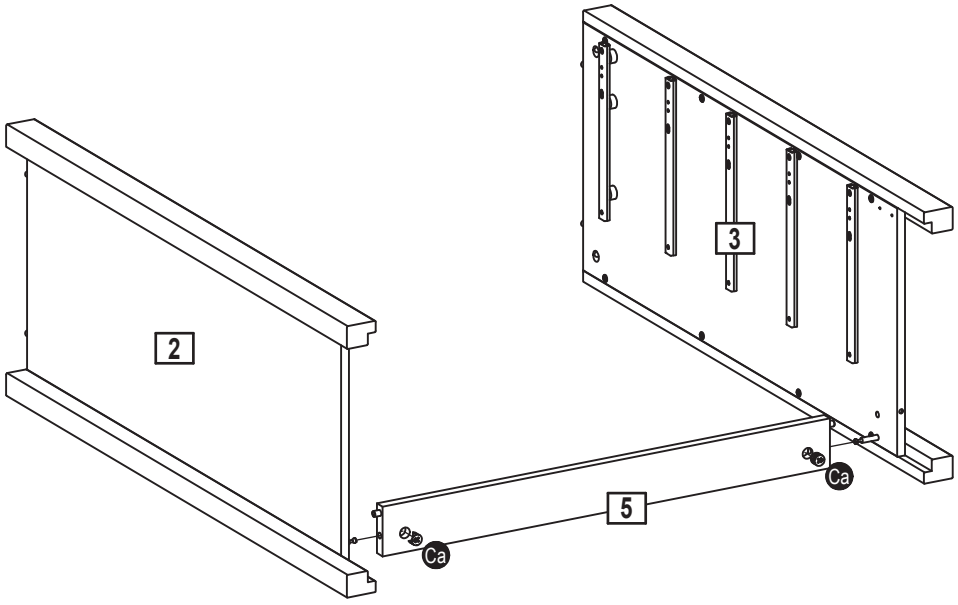

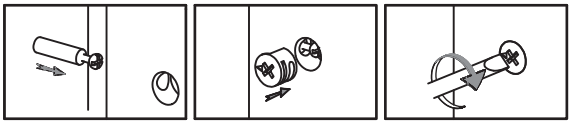

Assembly Instructions

Step 1.12

Place the top 1 onto the sides 2 and 3.


Push cams Ca into the holes indicated on the sides 2 and 3. Arrows pointing towards the top 1.

Turn the cams Ca to the right to fix the top 1.

Ca



ø15 x 10.5mm Cam x 4

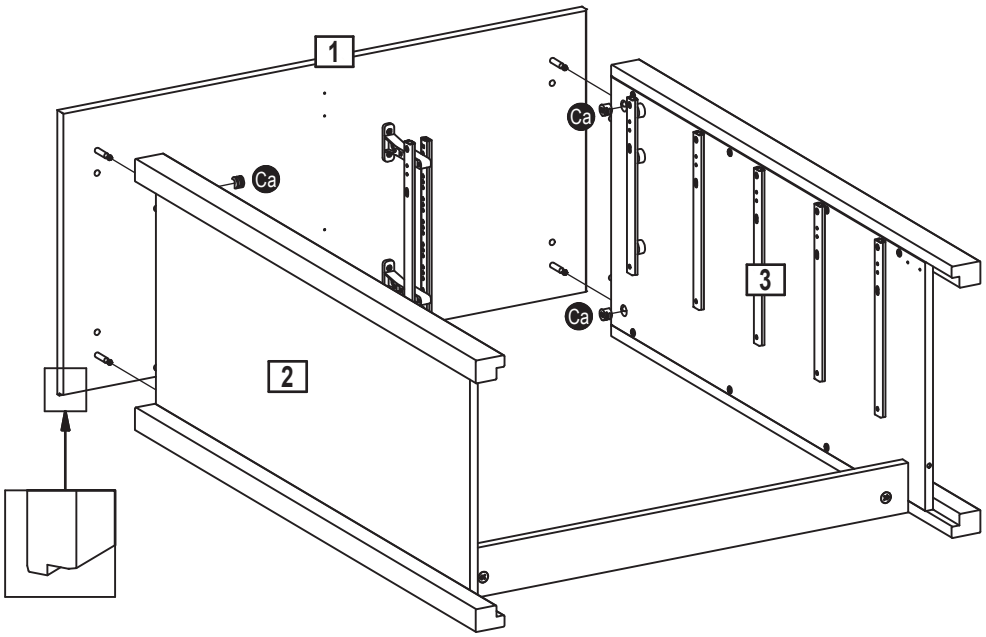

Step 1.13

Place the front rail 6 as shown.


Fix the angles Vl to the sides using screws Ko.

See detail.

Ko



ø4,2 x 9,5mm Screw x 4

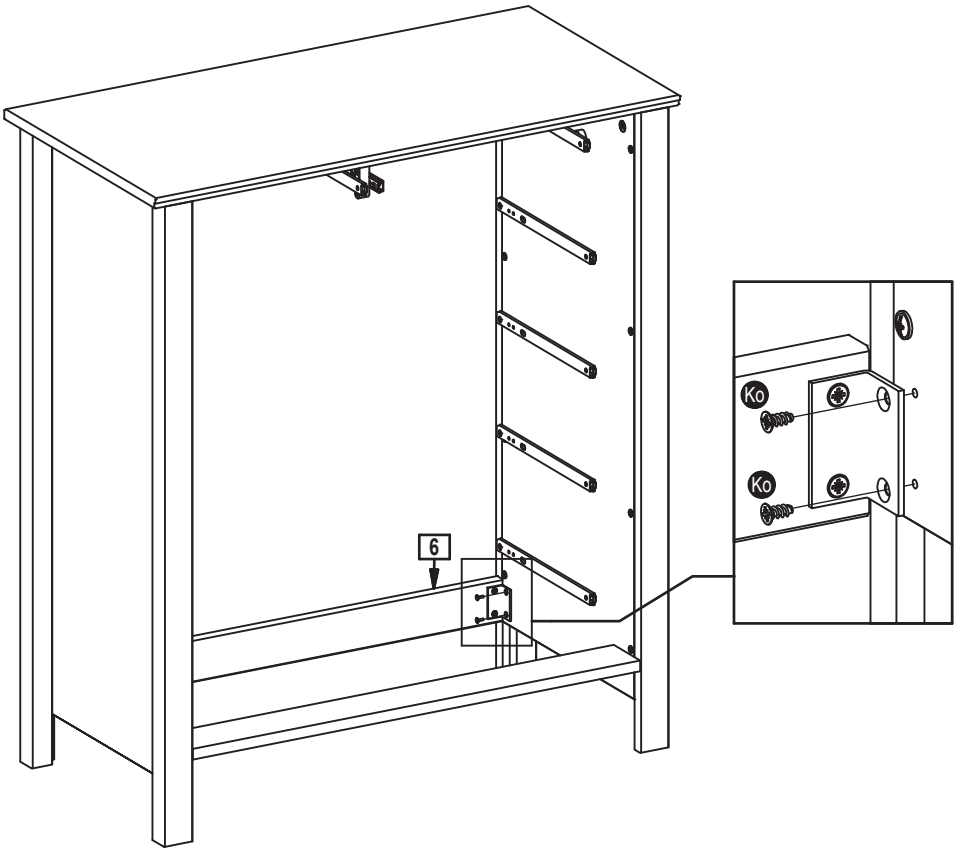

Assembly Instructions


Step 1.14

Place the backs 7 into the rabbet on the top 1 into the H-profile 8 and onto the posts 4.

Important!
Make sure the angle between the top 1 and the posts 4 is 90° when the backs 7 is attached.

Fix the backs 7 to the top 1, the posts 4 and the back rail 5 using nails Di.

Use a small hammer.

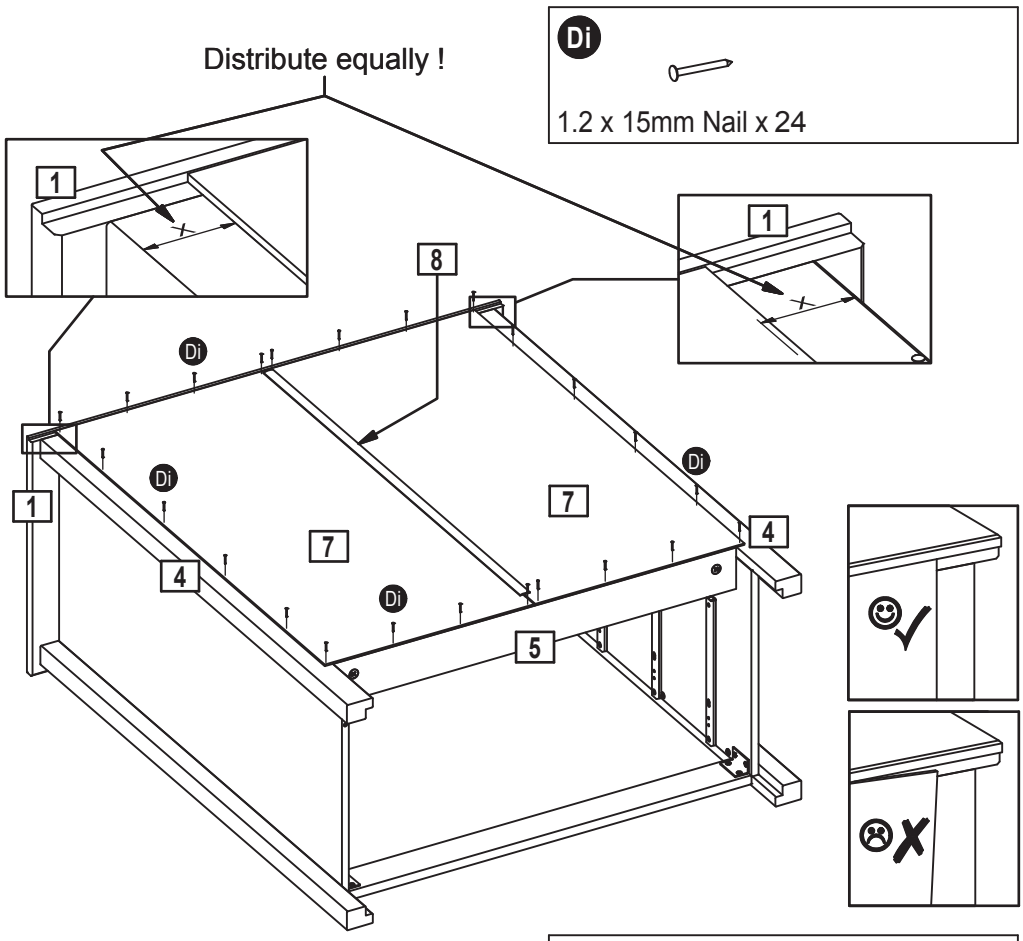


Step 1.15

Important!
The chest of drawers is heavy. Lift with care.

Its recommended that the chest is fixed to the wall.

Use the fittings Fh. Follow the instructions included with the fittings.

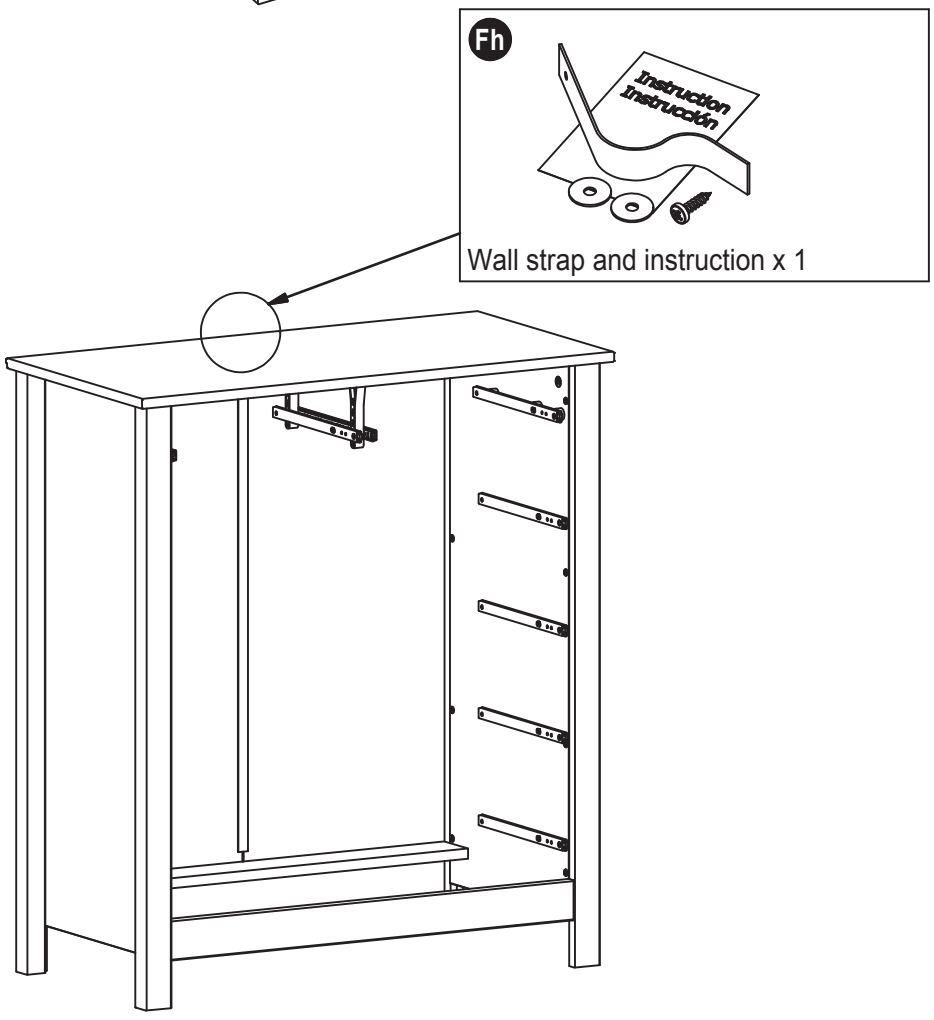


Assembly Instructions

Step 2

Assembly of the drawers.



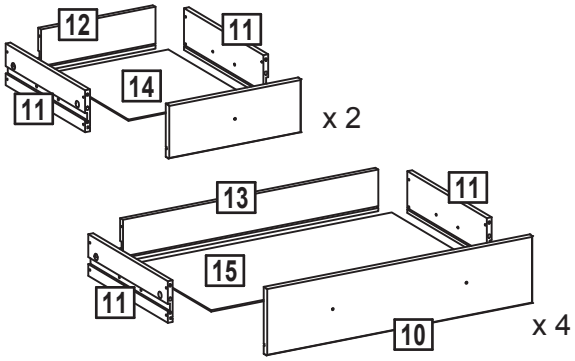


Step 2.1

Fix the drawer sides 11 to the drawer backs 12 and 13 as shown, using screws Bp.

Bp



ø3 x 35mm Screw x 24

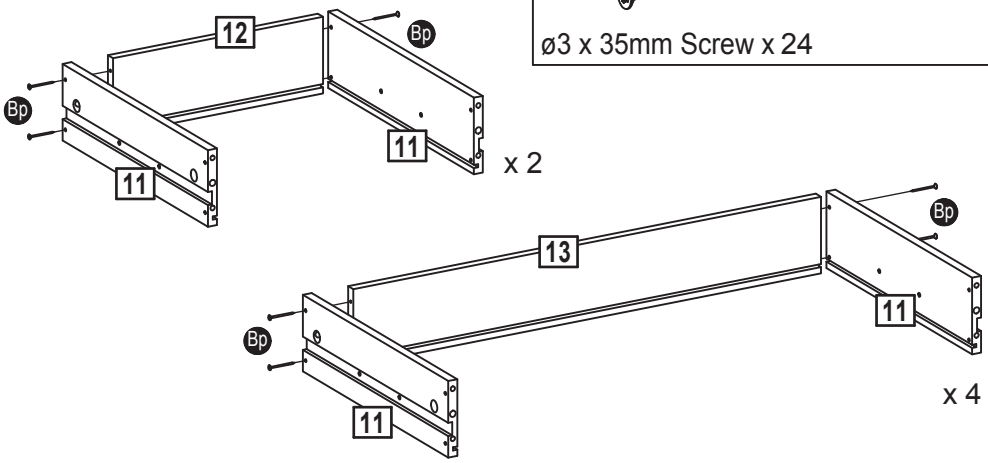

Step 2.2

Knock the dowels Ab into the holes indicated on the drawer sides 11 using a smal hammer.


Ab



ø6 x 30mm Wooden dowel x 24

Step 2.3


Slide the drawer bottoms 14 and 15 into the drawer sides 11.

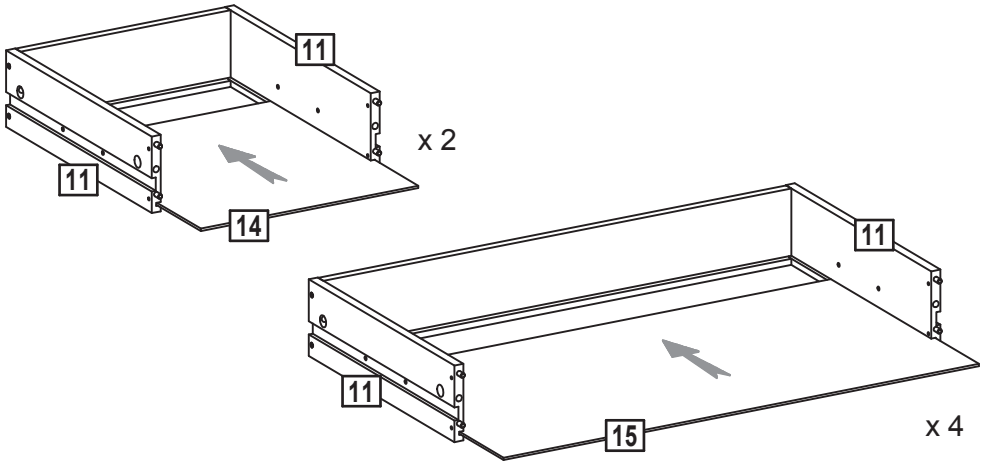



Assembly Instructions

Step 2.4

Screw the bolts Cb into the holes indicated on the drawer fronts 9 and 10.

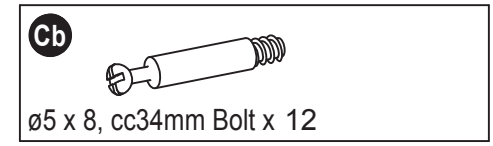

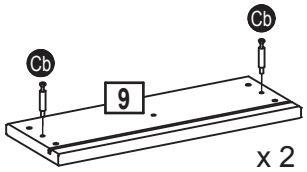


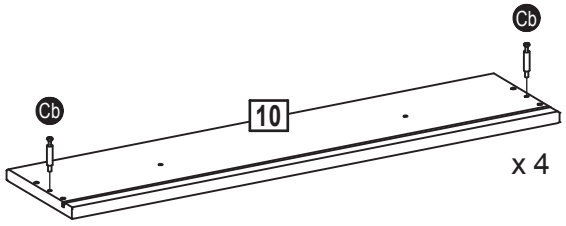



Step 2.5

Push the drawer fronts 9 and 10 onto the drawer sides 11.

Place cams Ca into the holes indicated. Arrow pointing towards the front. Turn the cams Ca to the right to fix the front.

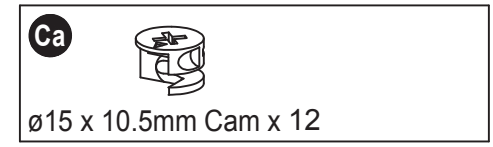

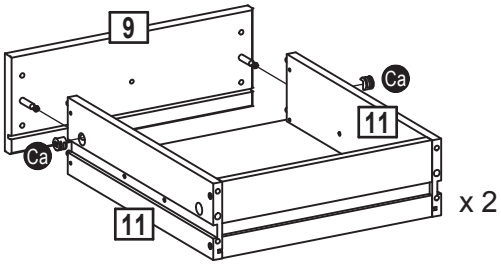


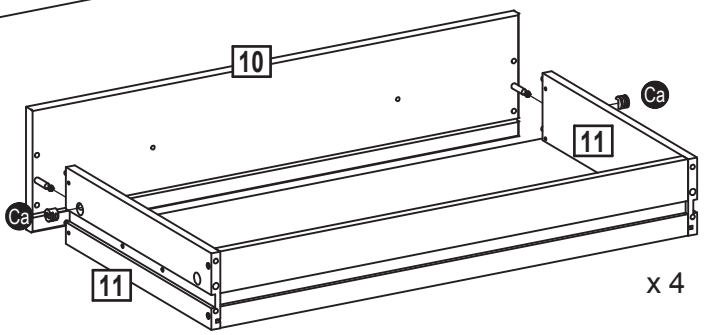



Step 2.6


Important!
Make sure the angle between the drawer fronts 9 / 10 and the drawer sides 11 is 90° before the drawer bottoms 14 and 15 is fixed using Fi as shown.

To adjust the angle between the drawer sides and the fronts push the fitting Fi sidewards. See details.

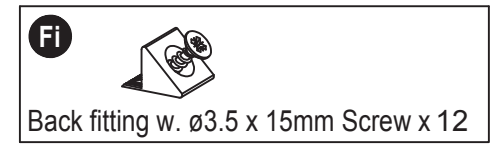

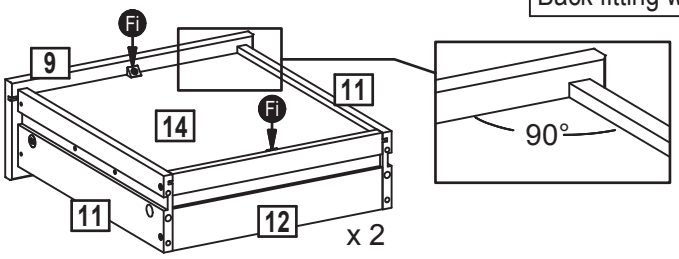

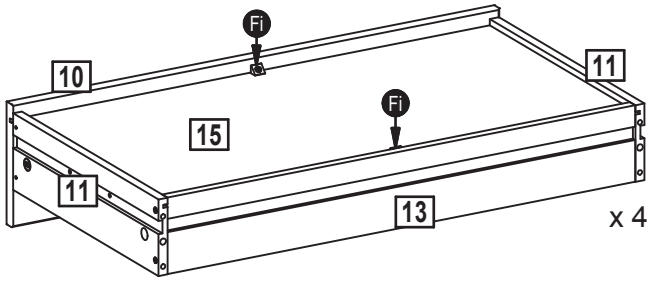


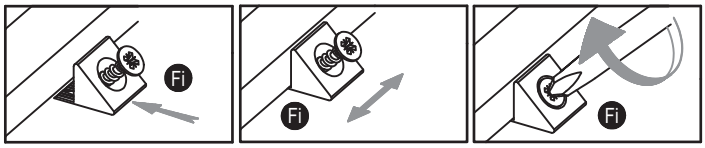


Step 2.7

Fix the metal knobs Ge to the drawer fronts 9 and 10 using screws Hd.

Ge	Hd
ø27 x 24mm Metal Knob x 10	M4 x 20mm Screw x 10

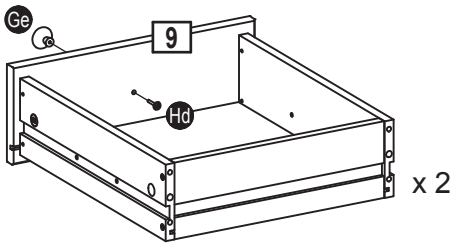

x 2

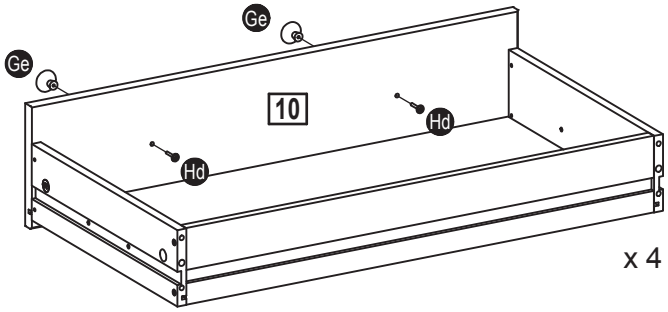

x 4


Step 2.8

Pull out the drawer runners. Slide the drawers onto the runners.

Fit and fix the lower drawer first and work your way up.

Fix drawers to the drawer runners using screws Hk.

Hk
M4 x 9mm Screw x 12

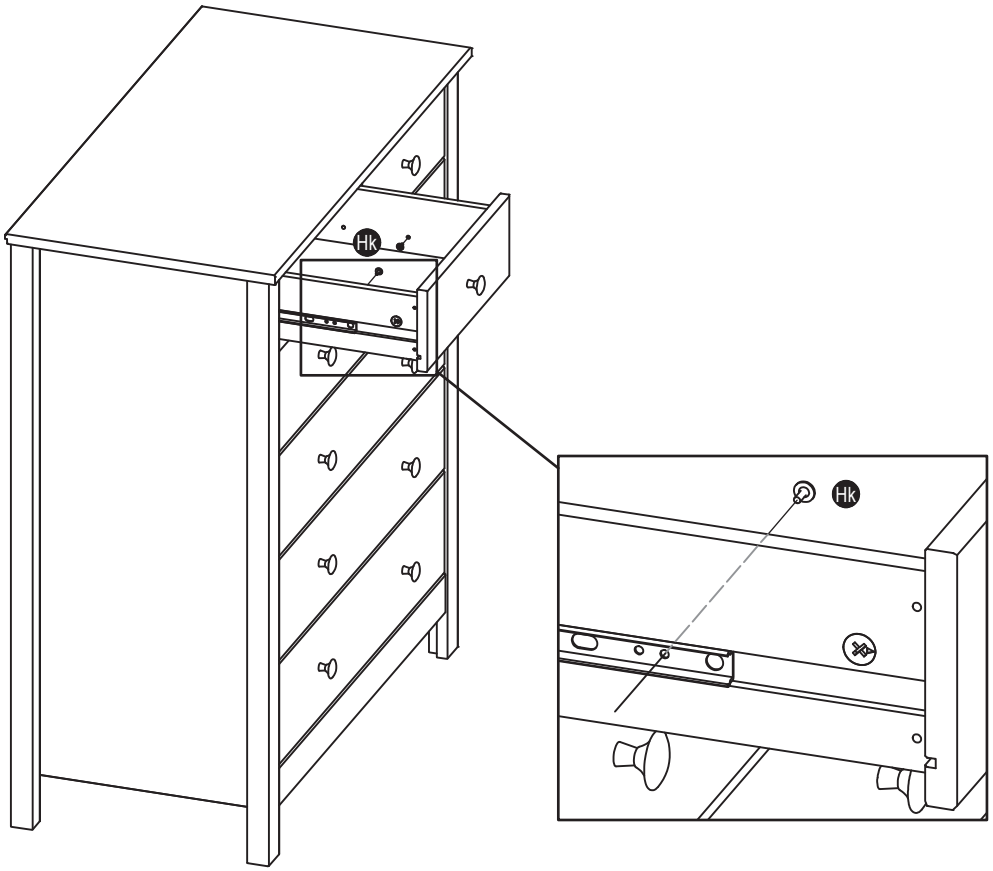


Osaka 3 Door 4 Drawer Wardrobe w. mirror

Assembly Instructions - Please keep for future reference

White 3461684

Black 3431731

Putty 3468711

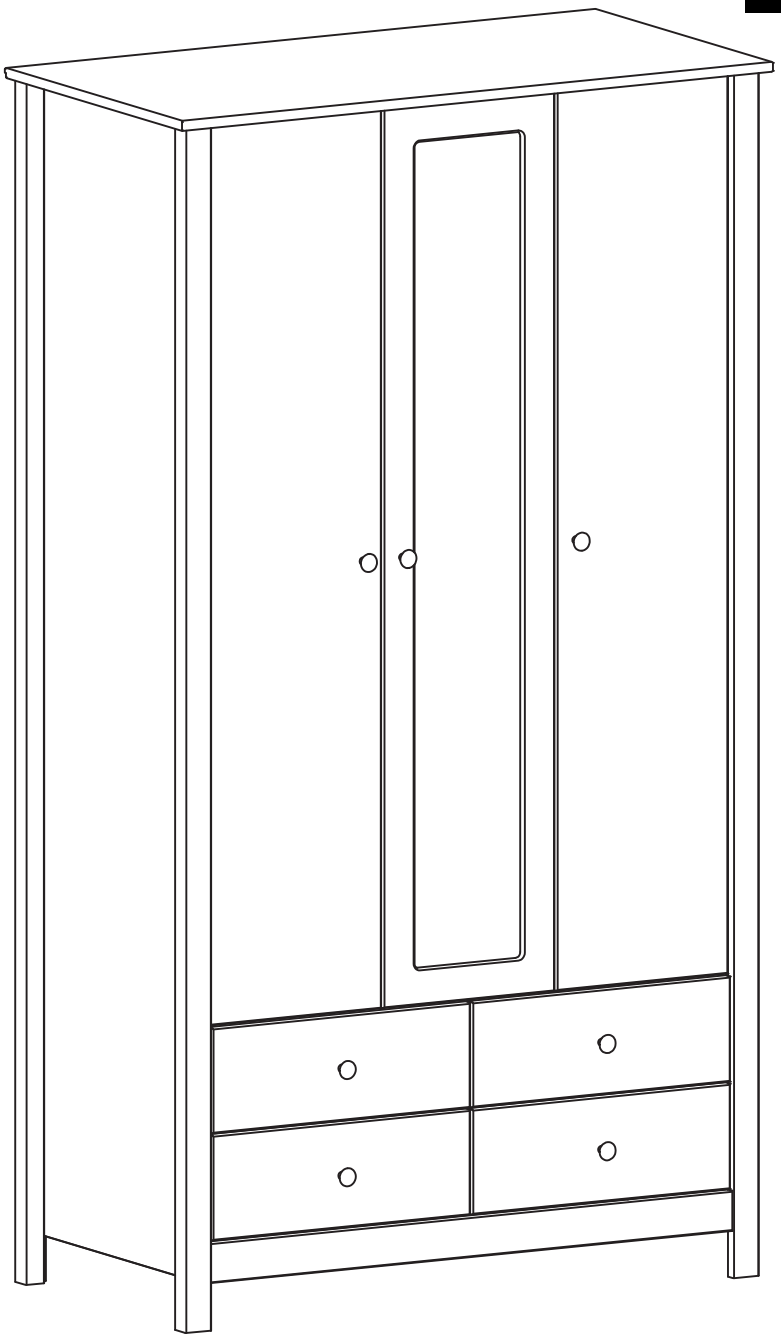

Dimensions

Width : 100.3 cm
Depth : 52.0 cm
Height: 181.2 cm

Assembly Instructions - Please keep for future reference

If you need help or have damaged or missing parts, call the **Argos Customer Helpline: 03456 400 800**

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Argos Customer Helpline: 03456 400 800**


Please check you have all the panels listed below

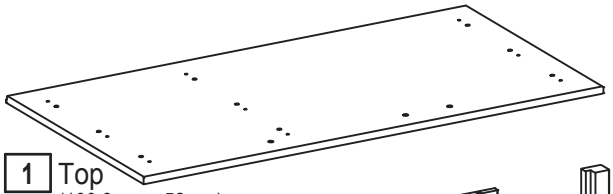

1 Top
(100,3 cm x 52 cm)

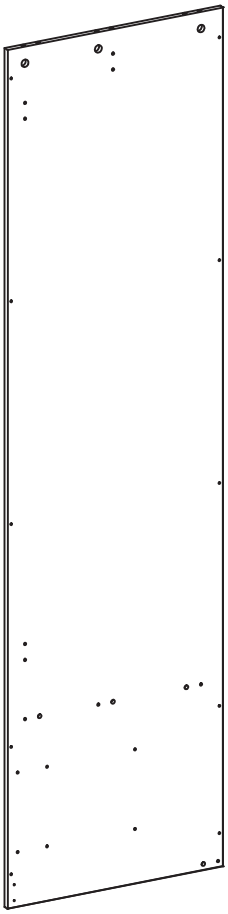


2 Side, left
(172,7 cm x 47 cm)

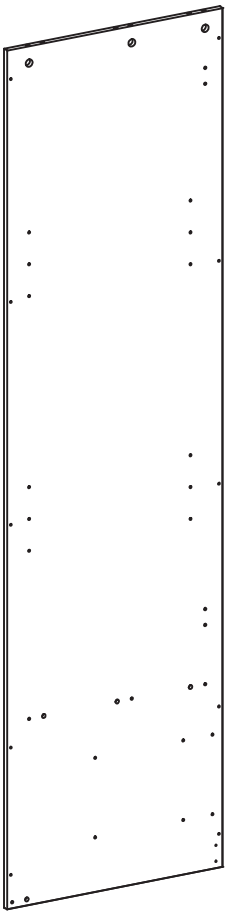


3 Side, right
(172,7 cm x 47 cm)




4 Post x 4
(179,7 cm x 4,4 cm)

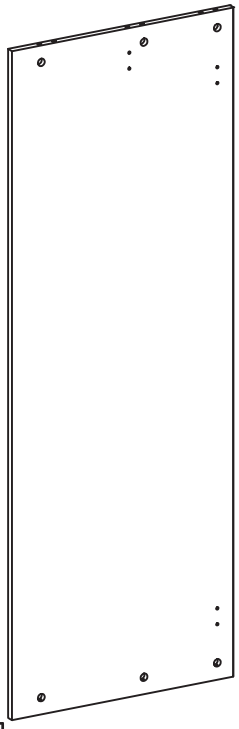


5 Divider, large
(134,5 cm x 48,4 cm)

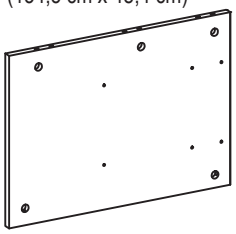


6 Divider, small
(34,7 cm x 48,3 cm)

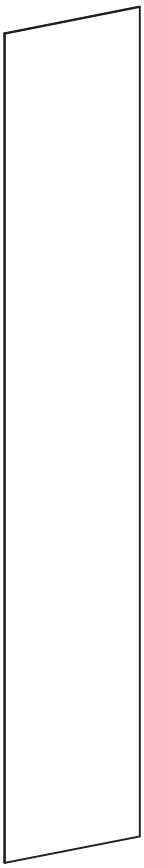


7 Back x 3
(172,9 cm x 30,5 cm)




8 H-profile
(134,0 cm x 1,7 cm)

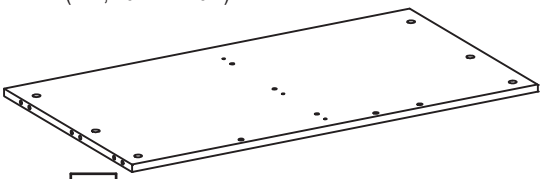

9 Bottom
(88,5 cm x 48,4 cm)

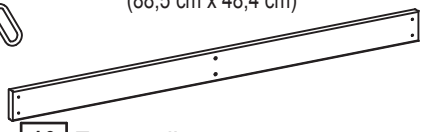


10 Front rail
(88,5 cm x 6 cm)




11 Back rail
(88,5 cm x 7 cm)



12 Shelf x 2
(28,8 cm x 47 cm)

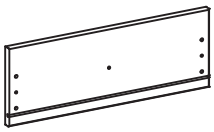


13 Drawer front x 4
(43,8 cm x 15,7 cm)




14 Drawer side, right/left x 8
(45 cm x 9,8 cm)



15 Drawer back x 4
(39,3 cm x 9,8 cm)




16 Drawer bottom x 4
(40,3 cm x 44,7 cm)

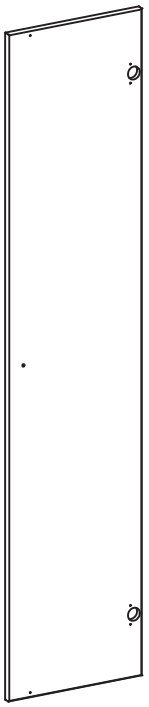

17 Door x 2
(134,1 cm x 29,1 cm)



18 Hanging rail
(57,4 cm x 2,2 cm)






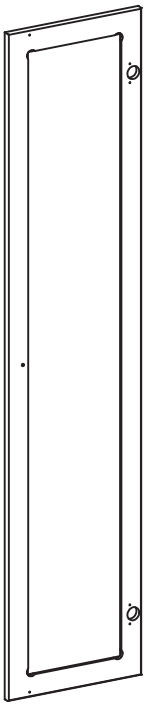


19 Mirror Door
(134,1 cm x 29,1 cm)


Components - Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

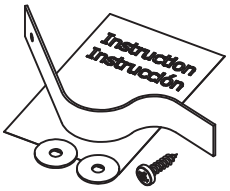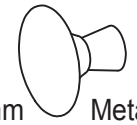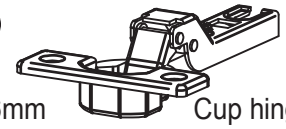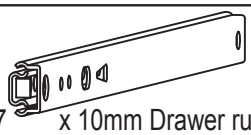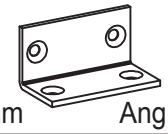Aa  ø7.8 x 40mm Wooden dowel x 23	**Ab**  ø6 x 30mm Wooden dowel x 16	**Bo**  ø3 x 12mm Screw x 26
Bp  ø3 x 35mm Screw x 16	**Ca**  ø15 x 10.5mm Cam x 33	**Cb**  ø5 x 8, cc34mm Bolt x 33
Di  1.2 x 15mm Nail x 50	**Fc**  Back fitting - 14 x 19mm x 6	**Fh**  Wall strap and instruction x 1
Fi  Back fitting w. ø3.5 x 15mm Screw x 8	**Fl**  Support for hanger rail - 15mm x 2	
Fr  Shelf support x 8	**Ge**  ø27 x 24mm Metal Knob x 7	**Hd**  M4 x 20mm Screw x 7
Hk  M4 x 9mm Screw x 8	**Jb**  ø4 x 25mm Screw x 20	**Kb**  ø5.8 x 8mm Screw x 20
Kf  ø5.8 x 19mm Screw x12	**Ko**  ø4,2 x 9,5mm Screw x 8	**Me**  ø26mm Cup hinge x 2
Mf  ø26mm Cup hinge x 4	**Mc**  0mm Crossplate x 6	**Nu**  ø10 x 9mm Spacer x 12
Pc  Magnet, adjustable x 6	**Pd**  35 x 12 x 1mm Magnet catch x 6	**Sa**  310 x 17 x 10mm Drawer runner x 8
Vl  44 x 23 x 23mm Angle x 2		


Tools required

 Flatblade screwdriver (Medium)

 Phillips screwdriver (Medium & large)

 Hammer


Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Assembly of the wardrobe.

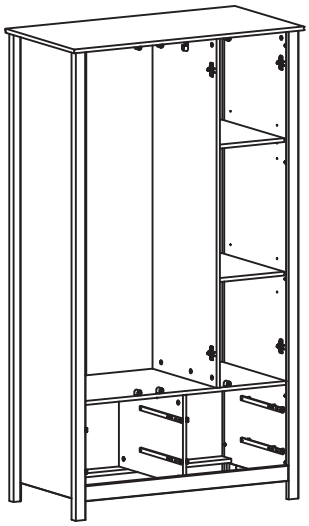

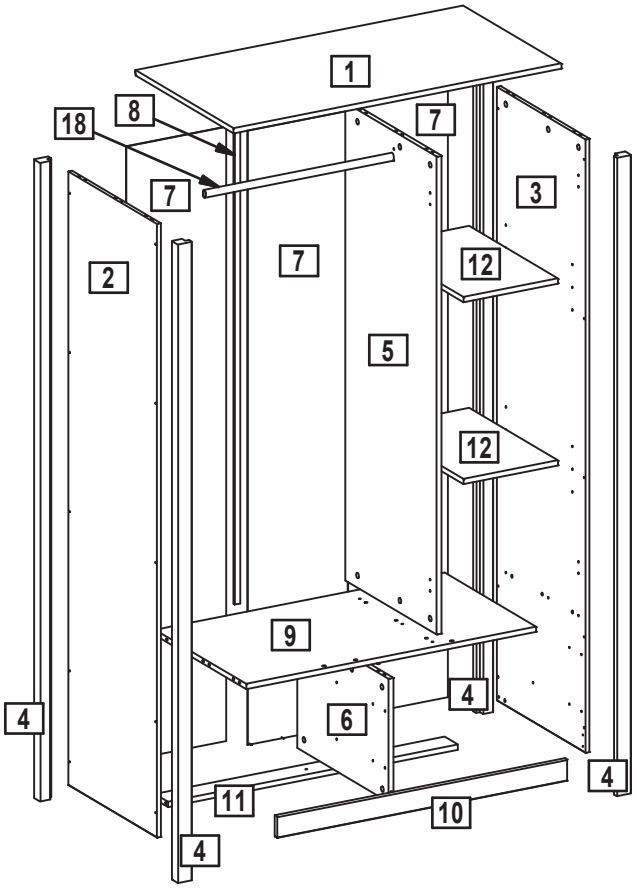


Step 1.1

Fix the posts 4 onto the sides 2 and 3 using screws Jb into the holes indicated.


Jb



ø4 x 25mm Screw x 20

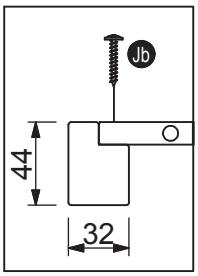

The top of the posts 4 and the sides 2 and 3 must be flush.

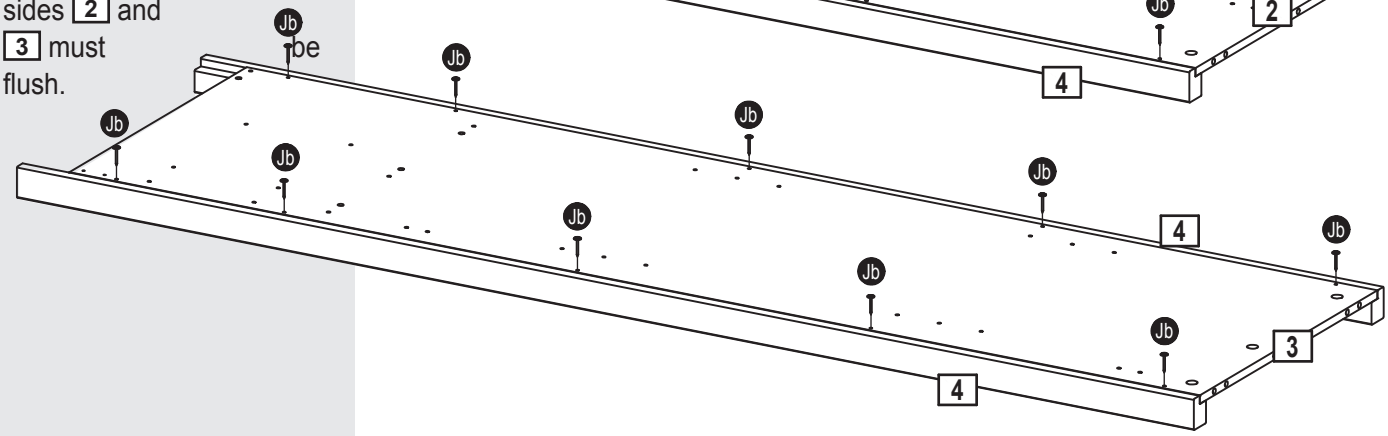


Assembly Instructions

Step 1.2

Knock the dowels Aa into the holes indicated on the sides 2 and 3 using a small hammer.

Screw the bolts Cb into the holes indicated on the sides 2 and 3.

Aa	Cb
ø7.8 x 40mm Wooden dowel x 6	ø5 x 8, cc34mm Bolt x 8

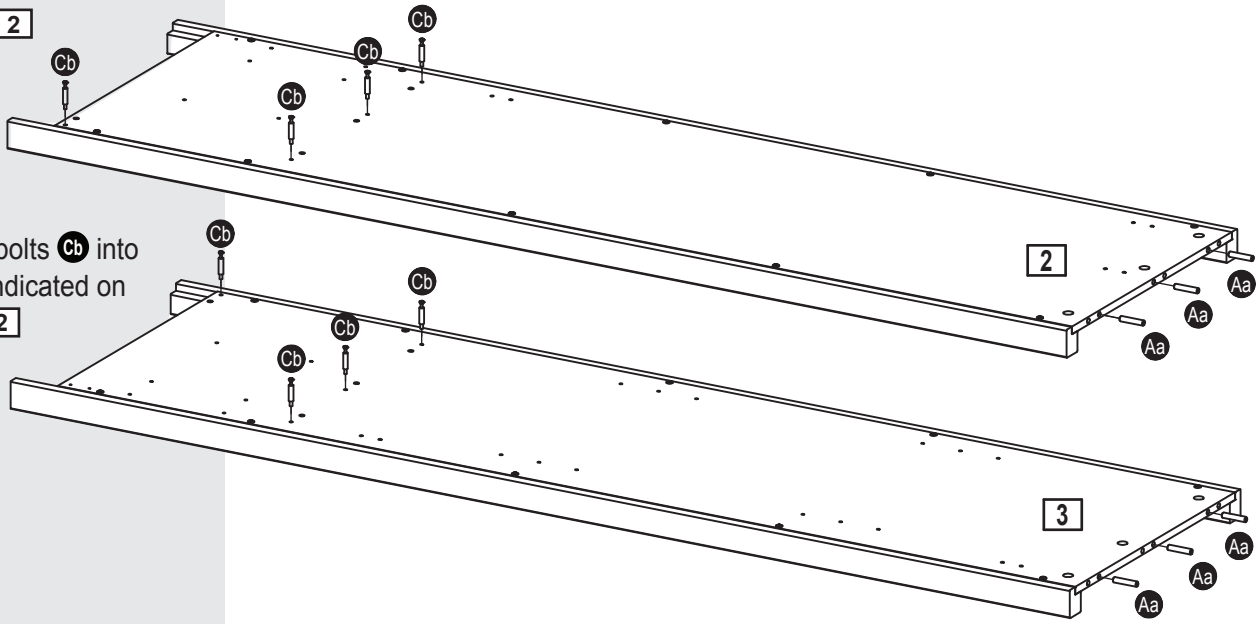


Step 1.3

Fix the Crossplates Mc to the sides 2 and 3 using the pre-mounted screws.
Note the details.

Position the Crossplates Mc exactly as shown.

Fix the support for hangerrail Fl onto the left hand side 2 using screw Bo.

Bo	Fl
ø3 x 12mm Screw x 1	Support for hanger rail - 15mm x 1
Mc	
0mm Crossplate x 4	

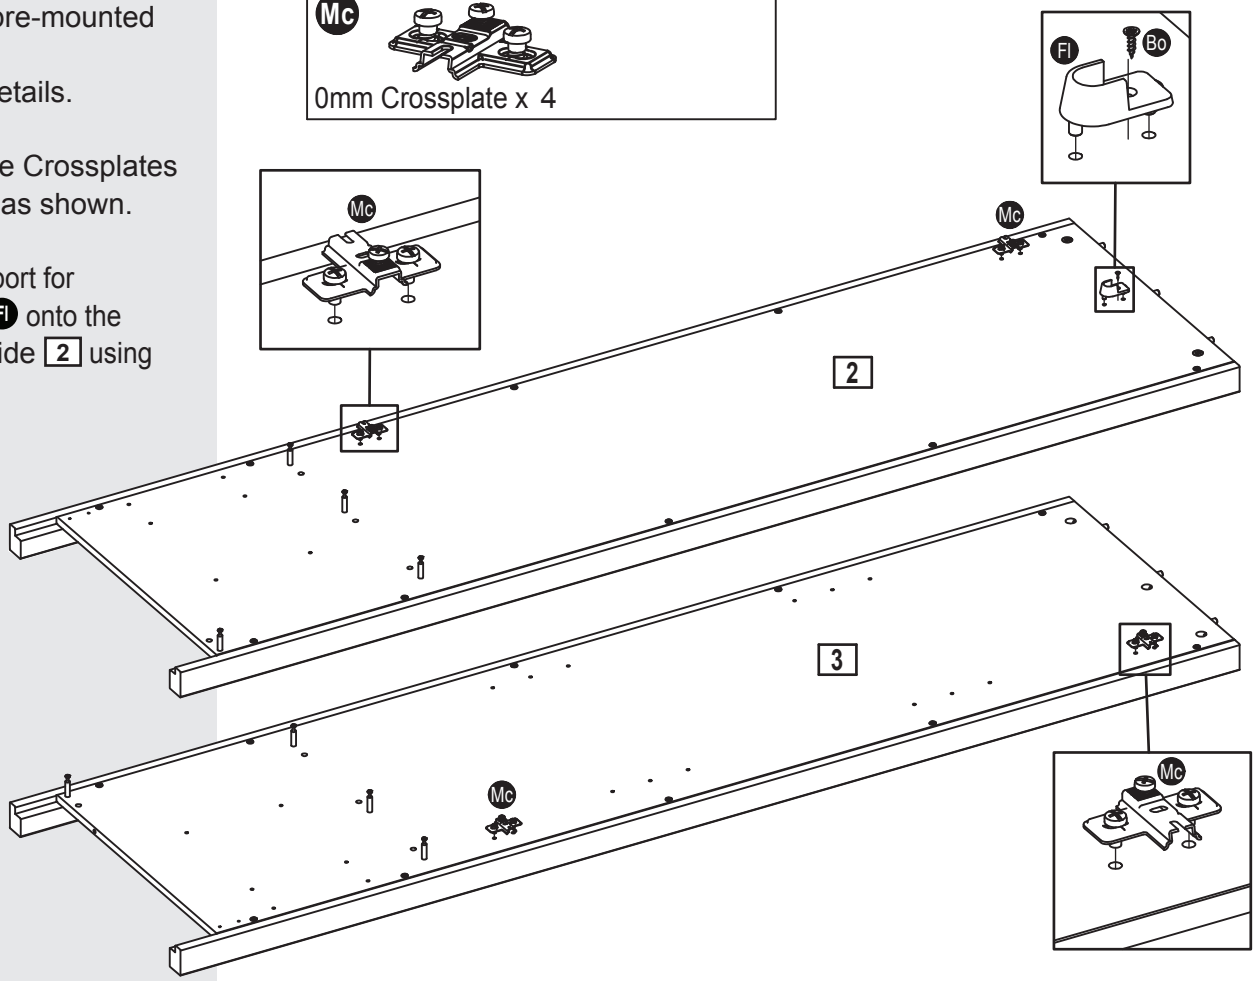


Assembly Instructions

Step 1.4

Slide the top of the drawer runners Sa backwards. You can identify the front end of the drawer runner Sa by the two M4 holes. See details.

Place the spacers Nu as shown, and fix the front end of the drawer runners Sa to the sides 2 and 3 using screws Kf through the holes number 1 and 7.

See details.

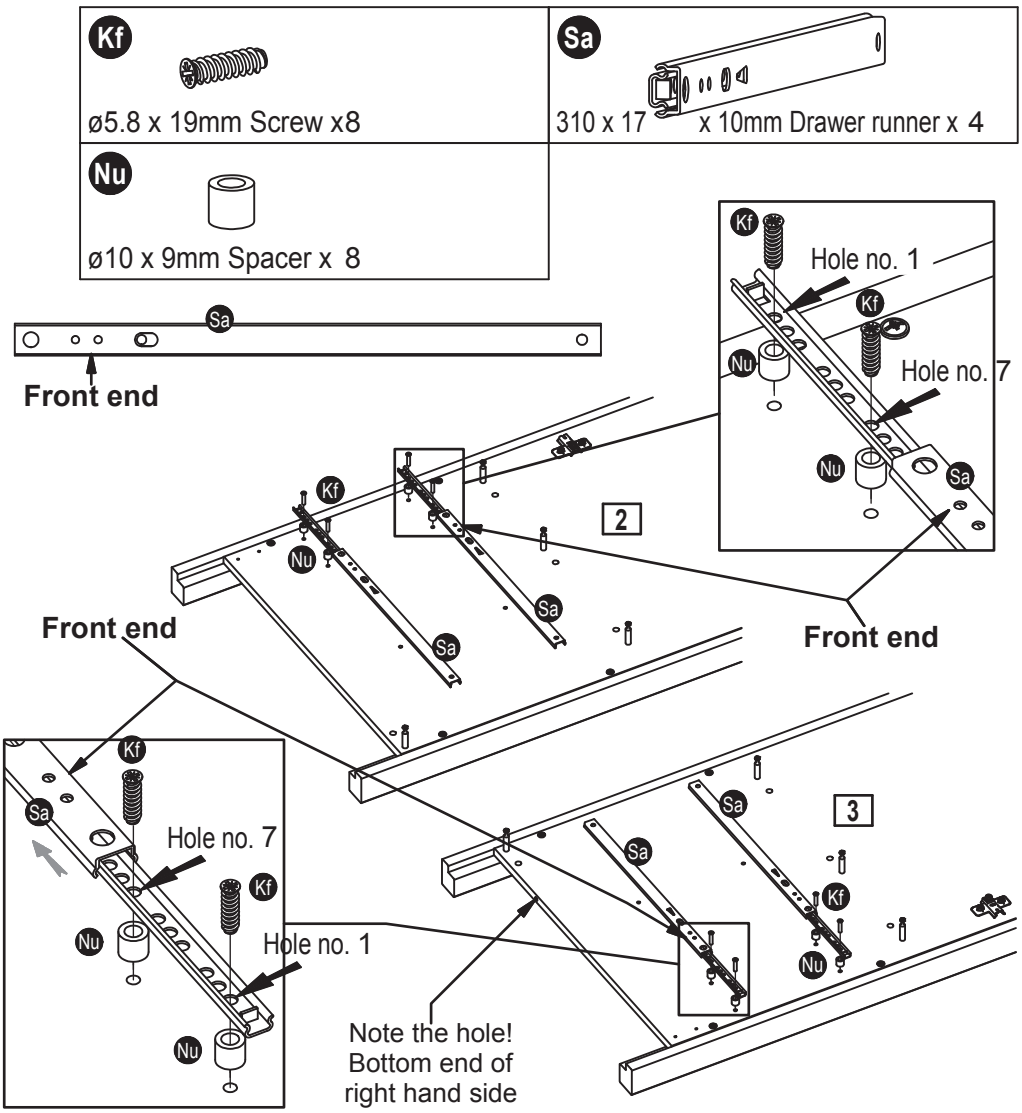


Step 1.5

Slide the top of the drawer runners Sa forwards.

Place the spacers Nu as shown, and fix the back end of the drawer runners Sa to the sides 2 and 3 using screws Kf through the holes indicated.

See details.

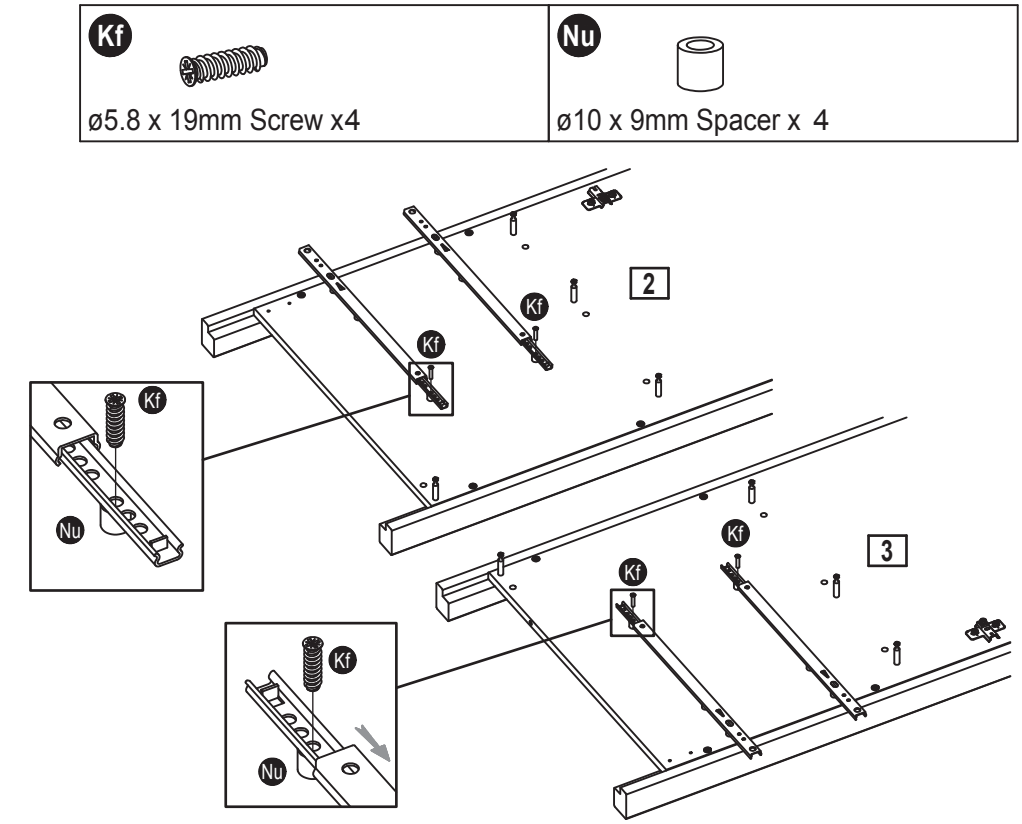

Assembly Instructions


Step 1.6

Knock the dowels Aa into the holes indicated on the large divider 5 and the small divider 6 using a small hammer.

Aa



ø7.8 x 40mm Wooden dowel x 9

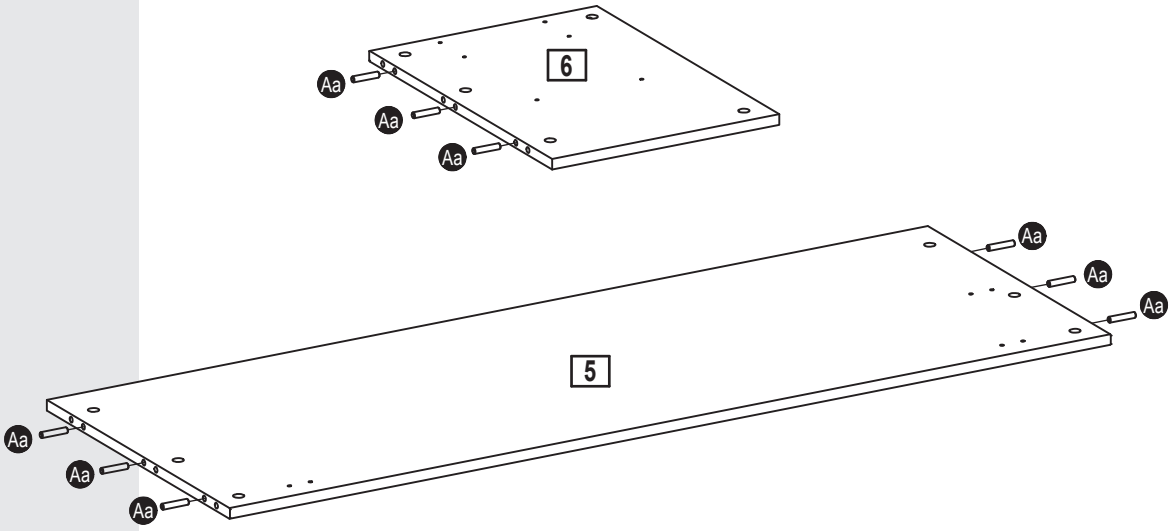

Step 1.7

Fix the Crossplates Mc to the large divider 5 using the pre-mounted screws.

Note the details.

Position the Crossplates Mc exactly as shown.

Fix the support for hangerrail Fl onto the large divider 5 using screw Bo.

Bo



ø3 x 12mm Screw x 1

Fl




Support for hanger rail - 15mm x 1

Mc



0mm Crossplate x 2

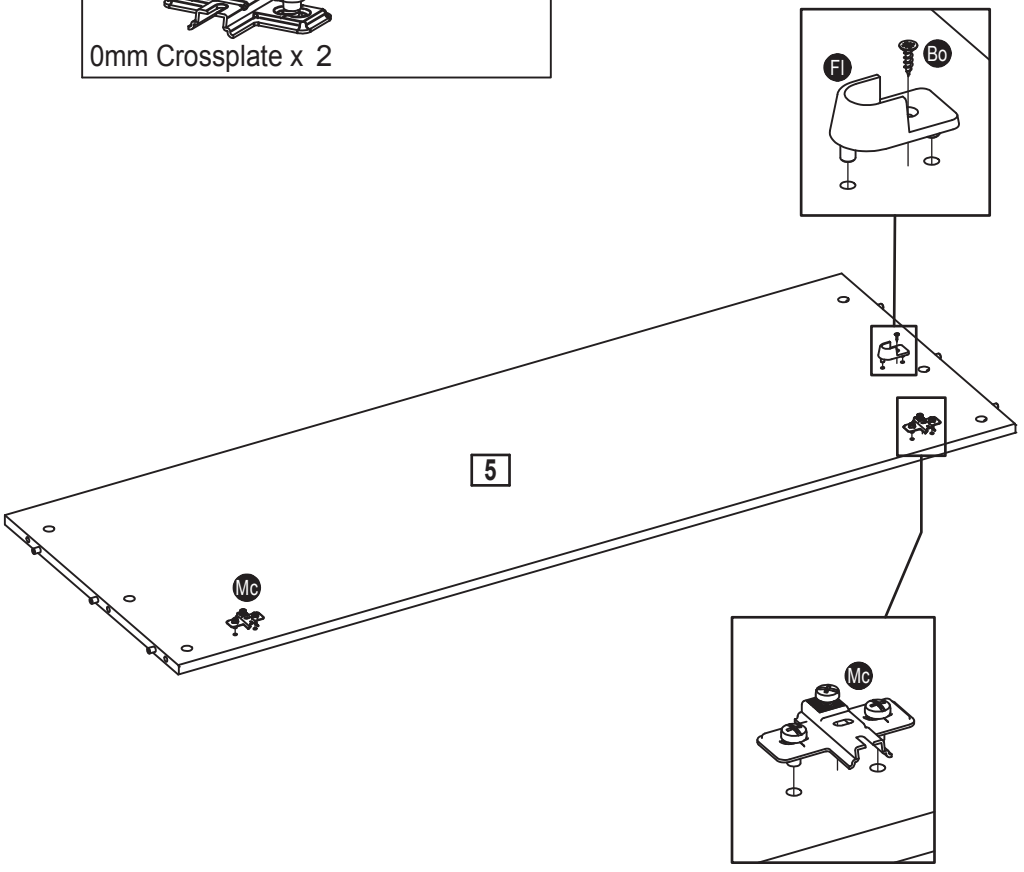

Assembly Instructions


Step 1.8

Slide the top of the drawer runners Sa backwards. You can identify the front end of the drawer runner Sa by the two M4 holes.

Fix the front end of the drawer runners Sa to the divider 6 using screws Kb through the holes number 1 and 7.

Kb ø5.8 x 8mm Screw x 4

Sa 310 x 17 x 10mm Drawer runner x 2

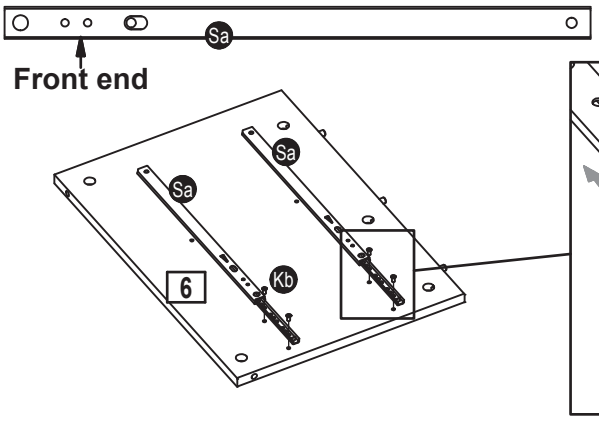


Step 1.9

Slide the top of the drawer runners Sa forwards.

Fix the back end of the drawer runners Sa to the divider 6 using screws Kb through the holes indicated.

Kb ø5.8 x 8mm Screw x 2

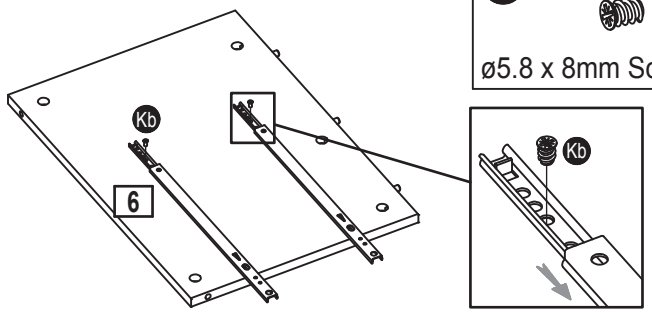


Step 1.10

Turn around the small divider 6.

Fix the front end of the drawer runners Sa to the divider 6 using screws Kb through the holes number 1 and 7.

Kb ø5.8 x 8mm Screw x 4


Sa 310 x 17 x 10mm Drawer runner x 4

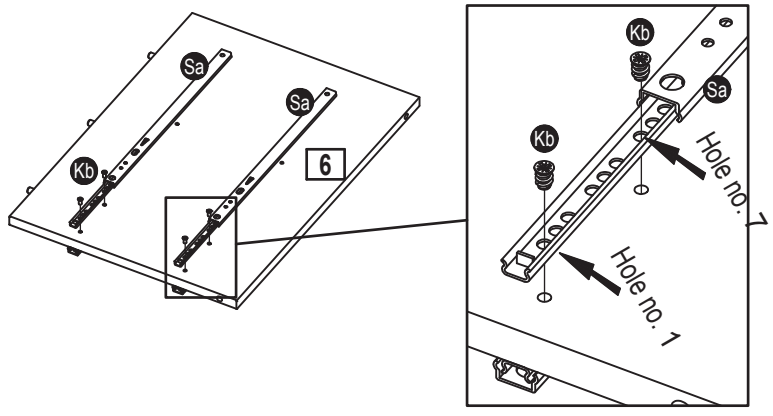

Step 1.11

Fix the back end of the drawer runners Sa to the divider 6 using screws Kb through the holes indicated.

Kb ø5.8 x 8mm Screw x 2

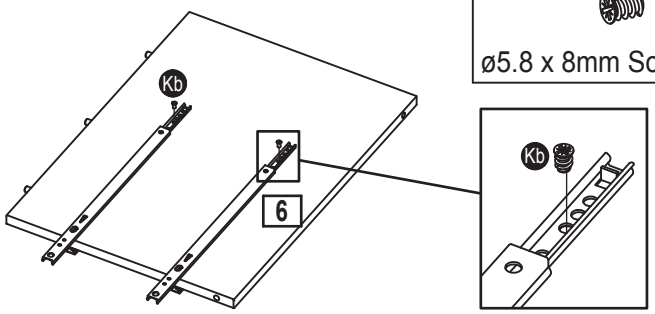

Assembly Instructions


Step 1.12

Fix the angles Vl using screws Ko into the holes indicated on the front rail 10.

Cb
ø5 x 8, cc34mm Bolt x 1

Ko
ø4,2 x 9,5mm Screw x 4

Vl
44 x 23 x 23mm Angle x 2

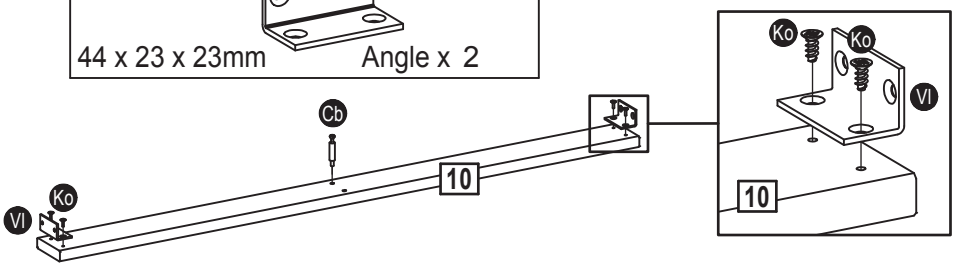

Step 1.13


Knock the dowels Aa into the holes indicated on the bottom 9 and the back rail 11 using a small hammer.

Press the magnets Pc into the holes indicated on the bottom 9.

Aa
ø7.8 x 40mm Wooden dowel x 8

Cb
ø5 x 8, cc34mm Bolt x 4

Pc
Magnet, adjustable x 3

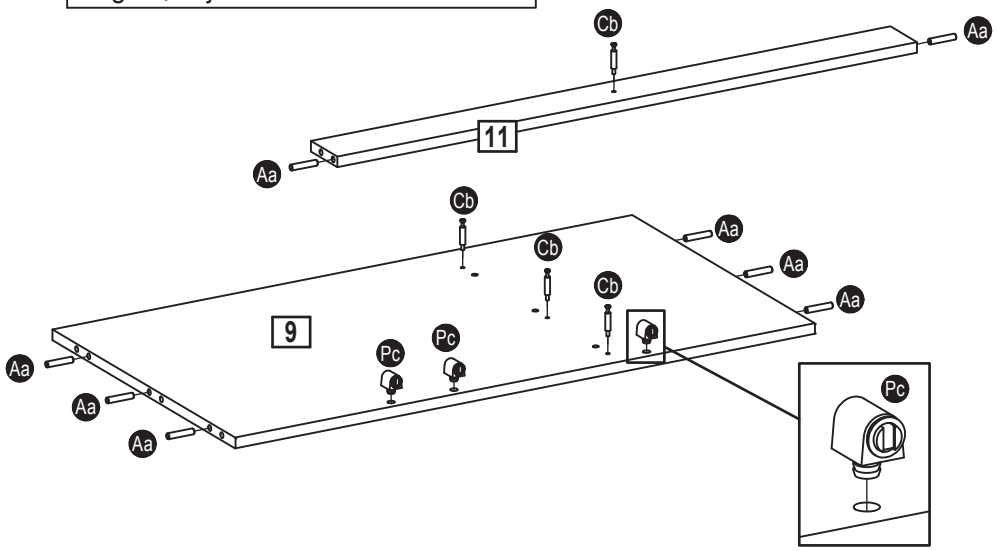


Step 1.14

Screw the bolts Cb into the holes indicated on the top 1.

Press the magnets Pc into the holes indicated on the top 1.

Cb
ø5 x 8, cc34mm Bolt x 9

Pc
Magnet, adjustable x 3

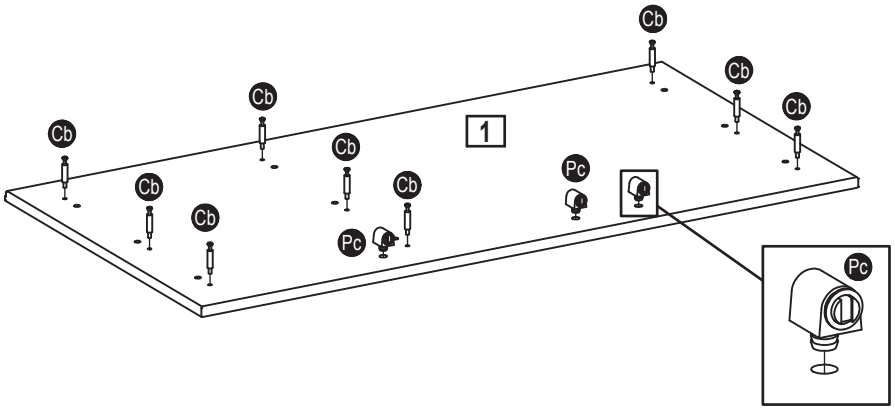


Assembly Instructions

Step 1.15

Place the large divider [5] onto the bottom [9].


Push cams (Ca) into the holes indicated on the large divider [5]. Arrows pointing towards the bottom [9].


Turn the cams (Ca) to the right to fix the large divider [5].

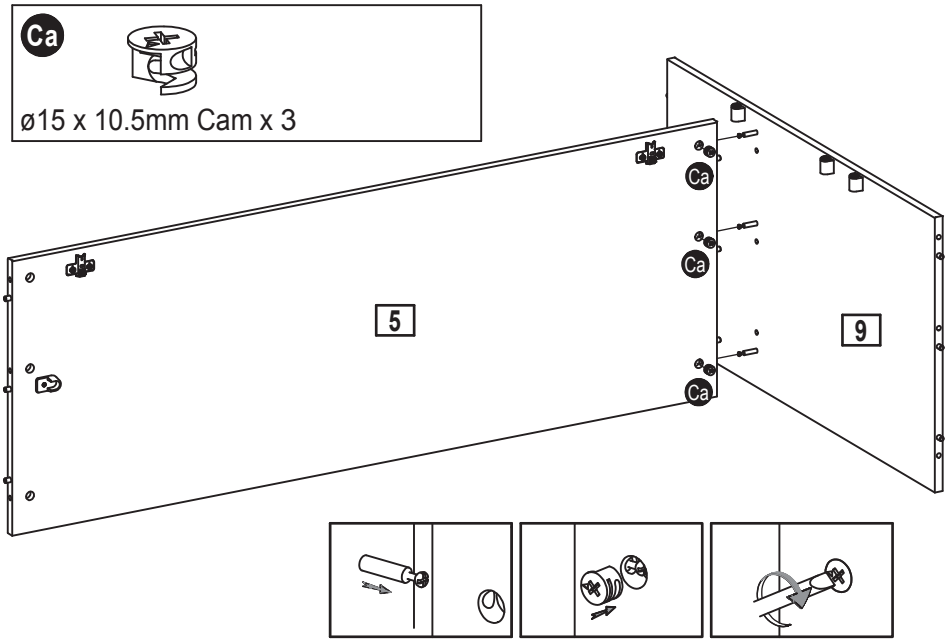

Step 1.16

Screw the bolts (Cb) into the holes indicated on the bottom [9].

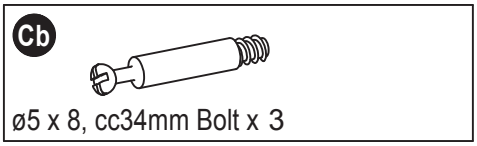

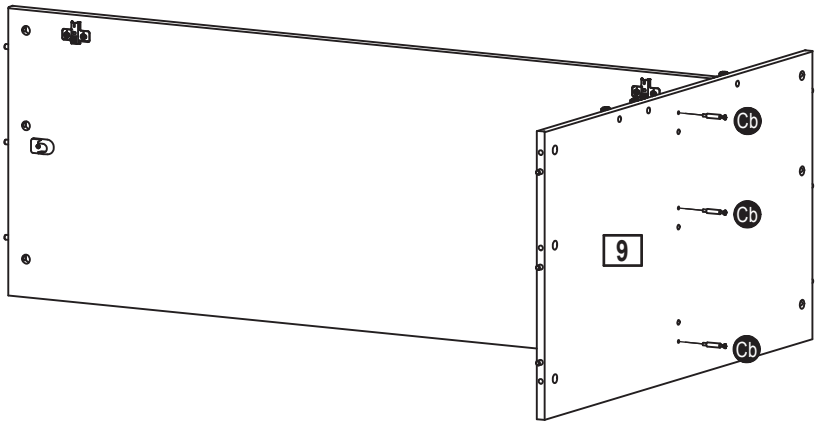



Step 1.17

Place the bottom [9] and the back rail [11] onto the small divider [6].

Push cams (Ca) into the holes indicated on the small divider [6]. Arrows pointing towards the bottom [9] and the back rail [11].

Turn the cams (Ca) to the right to fix bottom [9] and the back rail [11].

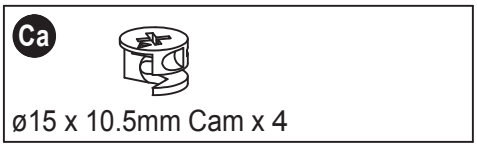

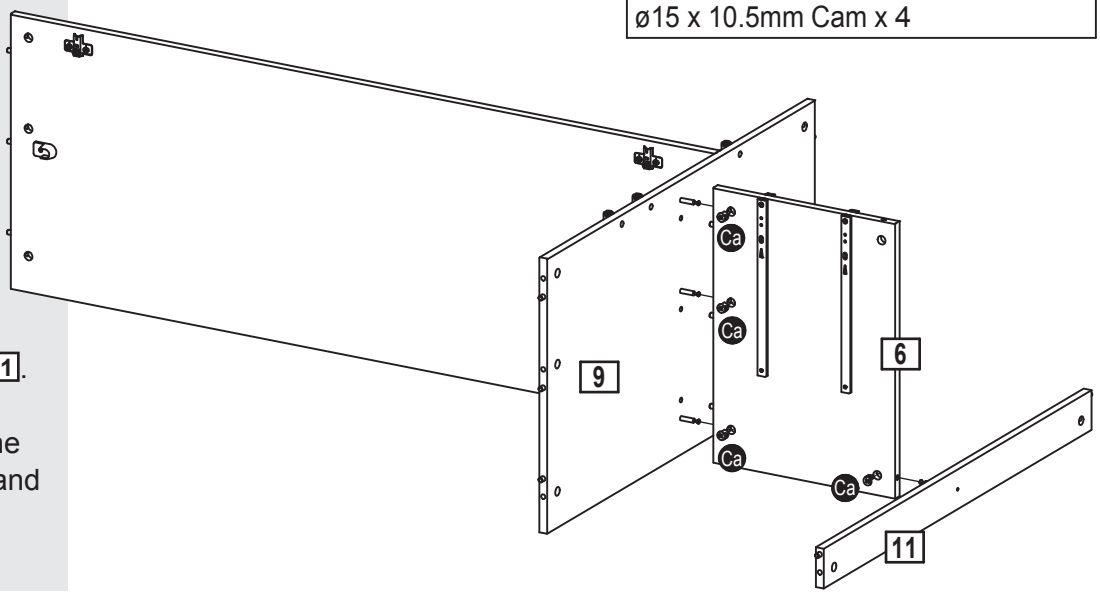

Assembly Instructions

Step 1.18

Place the sides 2 and 3 onto the bottom 9 and the back rail 11.


Push cams Ca into the holes indicated on the bottom 9 and the back rail 11. Arrows pointing towards the sides 2/3.

Turn the cams Ca to the right to fix the sides 2 and 3.

Ca



ø15 x 10.5mm Cam x 8

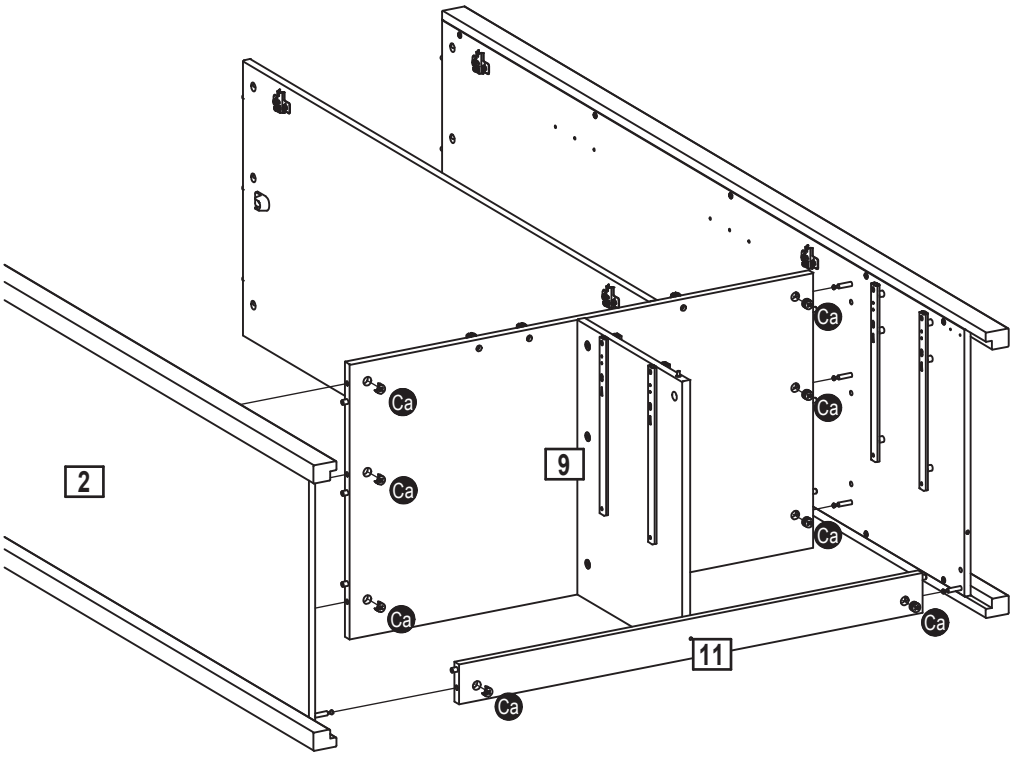

Step 1.19

Place the top 1 onto the sides 2 and 3.


Push cams Ca into the holes indicated on the sides 2 and 3. Arrows pointing towards the top 1.

Turn the cams Ca to the right to fix the top 1.

Ca



ø15 x 10.5mm Cam x 9

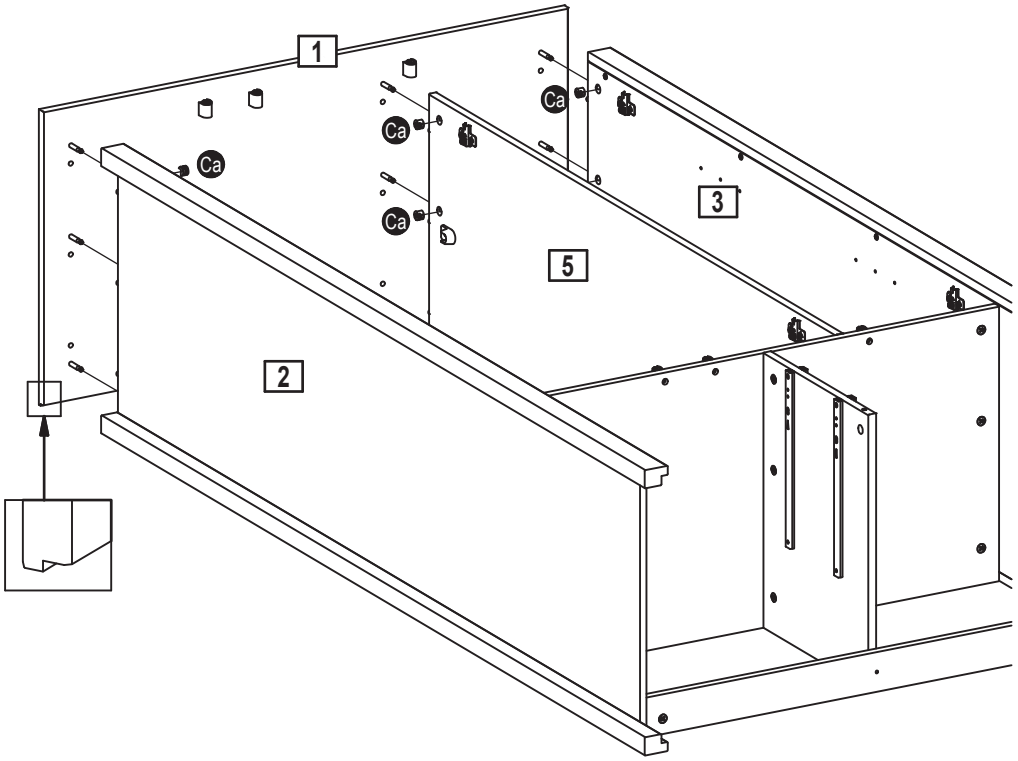

Assembly Instructions

Step 1.20

Place the front rail [10] onto the small diivider [6] as shown.


Push cam (Ca) into the hole indicated on the small divider [6]. Arrow pointing towards the front rail [10].

Turn the cams (Ca) to the right to fix the sides [2] and [3].

(Ca)



ø15 x 10.5mm Cam x 1

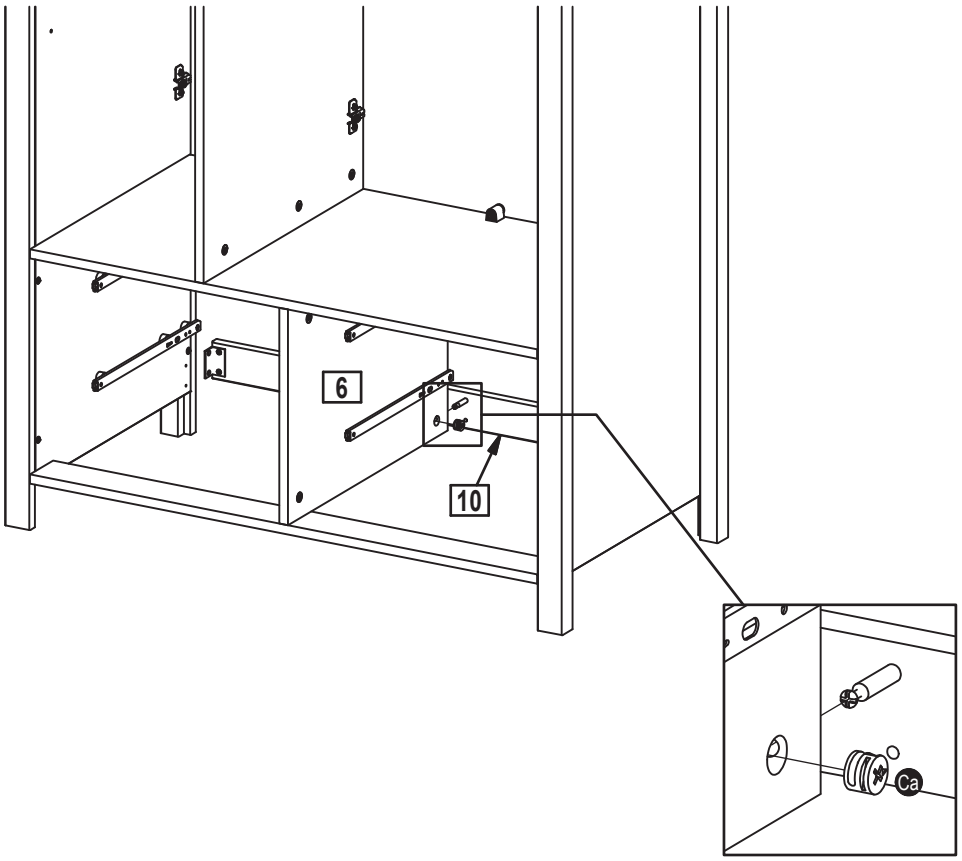

Step 1.21


Fix the angles (VI) to the sides using screws (Ko).

See detail.

(Ko)



ø4,2 x 9,5mm Screw x 4

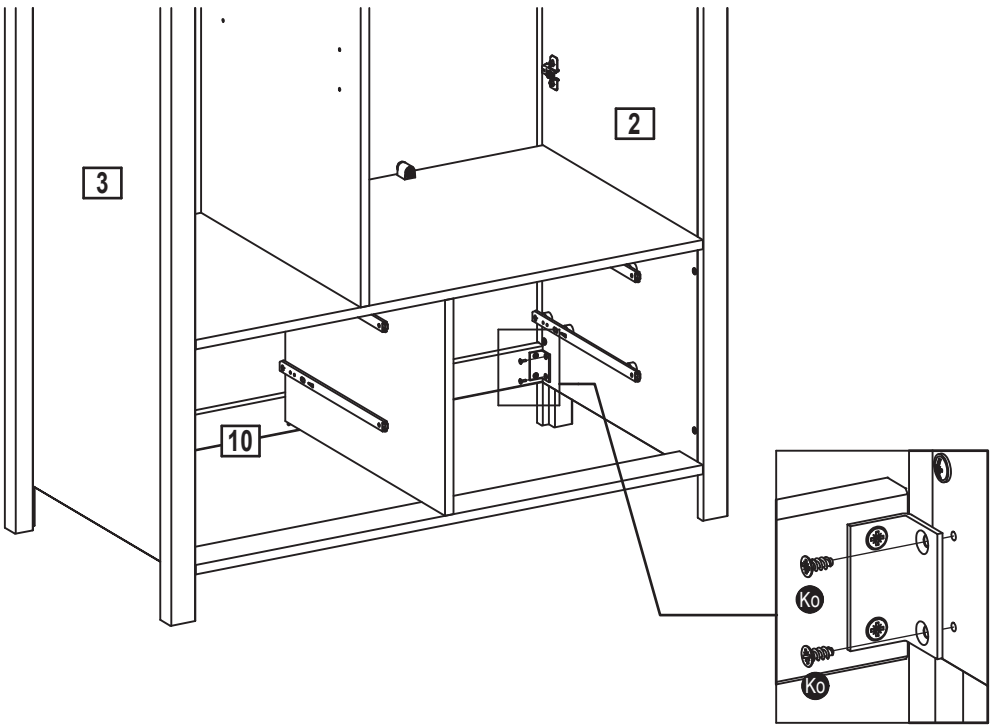

Assembly Instructions

Step 1.22


Place one of the backs 7 into the rabbet on the top 1 and onto the post 4 and the large divider 1.

Important!
Make sure the angle between the top 1 and the post 4 is 90° when the back 7 is attached.

The back 7 must cover exactly half of the divider 5. Note the distance.


Di

1.2 x 15mm Nail x 18

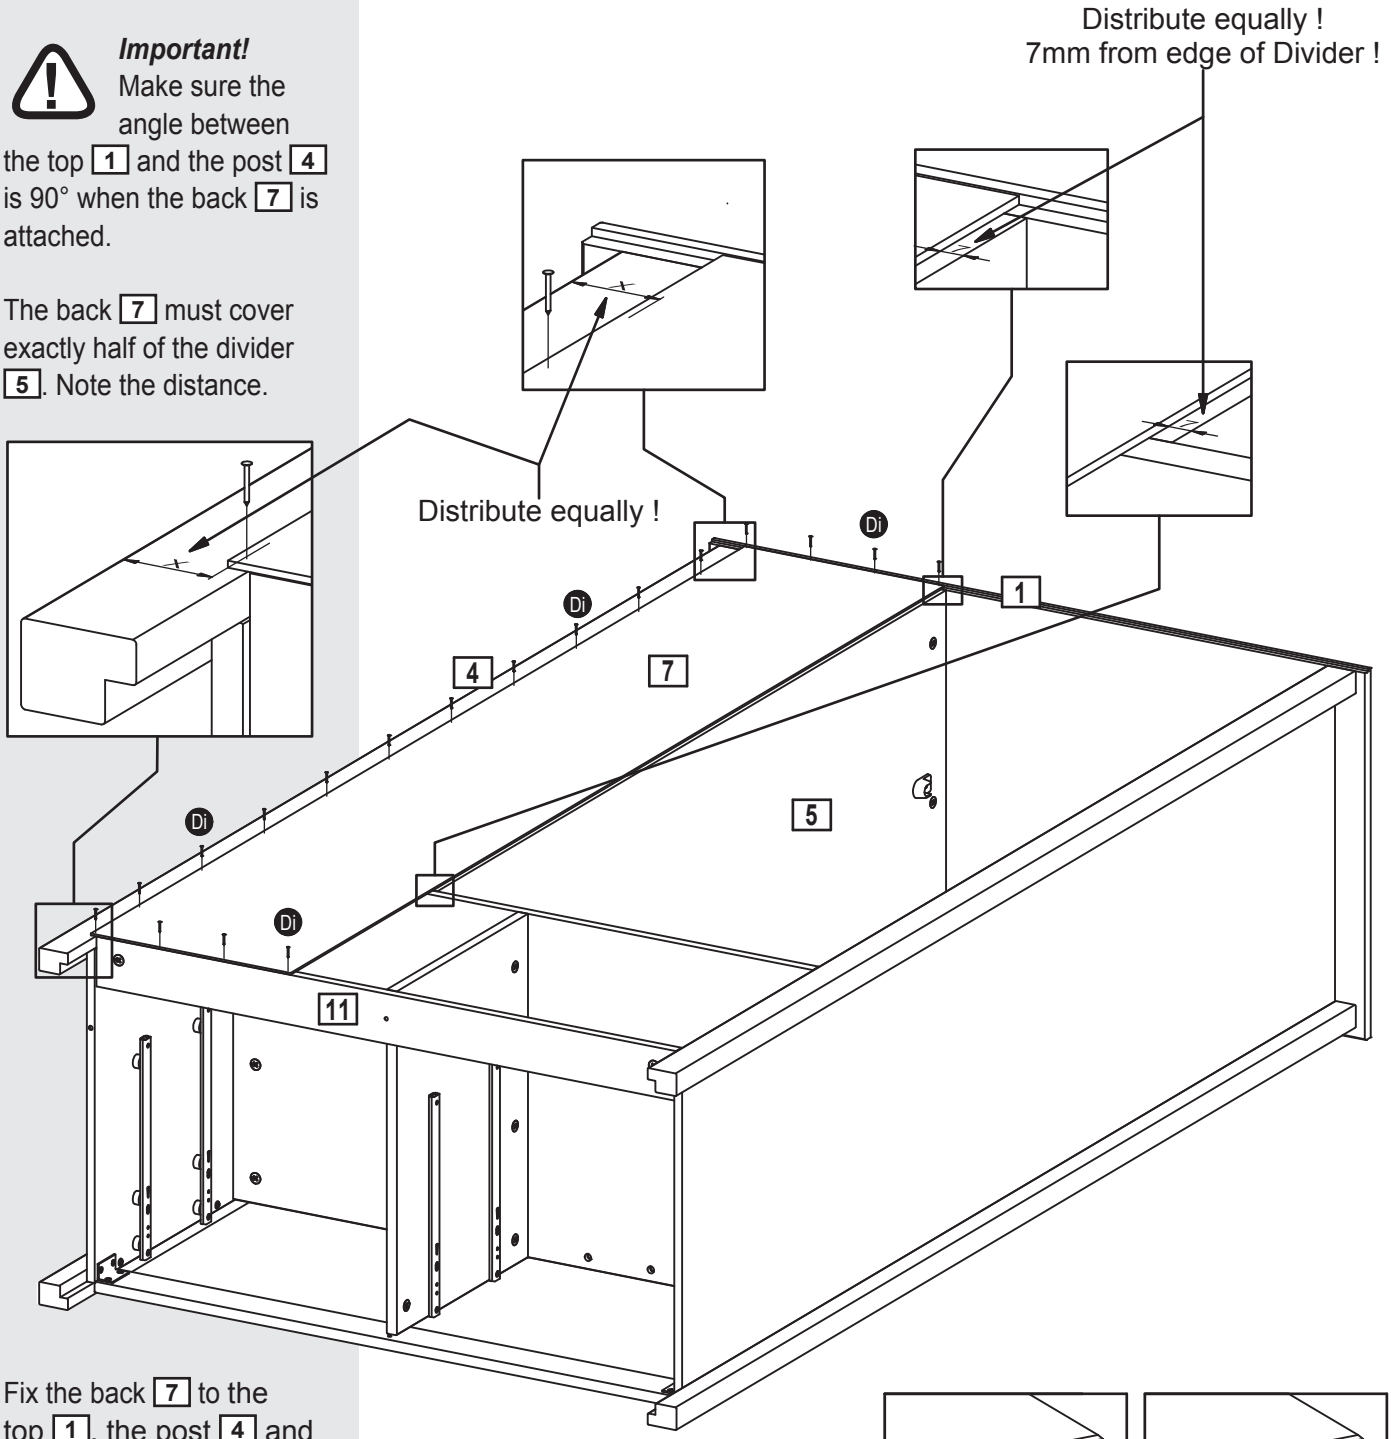

Fix the back 7 to the top 1, the post 4 and the back rail 11 using nails Di.

Use a small hammer.

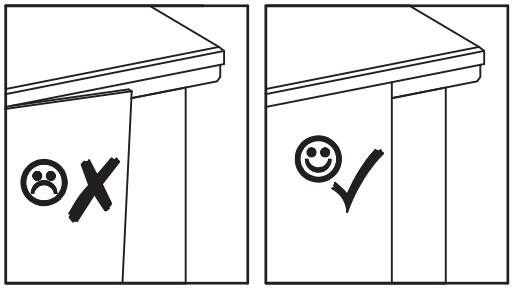

350313-14


Assembly Instructions

Step 1.23

Place the backs 7 into the rabbet on the top 1 into the H-profile 8 and onto the post 4.


Important!
Make sure the angle between the top 1 and the post 4 is 90° when the backs 7 is attached.


Bo	Di
ø3 x 12mm Screw x 6	1.2 x 15mm Nail x 26
Fc	
Back fitting - 14 x 19mm x 6	

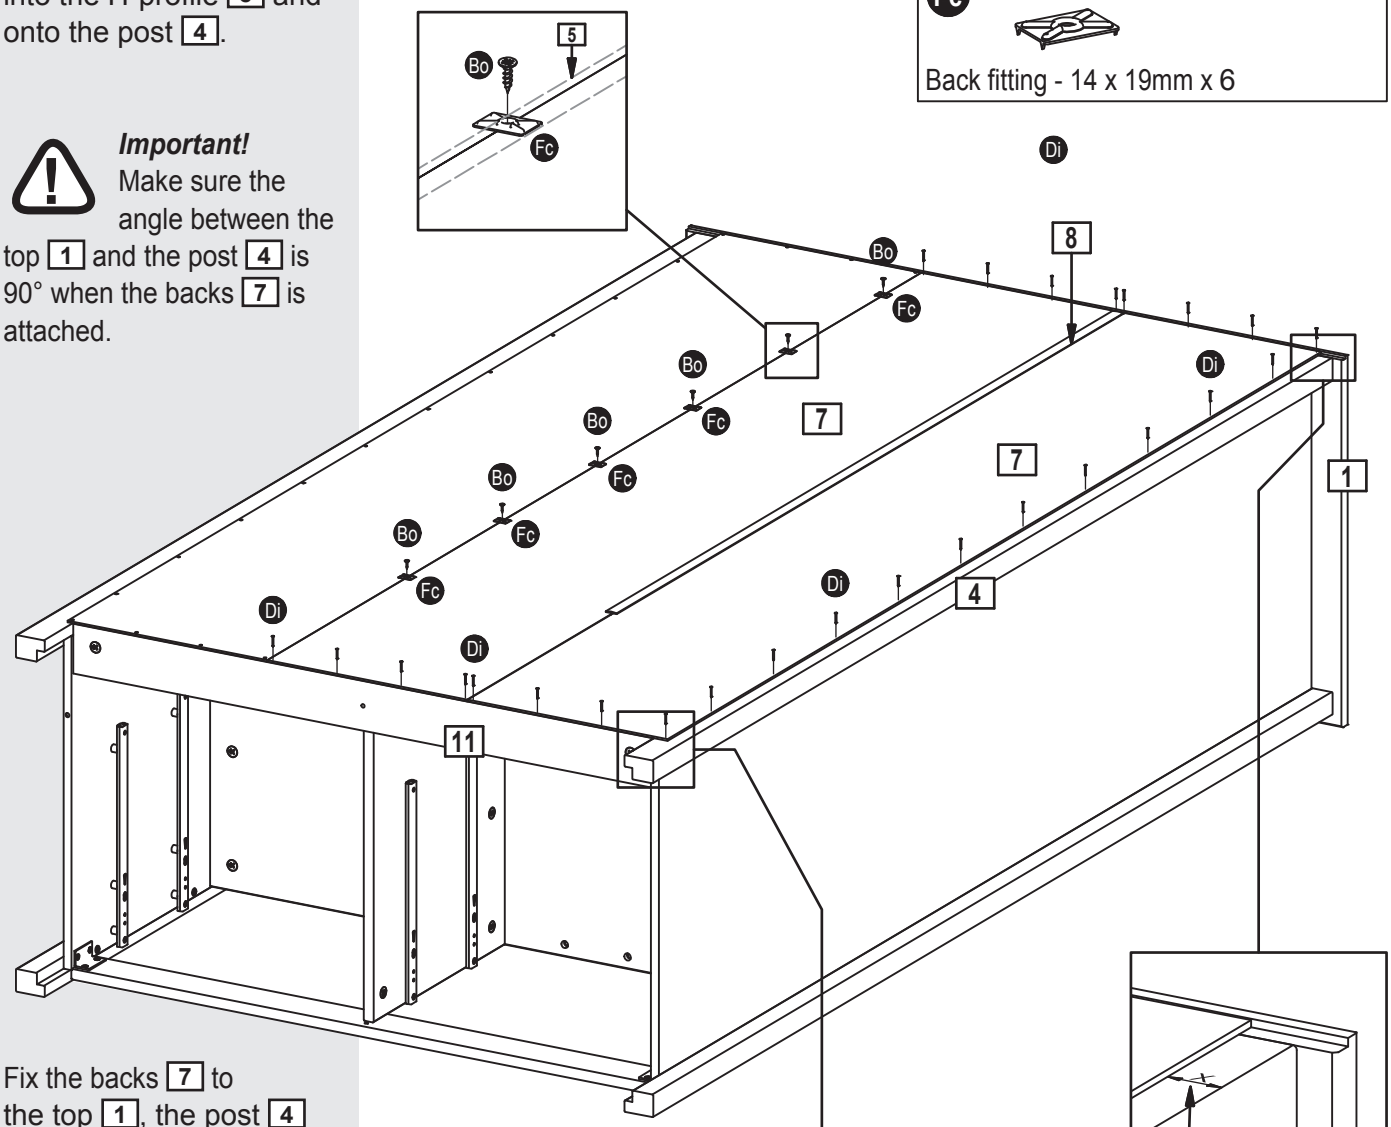

Fix the backs 7 to the top 1, the post 4 and the back rail 11 using nails Di.

Finally fix the backs 7 to the large divider 5 using screws Bo through the back fittings Fc.

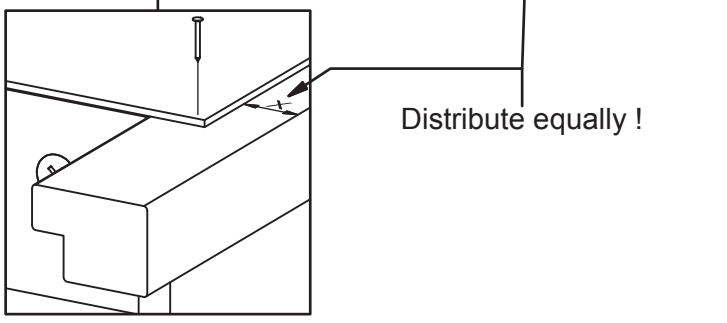

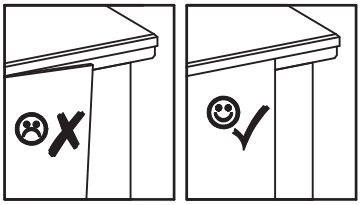

Assembly Instructions

Step 1.24


Important!
The wardrobe is heavy. Lift with care.


Its recommended that the wardrobe is fixed to the wall.

Use the fittings Fh. Follow the instructions included with the fittings.

Fix the shelf supports Fr to the side 3 and the divider 5 using screws Kb into the holes indicated.

Lower the shelves 12 onto the shelf supports Fr.

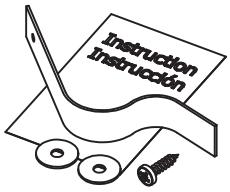
Fh  Wall strap and instruction x 1	Fr  Shelf support x 8
	Kb  ø5.8 x 8mm Screw x 8

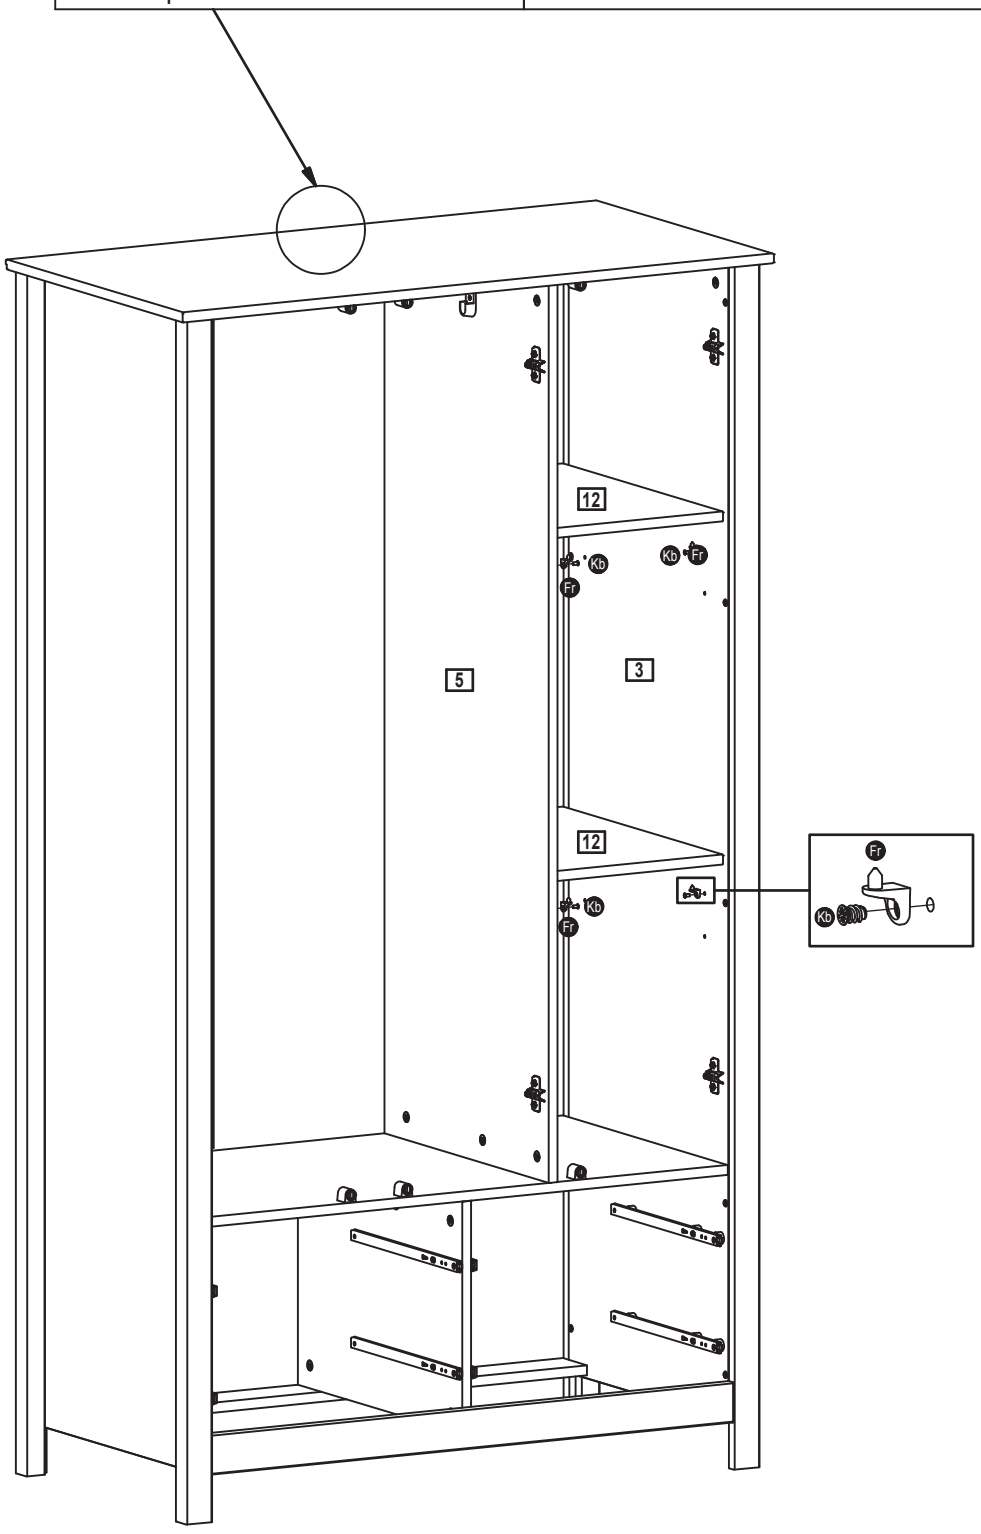


Assembly Instructions

Step 2

Assembly of the drawers.

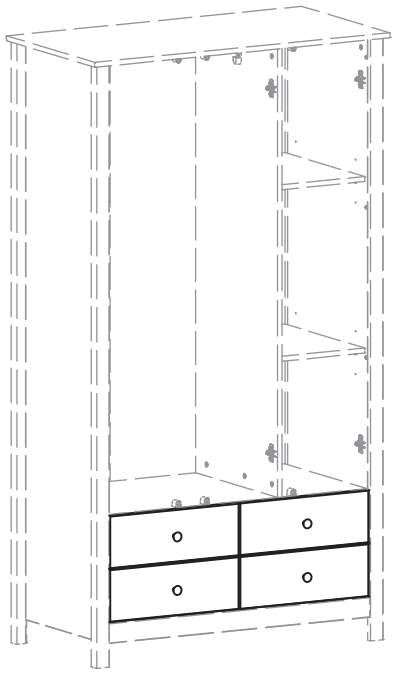

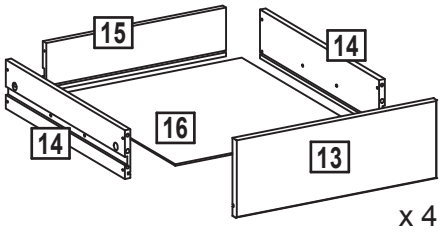

x 4


Step 2.1

Fix the drawer sides 14 to the drawer back 15 as shown, using screws Bp.

Bp



ø3 x 35mm Screw x 16

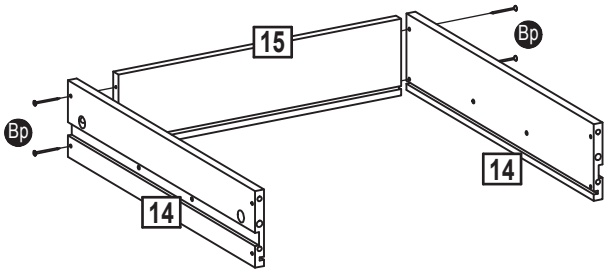

x 4


Step 2.2

Knock the dowels Ab into the holes indicated on the drawer sides 14 using a smal hammer.

Ab



ø6 x 30mm Wooden dowel x 16

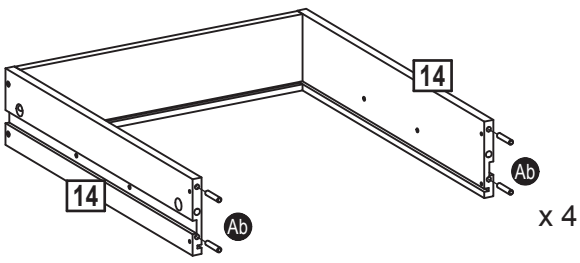


x 4

Assembly Instructions

Step 2.3

Slide the drawer bottom 16 into the drawer sides 14.

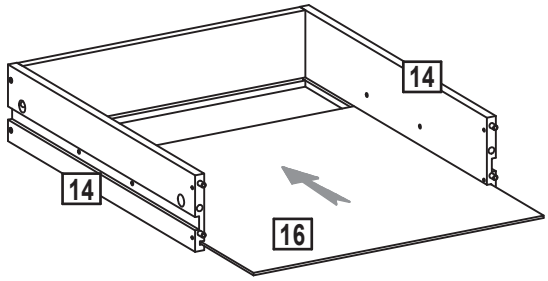


x 4


Step 2.4

Screw the bolts Cb into the holes indicated on the drawer front 13.

Cb



ø5 x 8, cc34mm Bolt x 8

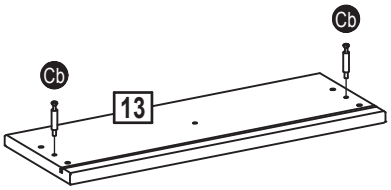

x 4

Step 2.5


Push the drawer front 13 onto the drawer sides 14.

Place cams Ca into the holes indicated. Arrow pointing towards the front. Turn the cams Ca to the right to fix the front.

Ca



ø15 x 10.5mm Cam x 8

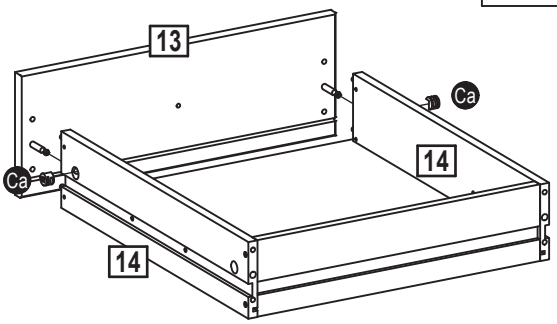

x 4

Step 2.6


Important!
Make sure the angle between the drawer front 13 and the drawer sides 14 is 90° before the drawer bottom 16 is fixed using Fi as shown.

To adjust the angle between the drawer sides and the fronts push the fitting Fi sidewards. See details.


Fi



Back fitting w. ø3.5 x 15mm Screw x 8

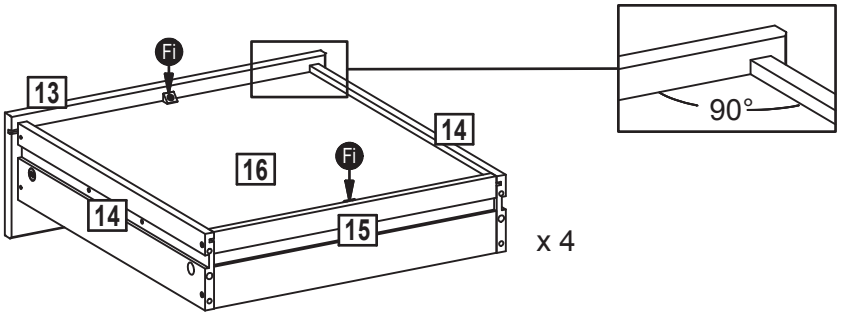


x 4

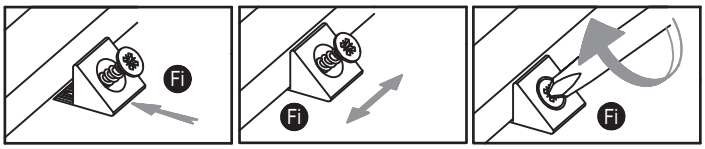


Assembly Instructions

Step 2.7

Fix the metal knobs Ge to the drawer front 13 using screws Hd.

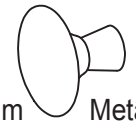Ge	Hd
 ø27 x 24mm Metal Knob x 4	 M4 x 20mm Screw x 4

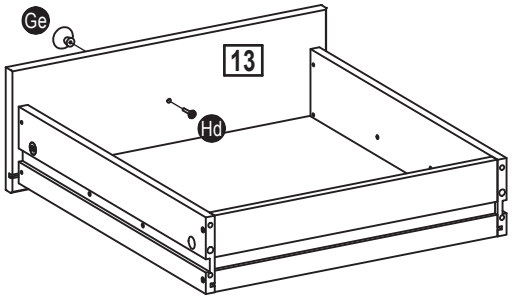

x 4


Step 2.8

Pull out the drawer runners. Slide the drawers onto the runners.

Fit and fix the lower drawer first and work your way up.

Fix drawers to the drawer runners using screws Hk.

Hk
 M4 x 9mm Screw x 8

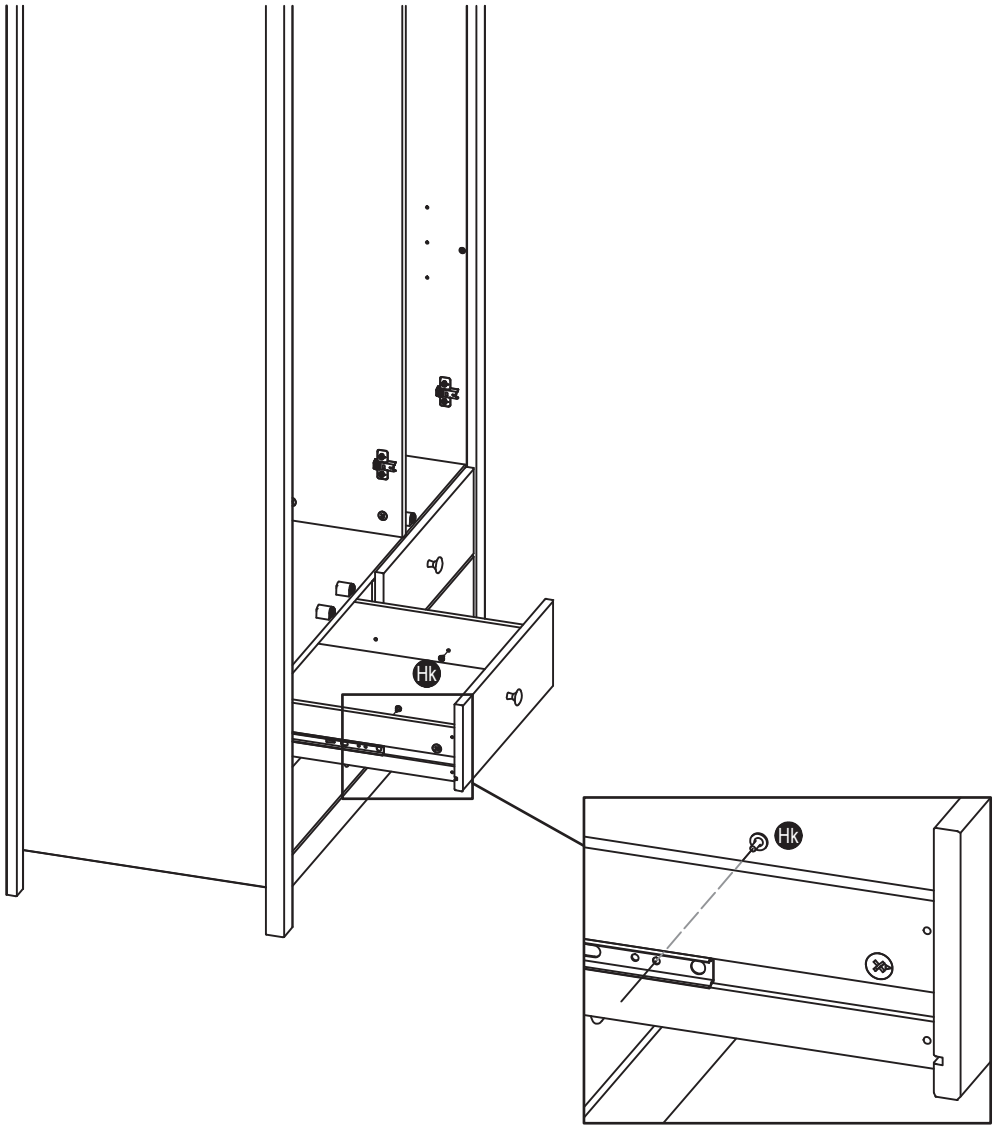



Assembly Instructions

Step 3

Assembly of the doors.


Note !
Two types of hinges is included. Type Me must be used on the center door and type Mf must be used on the outer doors.

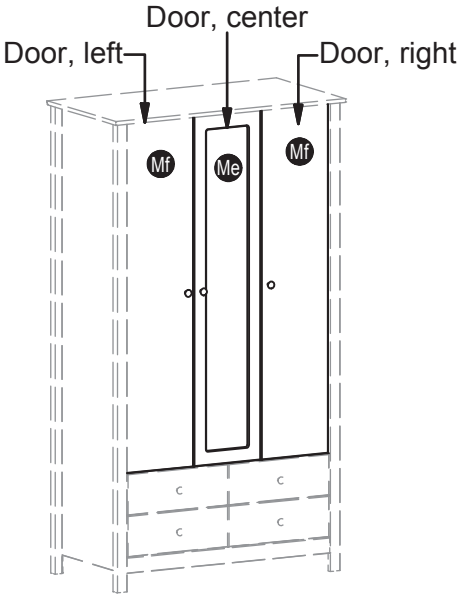


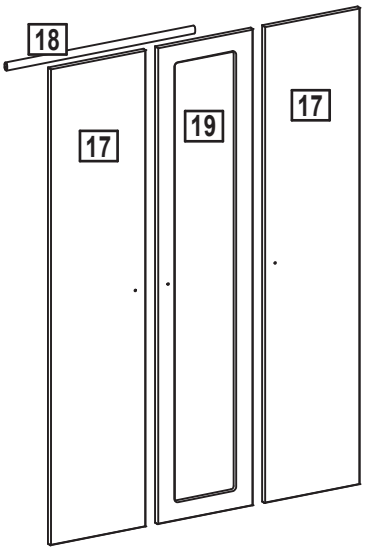

Step 3.1

Place the two cup hinges Me into the holes indicated on the center door 19.

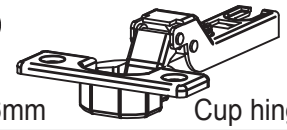Bo  ø3 x 12mm Screw x 18	Me  ø26mm Cup hinge x 2
Mf  ø26mm Cup hinge x 4	Pd  35 x 12 x 1mm Magnet catch x 6

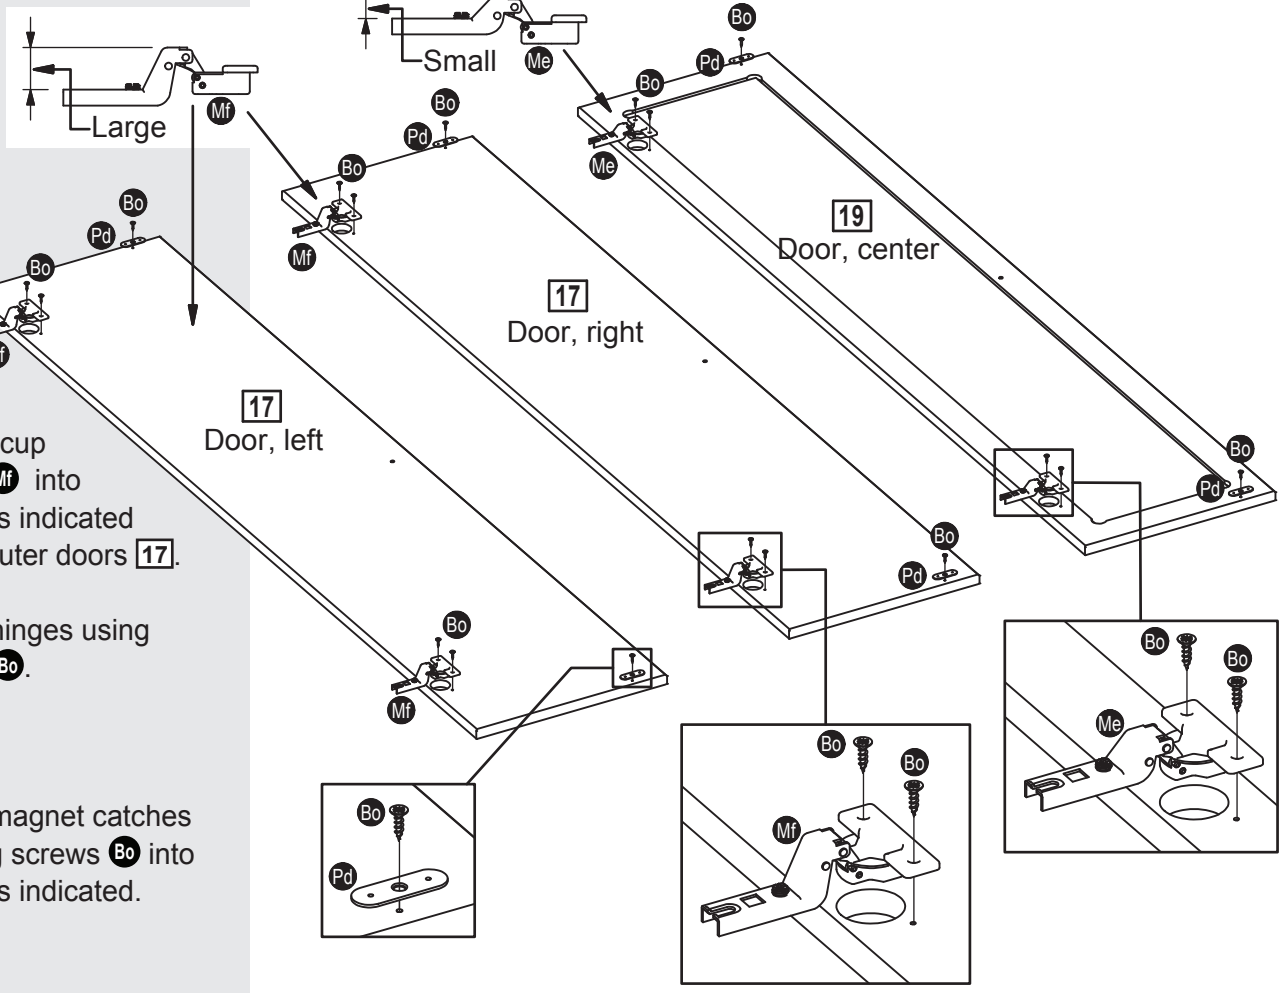

Place the four cup hinges Mf into the holes indicated on the outer doors 17.

Fix the hinges using screws Bo.

Fix the magnet catches Pd using screws Bo into the holes indicated.

Assembly Instructions


Step 3.2


Place the hanger rail 18 into the supports Fl.

Slide the cup hinges Me/Mf onto the crossplates Mc.

Fix the hinges using the premounted screw in the crossplates.

See details below on how to fit the cup hinge Mf onto the cross plate Mc.

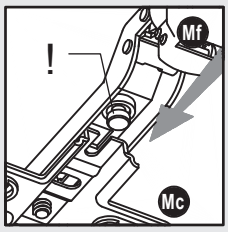


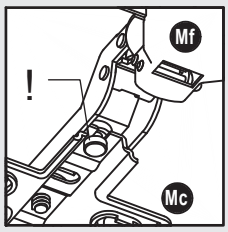


Fix the metal knobs Ge to the doors 17 and 19 using screws Hd.

Adjust the magnets Pc.

Ge	Hd
ø27 x 24mm Metal Knob x 3	M4 x 20mm Screw x 3

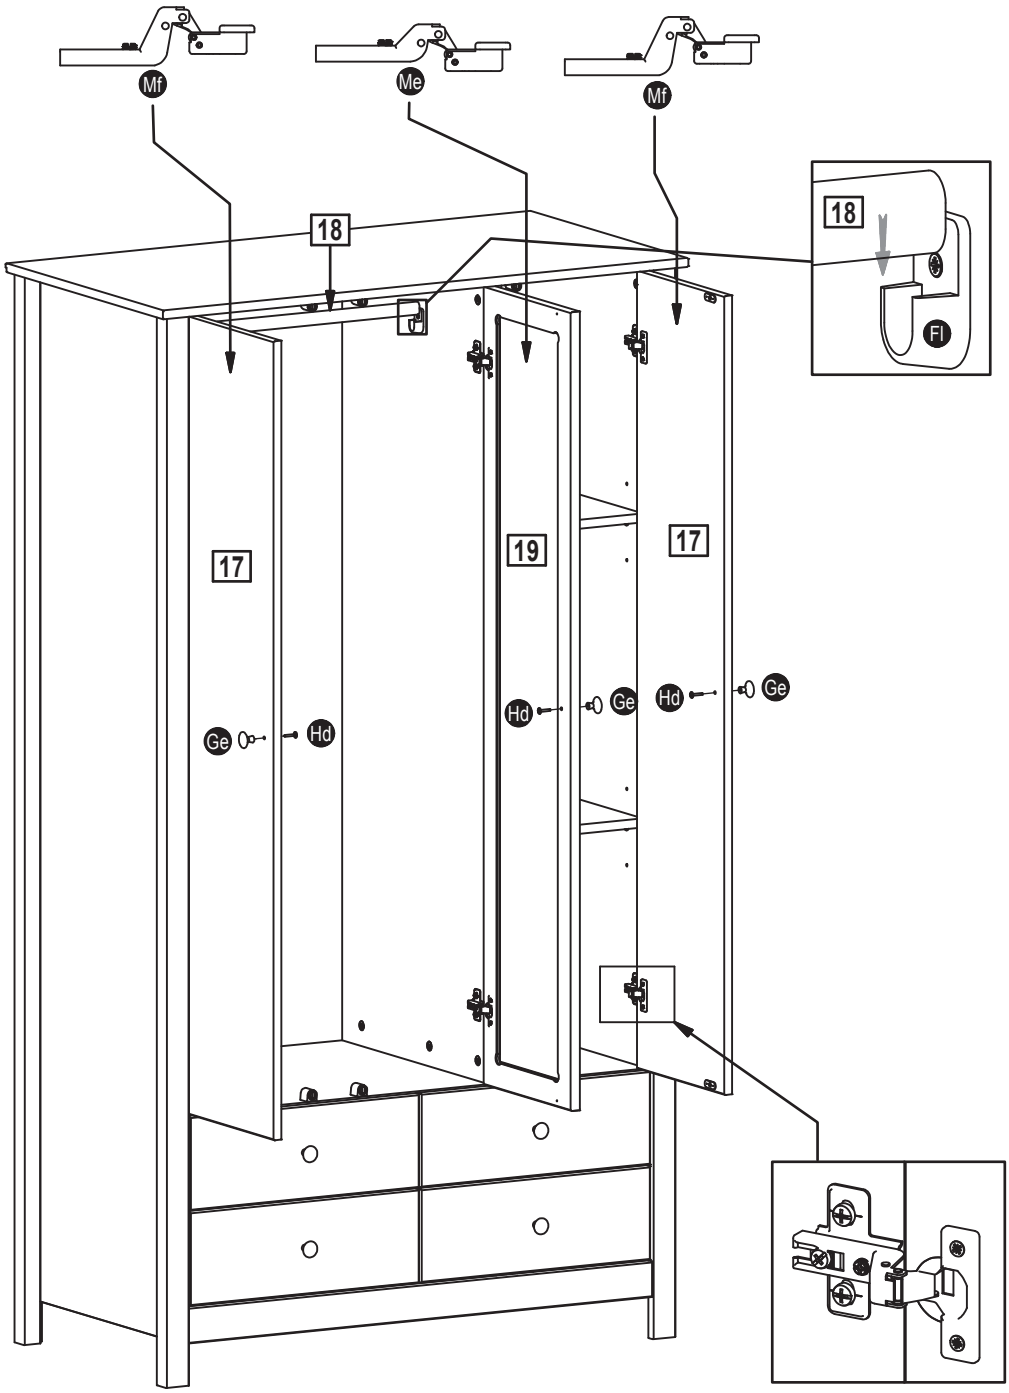

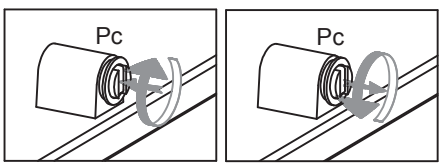


Assembly Instructions

Step 3.3


Adjusting the doors left/right.

a:
To adjust the door towards the left hand side - turn the adjusting screw to the right.


b:
To adjust the door towards the right hand side - turn the adjusting screw to the left.

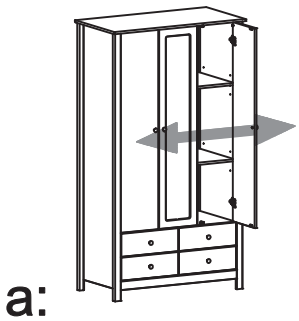

a:

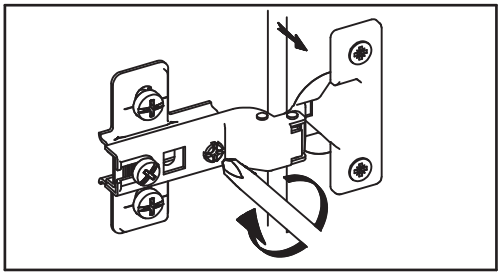

b:

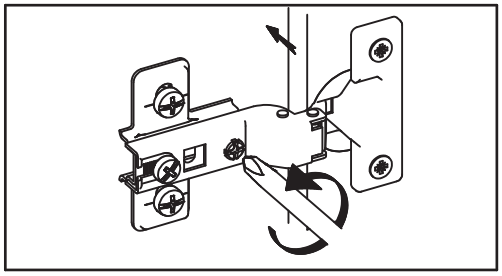


Adjusting the doors forwards/backwards.


a:
Loosen the fixing screw.

b:
Push the cup hinges / the door forwards OR backwards to adjust.


c:
Tighten the fixing screws of ALL the crossplates.

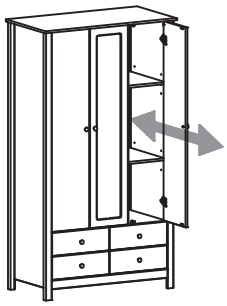


a:

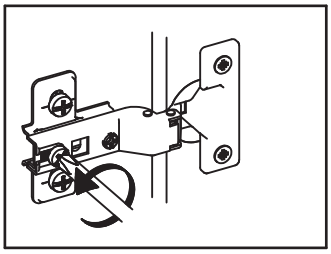

b:

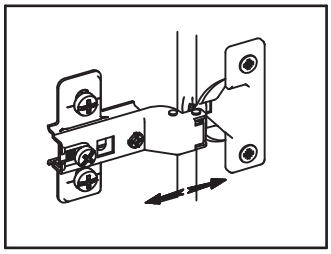

c:

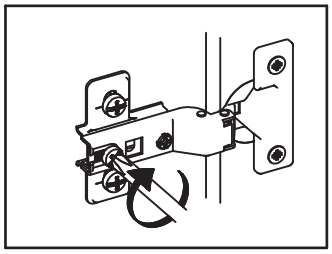


Adjusting the doors up/down.


a:
Loosen the two pre-mounted screws of each crossplate, BUT ONLY as much as it will allow the cross plate to move up and down.

b:
Push the the door up OR down to adjust.


c:
Tighten the pre-mounted screws of ALL the crossplates.

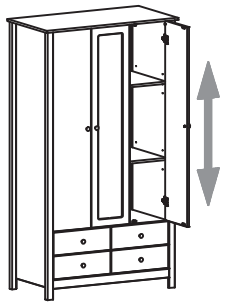


a:

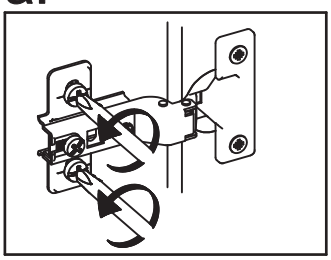

b:

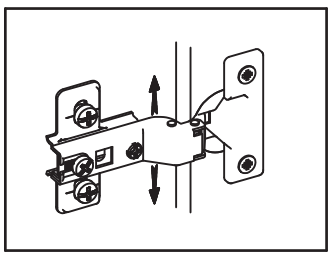


c:

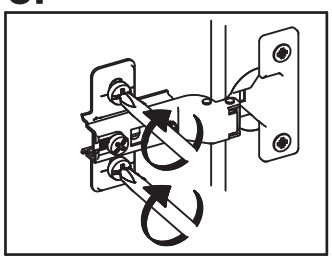

If you need help or have damaged or missing parts, call the **Argos Customer Helpline: 03456 400 800**
Home Retail Group - 489-499 Avebury Boulevard - Saxon Gate West - Central Milton Keynes MK9 2NW

A Guide to

Wall Mounting & Fixings

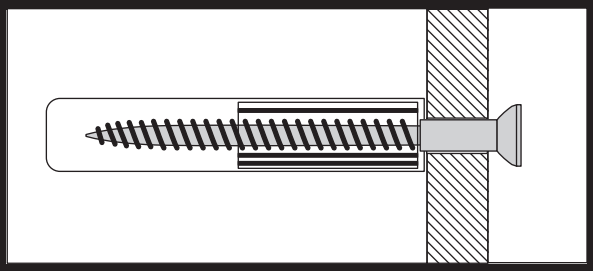

IMPORTANT:

When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


HINTS:

1) General Rule ⚠ Always use a larger screw and wall plug if you are not sure.
2) Ensure you use the recommended drill bit to match the wall plug and hole size.
3) Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4) Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic tile to avoid splitting or cracking.
5) Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plaster board.

No.1 "Standard" Wall Plug
General Wall Materials

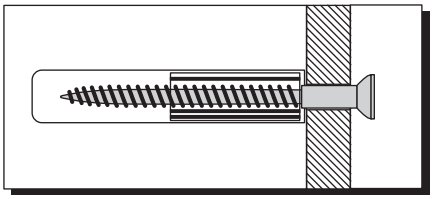


These come in various sizes and are made from plastic or sometimes wood fiber.

No.2 "General Purpose" Wall Plug
Aerated / Breeze Block

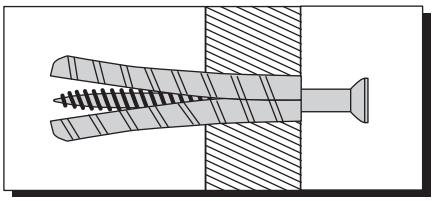


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case.
For light loads, a General Purpose Plug can be used.

No.3 "Shield Anchor" Wall Plug
Heavy Loads

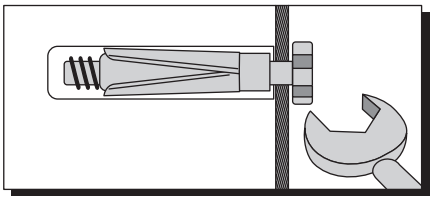


For use with heavier loads such as TV & HiFi Speakers and Satellite Dishes etc.

No.4 "Cavity Fixing" Wall Plug

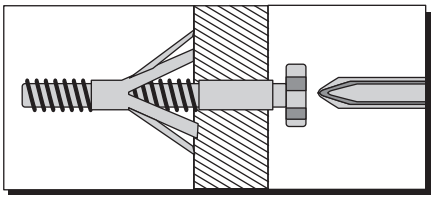


For use with plaster board partitions or hollow wooden doors.

No.5 "Cavity Fixing - Heavy Duty" Wall Plug

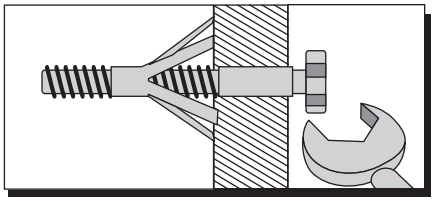

For use when fitting or supporting heavy loads such as shelving, wall cabinets, coat racks.

No.6 "Hammer Fixing" Wall Plug

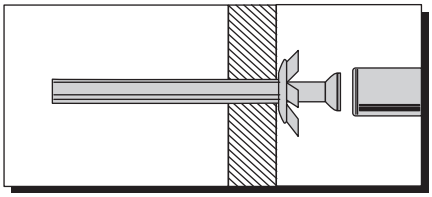

For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

CARE & MAINTENANCE

⚠ **SAFETY**

Always check the fitting and location to ensure your safety in and around the home.

⚠ **FITTING**

From time to time check the fitting to ensure the wall plugs or screws do not become loose.