CLEANING AND CARE

- Always turn off the power and remove the plug after and before cleaning.
- The cooking plates are coated with non-stick cooking surface, therefore little cleaning is required. Simply wipe cooking plates over with a damp cloth.
- Do not immerse the appliance in water or other liquid.
- Do not use abrasive scouring pads, powders or cleaners.
- Do not place in the dishwasher.
- Before next use, lightly grease the cooking plates for easy removal of cooked Doughnuts.

STORAGE

- Always unplug the appliance before storage.
- Always make sure the appliance is cool and dry before string.
- To minimize storage space in your kitchen, the appliance can be stored vertically.

WARNING

WEEE product should be disposed of by handing it over at a designated collection point. For more information about where you can drop off your waste product for recycling please contact your local authority. Unsuitable for dishwasher or microwave use.
MADE IN CHINA



21 Commerce Way
BN15 8TA, UK
www.fizzcreations.com
© 2015 Fizz Creations Ltd. All rights reserved.



DOUGHNUT MAKER

FOR HOUSEHOLD USE

Instruction Manual

Model: ARG7010

Please read these instructions carefully and retain for future reference.

IMPORTANT SAFEGUARDS

- READ ALL INSTRUCTIONS
- Make sure the voltage in your outlet is the same as the voltage indicated on the appliance's rating label.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug – do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Close supervision is necessary when your appliance is being used by children or infirm persons.
- Young children should be supervised to ensure that they do not play with the appliance. This appliance is not intended for use by persons (including children) with insufficient physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or ay other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surfaces.
- Do not operate any appliance with a damaged has malfunctioned or has been damaged in any manner. In order to avoid the risk of an electric shock, never try to repair the appliance yourself. Take it to an authorized service station for examination and repair.
- Do not use outdoors or for commercial purposes.
- Unplug the unit when finished using.
- Do not immerse the appliance in water or any other liquid.

BEFORE THE FIRST USE

Remove all packaging materials.
Clean the baking plates with a damp cloth or sponge.
Slightly grease the baking plates with a little cooking oil.
Take care to prevent water from running into the appliance.


PARTS IDENTIFICATION

Before using your appliance for the first time, you should become familiar with all of the parts. Read all Instructions and Safeguards carefully.



1. Handle
2. Upper Housing
3. Power Light

4. Handle Lock
5. Bottom Housing
6. Upper Non-stick Plate
7. Bottom Non-stick Plate

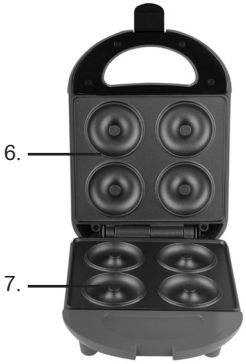

USING YOUR APPLIANCE

Before using the appliance for the first time, peel off any promotional materials and packaging materials, and check that the cooking plates are clean and free of dust. If necessary, wipe over with a damp cloth. For best results, pour a teaspoon of vegetable oil on to the non-stick plates. Spread over with an absorbent kitchen towel and wipe off any excess oil.

When your appliance is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.

- Insert the pin plug into the power outlet, you will notice that the power light will go on, indicating that the appliance has begun preheating.
- Allow your appliance to pre-heat until the power light goes out. This indicates that the cooking plates have reached the correct temperature for cooking.
- For best results, lightly spray the cooking plates with a cooking oil spray before using. This will assist in the removal of the Doughnuts after cooking.
- Divide mixture into pan holes using a jug & spoon or fabric piping bag.
- Note: Do not use disposable plastic piping bags as these may melt if they come into contact with hot plates.
- Gently close the lid, ensuring the latch locks in place. Do not slam the lip down as it may cause the mixture to run off the cooking plates.
- Allow to cook for approximately 2- 4 minutes or until golden, adjusting the time to suit your own individual taste.
- To remove Doughnuts, always use a plastic or wooden spatula. Never use a sharp object or metal, as this will damage the non-stick surface of cooking plates.
- Once you are finished cooking, disconnect the plug from the wall outlet and leave unit open to cool.

RECIPE

Ingredients:

- 1 1/2 cup plain flour
- 1/2 cup caster sugar
- 1 1/2 tsp baking powder
- 1/2 tsp salt
- 125 g butter softened
- 1 egg
- 3/4 cup milk

Method:

STEP 1 - In a large bowl, stir flour, caster sugar, baking powder and salt to combine.
STEP 2 - Add butter, egg and milk and beat with an electric beater until mixture is thick, smooth and creamy.