
Foley Sideboard

Assembly Instructions - Please keep for future reference | 391/5790

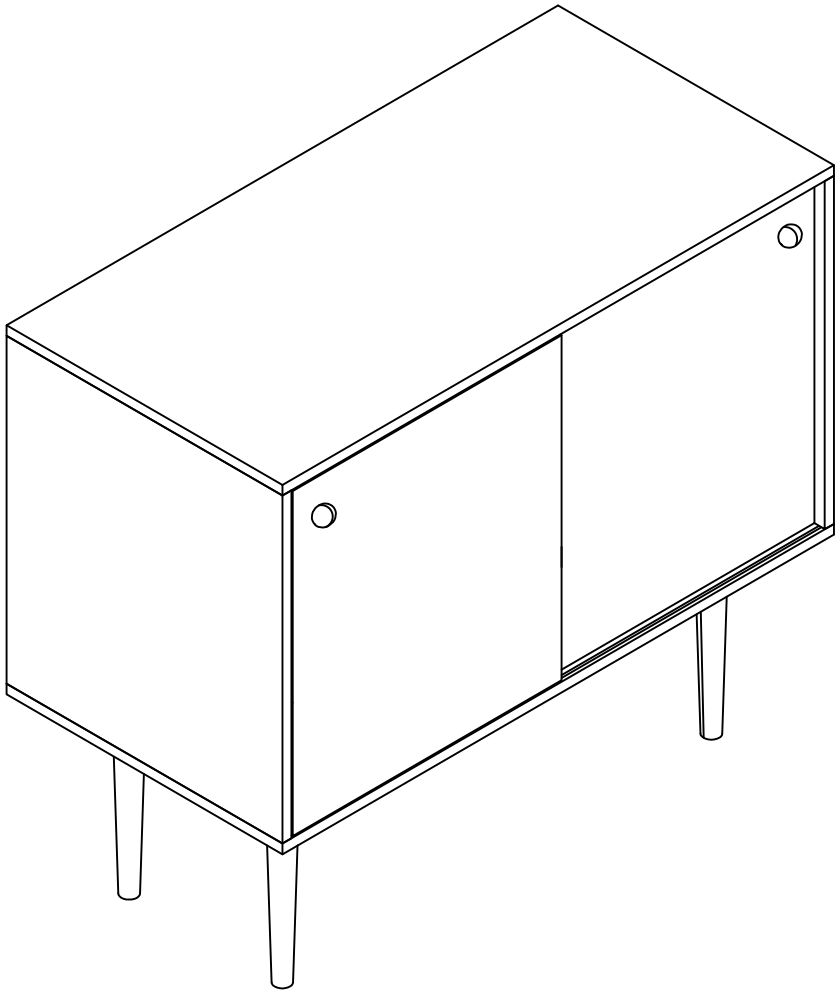

Dimensions

Width - 80 cm
Depth - 40 cm
Height - 80 cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:** 0345 6400 800

Issue 1-15-05-15

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

Check you have all the components and tools listed on pages 2 and 3.
Remove all fittings from the plastic bags and separate them into their groups.
Keep children and animals away from the work area, small parts could choke if swallowed.
Make sure you have enough space to layout the parts before starting.

Assemble the item as close to its final position (in the same room) as possible.

Assemble on a soft level surface to avoid damaging the unit or your floor.

Assembly requires 2 people.

Do not stand or put excessive weight on the product,this could cause damage.



We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers and Allen keys.

Dispose of all packaging carefully and responsibly.

Solid wood / Real wood veneers

This product has been finished using natrual materials. As a living material, you may notice some variation in the grain and colour shade between the different components.

Unlike a synthetic or man-made material which has a uniform finish, a feature of natural wood is its variation in grain and colour. We wish to reassure you that this is quite normal and is not the result of any manufacturing fault.

Where sheets of wood are joined together, a line may be detected. Again, this is normal and is not an imperfection.

The natural finish should be cared for by the periodic application of a good quality 'was' based domestic furniture polish (Not silicone!!). Occasional / small spills should be removed immediately using a damp cloth.

Do not allow hot articles to come into contact with the surface, as damage will occur!

Care and maintenance

Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.


From time to time check that there are no loose screws on this unit.

This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Components - Parts

If you have damaged or missing components.
call the **Customer Helpline**: 0345 6400 800


Please check you have all the parts listed below

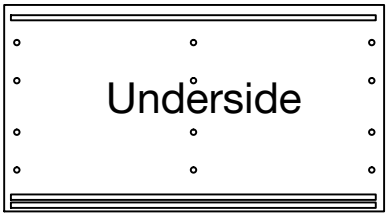

1 Top panel x 1
(80x40x1.5cm)

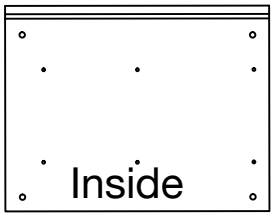


2 Side panel x 2
(59x40x1.5cm)

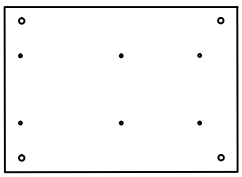

3 Divider x 1
(59x33.5x1.5cm)




4 Door x 2
(60x39.5x1.2cm)

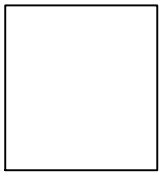


5 Adjustable shelf x 2
(37.5x33.5x1.2cm)



6 Back panel x 2
(60x39x0.3cm)

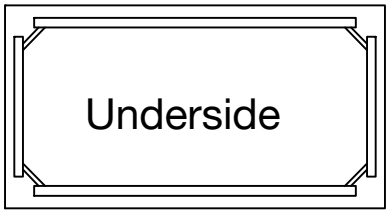

7 Base panel x 1
(80x40x7.5cm)

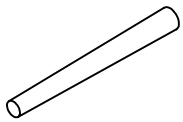



8 Feet x 4
(18x3.8x3.8cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 0345 6400 800**


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


A  Metal dowel x 12	**B**  Locking nut x 12	**C**  Wooden dowel x 12
D  Shelf support pin x 8	**E**  Plastic bracket x 4	**F**  3x4mm screw x 4
G  M6x50mm Allen screw x 8	**H**  Spring washer x 8	**J**  Plain washer x 8
K  Allen key x 1	**L**  Wall strap x 2	**M**  12mm screw x 2

Tools required

 Ruler/tape measure

 Phillips screwdriver (Not supplied)

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Preparing panels


Place top panel 1 and base panel 7 flat onto the floor with the fixing holes facing up.

Screw metal dowels A into each panel as shown.

Screw metal dowels as far as shown.

Do not overtighten.

Insert wood dowels C into top panel 1 and base panel 7 as shown.

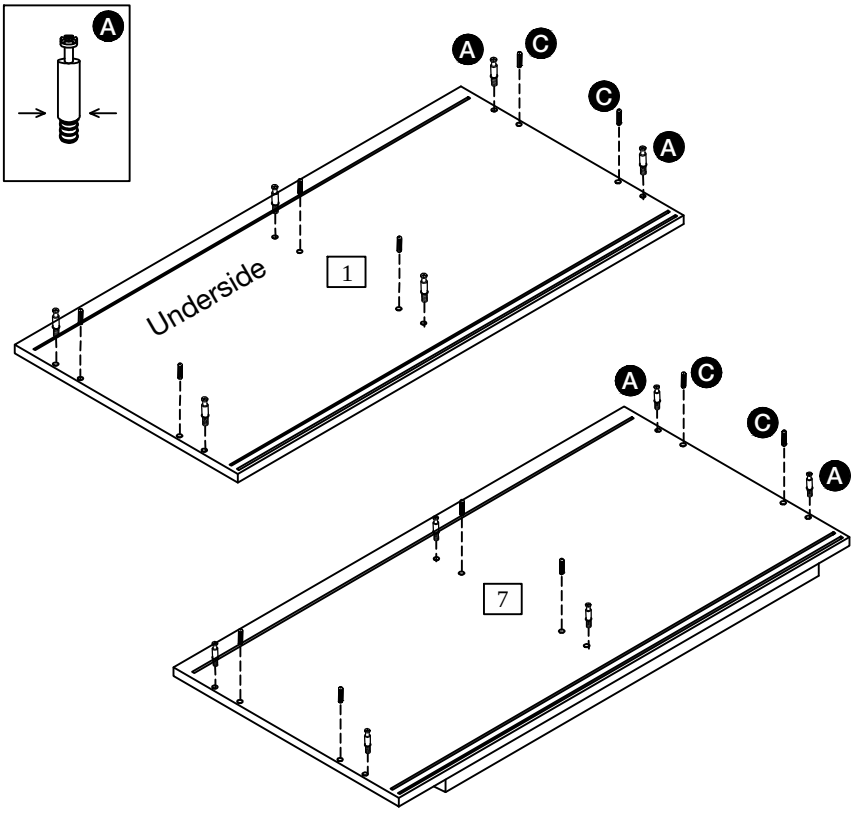

Step 2


Assembling side panels

Carefully locate side panels 2 and divider 3 onto top panel 1 in the locations shown.

Note: Ensure all grooves are correctly located at the back.

Insert locking nuts B into side panels 2 and divider 3.

Turn locking nuts clockwise to secure.

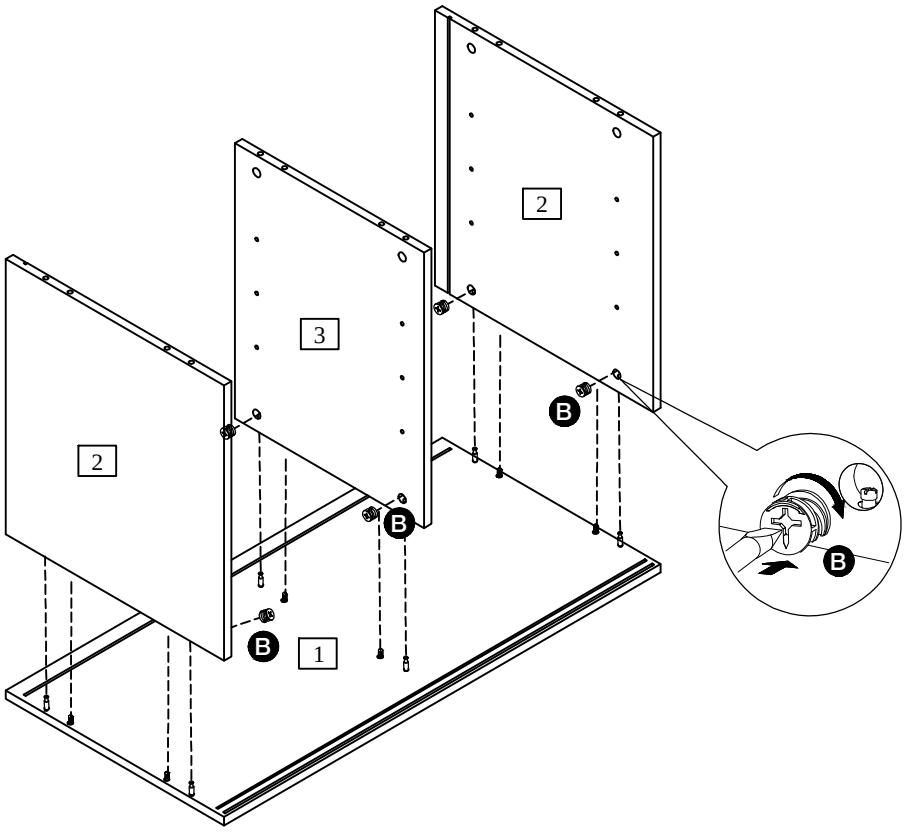


Step 3

Assembling back panels

Carefully slide back panels [6] into the grooves as shown.

Note: Ensure the finished surface of back panels [6] is on the inside as shown.

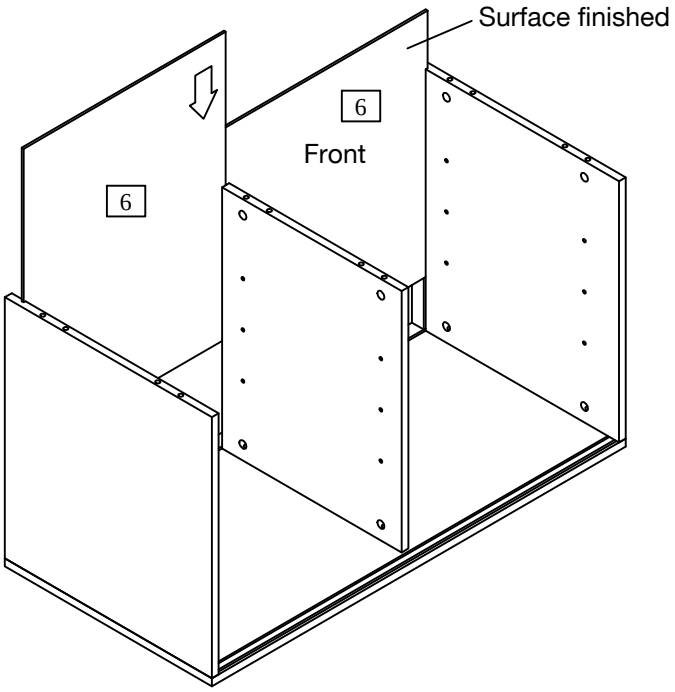

Step 4

Assembling doors and base panel

Carefully locate doors [4] into the grooves in the underside of top panel [1].

Note: There are 2 grooves. Locate 1 door into each groove.


Ensure the door 'handle' holes are located outside as shown.

With help, carefully locate base panel [7] into position as shown.

Note: Ensure the doors locate into the grooves in base panel [7] correctly.

Insert locking nuts (B) into both side panels [2] and divider [3].


Turn locking nuts clockwise to secure.

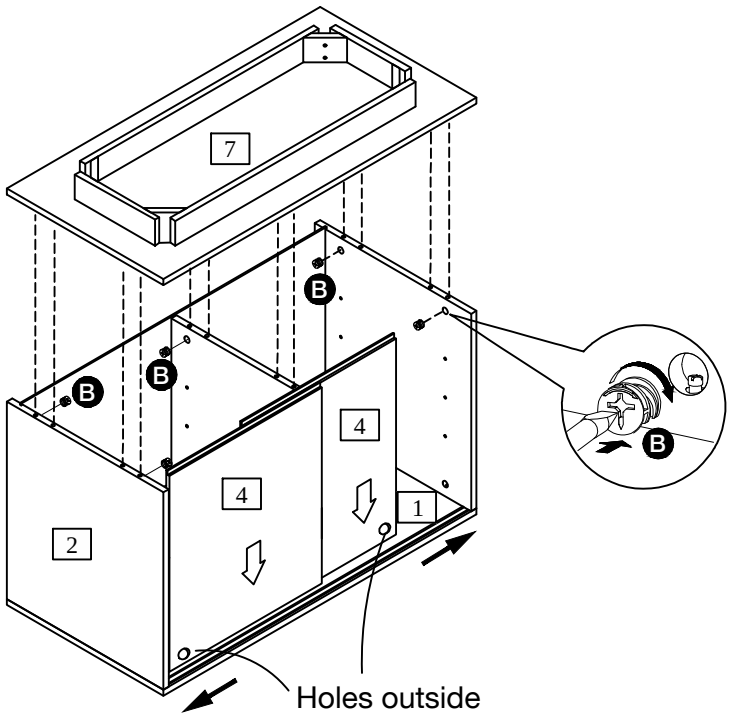

Step 5

Attaching legs

Assemble legs 8 to base panel 7 using fixings G, H, J.

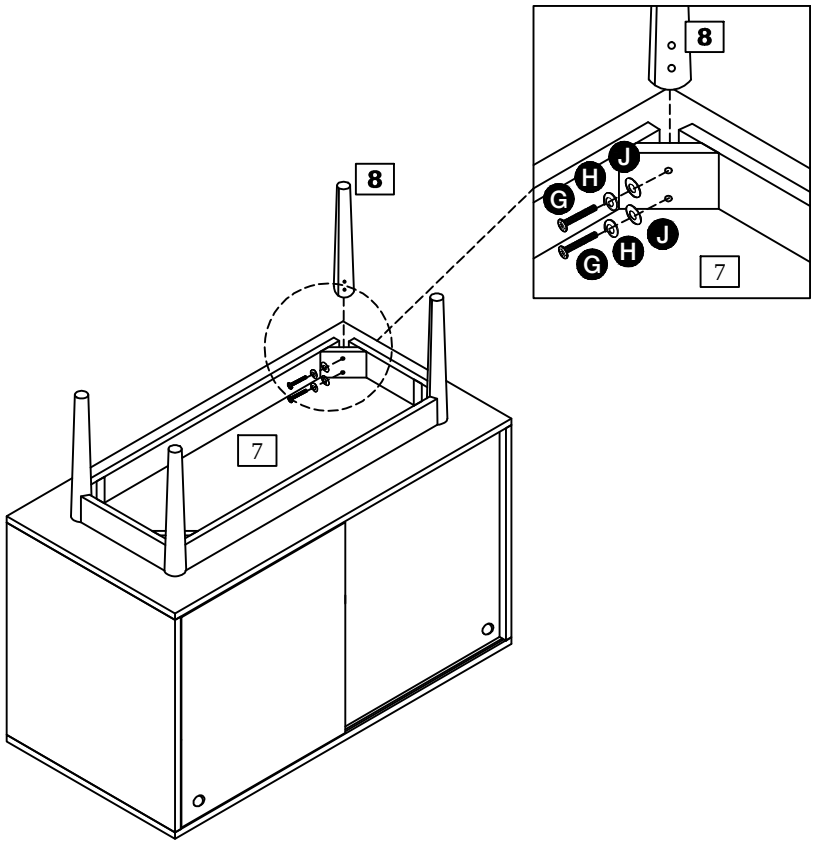


Step 6

Securing assembly

With help, carefully turn the sideboard over to the upright position.

Warning: The sideboard is heavy. Lift with care.

Fit plastic brackets E around the edge of back panels 6 using screws F.

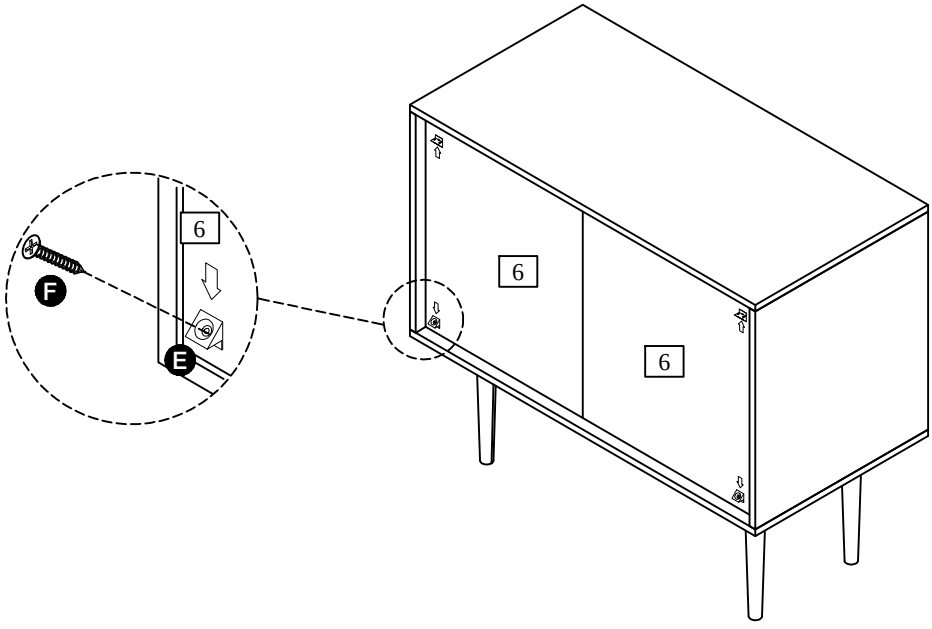

Assembly Instructions


Step 7

Locating shelves

Slide open the doors.

Fit shelf support pins Ⓓ at the desired height.

Carefully place height adjustable shelves [5] onto the support pins.

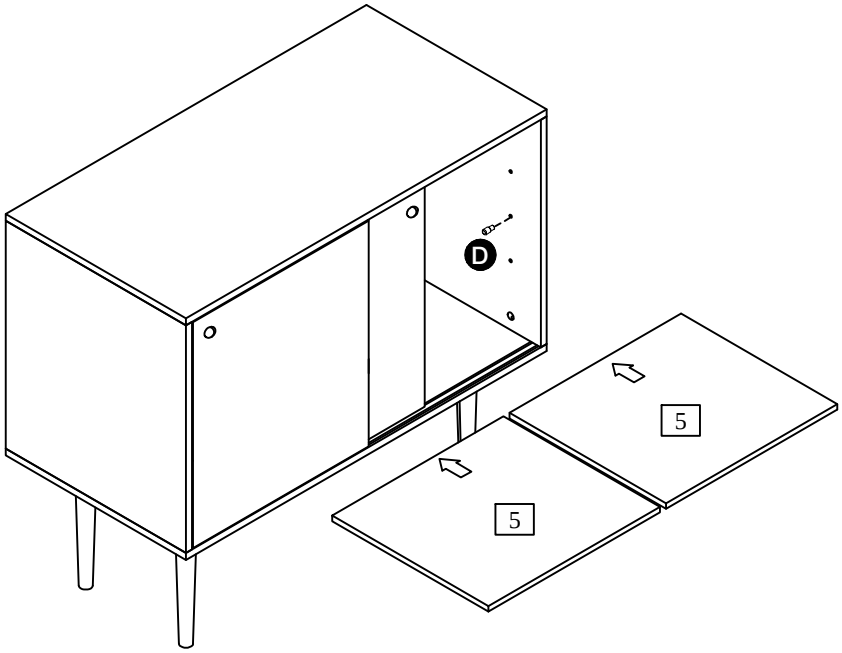

Step 8

It is recommended that the sideboard is fixed to the wall to ensure stability.

Assemble wall straps Ⓛ to the back edge of top panel [1] using screws Ⓜ.

With help, move the unit to the desired location.


Mark the fixing hole locations on the wall and remove the unit.

Drill the wall and fit suitable plugs for your wall type.

Note: Wall plugs are not supplied.

Warning: Before drilling. Check the wall for hidden pipes or cables.Re-position the unit and secure the wall straps to the wall.

Note: Screws are not supplied.

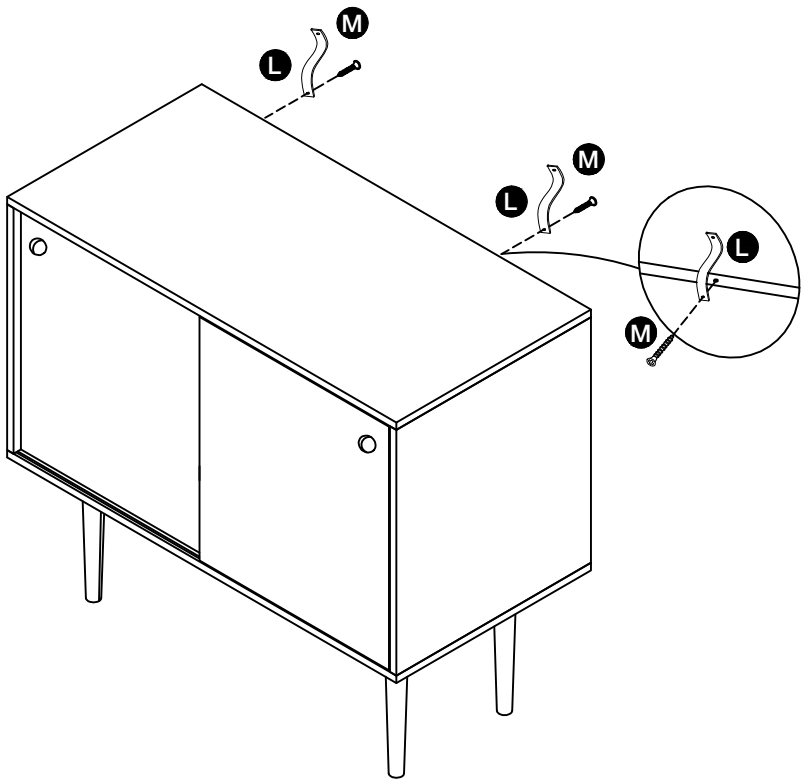

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 6400 800**
Home Retail Group. 489-499 Avebury Boulevard. Saxon Gate West. Central Milton Keynes. MK9 2NW