
DR82536

Washington - 3+3drw

Assembly Instructions - Please keep for future reference

414/7866
392/4121

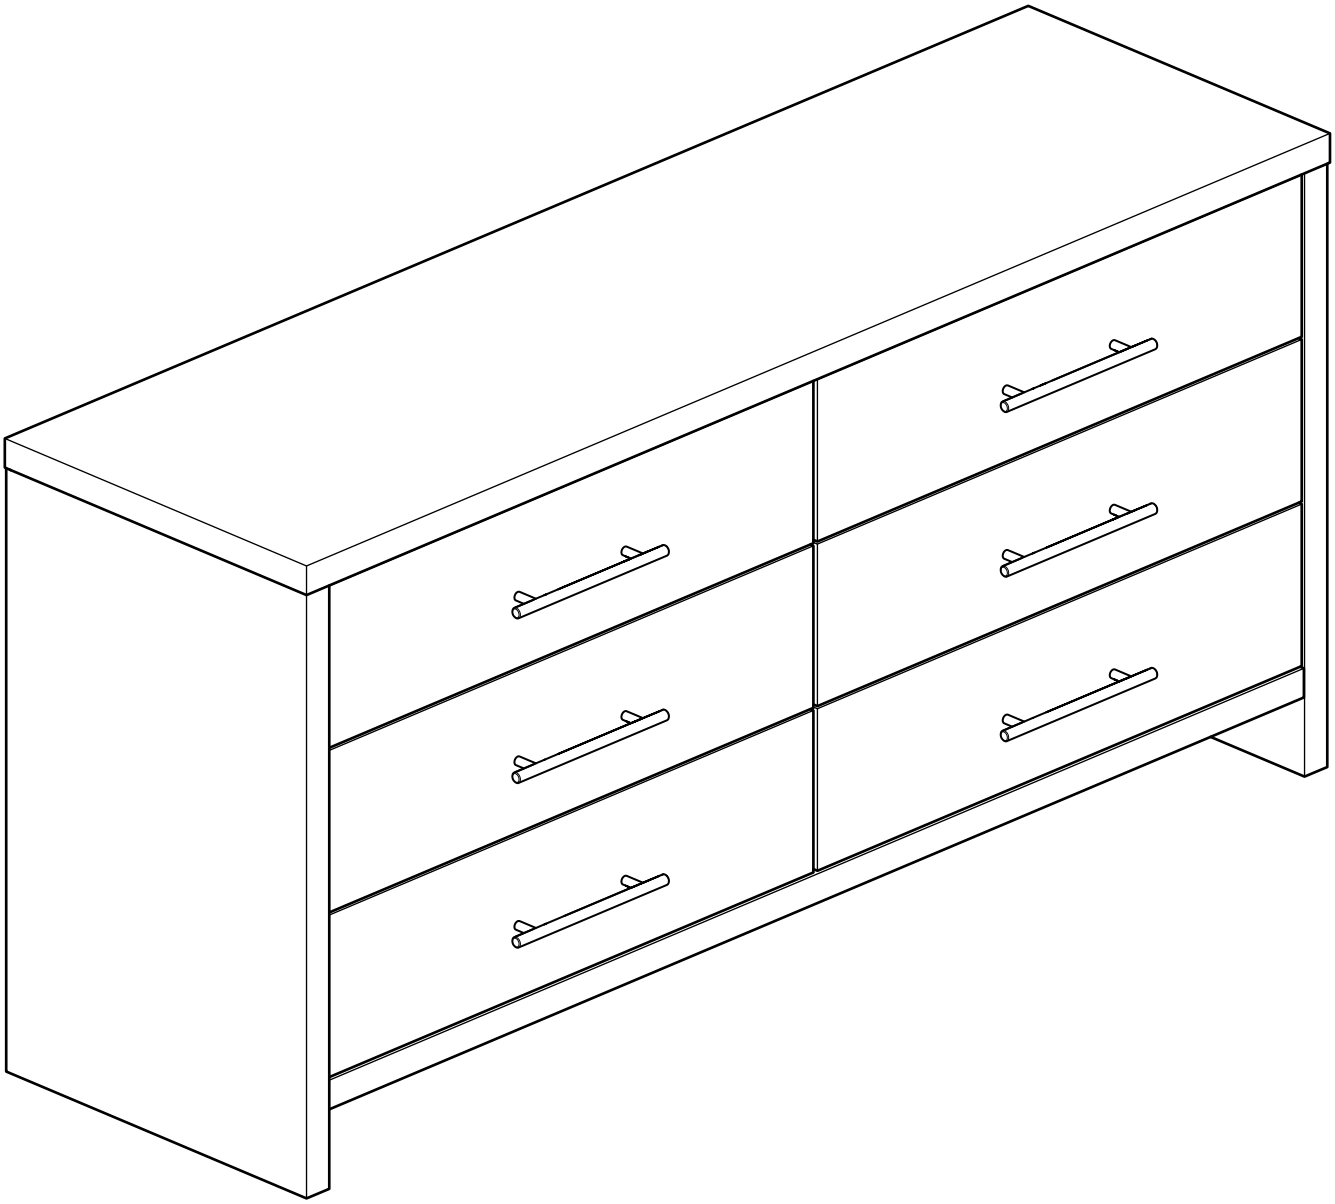

Dimensions

Width - 153cm
Depth - 45.1cm
Height - 48.3cm

414/7866 SMOKEY OAK
392/4121 WARM OAK

Tip : To prevent damage, we recommend that you build your unit on the carton(s) it was packed in.

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please visit: **www.argos-support.co.uk**
or email: **Help@ClickSpares.co.uk** (quoting your original order number)
Alternatively, call the Spares Helpline on: **0370 112 1928**
For any other queries please contact the Customer Helpline on: **0345 640 2020**

Issue 1 - 02/07/15

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/ drivers **for inserting screws,** as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Glue safety - Take care when using glue, please follow the advice below•

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts


• Regularly check and ensure that all bolts and fi ttings are tightend properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

For damaged or missing parts, please visit:
www.argos-support.co.uk or email: **Help@ClickSpares.co.uk**


Please check you have all the panels listed below

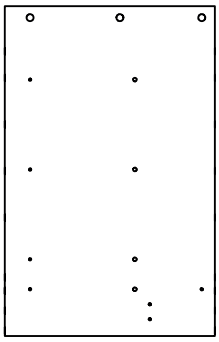


1 Left side
(70.5 x 44.9 cm)
P8316

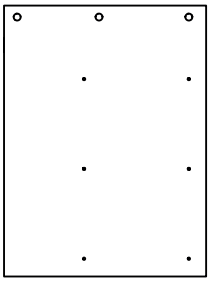


2 Upright
(57.9 x 43.2cm)
P2959

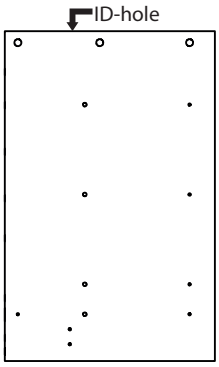

3 Right side
(70.5 x 44.9cm)
P8315

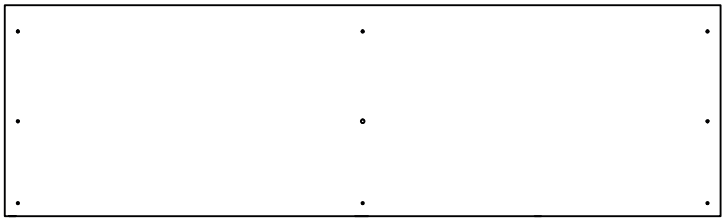


4 Top
(153 x 45.1cm)
P8504




5 Drawer front left x 3
(72.4 x 18.9cm)
P4115



6 Foldy back
(152 x 64.2cm)
BO2568




7 Drawer front right x 3
(72.4 x 18.9cm)
P4114

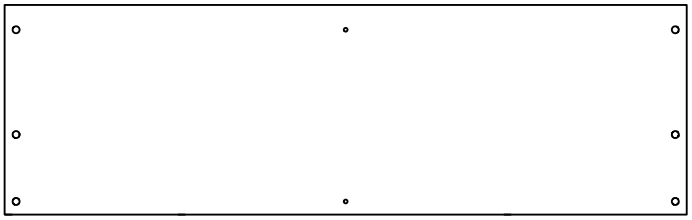

8 Bottom
(145.8 x 44.8cm)
P8112



9 Drawer bottom x 6
(68.2 x 34.3cm)
BO2540



10 Plinth
(145. 8 x 92cm)
P7050



11 Left drawer side x 6
(35 x 14cm)
LA1614



12 Drawer back x 6
(67 x 14cm)
LA1617



















13 Right drawer side x 6
(35 x 14cm)
LA1615

Components - Fittings


For damaged or missing parts, please visit:
www.argos-support.co.uk or email: **Help@ClickSpares.co.uk**


Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly**.** In some cases more fittings may be supplied than are required.

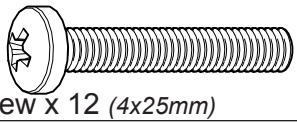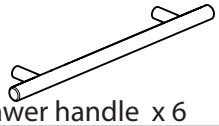FK1011 **A**  Locking screw x 27 *(5x24mm)*	FK1010 **B**  Locking nut x 12 *(12x10mm)*	FK1012 **C**  Large locking nut x 15 *(15x12mm)*
FK1301 **D**  Fixing screw drawer x 24 *(6.3x10mm)*	FK1311 **E**  Screw x 84 *(3x15mm)*	FK1400 **F**  Screw x 9 *(4x15mm)*
FK1985 **G**  Screw x 12 *(4x25mm)*	FK1007 **H**  Confirmat screw x 2 *(7x70mm)*	FK1515 **I**  Nail x 32
FK1410 **J**  Wood dowel x 4 *(5x30mm)*	FK1235 **K**  L-Bracket x 1	GR1855 **L**  Drawer handle x 6
FK1234 **M**  Peg, brown x 2	FK1250 **N**  Drawer base support x 36	FK1248 **O**  Corner connector, white x 2
FK1800 **P**  Plug, Nylon x 9	FA1510 **Q**  Glue x 1	PM1515 LA **R**  Runner left part A x 6
PM1515 LB **S**  Runner left part B x 6	PM1515 RA **T**  Runner right part A x 6	PM1515 RB **U**  Runner right part B x 6
ZF99936 **V**  Wall plug *(6mm)* and parkerscrew x 1	FK1004 **W**  Allen key x 1 *(3mm)*	FK1415 **X**  Nail holder x 1


Tools required


Phillips screwdriver (medium & large)


Flatblade screwdriver (medium)



Piercer (small)

7mm Suitable drill bit (for use with wall plug)

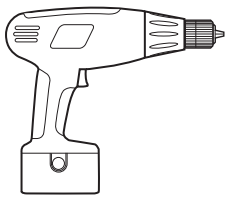

Drill (for use with wall plug)


Small hammer


Ruler/tape measure


Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws




The screws length is measured from the head to the point (30mm screw shown).

Assembly Instructions

Step 1

a: Press the Nylon plug Ⓟ firmly into left side [1].


Screw 24mm locking screw Ⓐ into left side [1].


Note: Insert 24mm locking screw Ⓐ as far as shown. **Do not over tighten.**


Insert large locking nuts Ⓒ into left side [1].


Make sure the 'arrow' on locking nuts Ⓒ points towards the hole in the edge of left side [1].

a:

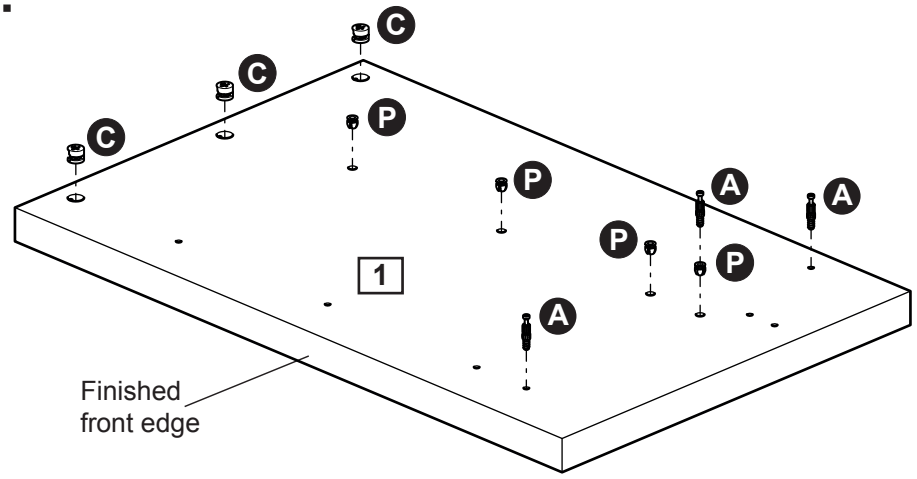

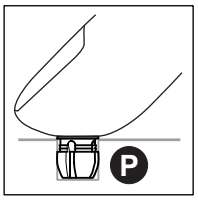

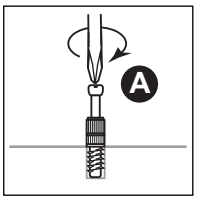

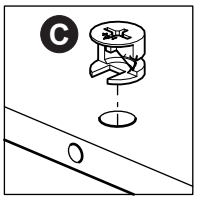



Attaching runners
b: Fix runner left part A Ⓡ on left side [1] as shown usesing fixing screw drawer Ⓓ into left side [1].

Note: look carreful for the right postion.

Insert 15mm screw Ⓔ as shown into left side [1] to fix runner left part A Ⓡ.

b:

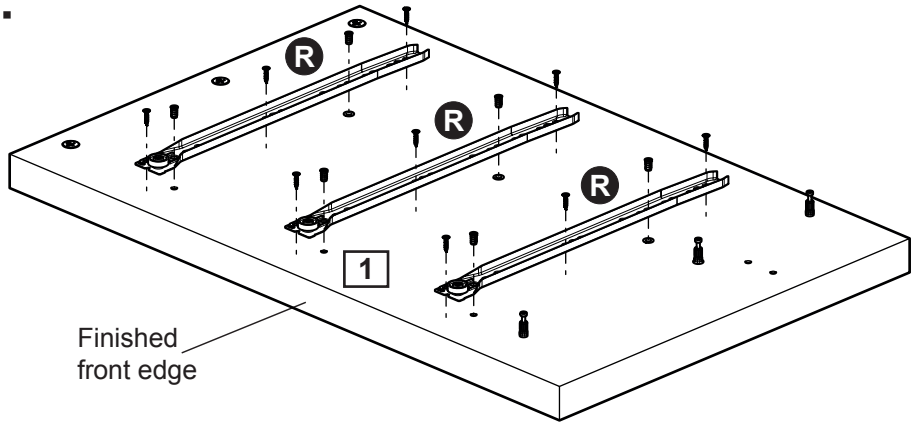

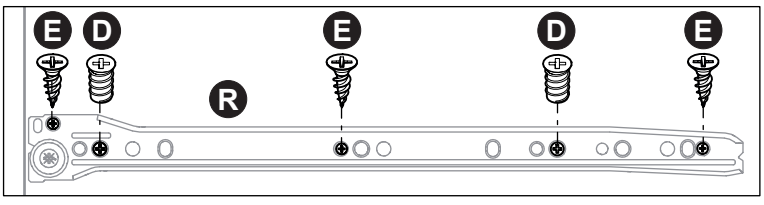

Assembly Instructions

Step 2

a: Press the Nylon plug Ⓟ firmly into right side [3].


Screw 24mm locking screw Ⓐ into right side [3].


Note: Insert 24mm locking screw Ⓐ as far as shown. **Do not over tighten.**


Insert large locking nuts Ⓒ into right side [3].


Make sure the 'arrow' on locking nuts Ⓒ points towards the hole in the edge of right side [3].

a:

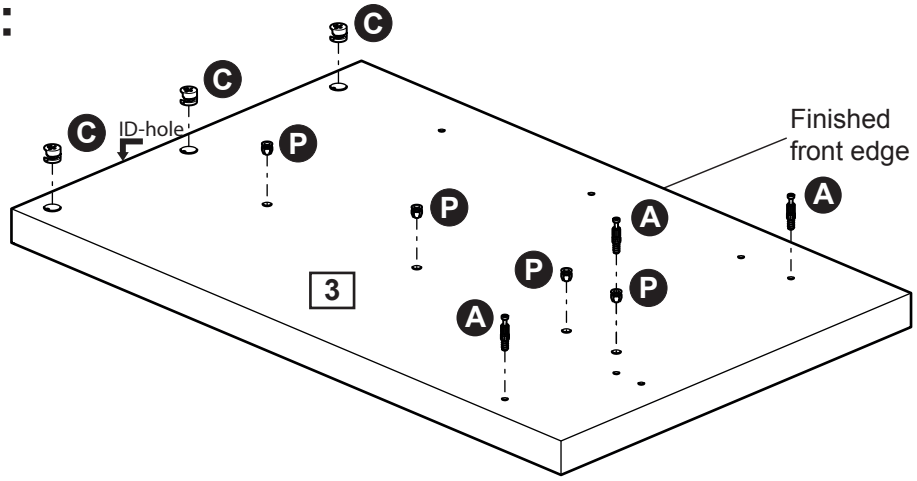

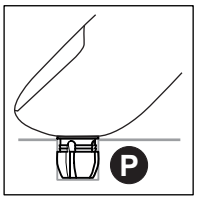

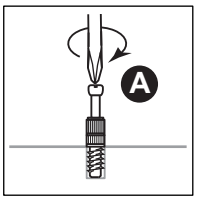

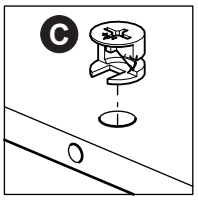


Attaching runners


b: Fix runner right part A Ⓣ on right side [3] as shown usesing fixing screw drawer Ⓓ into right side [3].

Note: look carreful for the right postion.

Insert 15mm screw Ⓔ as shown into right side [3] to fix runner right part A Ⓣ.

b:

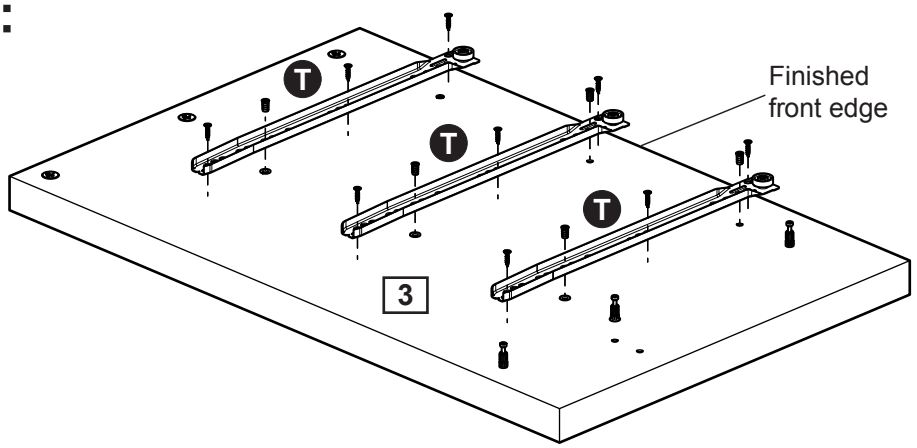

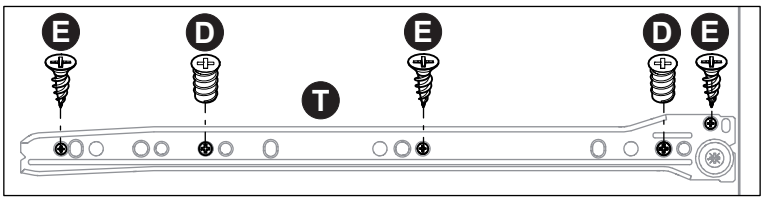

Assembly Instructions

Step 3

a: Insert large locking nuts Ⓒ into upright [2].


Make sure the 'arrow' on locking nuts Ⓒ points towards the hole in the edge of upright [2].


Attaching runners
b: Fix runner right part A Ⓣ on upright [2] as shown usesing fixing screw drawer Ⓓ into upright [2].


Note: look carreful for the right postion.

Insert 15mm screw Ⓔ as shown into upright [2] to fix runner right part A Ⓣ

a:

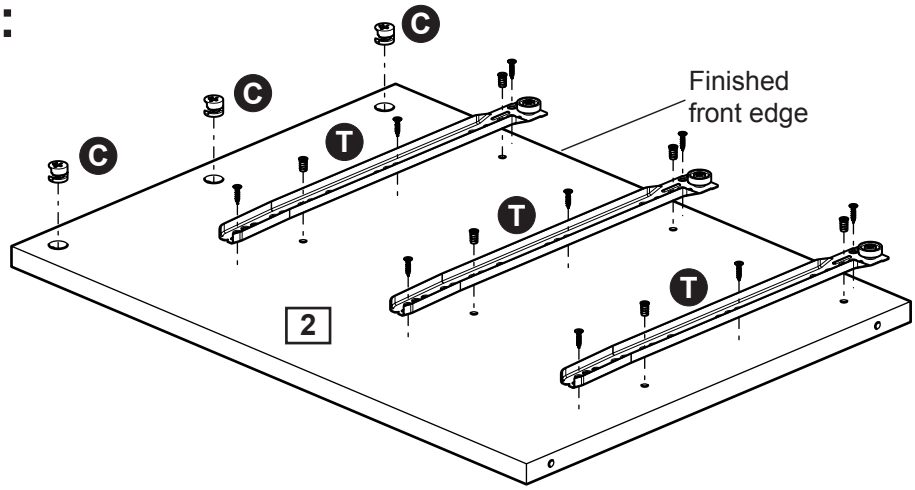

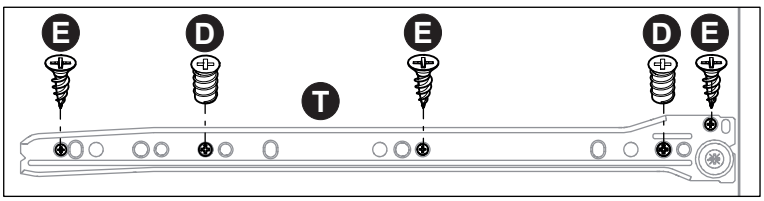

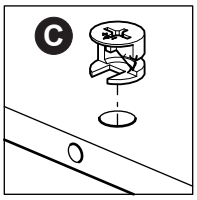


b: Flip panel upright [2]


Attaching runners
b: Fix runner left part A Ⓡ on upright [2] as shown usesing fixing screw drawer Ⓓ into upright [2].

Note: look carreful for the right postion.

Insert 15mm screw Ⓔ as shown into upright [2] to fix runner left part A Ⓡ.

b:

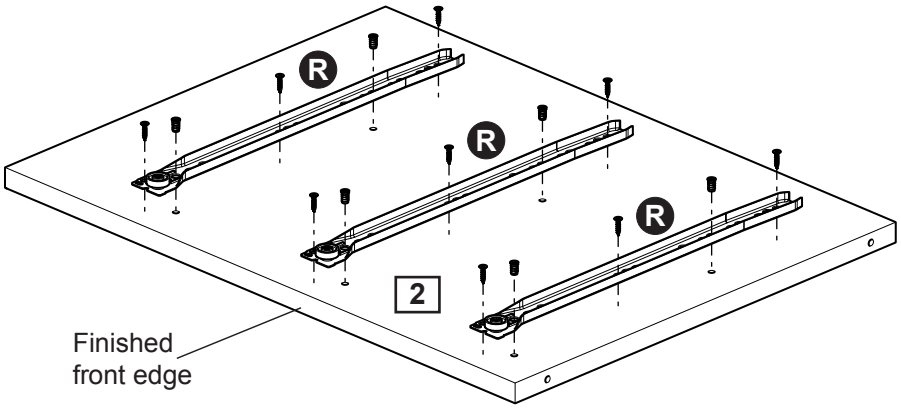

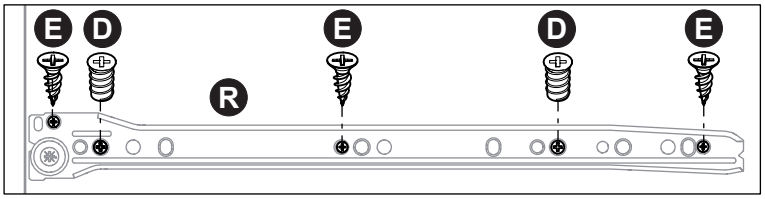


Assembly Instructions

Step 4

Press the Nylon plug P firmly into top 4.

Screw 24mm locking screw A into top 4.


Note: Insert 24mm locking screw A as far as shown. **Do not over tighten.**

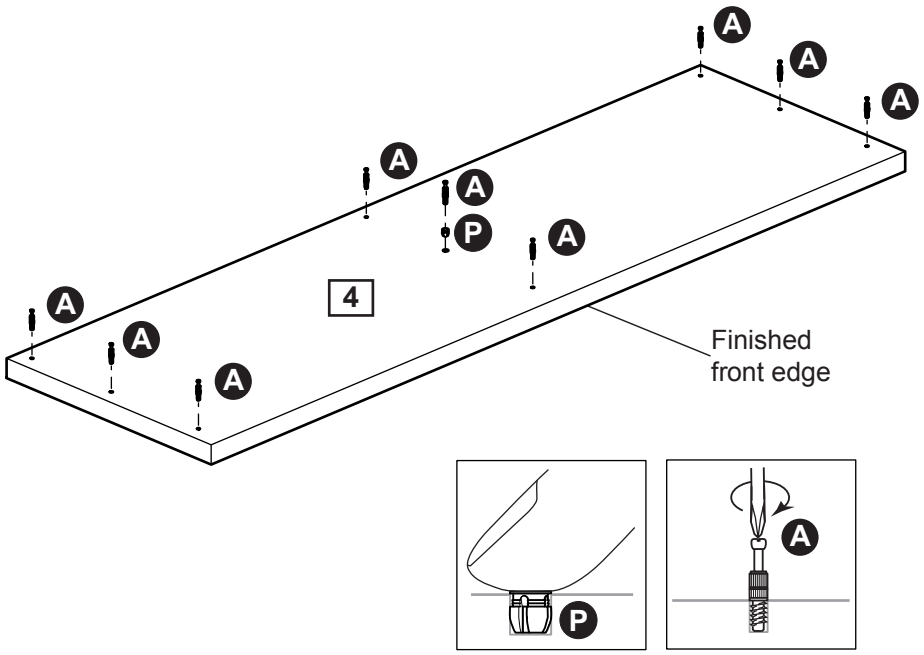

Step 5

Put drop of glue Q into the 4 holes of plinth 10.


Insert wood dowel J into the 4 holes of plinth 10.

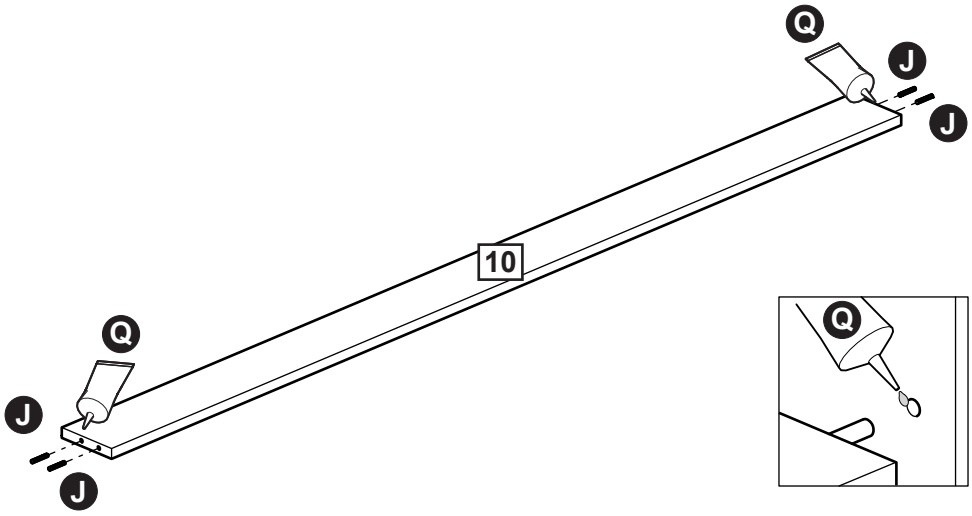


Step 6

Insert large locking nuts C into bottom 8.

Make sure the 'arrow' on locking nuts C points towards the hole in the edge of bottom 8.

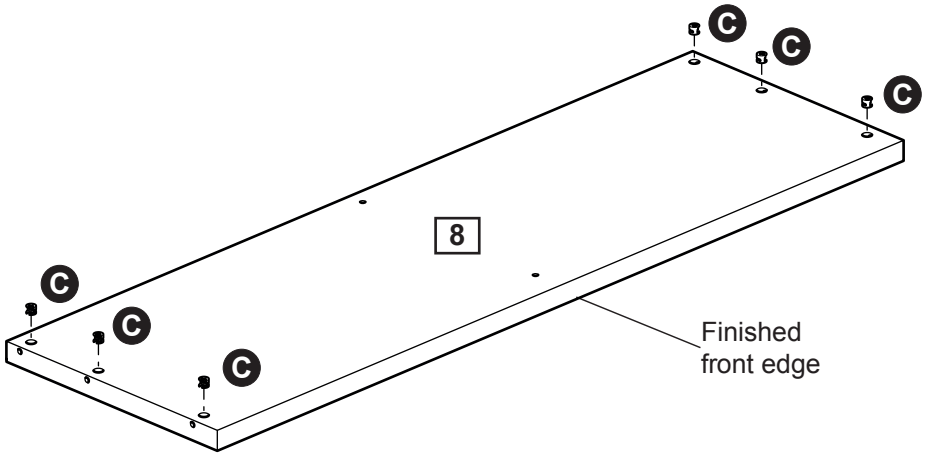

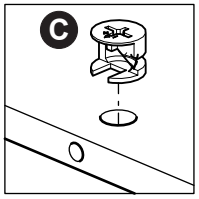

Assembly Instructions


Step 7


Attaching panels


Put drop of glue Q into the 2 holes of left side 1 and the 2 holes of right side 3

Position left side 1 and right side 3 onto bottom 8 and plinth 10.

Use a screwdriver to turn locking nuts C clockwise to lock.

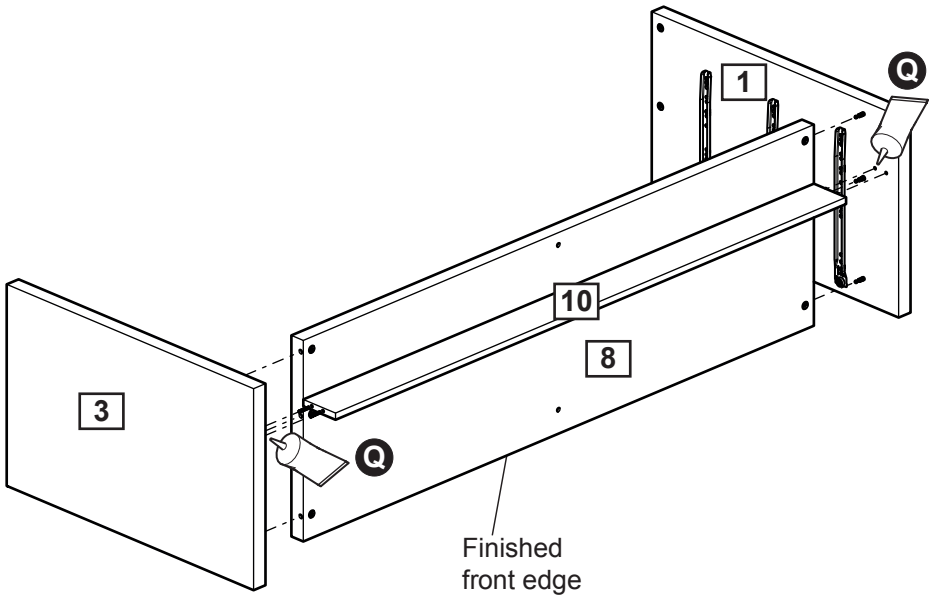

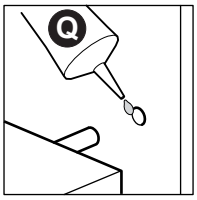

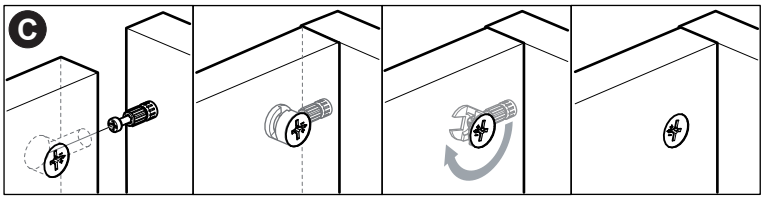

Step 8


Attaching panels


Attach upright 2 with 2x confirmat screw H onto bottom 8.
Use allen key W.


Position top 4 onto left side 1, upright 2 and right side 3.

Use a screwdriver to turn locking nuts C clockwise to lock.

Mount corner connector O with 2 screws F on the plint 10 and bottom 8.

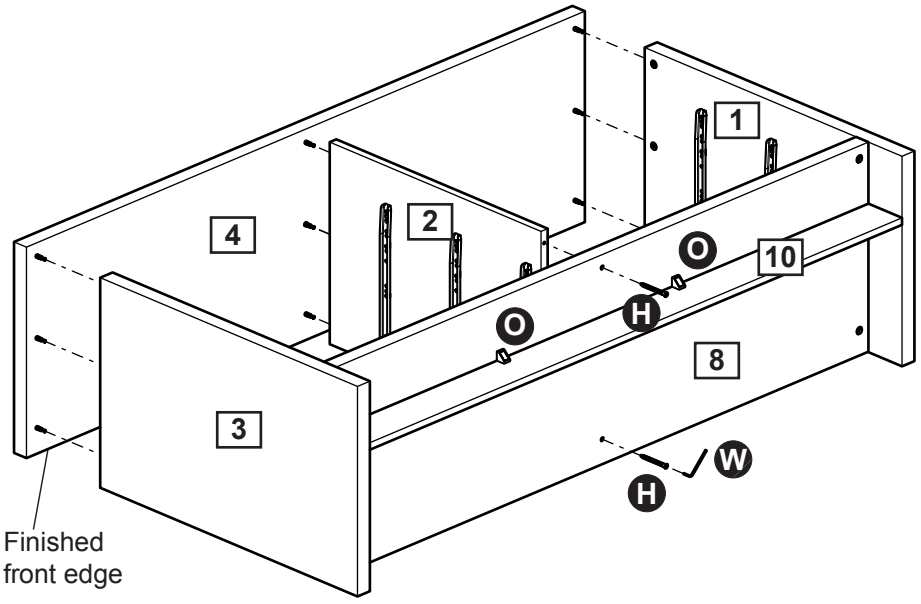

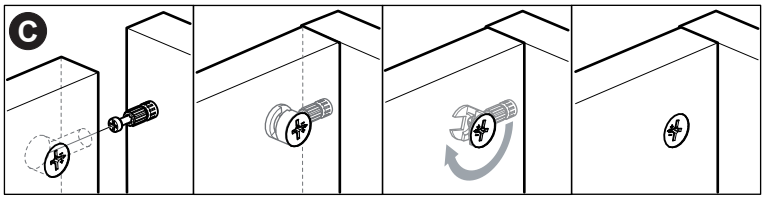

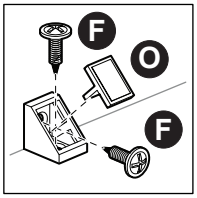

Assembly Instructions


Step 9


Fitting back panel


Attach foldy back 6 to the back with the coloured surface facing the inside using nails I.
Use nail holder X to hold the nails I vertical and at correct distance as you secure the foldy back 6.
Nails I should be spaced about 150mm apart.

Important:
Furniture MUST be 'square' when back is attached.

screw 4x screw F into the pre-drilled holes of foldy back 6.

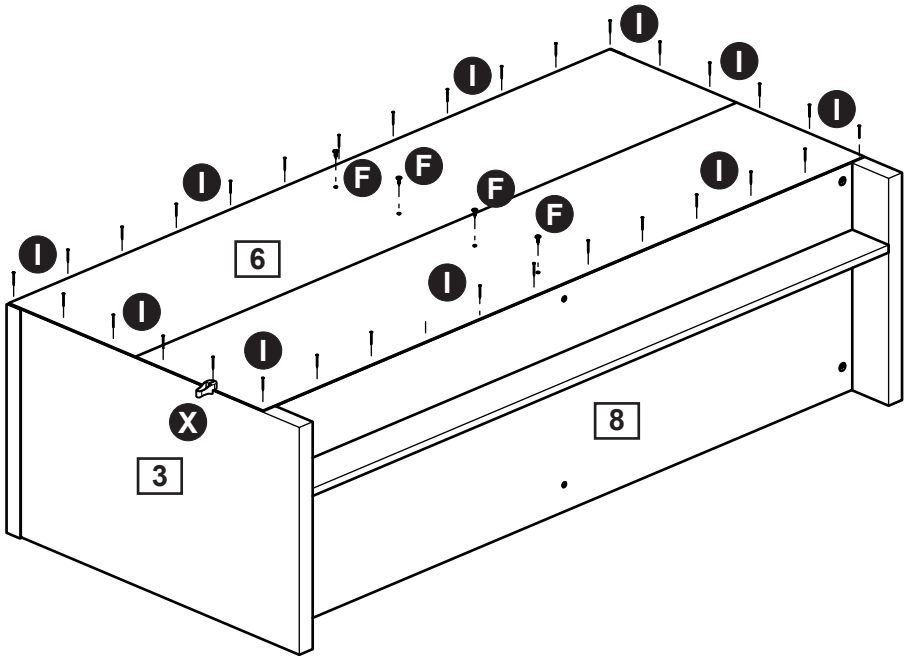

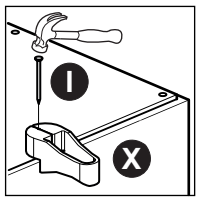

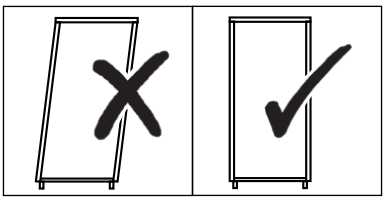

Step 10

Preparing drawer

Insert locking nuts B into left drawer side 11 and right drawer side 13.


Make sure the 'arrow' on locking nuts B points towards the hole in the edge of 11 and 13.


Put drop of glue Q into the 3 holes of left drawer side 11 and right drawer side 13.


Attach left drawer side 11 and right drawer side 13 onto drawer back 12.

Insert drawer bottom 6.

5x

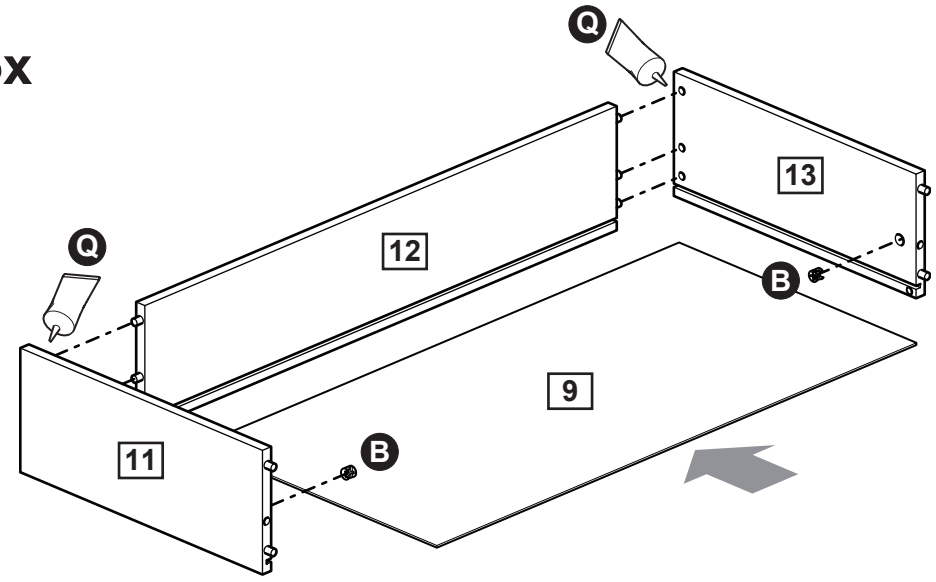

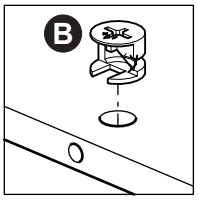

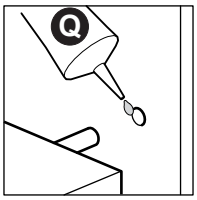


Assembly Instructions

Step 11

Screw 24mm locking screw Ⓐ into drawer front left [5] and drawer front right [7].

Note: Insert 24mm locking screw Ⓐ as far as shown. **Do not over tighten.**

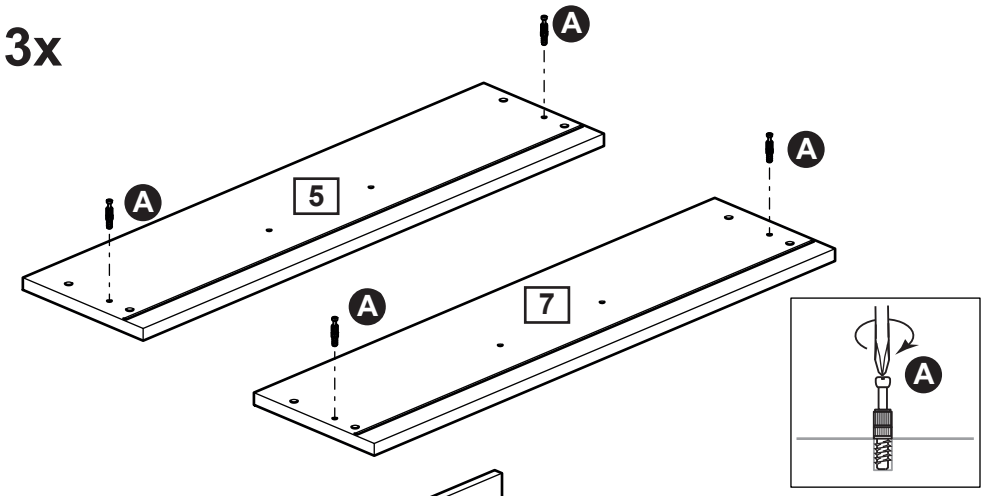


Step 12

Position drawer front left [5] onto drawer.
Use a screwdriver to turn locking nuts Ⓑ clockwise to lock.
Note: look carefully to the positions of drawer front left [5].

Position drawer front right [7] onto drawer.
Use a screwdriver to turn locking nuts Ⓑ clockwise to lock.
Note: look carefully to the positions of drawer front right [7].

Fix drawer handle Ⓛ onto drawer front left [5] and drawer front right [7] using screw Ⓖ.

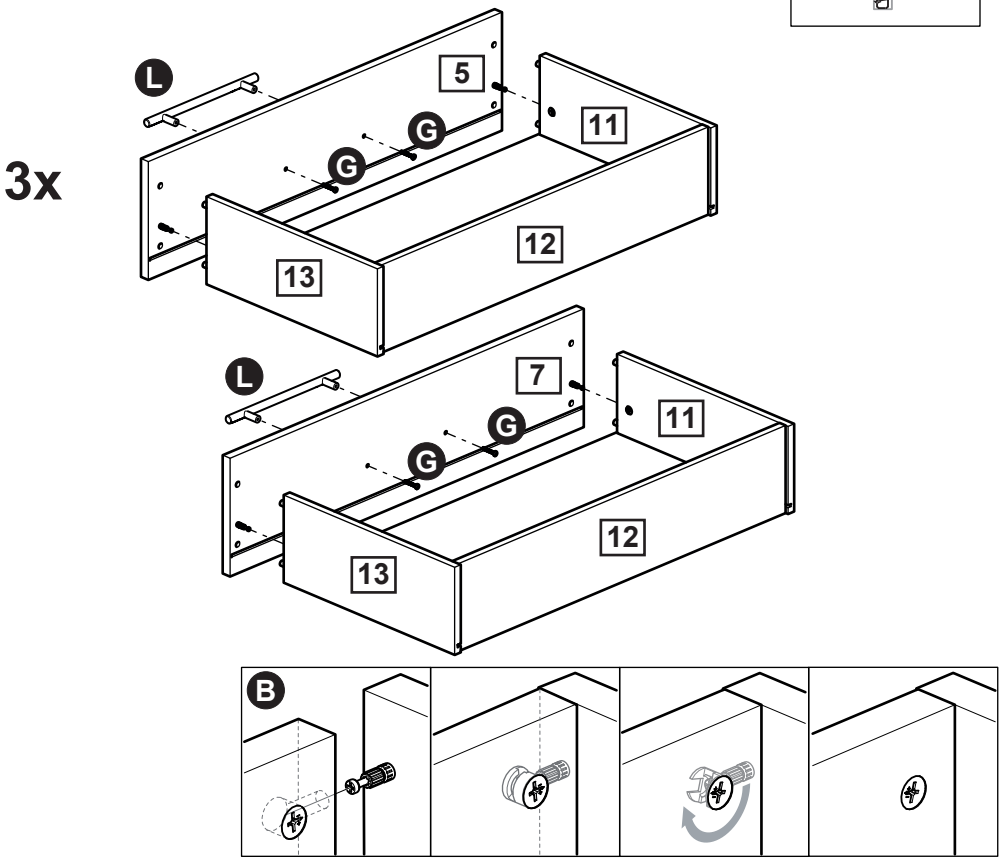


Step 13

a: Turn over drawer.

Fix runner left part B Ⓢ on left drawer side [11] as shown using screw Ⓔ.


Fix runner right part B Ⓤ on right drawer side [13] as shown using screw Ⓔ.

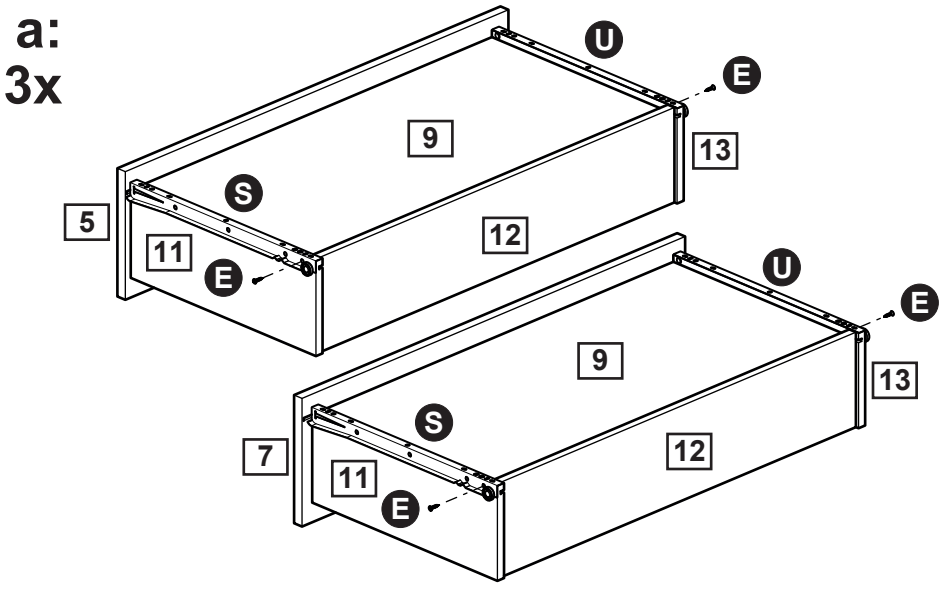

Step 13 - Continued


b: Fix runner left part B Ⓢ and runner right part B Ⓤ using screw Ⓔ.

Slide drawer base support Ⓝ in corner as shown and fix them, using the attached screw.

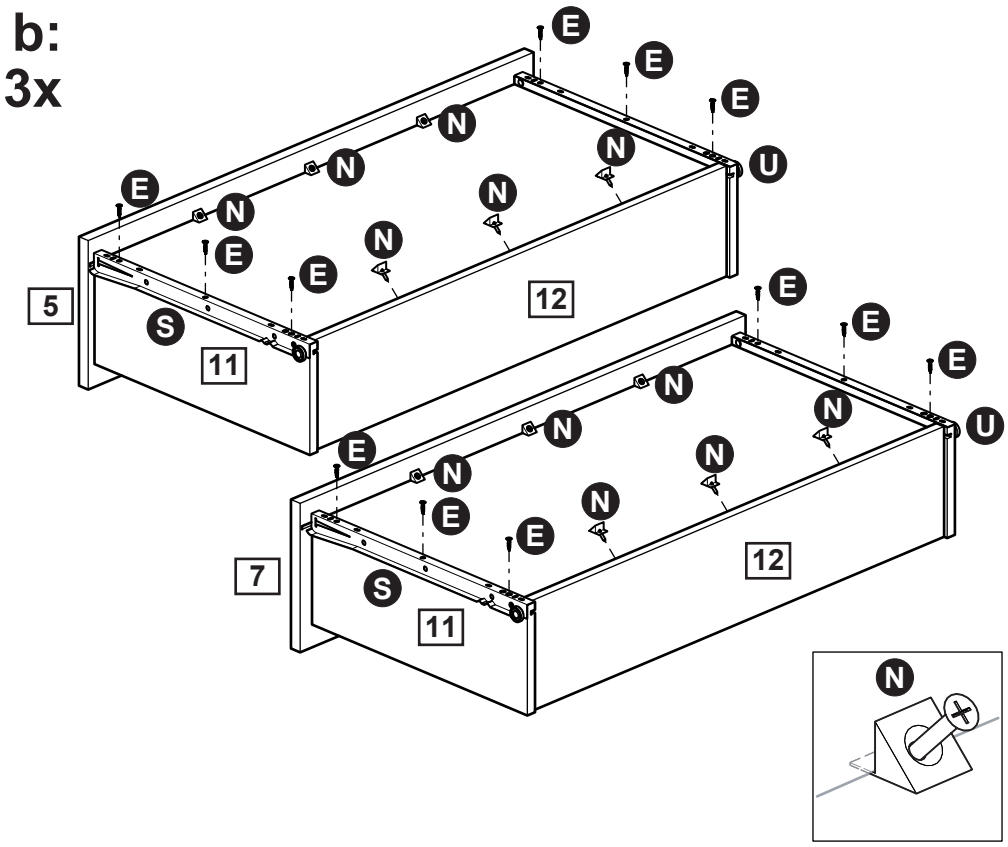

Step 14

Inserting drawers
as shown.
For adjusting the drawers see ‘adjustment’ on page ‘drawer adjustment’.

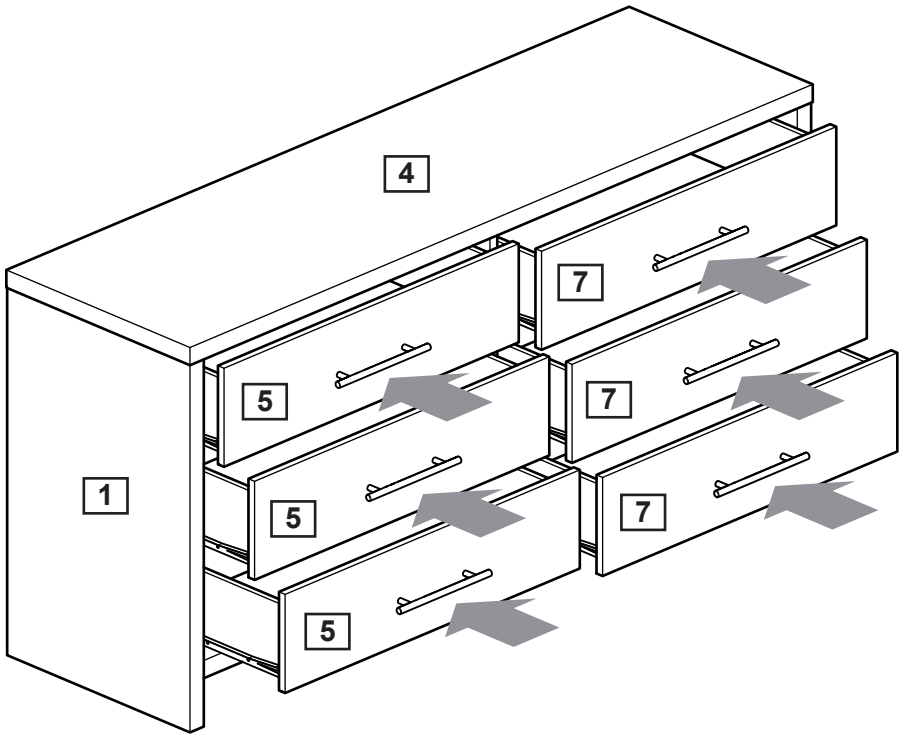

Assembly Instructions


Step 15


Position L-bracket Ⓚ on top [4] as shown, fix using screw Ⓕ.


Note: there is no pre-drilled hole for screw Ⓕ.


Use Ⓥ to fix on the wall, please see page 'Wall Mounting & Fixings' for more information.


Use peg Ⓜ to square your furniture. Knock peg Ⓜ in, as far as you require, under the end of the side of the forniture. Then snap off flush with the side.

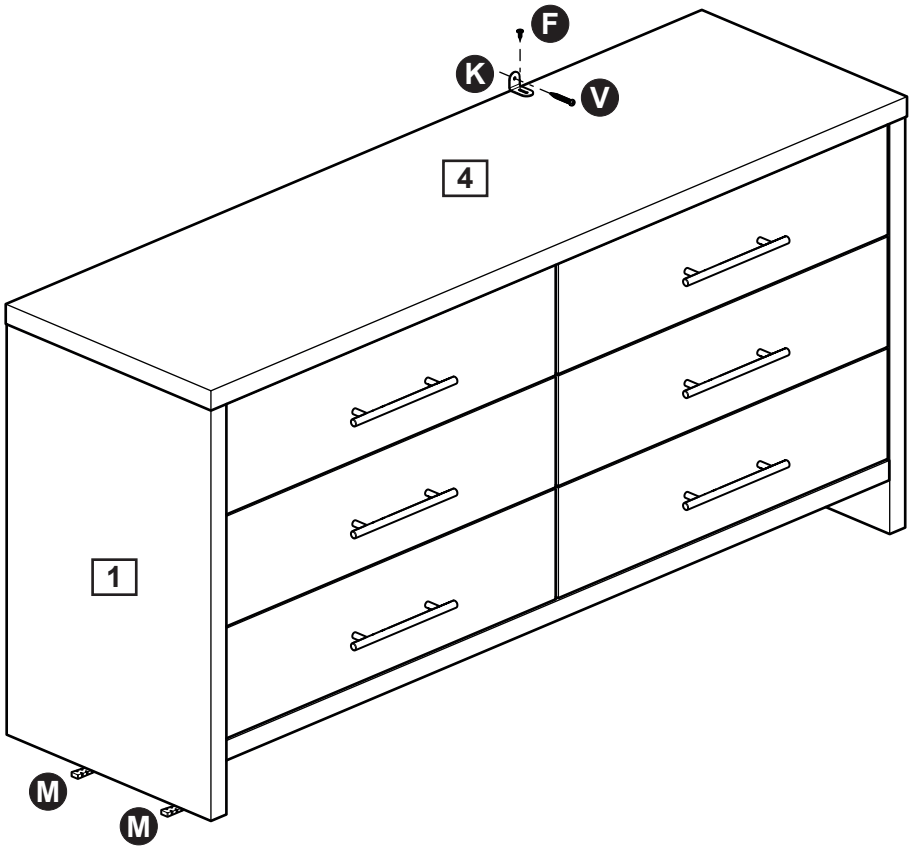

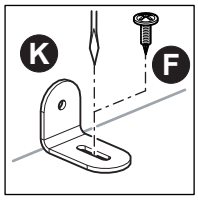

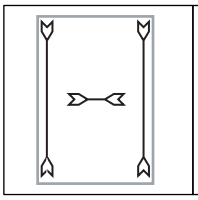

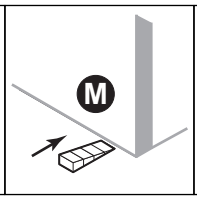

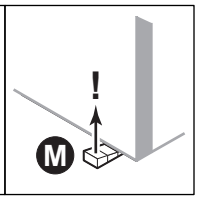

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos 03456 400 800

A Guide to - Drawer adjustment

Adjustment

Note: Each drawer can be adjust for approximately 1mm up or down on each site of the drawer.

Remove drawer, adjust the wheel from runner left part A and runner right part A as shown.


Insert drawer.


Repeat above steps until the desired result is achieved.




Runner left part A x 2

Runner right part A x 2

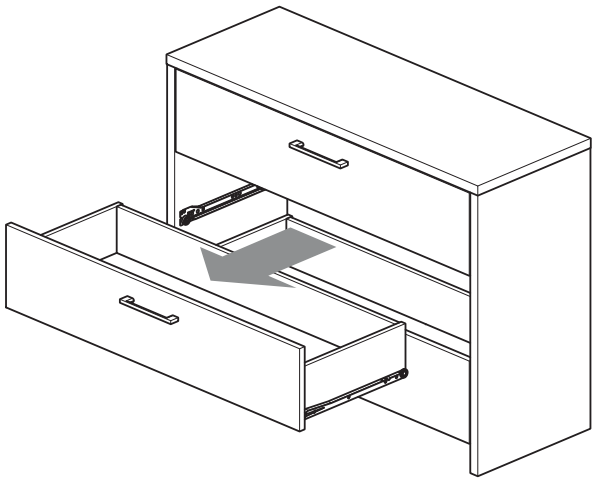

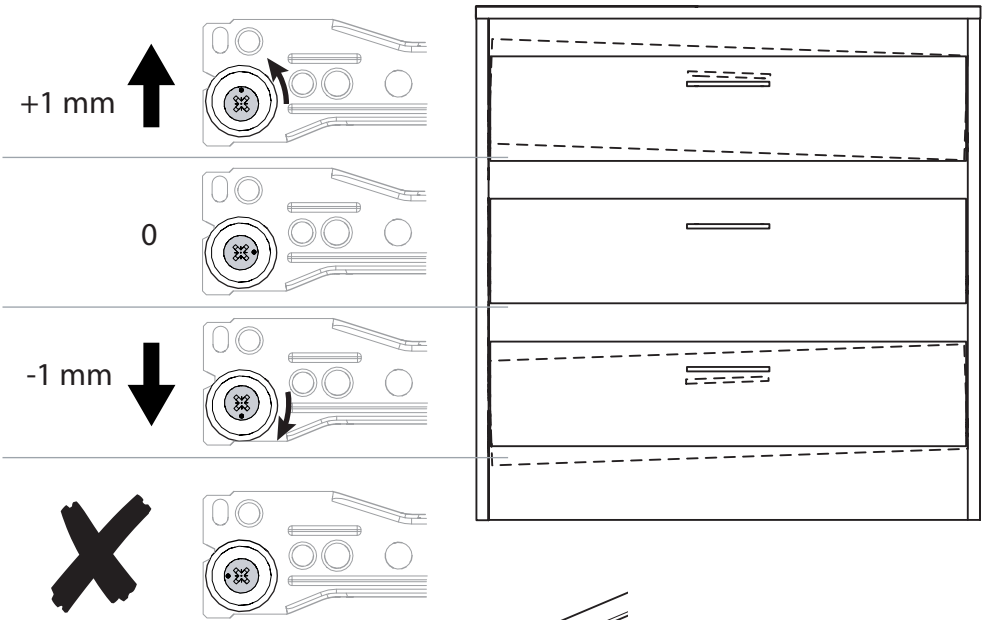

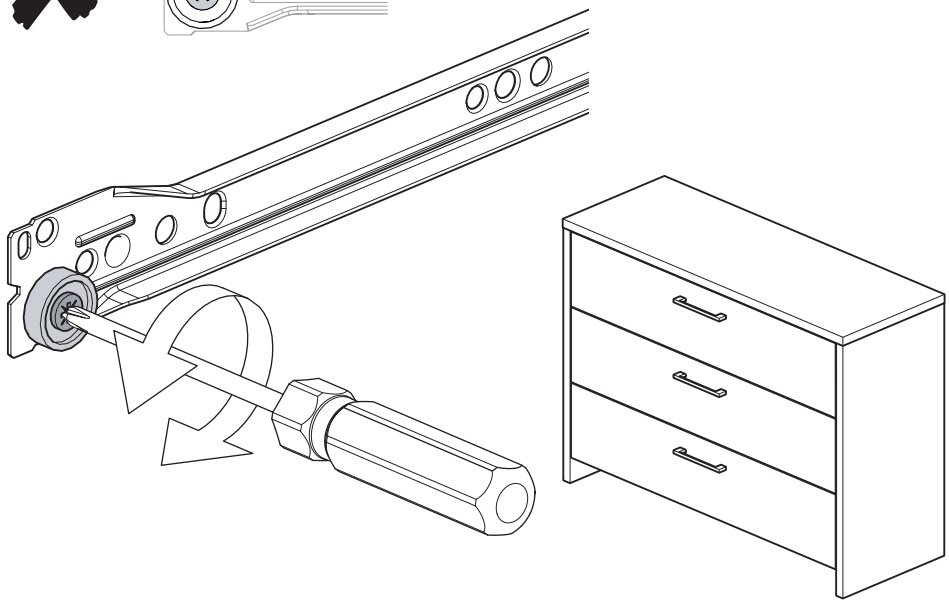

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

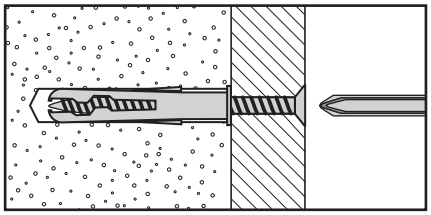


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

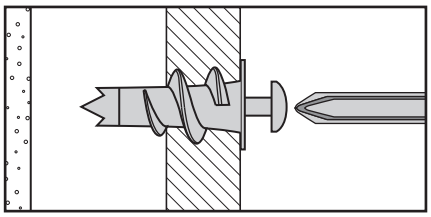


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

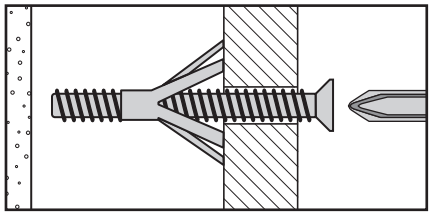


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

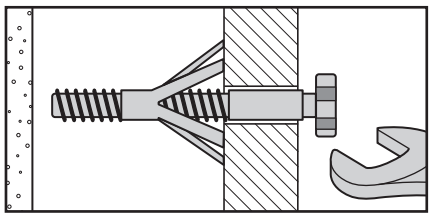


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

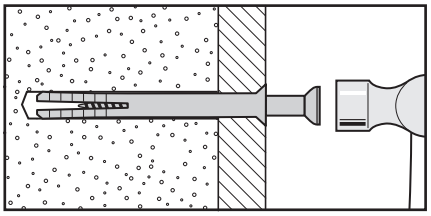

For use with walls stuck with plasterboard. The hamemr fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

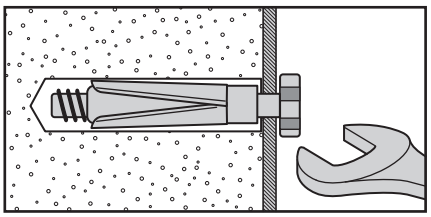

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.