SEIKO


INSTRUCTIONS

SEIKO

HE083-1


How to start

• Install the battery or remove the insulator according to the type of your clock.

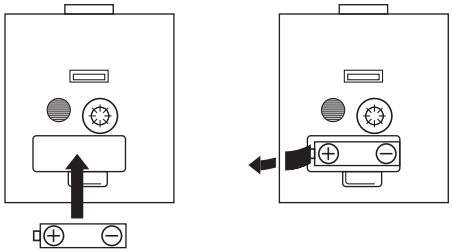

Remarks: The quantity, type and size of batteries may differ depending on the model.

How to set the time

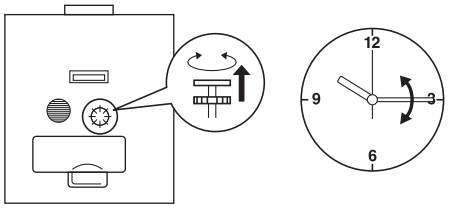


Battery life

• Approx. 10 months.

How to set the alarm time

• Alarm hand setter

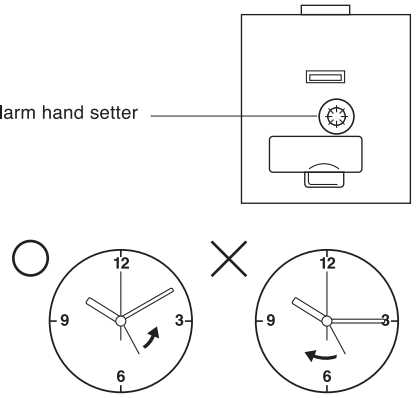

• To set the alarm time, be sure to turn **the alarm hand** counterclockwise.

How to disengage the alarm

