
TV Bench

Assembly Instructions - Please keep for future reference

609/0162
609/1422
609/3712
609/6269
395/5372

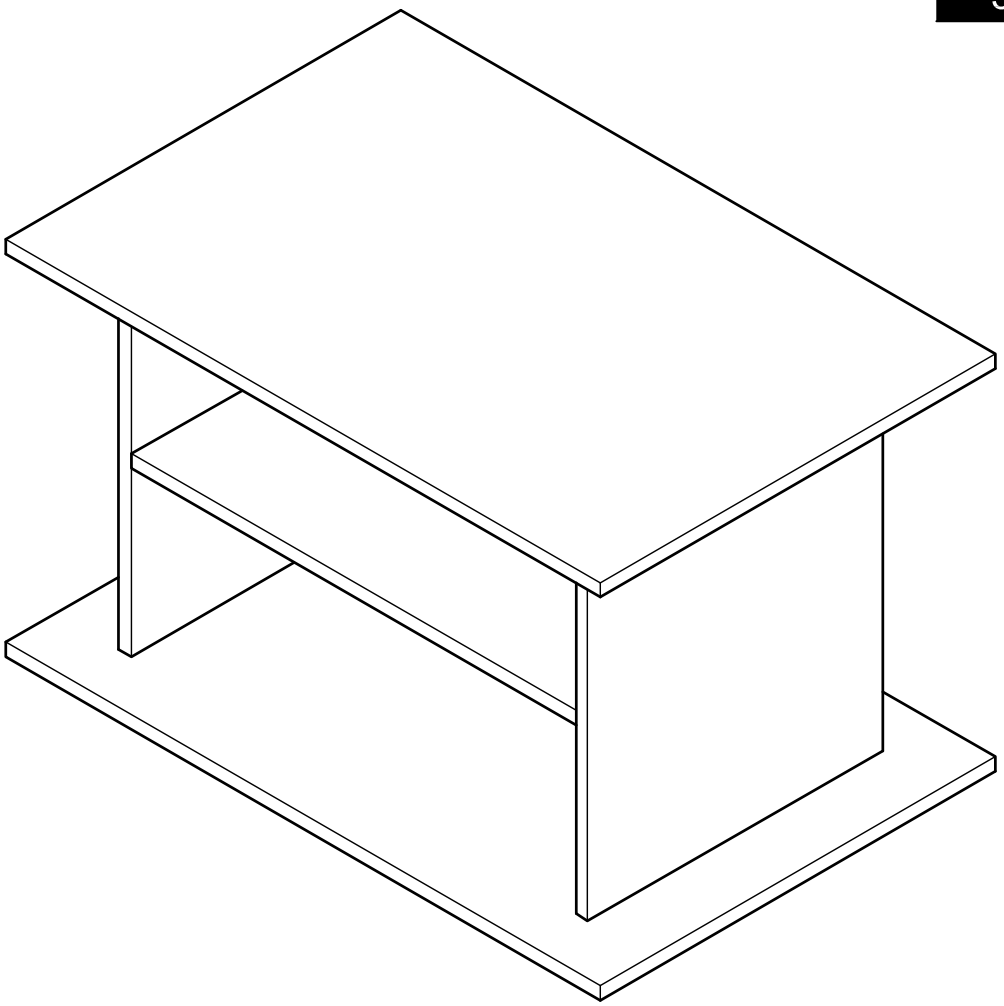

Dimensions

Width - 60cm
Depth - 40cm
Height - 38cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

Issue 1 - 20/03/10

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on page 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the panels during assembly, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/driver ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.


Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

Please check you have all the panels listed below

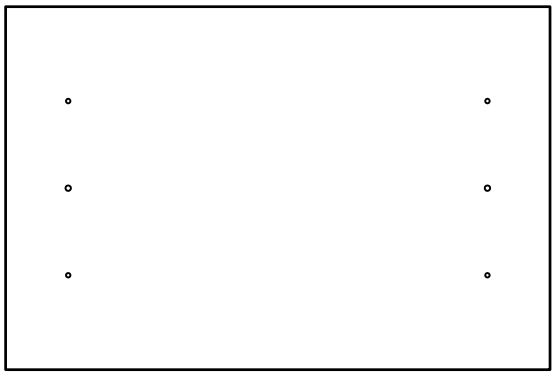


1 Table Top (60 x 40cm)

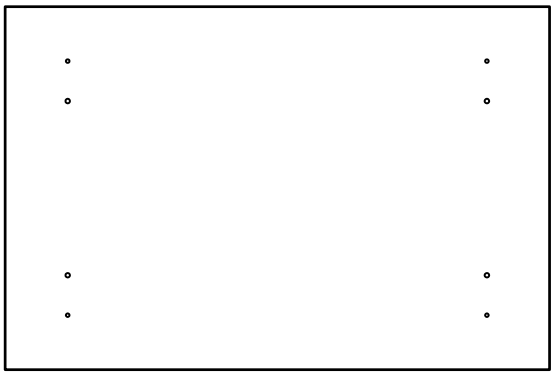


2 Bottom (60 x 40cm)




3 Shelf (45 x 29.6cm)

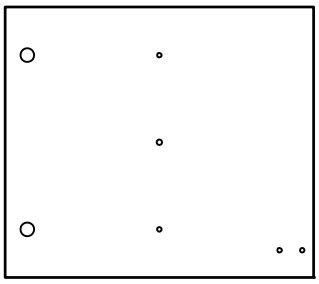

4 Right side (34 x 29.8cm)

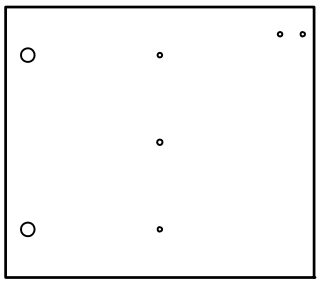

5 Left side (34 x 29.8cm)





6 Support (45 x 5cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 03456 400800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Locking pin x 4	B  Dowel x 6	C  44mm Screw x 12
D  17mm Screw x 4	E  Locking nut x 4	F  Plastic plug x 8
G  Foot x 4		


Tools required



Phillips screwdriver (medium & large)




Flatblade screwdriver (medium)

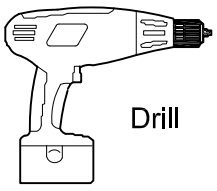


Drill

7mm Masonry drill bit (for use with wall plug)




Small hammer



Ruler/tape measure

Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions


Step 1

Fitting the shelf


a: Insert dowels B into the shelf 3.

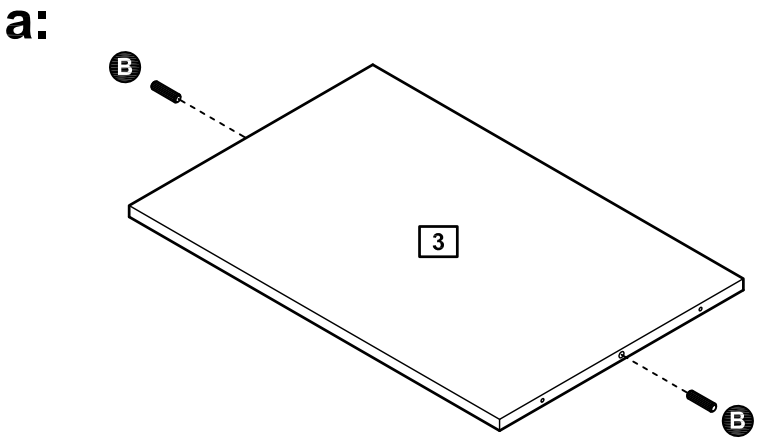

b: Use screws C to fix the right side panel 4 and left side panel 5 onto the support 6 and shelf 3.

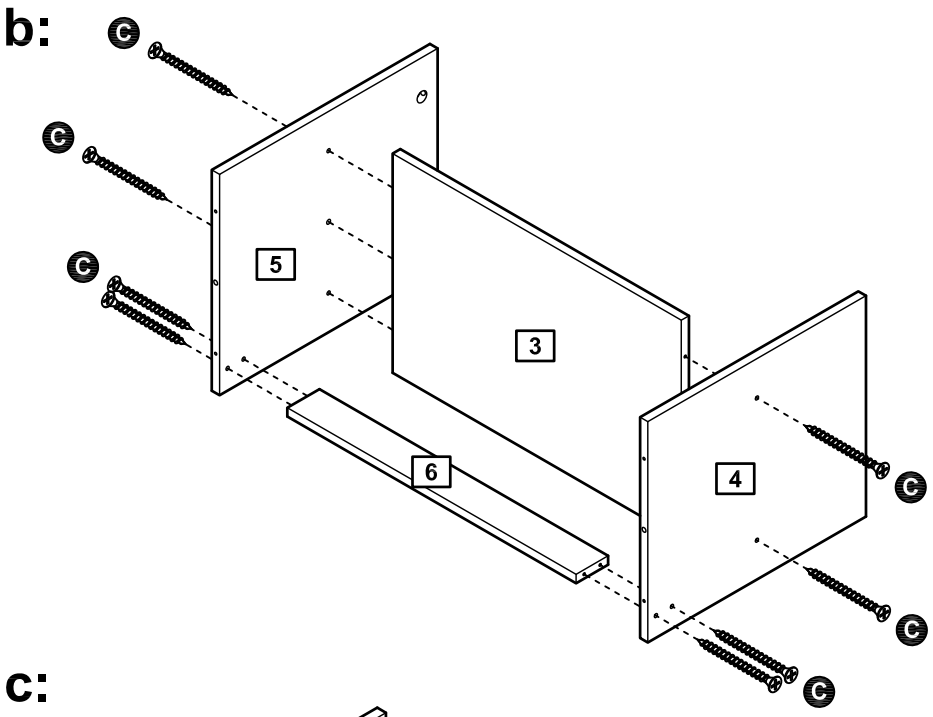


c: Insert dowels B into the unit.

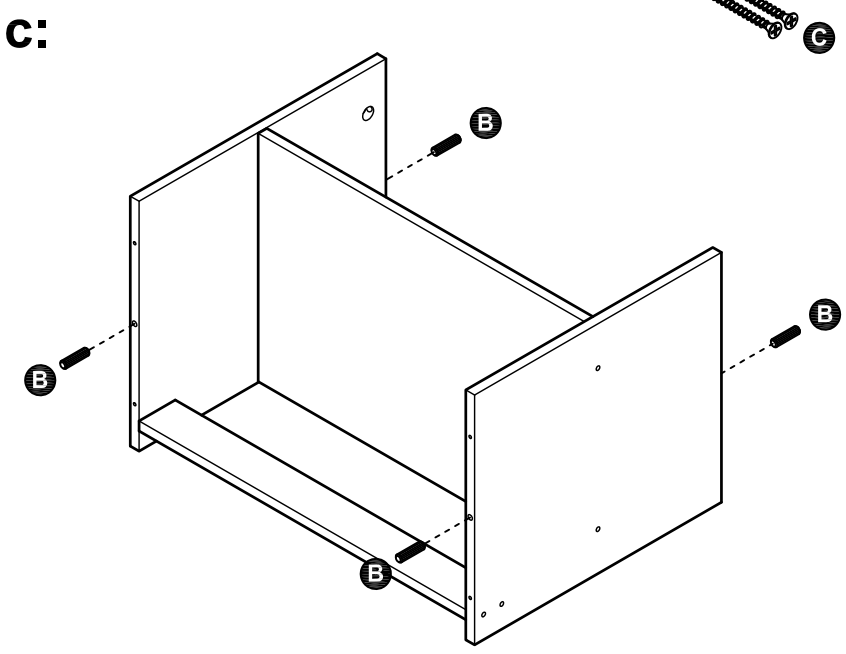


Step 2

Fitting the bottom panel

a: Use screws C to fix the bottom panel 2 onto the unit.

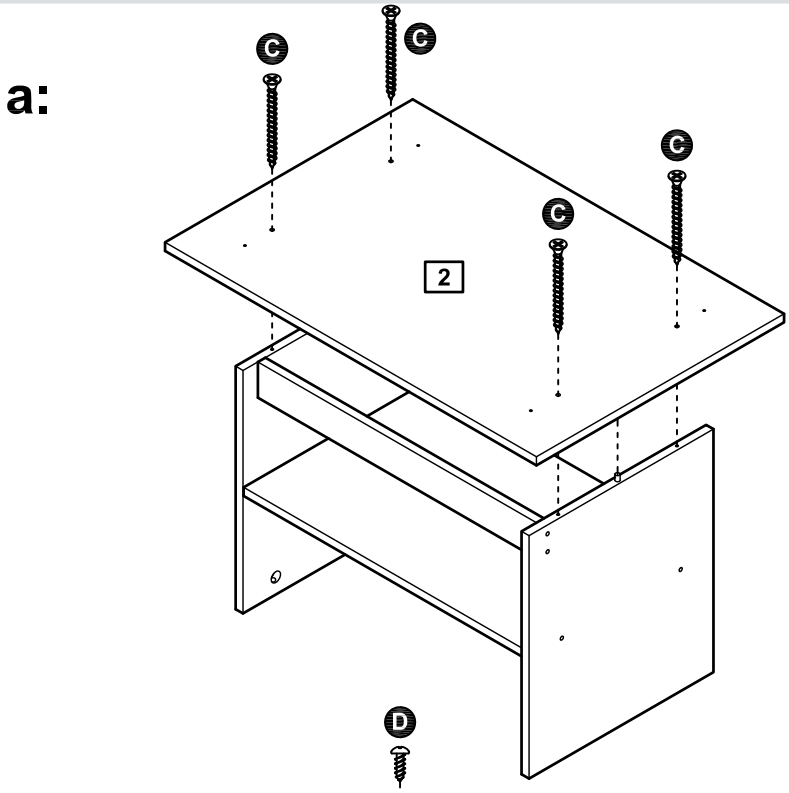


b: Use screws D to fix the feet G onto the unit.

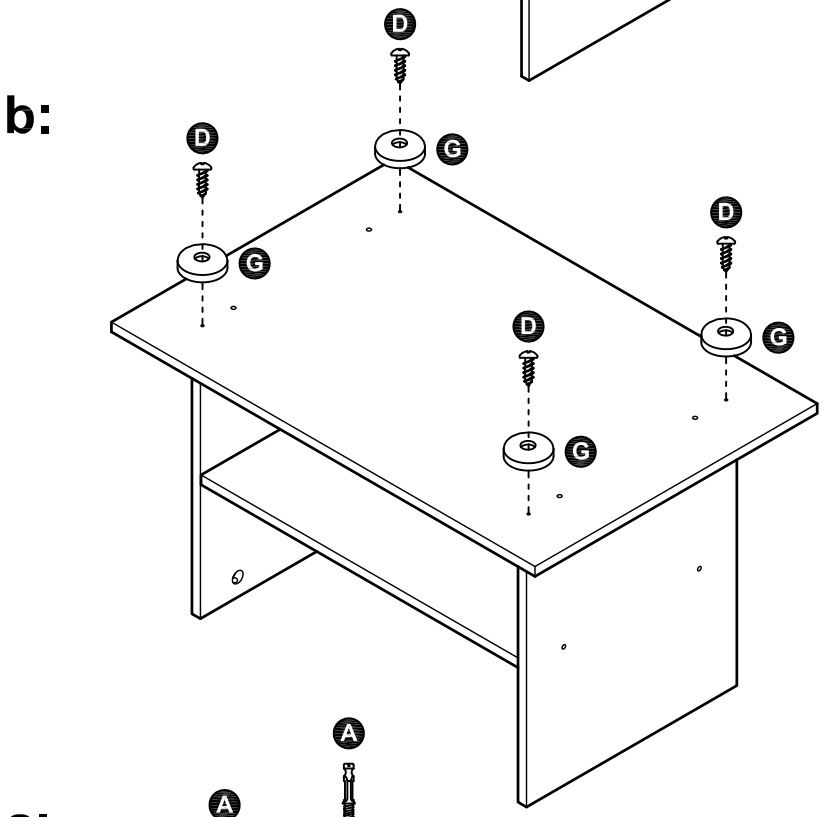


Step 3

Fitting the table top

a: Screw locking pins A into table top 1. Insert locking pins as far as shown.

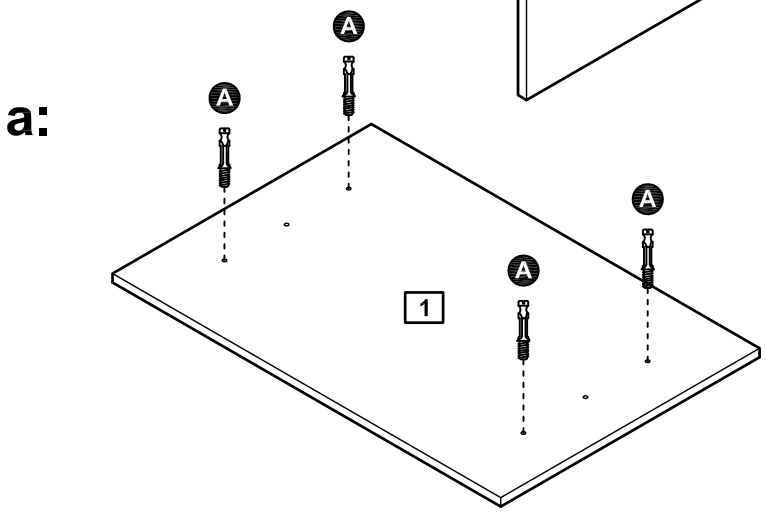

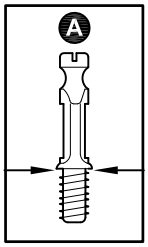


Assembly Instructions

Step 3 - continued


b: Attach table top 1 onto the unit.


b:

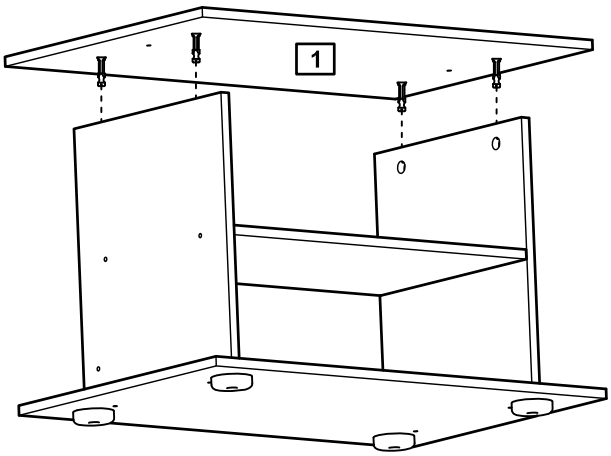


c: Insert locking nuts E into left side panel 5 and right side panel 4, then use a screwdriver to turn locking nuts E clockwise to lock.

c:

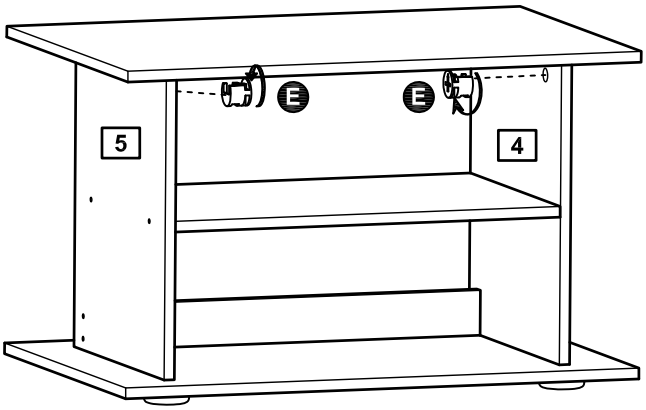

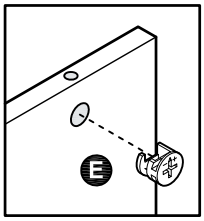

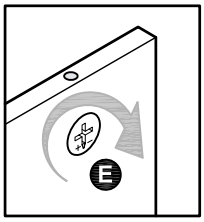


Step 4

Finishing the unit

a: Use plastic plugs F to cover the screw heads.

a:

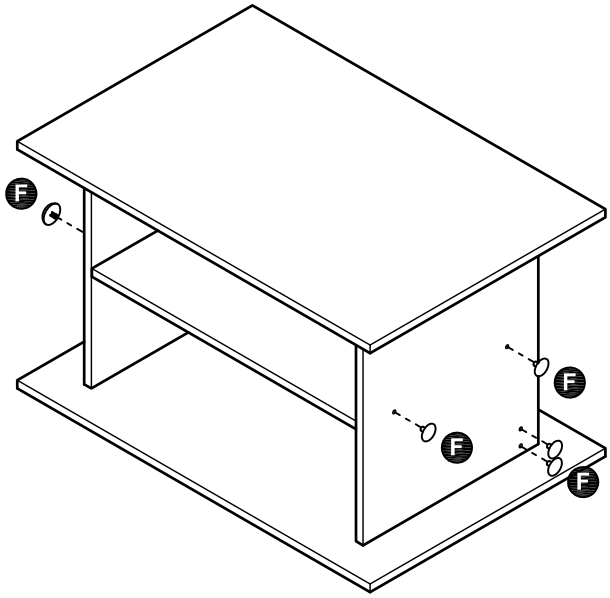

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**