
White Media Storage Unit With Glass Doors

Assembly Instructions - Please keep for future reference

395/5956

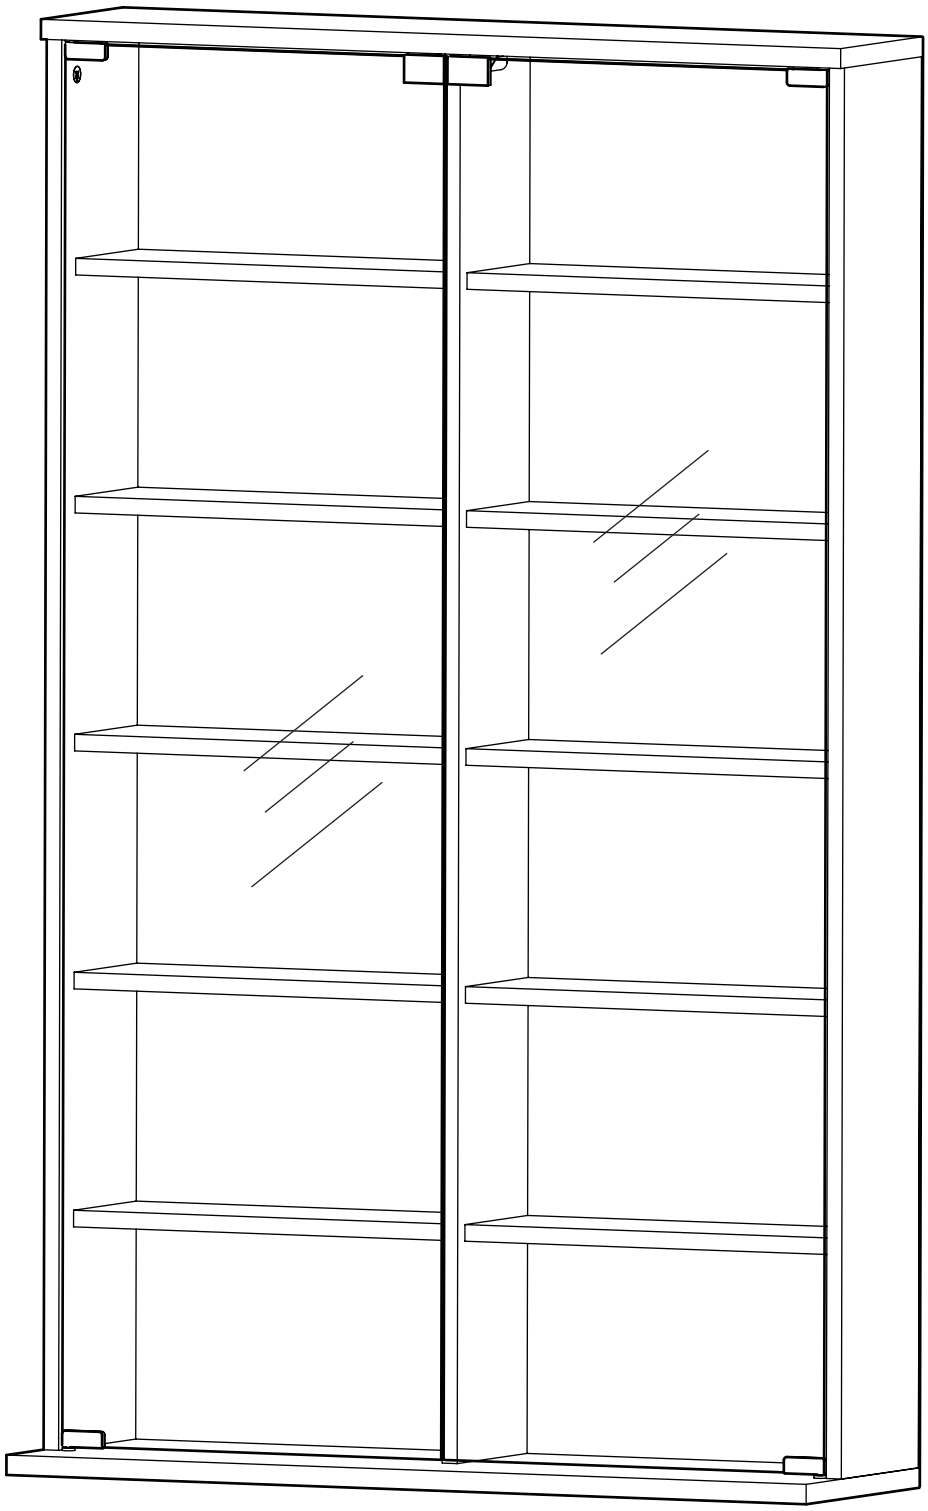

Dimensions

Width - 80cm
Depth - 23.5cm
Height -131cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline**
Argos = 0345 6400800

issue 16/03/15

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Glass safety

- Keep these instruction for future reference.
- Imported by:

Arogs Ltd.

489-499 Avebury Boulevard.
Saxon Gate West.
Central Milton Keynes.
Mk9 2NW

- If the glass is chipped or broken, stop using the product and consult the Manufacturer or Supplier.
- Batch No:
- Date of Manufature:
- Type of glass used: 4mm toughened glass

Warnings

(a) Do not place very hot or very cold items on the glass surface(s) unless adequately thick mats are used to prevent such items from coming into contact with the glass.
(b) Do not sit or stand upon the glass surface(s).

(c) Do not use the glass as a chopping surface. Do not strike the glass with hard or pointed items.

(d) When cleaning glass panels use a damp cloth or leather with washing up liquid or soft soap if necessary, do not use washing powders or any other substance containning abrasives since these substances cscratch glass.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline Argos = 0345 6400800**


Please check you have all the panels listed below

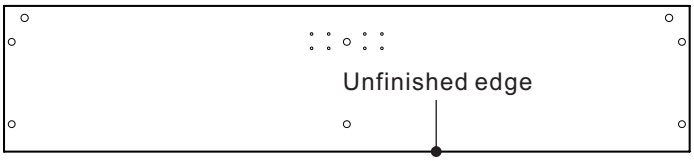


1 Top panel x 1 (80 x 17cm)

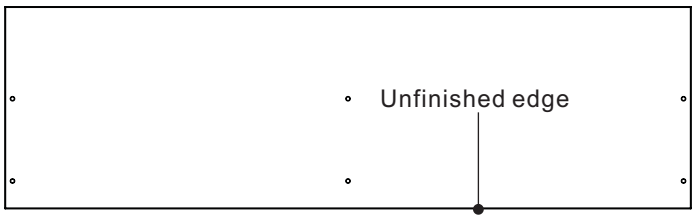


2 Bottom panel x 1 (80 x 23.5cm)

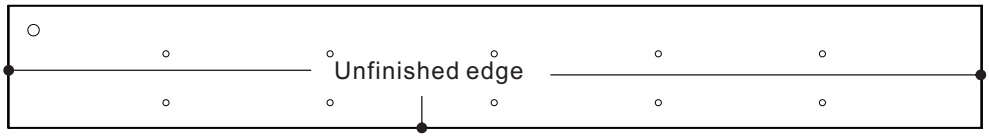


3 Right Side panel x 1 (127.5 x 17cm)

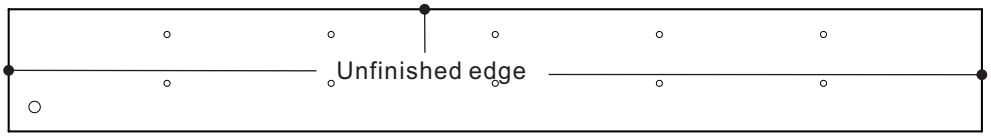


4 Left Side panel x 1 (127.5 x 17cm)

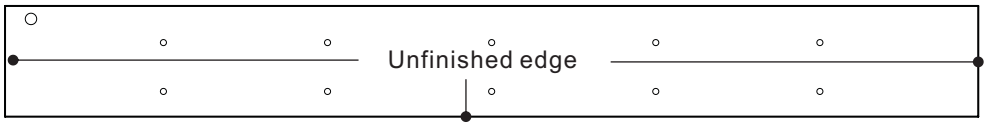

5 Middle panel x 1 (127.5 x 14.5cm)



6 Back panel x 2 (130.9 x 39.8cm)

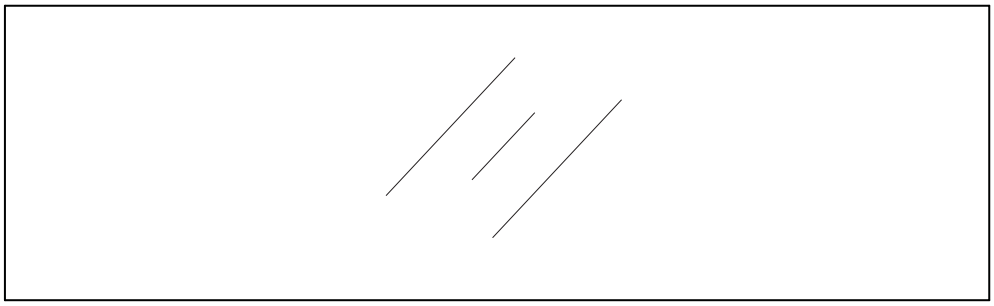

7 Glass door x 2 (126.7 x 37.9cm)



8 Shelf x 8 (37.6 x 13cm)



9 Left Shelf x 1 (37.6 x 13cm)















10 Right Shelf x 1 (37.6 x 13cm)


Components - Fittings


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

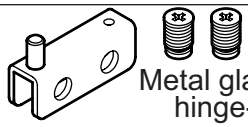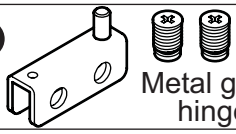
A  45mm Screw x 6	**B**  15mm Screw x 8	**C**  12mm Screw x 1
D  26mm Screw x 1	**E**  Wall plug x 1	**F**  Wall strap x 1
G  Cam bolt x 5	**H**  Cam lock x 7	**I**  Double side cam bolt x 1
J  30mm Wood dowel x 21	**K**  50mm Wood dowel x 9	**L**  Metal glass hinge-left x 2
M  Metal glass hinge-right x 2	**N**  Glass hinge plastic ring x 4	**O**  Metal glass door plate x 2
P  Door catch x 2	**Q**  Nail Holder x 1	**R**  Nail x 42


Tools required


Phillips screwdriver (medium & large)


Ruler/tape measure


7mm Suitable drill bit (for use with wall plug)

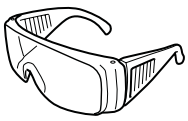
Eye protection (when using a hammer.)

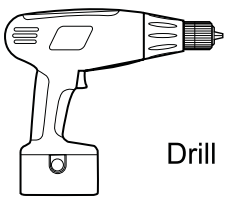
Drill


Small hammer

Ruler - Use this ruler to help correctly identify the screws




The screws length is measured from the head to the point (30mm screw shown).

Assembly Instructions


Step 1

Fitting bolt

a: Screw Cam bolt G into Side panels 3 4 .

Note: Insert Cam bolt as far as shown.
Do not over tighten.

a:

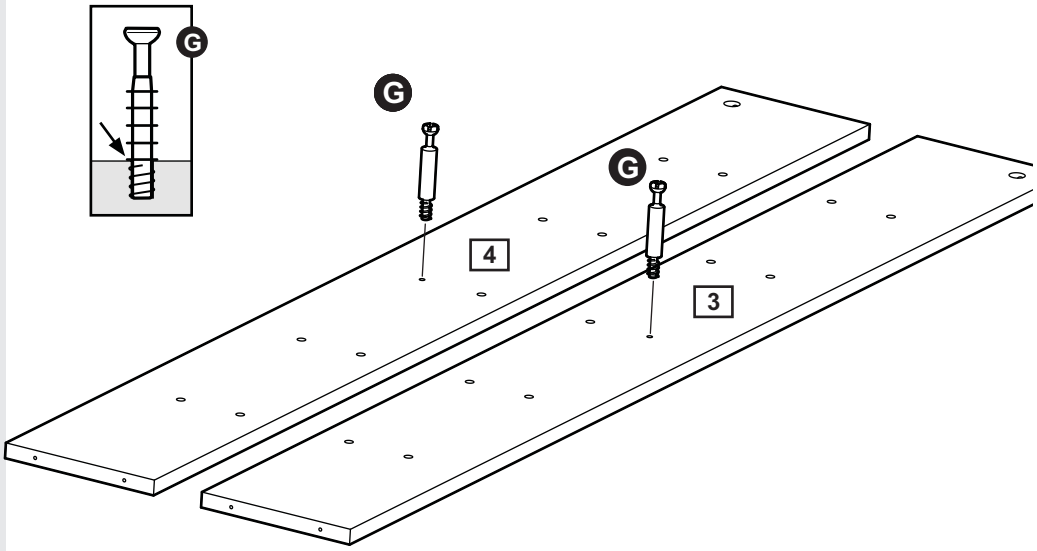


b:Screw Cam bolt G into Top 1 .

Note: Insert Cam bolt as far as shown.
Do not over tighten.

Attach Door catch P using 15mm Screws B.

b:

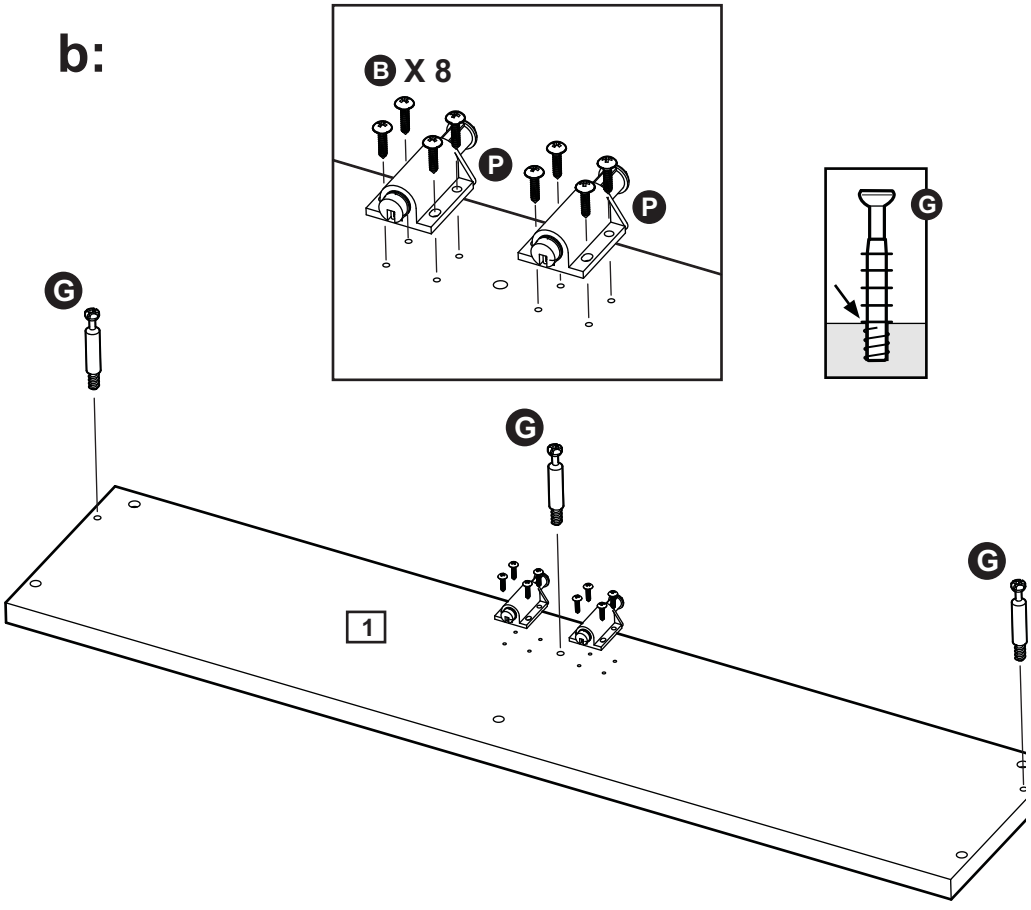

Assembly Instructions

Step 2


Attaching panel

a: Attaching panel 8 9 10 with 50mm dowel K and double side cam bolt I. Insert the 30mm dowel J into the side of shelf.

Be ware of the amount of wood dowel on the third layer shelf.


Use a screwdriver to turn Cam lock H clockwise to lock.

a:

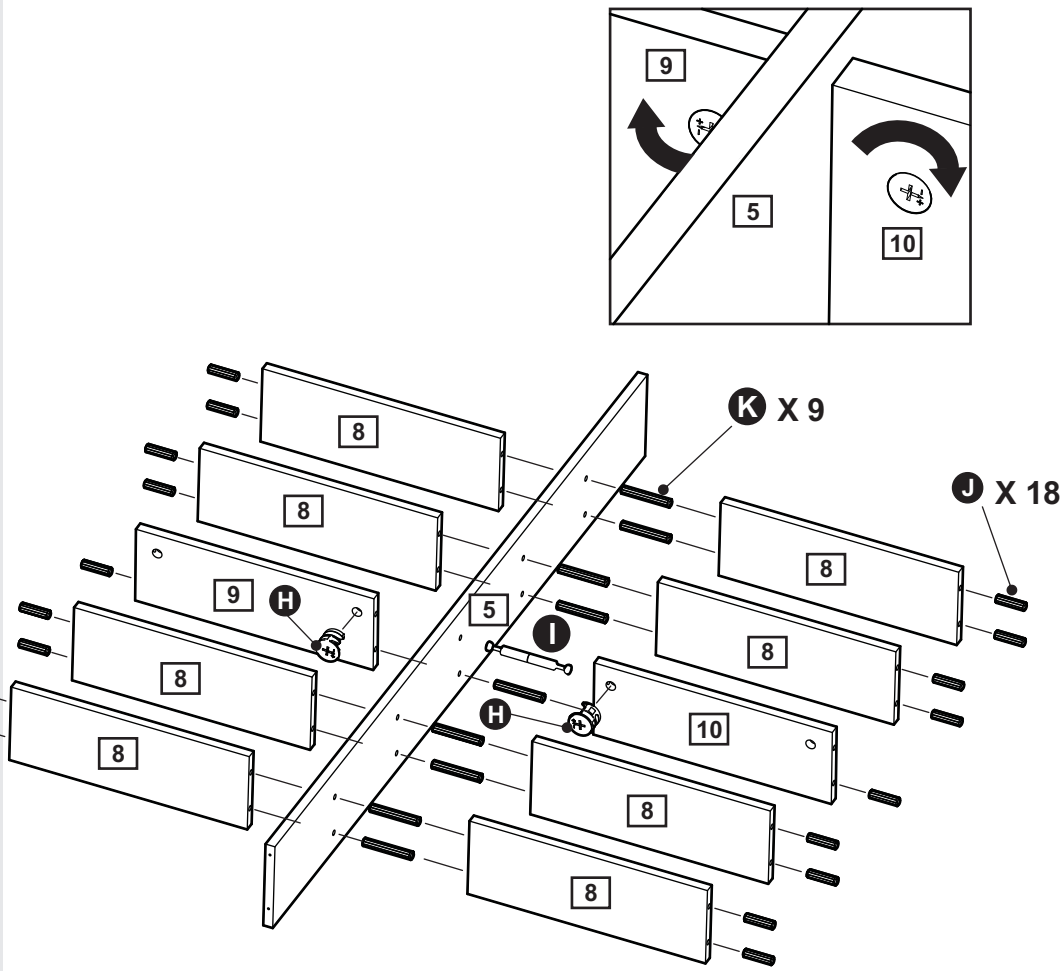

b: Attaching the side panels 3 4 with cam lock H. Use a screwdriver to turn Cam lock H clockwise to lock.

b:

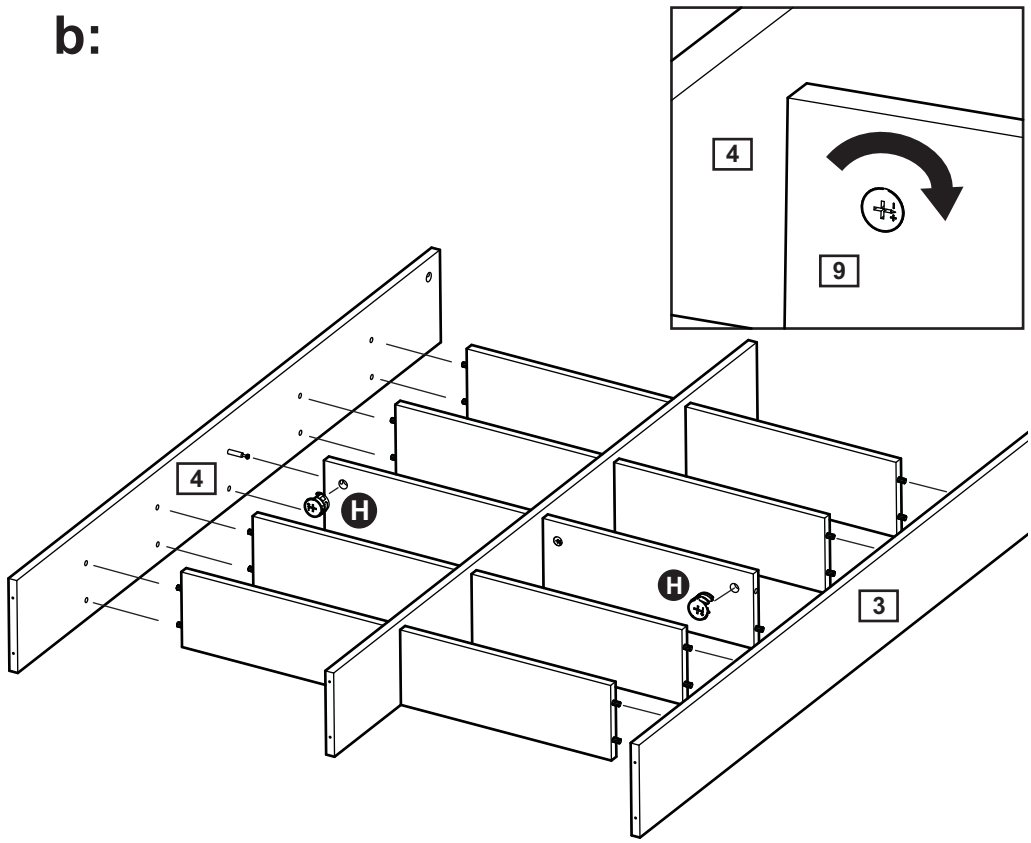


Assembly Instructions

Step 2

Attaching panel

c: Attaching the bottom panel [2] onto unit with screw (A) .


c:

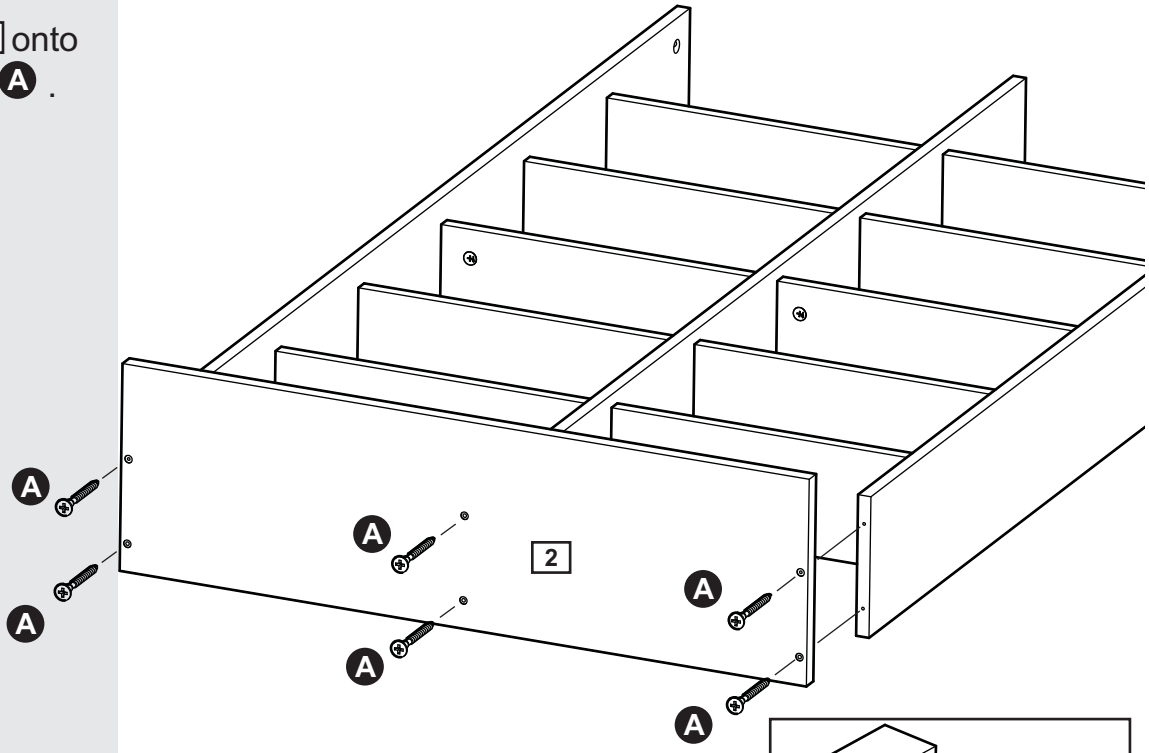

d: Attaching Top panel [1] with cam lock (H) and wood dowel. (J)

Use a screwdriver to turn Cam lock (H) clockwise to lock.

d:

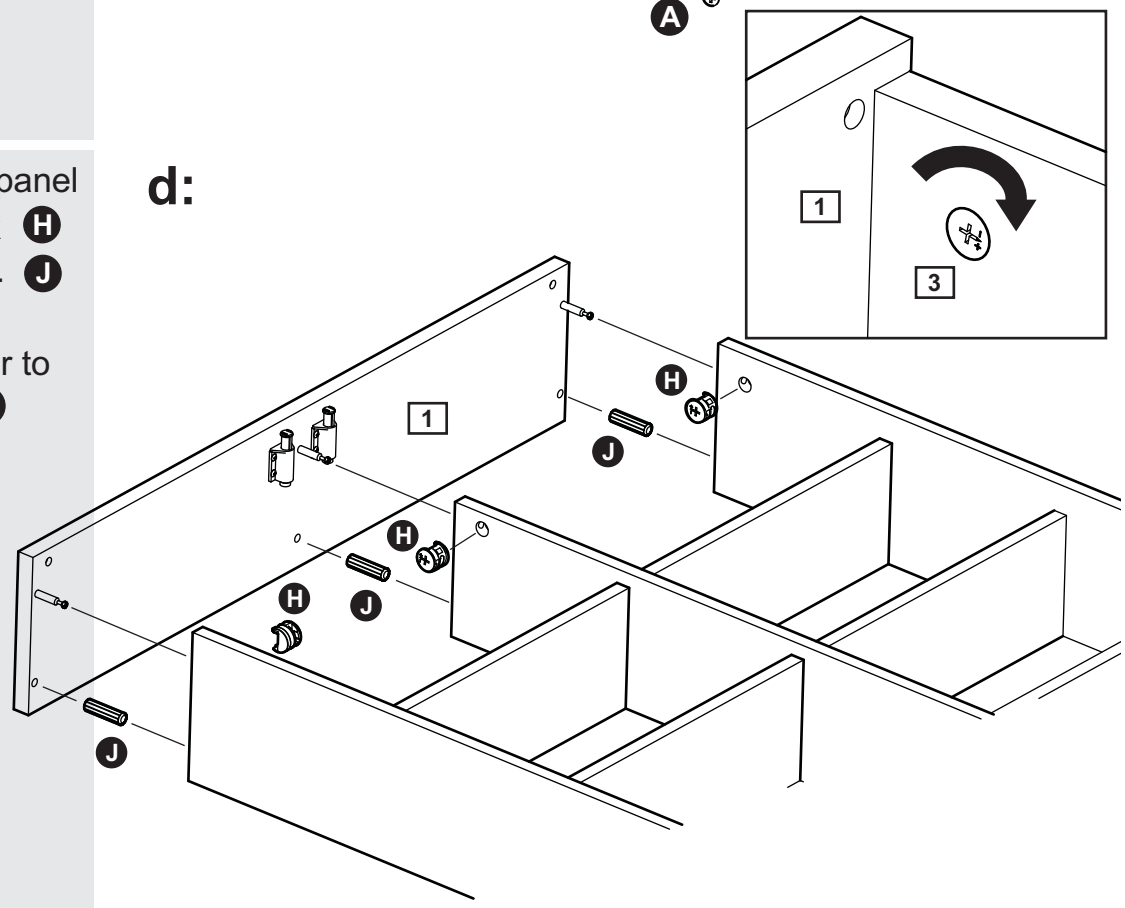


Assembly Instructions

Step 3

Attaching Metal glass hinge

Insert Glass hinge plastic ring (N) and Metal glass hinge-right (M) into right side of bottom and left side of top .

Insert Glass hinge plastic ring (N) and Metal glass hinge-left (L) into right side of top and left side of bottom .

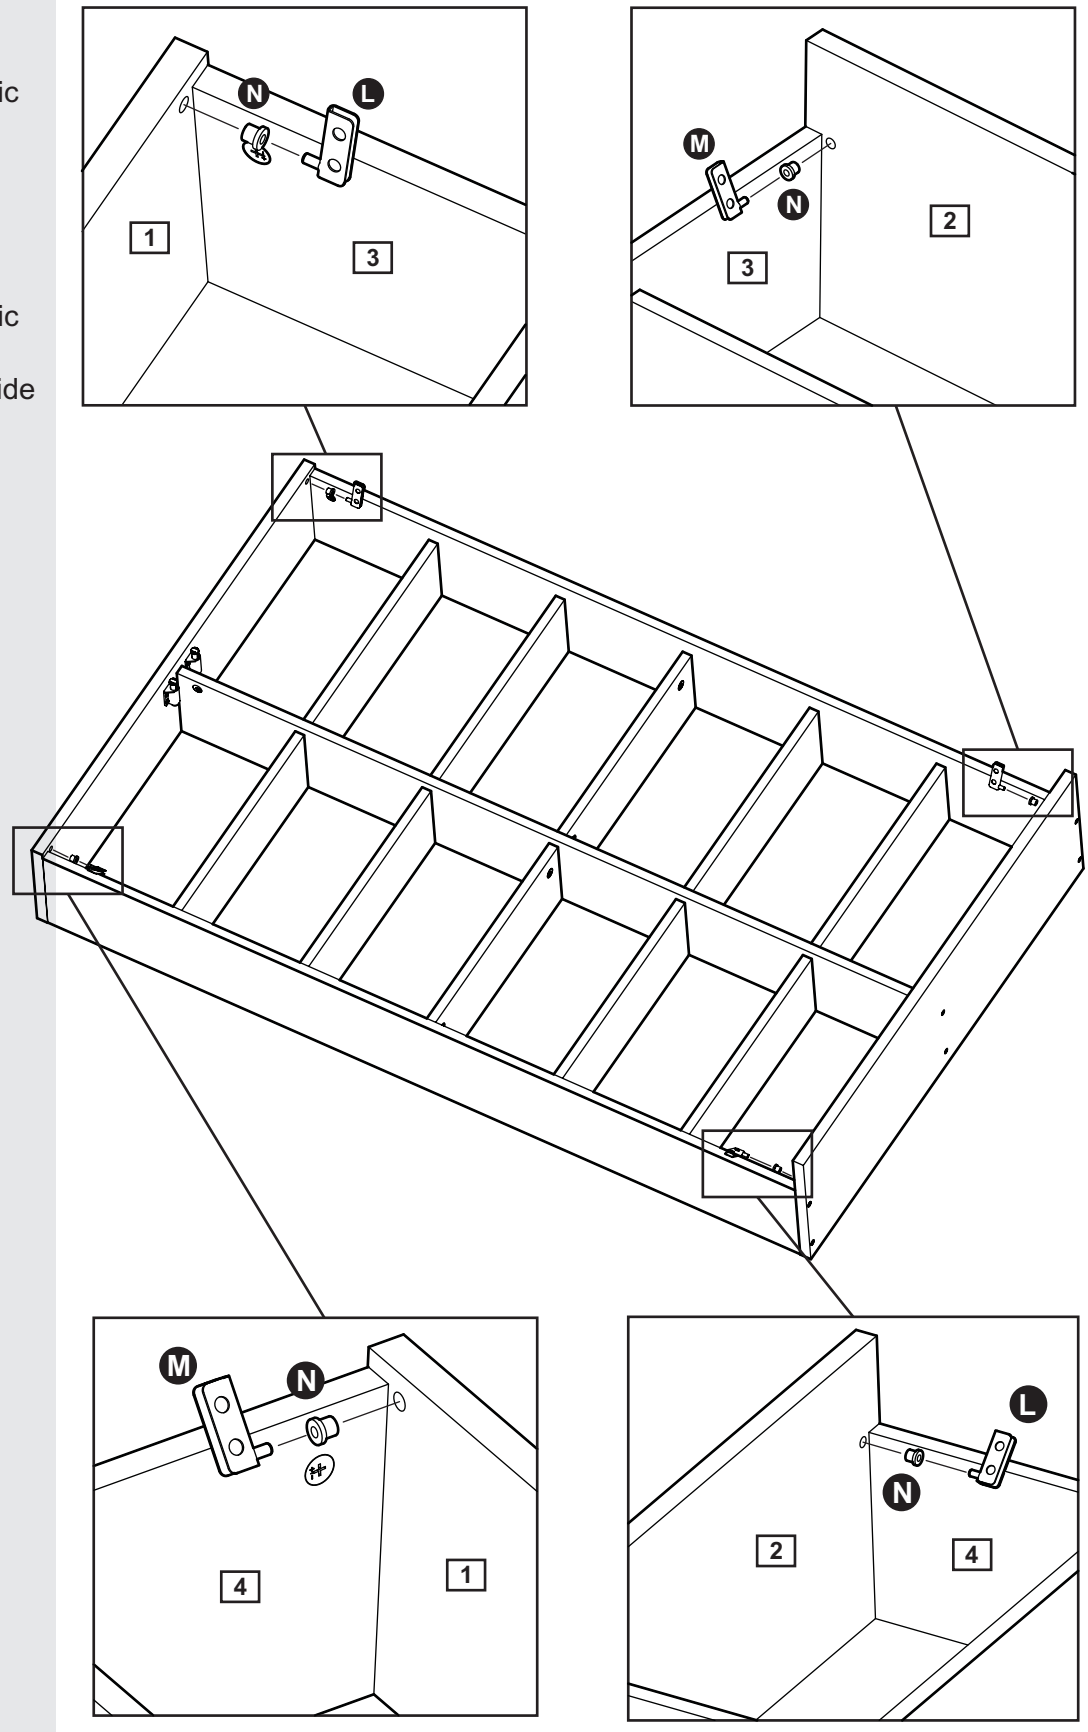

Assembly Instructions

Step 4


Sliding glass door


This step need two people.

Slide Glass door [7] into Metal glass hinge-left (L) and Metal glass hinge-right (M) where shown.

Use a screwdriver to turn the screws on Metal glass hinge-left (L) and Metal glass hinge-right (M) clockwise to lock.

Attach Metal glass door plate (O) to appropriate position of Glass door [7] correspondence with Door catch (P) .

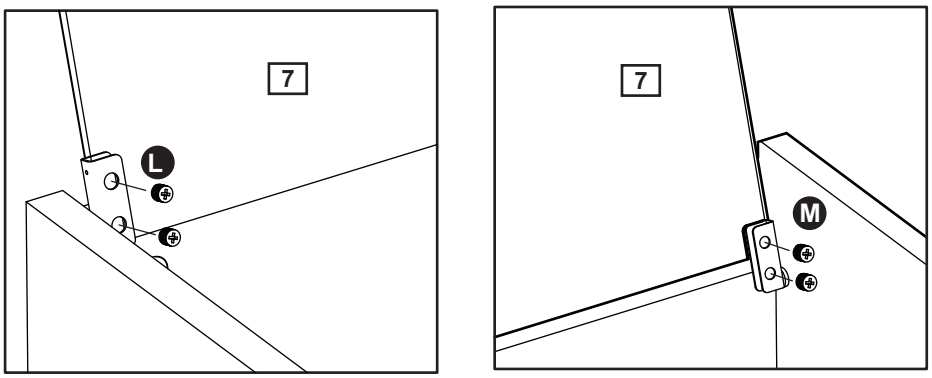

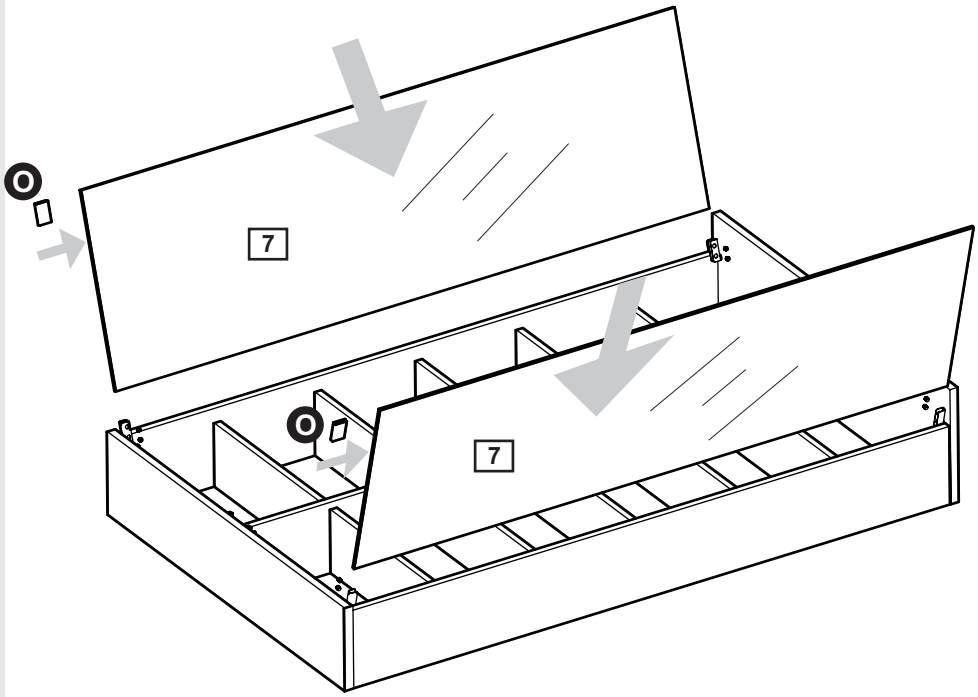


Step 5

Attaching back panels

a: Lift the unit up, please with care.


a:

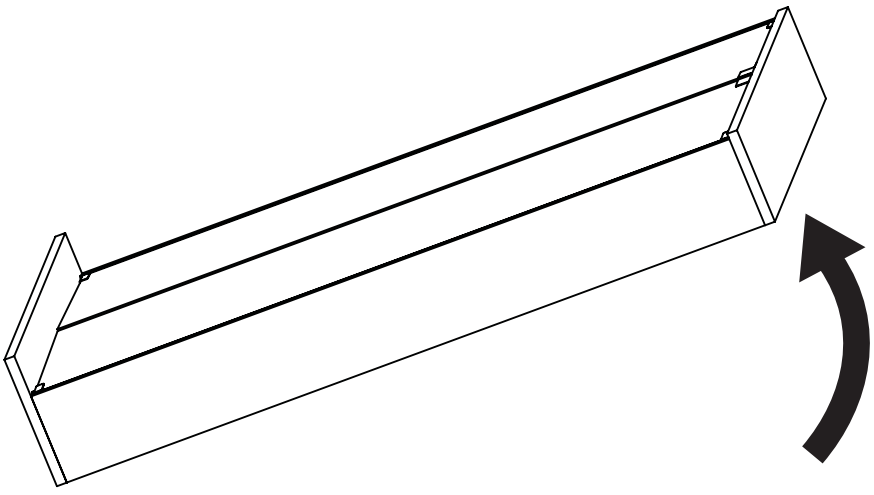

Assembly Instructions

Step 5

b: Fix the back panel 6 onto the unit using nail holder Q and nail R .

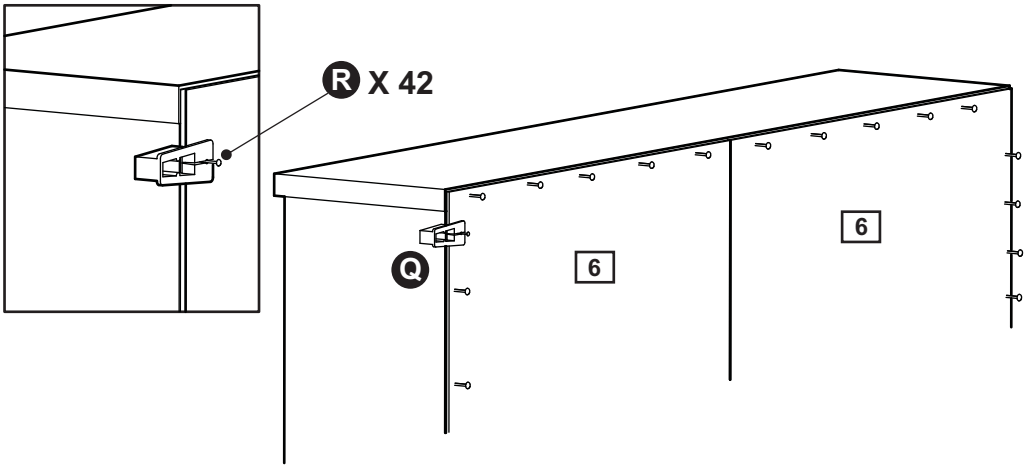

Step 6

Fixing to wall

It is recommended that the storage unit is fixed to a wall.

Fix wall strap F to top of storage unit using screw C.

With help, move storage unit into position.

The storage unit is heavy. **Lift with care.**

Mark fixing hole on wall and remove storage unit.


Drill 7mm hole and insert wall plug E.


Before drilling, check wall for hidden pipes and cables.

Reposition storage unit and fix wall strap using screw D.

Note: Wall plugs supplied are for solid walls only.

The correct type of fixing must be used for your wall, seek professional advice if in doubt.

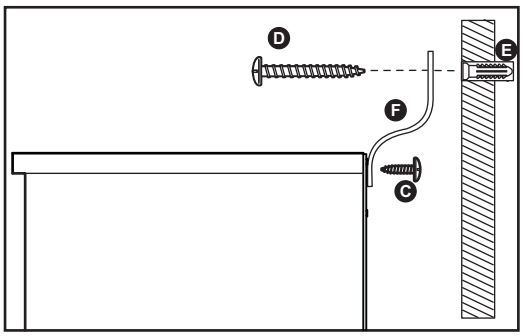

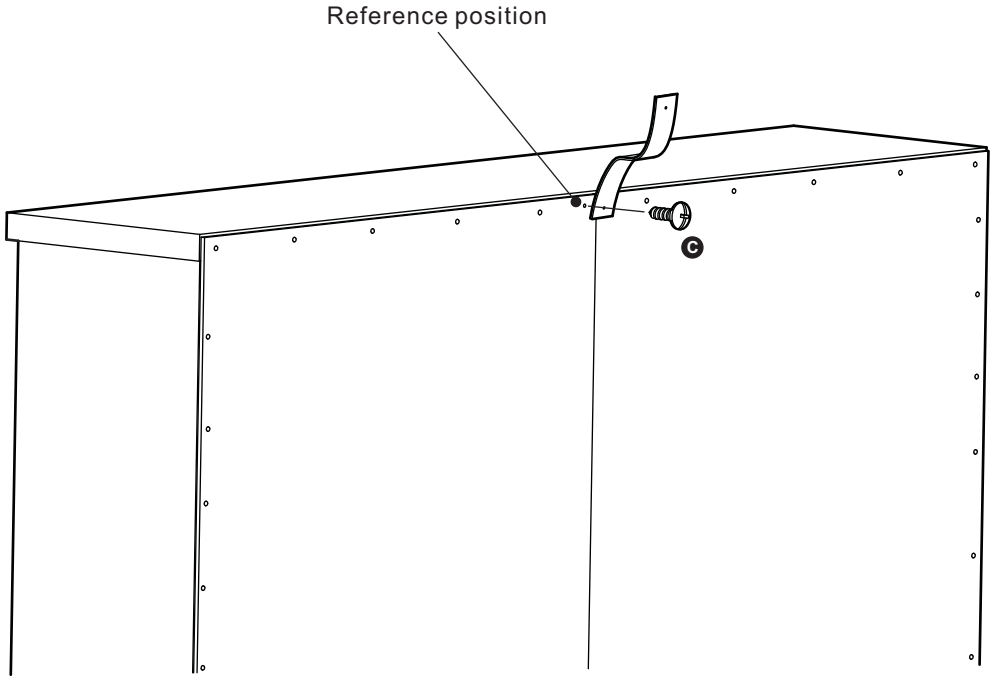

If you need help or have damaged or missing parts, call the **Customer Helpline**
Argos = 0345 6400800

A Guide to - **Wall Mounting** & **Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fxings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.

Hints:

1: ***General rule***: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well ftted and are a tight ft in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "**General Purpose**" **wall plug**

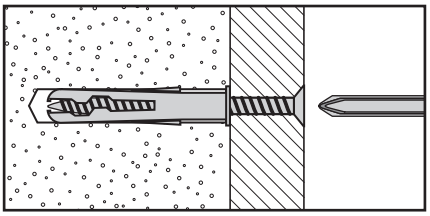


Generally aerated blocks should not be used to support heavy loads, use a specialist ftting in this case. For light loads, general purpose wall plugs can be used.

No.2 "**Plasterboard**" **wall plug**

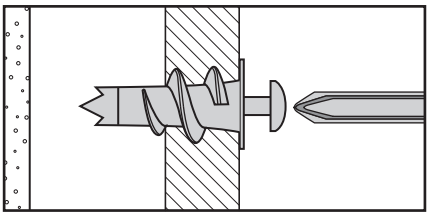


For use when attaching light loads on to plasterboard partitions.

No.3 "**Cavity Fixing**" **wall plug**

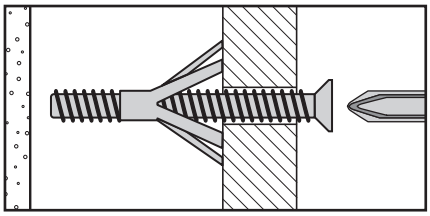


For use with plasterboard partitions or hollow wooden doors.

No.4 "**Cavity Fixing-Heavy Duty**" **wall plug**

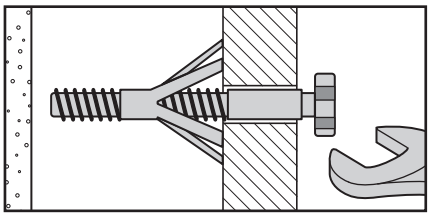


For use when ftting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "**Hammer Fixing**" **wall plug**

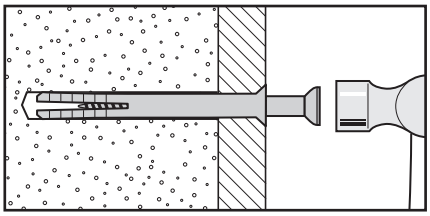

For use with walls stuck with plasterboard. The hammer fxing allows it to be fxed to the wall rather than the plasterboard. Always check the fxing is secure to the retaining wall.

No.6 "**Shield Anchor**" **wall plug Heavy loads**

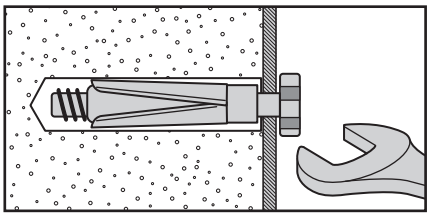

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the ftting and location to ensure your safety in and around the home.

Fitting: From time to time check the ftting to ensure the wall plugs or screws do not become loose.

Revision 2 - 7/10/09