
Castle - Wardrobe

Assembly Instructions - Please keep for future reference

418/4726

397/9891

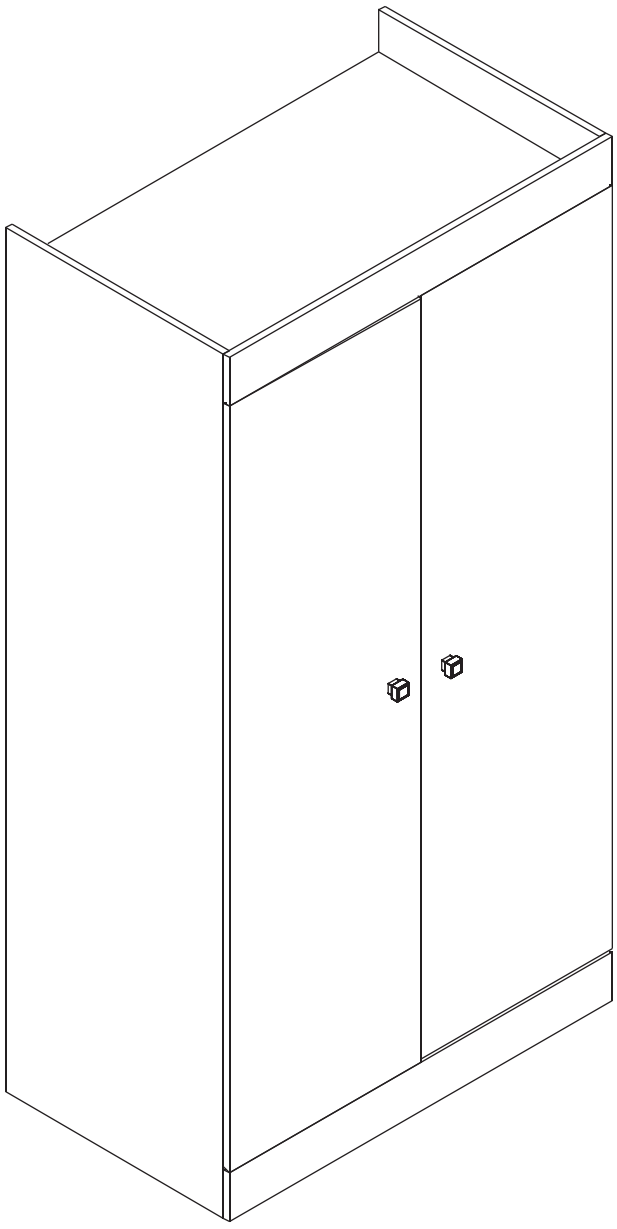

Dimensions

Width - 89cm
Depth - 52.7cm
Height - 174.5cm

Important – Please read these instructions fully before starting assembly

If you need help or have damage or missing parts, call the **Customer Helpline: 03456 400 800**

Issue 1 - 31/03/15

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.


• Assemble on a soft level surface to avoid damaging the unit or your floor.

• This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

• The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

• On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

• This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.

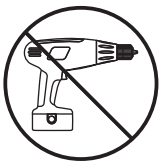

• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

• Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below

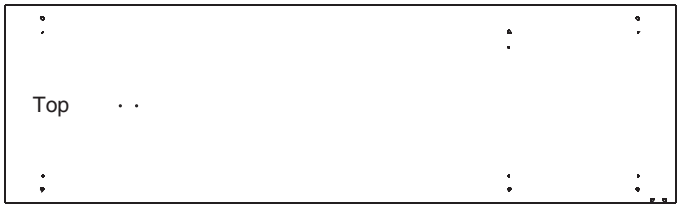


1 Right side panel
(174 x 51.2cm)




2 Left side panel
(174 x 51.2cm)

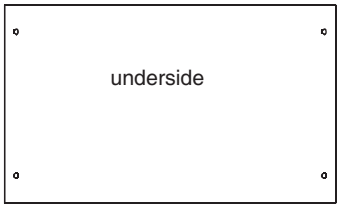


3 Base panel
(86 x 51.2cm)

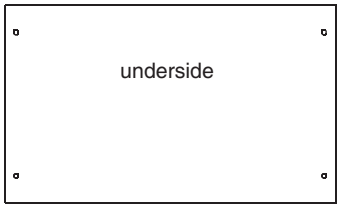


4 Top panel
(86 x 51.2cm)

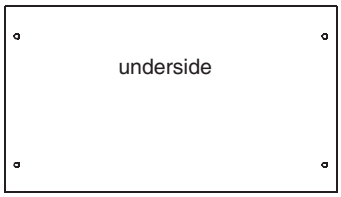

5 Fixed shelf
(86 x 48cm)




6 Bottom front frame
(89.1 x 9.6cm)




7 Top front frame
(89.1 x 9.6cm)



8 Unfinished bottom back frame
(86 x 9cm)

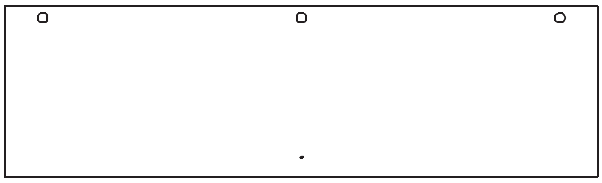

9 Left Door
(153.9 x 44.2cm)

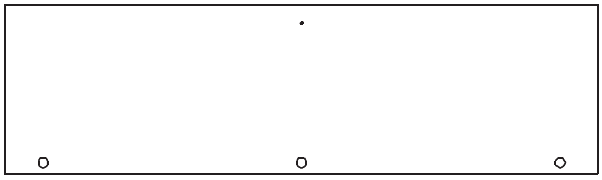

10 Right Door
(153.9 x 44.2cm)





















11 Back panel x 2
(155 x 43.8cm)

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 03456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

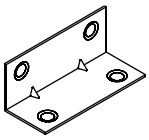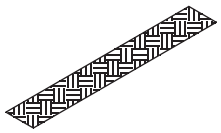A  25mm Screw x 02	**B**  14mm Screw x 40	**C**  Nail x 04
D  Nail x 54	**E**  Wooden dowel x 24	**F**  Metal dowel x 12
G Locking nut x 12 	**H** L shaped bracket x 09 	**I**  Silicone stopper x 04
J  Hanging rail support x 02	**K** Plastic feet x 04 	**L**  Handle x 02
M  Hanging rail 853mm x 01	**N**  H profile 1530mm x 01	**O**  Door hinge x 06
P  Hinge plate x 06	**Q**  14mm Screw x 24	**R**  Washer x 02
S  Wall strap x 01	**T**  Plastic cap x 12	**U**  16mm Screw x 01


Tools required




Phillips screwdriver (medium & large)

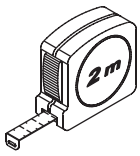

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Insert dowels Ⓔ into the indicated parts.

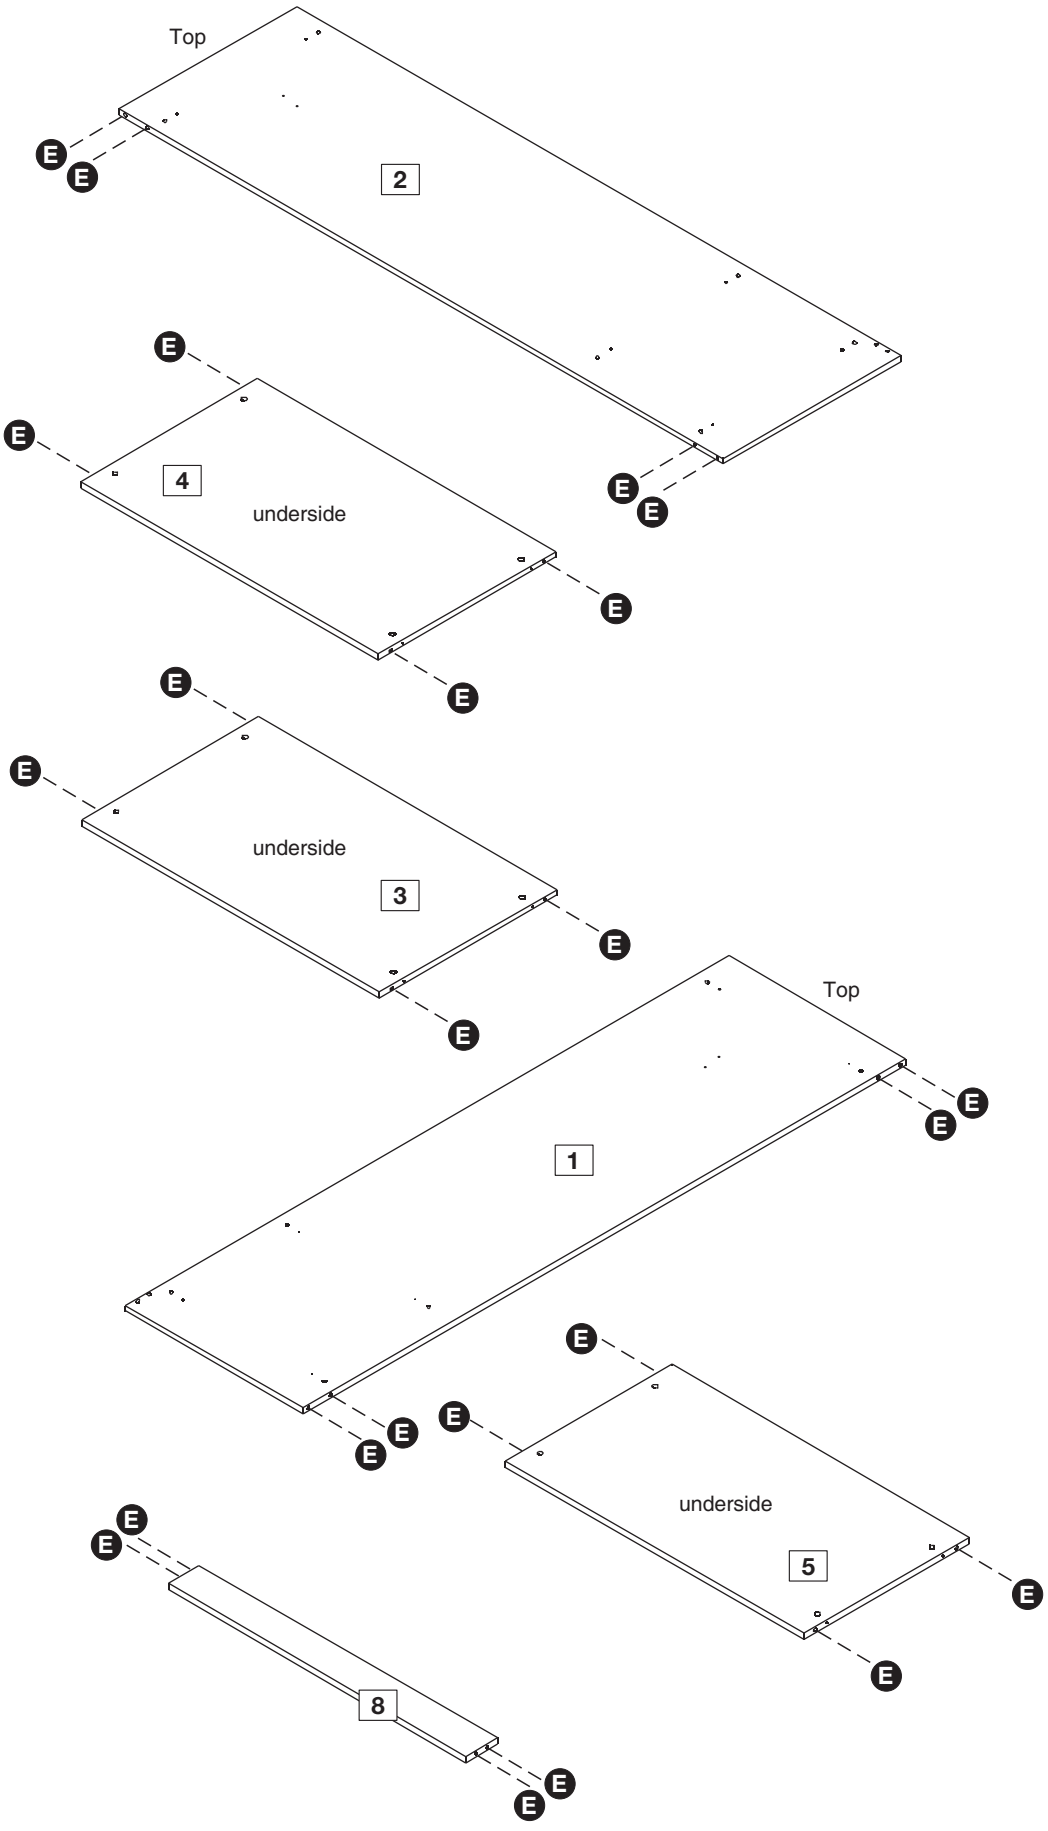

Assembly Instructions


Step 2

Fitting Metal dowels.

Screw metal dowels (F) into right side panel [1] and left side panel [2] .

Note: Insert metal dowels as far as shown.

Do not over tighten.

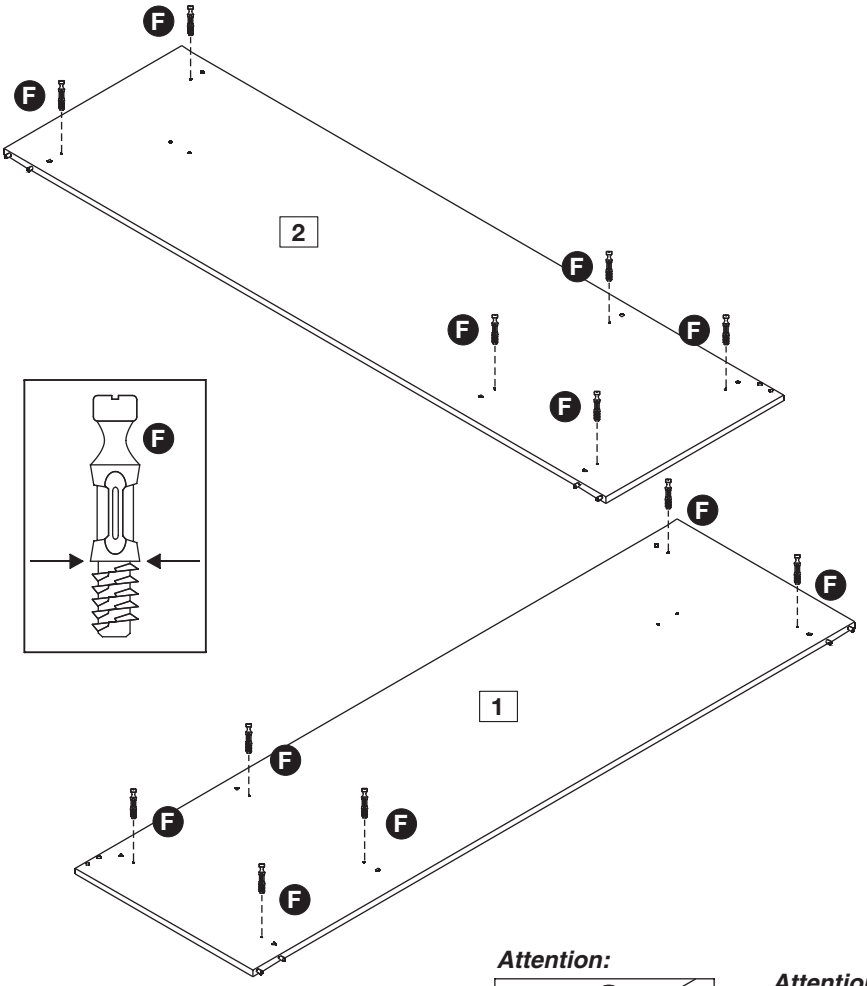


Step 3

Fixing L shaped brackets.

Fix L shaped brackets (H) in the indicated parts using screws (B) as shown.

Make sure L shaped bracket is fixed between pre-drilled hole and edge of the panel as shown.

Attention: Leave **1mm** space from the edge of the bar and panels as shown.

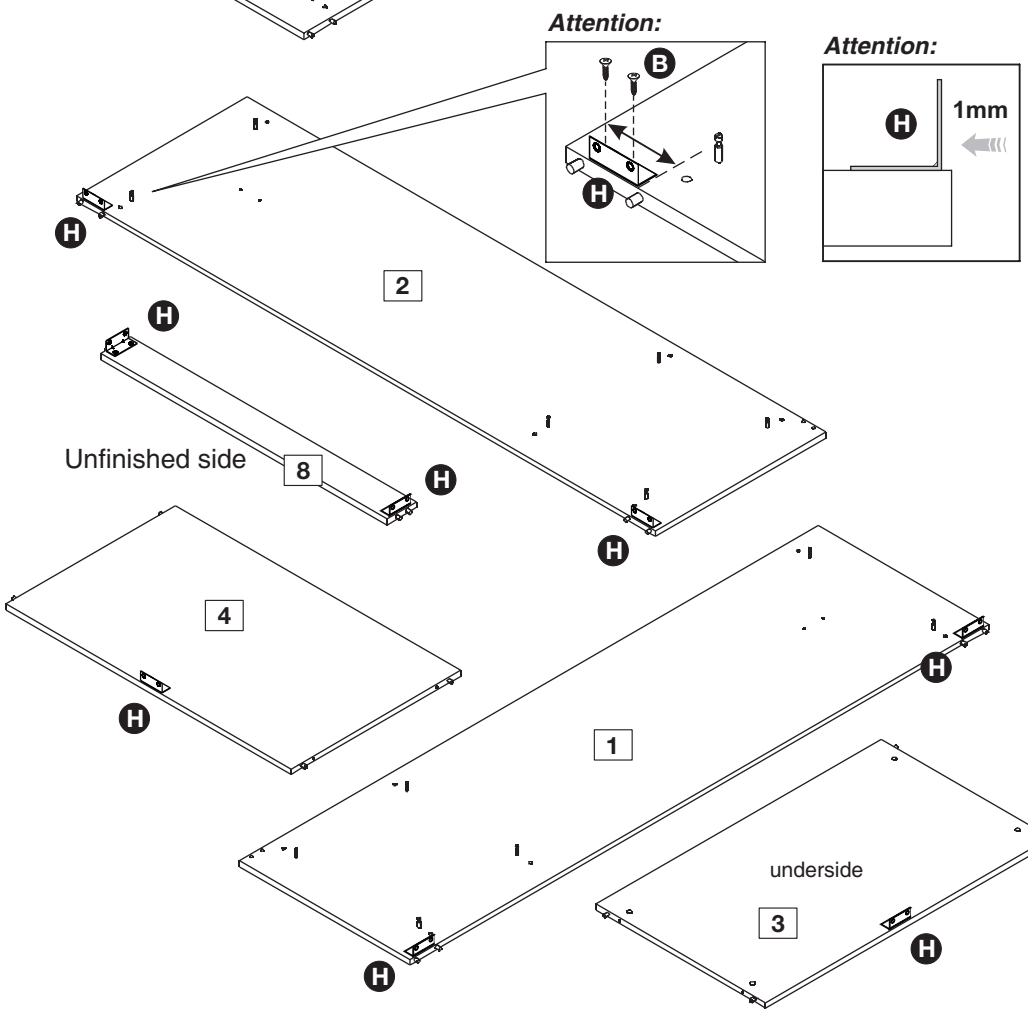


Assembly Instructions

Step 4

Fixing hinge plate.

a: Fix hinge plates P into the pre marked holes on side panels 1 and 2 using screws Q .

b: Fix hanging rail support J in the pre marked holes on the right side panel 1 and left side panel 2 using screws B.

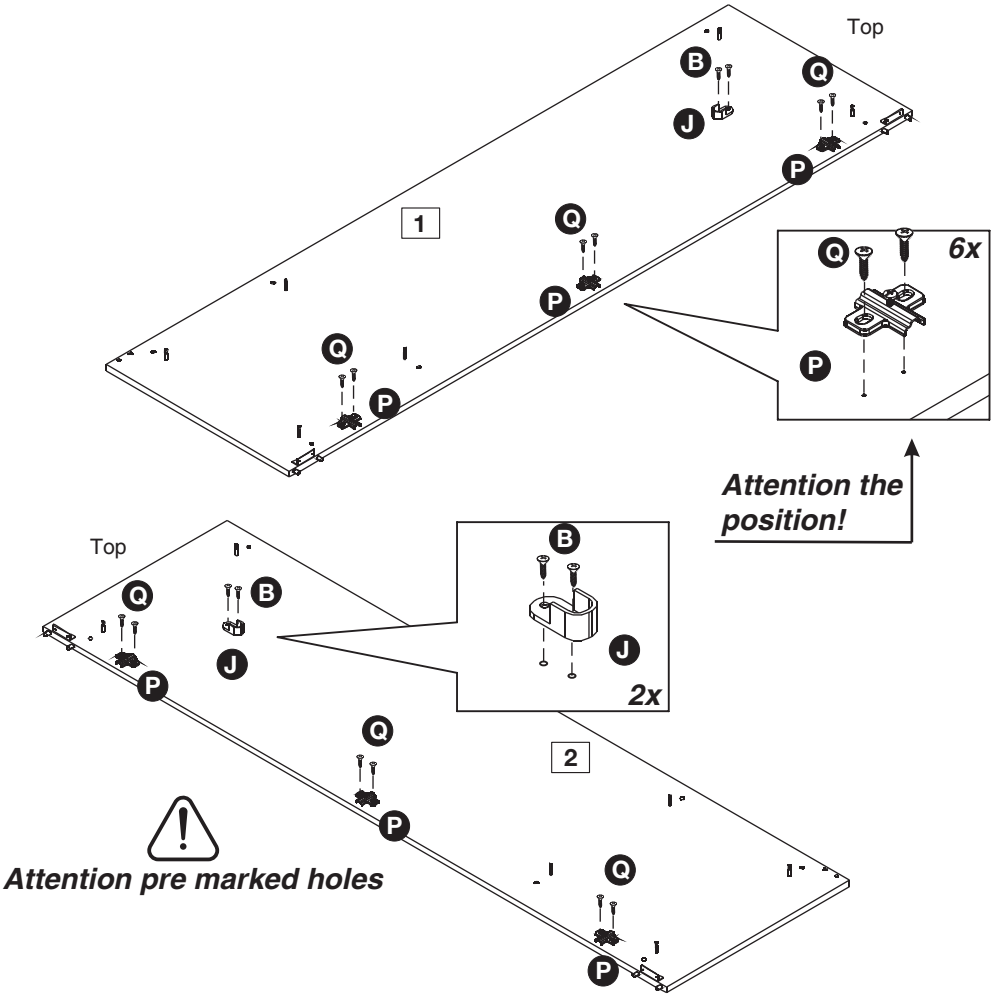

Step 5

Assembling the cabinet.

Fit parts 3 , 4 and 5 on the left side panel 2 as shown.


Insert 6 locking nuts G in the parts indicated as shown.

Use a screwdriver to turn locking nuts G clockwise to lock.

Do not over tighten.

After screwing locking nuts, insert plastic caps T .

Fix unfinished bottom back frame 8 using screws B.

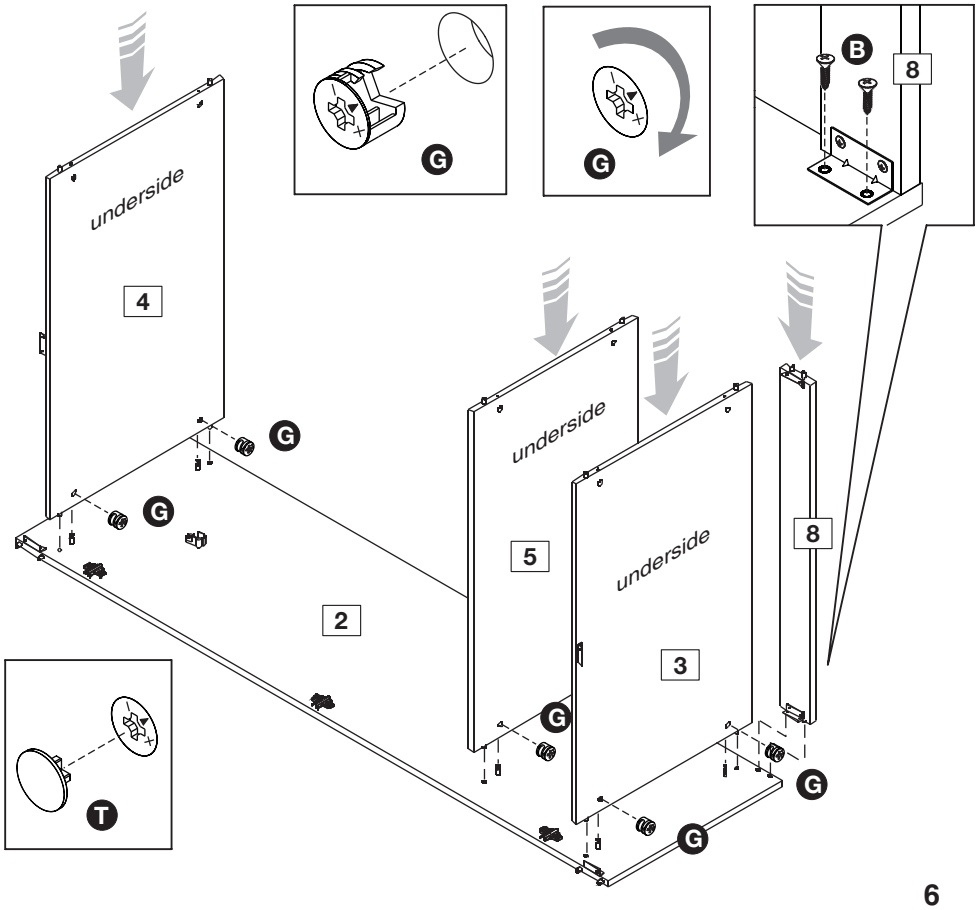

Step 6

Fixing right side panel.

Fit right side panel 1 on to cabinet.


Insert 6 locking nuts G into top panel where shown.

Use a screwdriver to turn locking nuts G clockwise to lock.

Do not over tighten.

After screwing locking nuts, insert plastic caps T .

Fix unfinished bottom frame 8 and L shaped bracket H using screws B as shown.

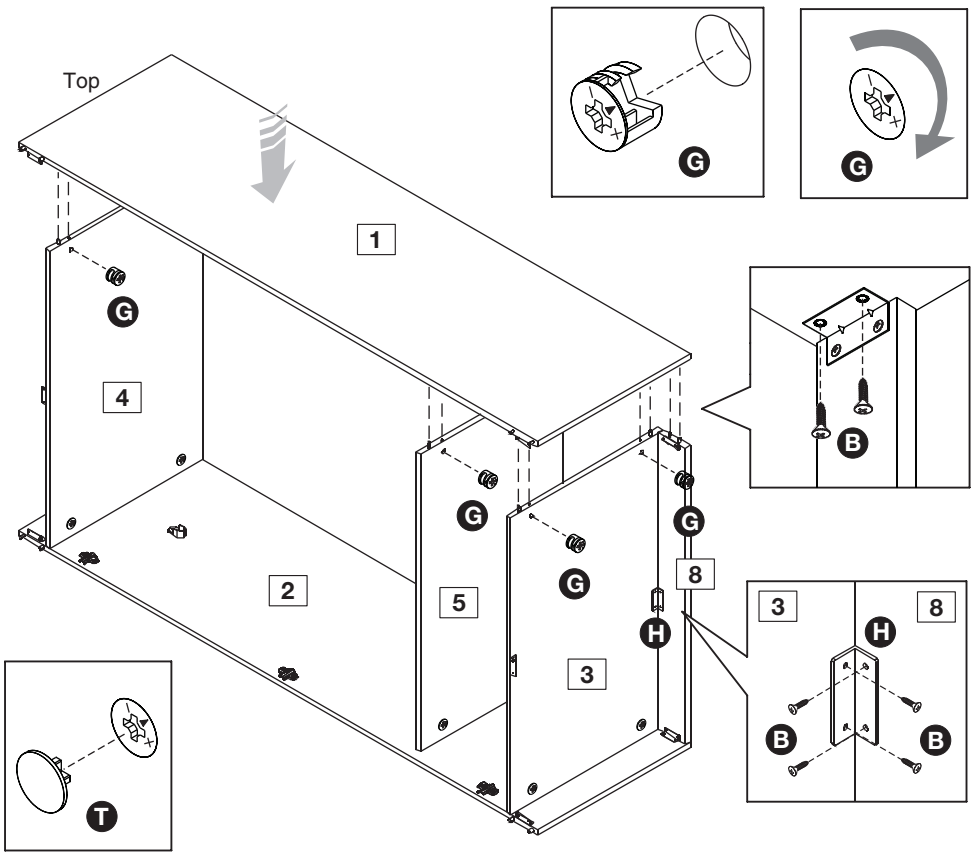


Step 7

Fixing the frames.

With help, carefully turn the product with its face upwards.

Fix top front frame 7 and bottom front frame 6 using screws B as shown.

Finished sides to face outside and finished edges to face up.

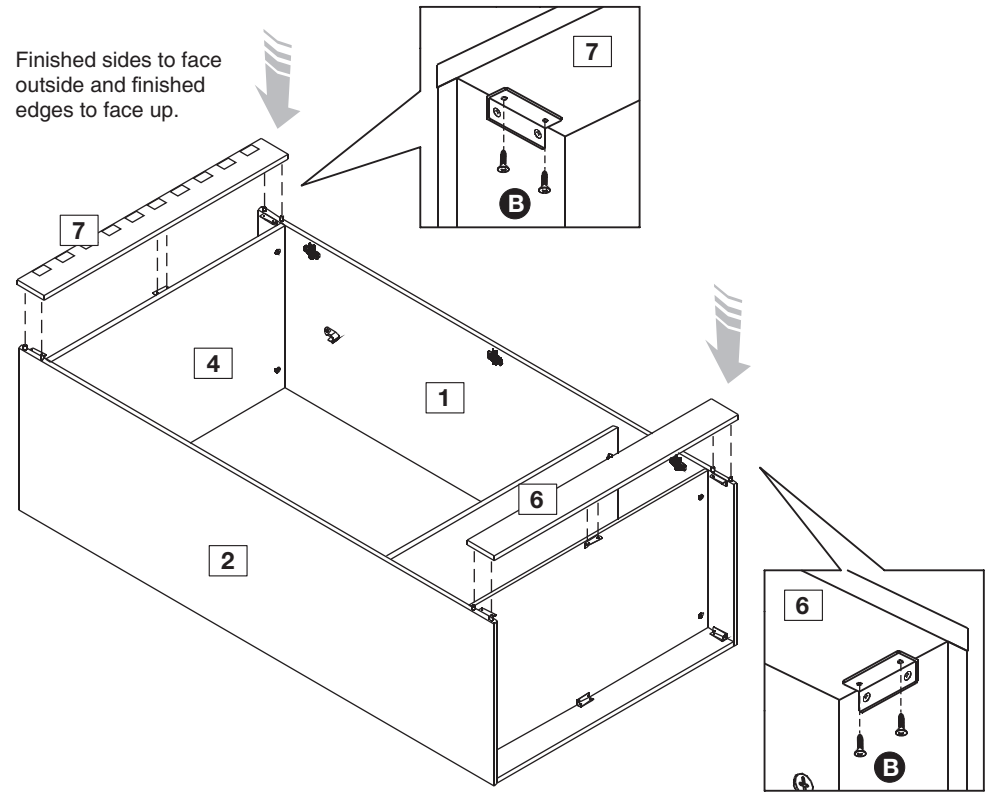

Step 8

Fixing back panel.


With help, carefully stand the product upright.


Important: Cabinet **MUST** be 'square' when back panels are attached.


a: Attach the back panel 11 to the right side first using nails D.

b: Position H profile N onto back panel (just attach).

c: Carefully slot the second back panel 11 into profile and fix it to the cabinet using nails D.

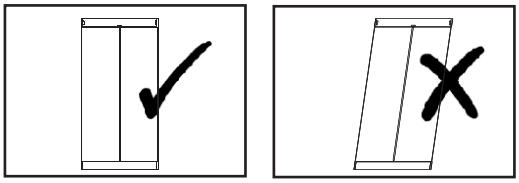

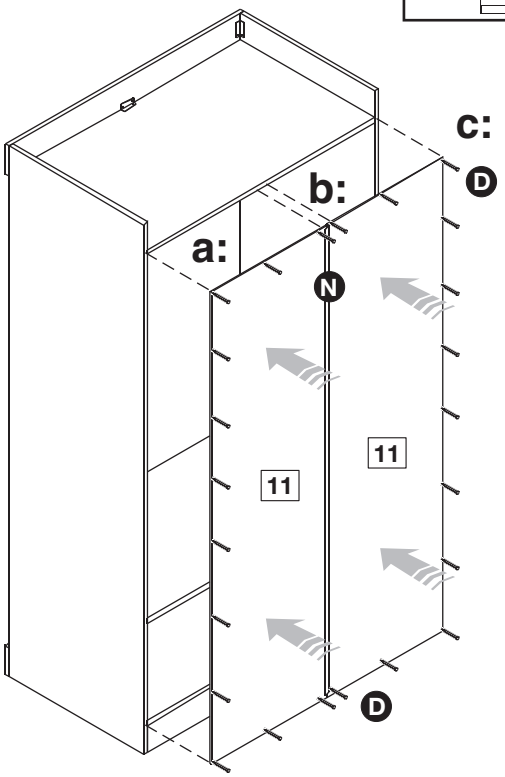

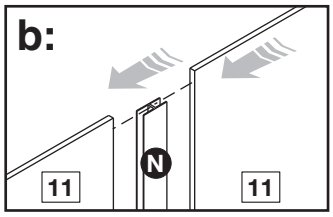

Step 9


Attach plastic feet.

With help, carefully lay down the product.

Attach plastic feet K in the bottom edge of the right and left side panels using nails C .

Make sure nails are fully nailed.


After attaching plastic feet, with help, carefully stand the product upright.

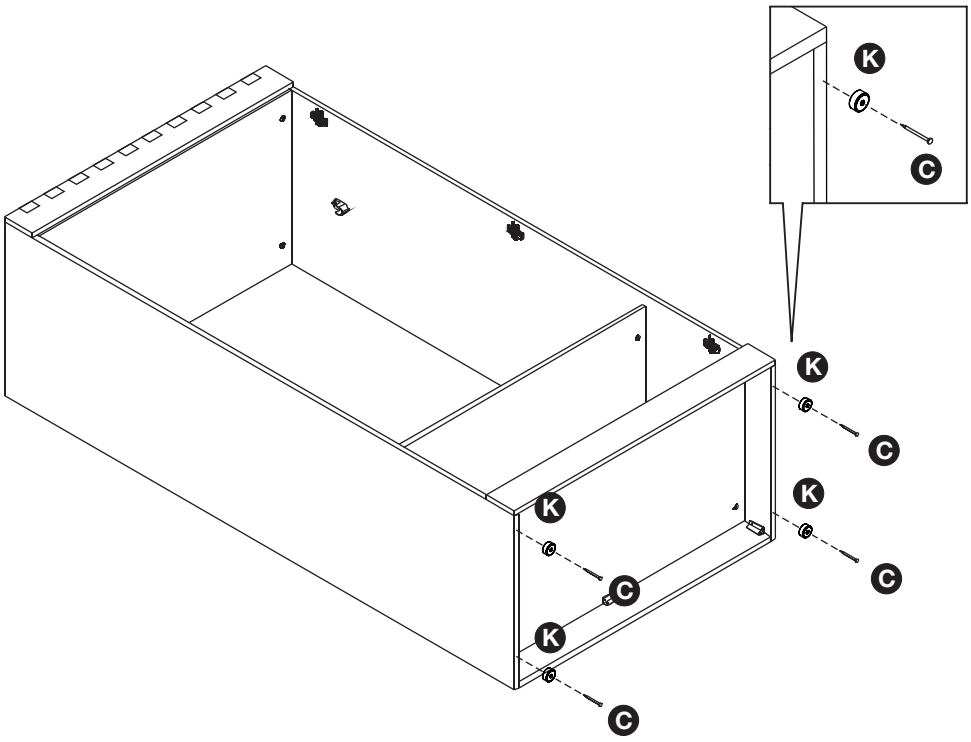

Step **10**

Preparing the doors:


Fix door hinge O to the letf door 9 and right door 10 using screws Q as shown.

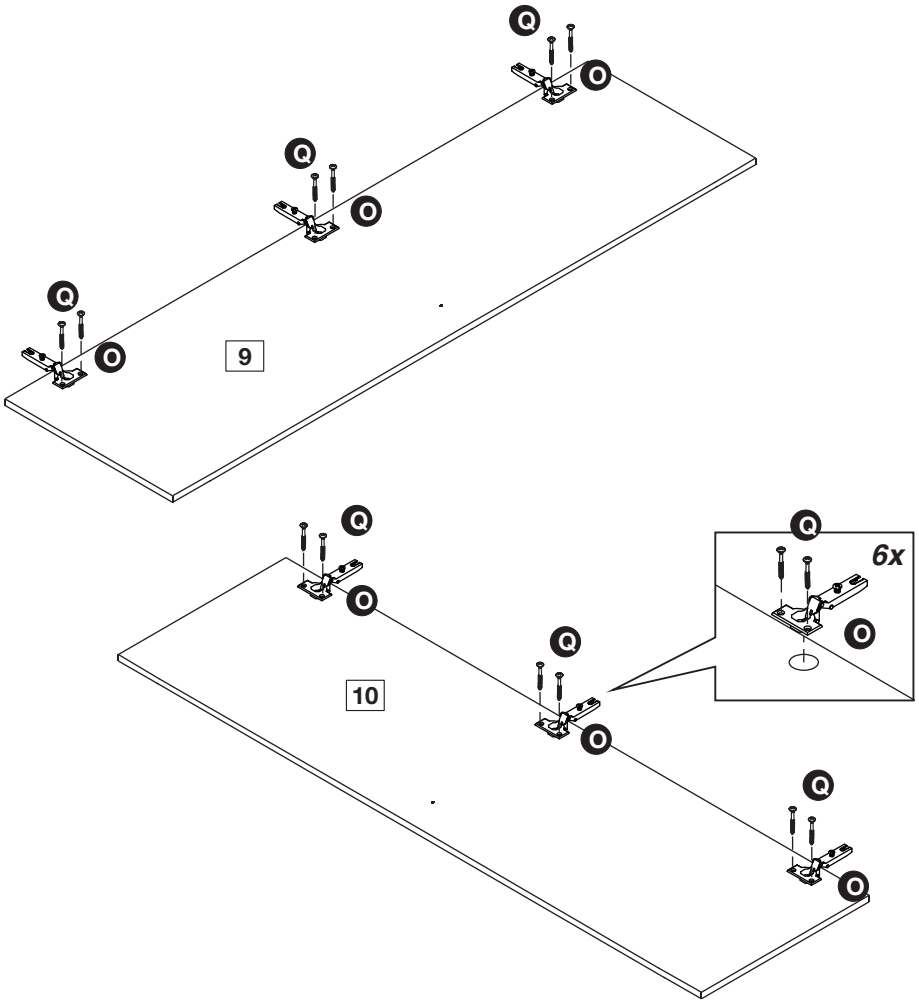

Step **11**

Attach handles.


Using screws A attach the handles L to the doors.

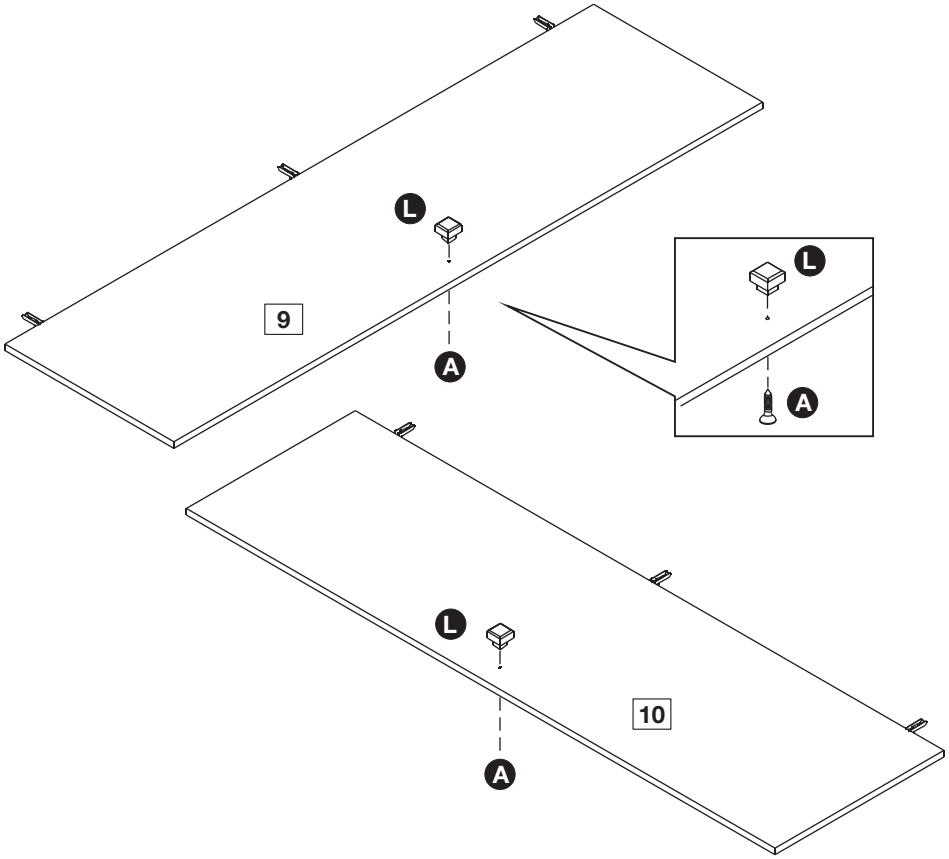

Step **12**

Hanging doors.

With help, slot doors hinges **O** onto hinges plates **P** and tighten screws.
Hinge plates must be inserted in the screw in the back of the hinge.

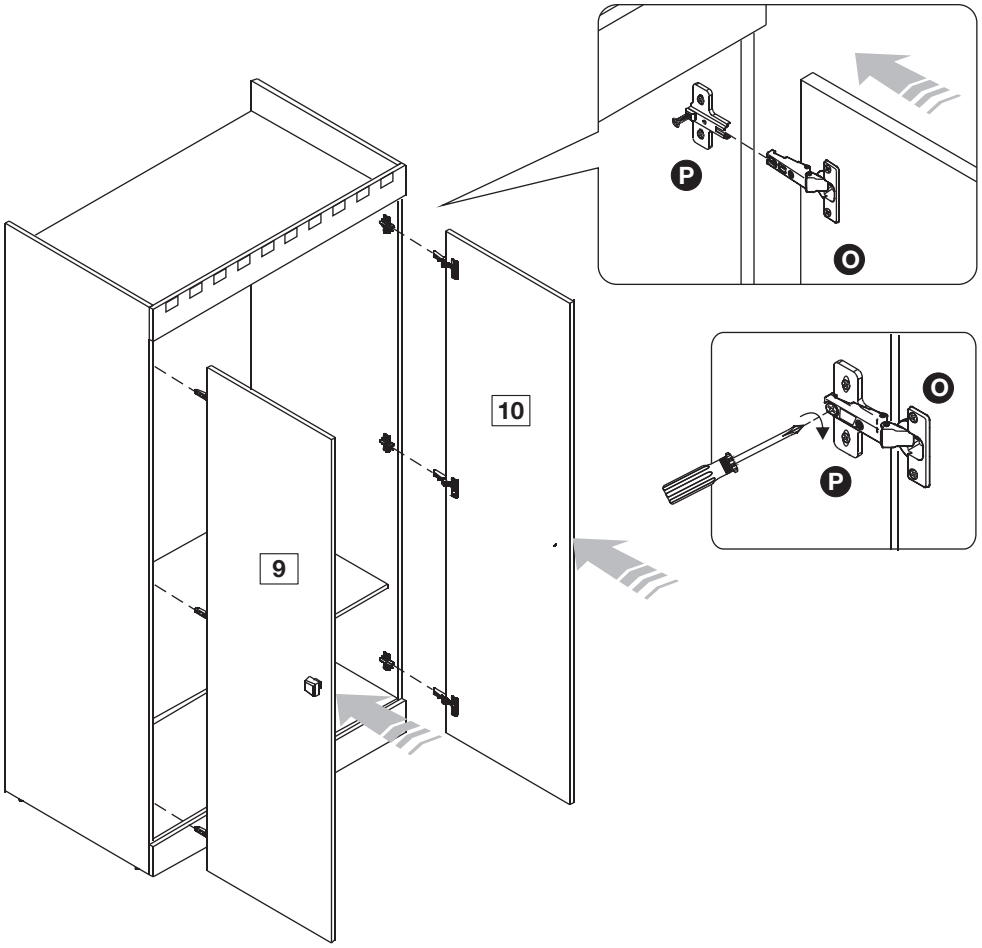


Step **13**

Hinge adjustment

a: To move doors up or down: loosen screws shown and move doors to suit.

Re-tighten screws.


Continued on next page.

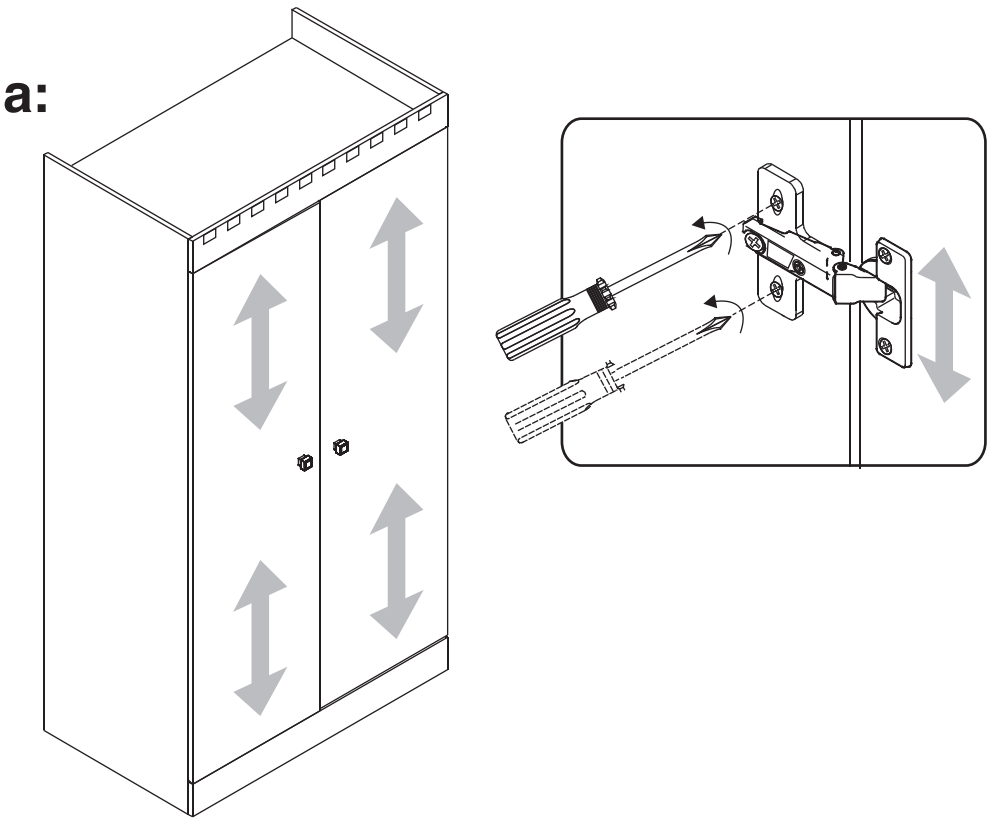

Step **14** - continued

b: To move doors in or out: loosen screw shown and move doors to suit.


Re-tighten screws.

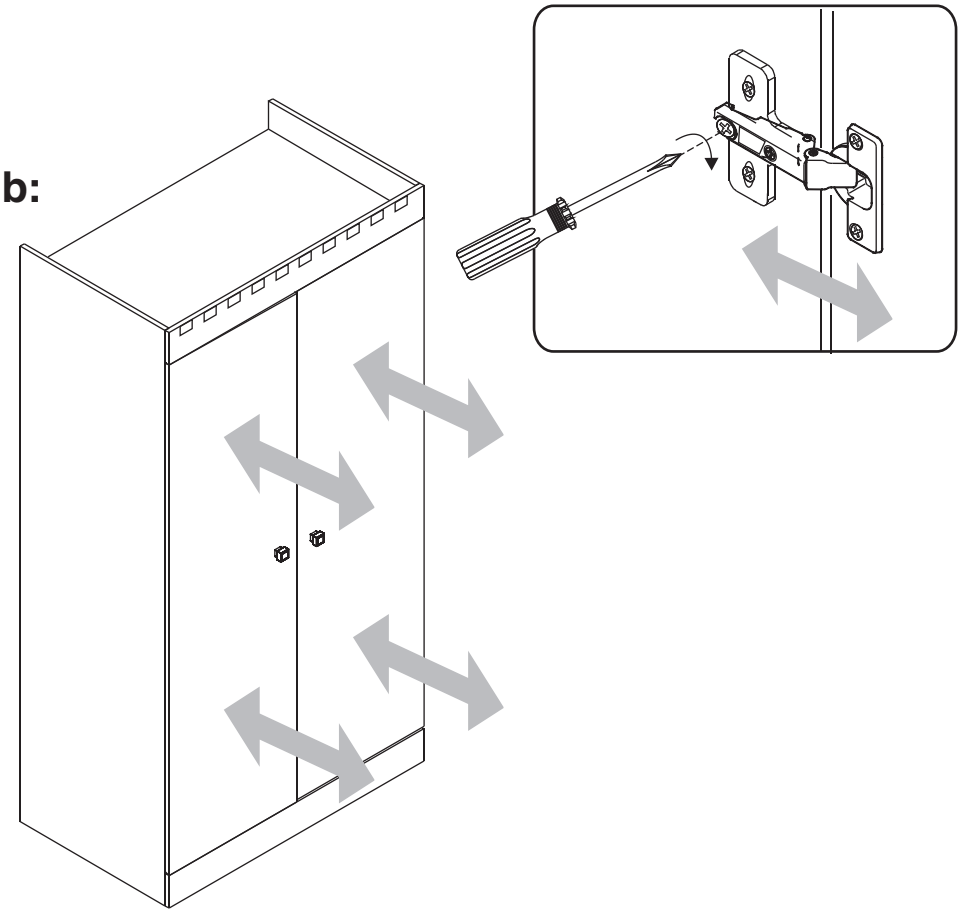

Step **15**

c: To move doors left or right: loosen screw shown and move doors to suit.


Re-tighten screws.

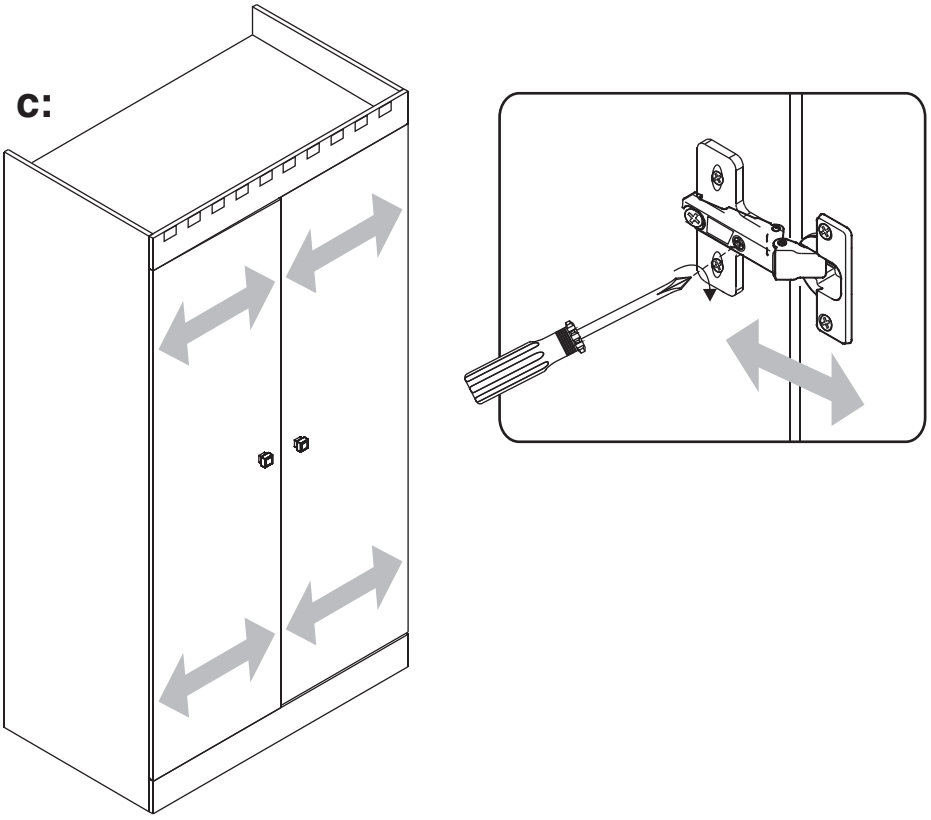

Step **16**

Attach silicone stopper Ⓘ in both doors as shown.


Place hanging rail Ⓜ into the supports within the cabinet as shown.

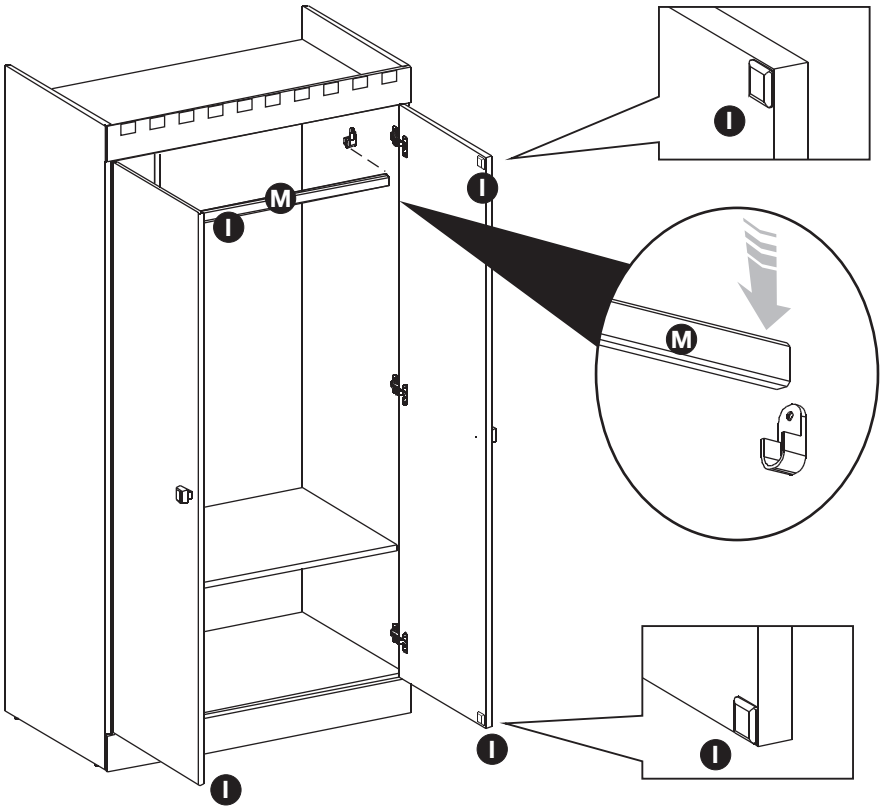

Step **17**

Fixing to wall.

Furniture must be fixed to a wall. Fix wall strap Ⓢ to top of furniture using washer Ⓡ and screw Ⓤ. With help, move furniture into position.

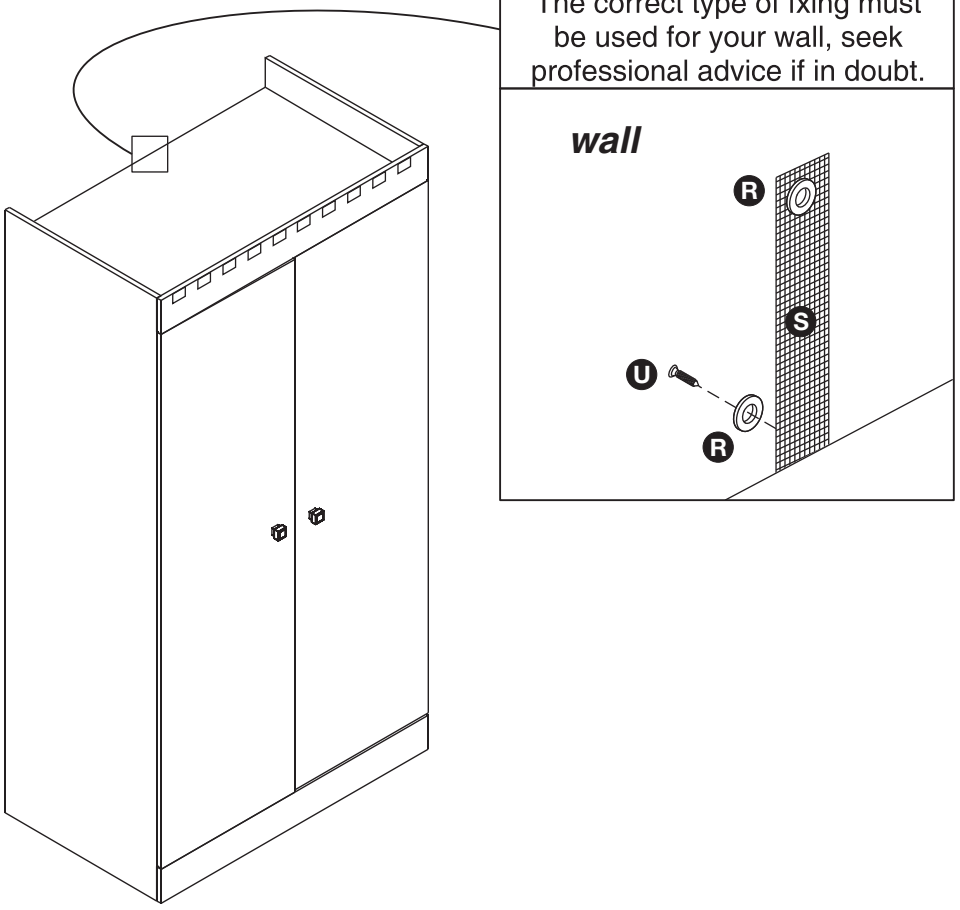


Assembly is complete.

If you need help or have damage or missing parts, call the **Customer Helpline: 03456 400 800**

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

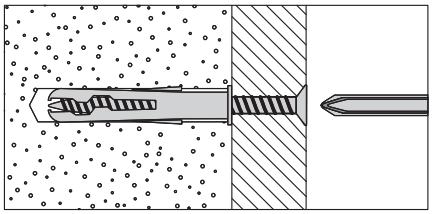


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

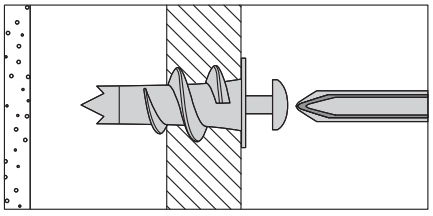


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

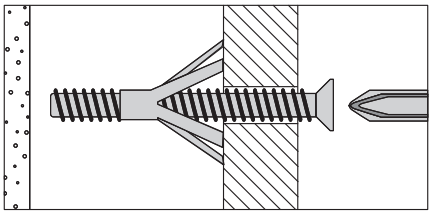


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

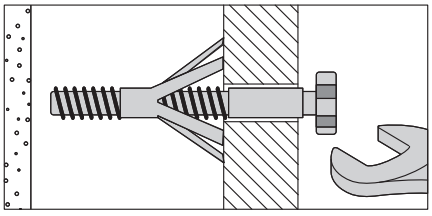


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

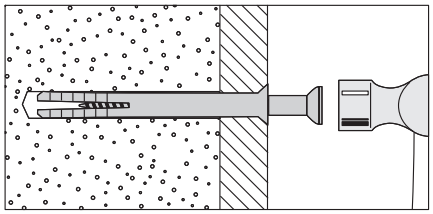

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

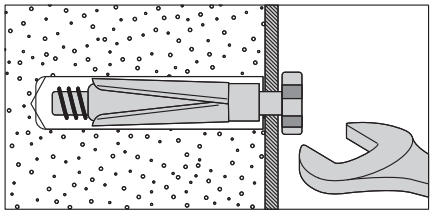


For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

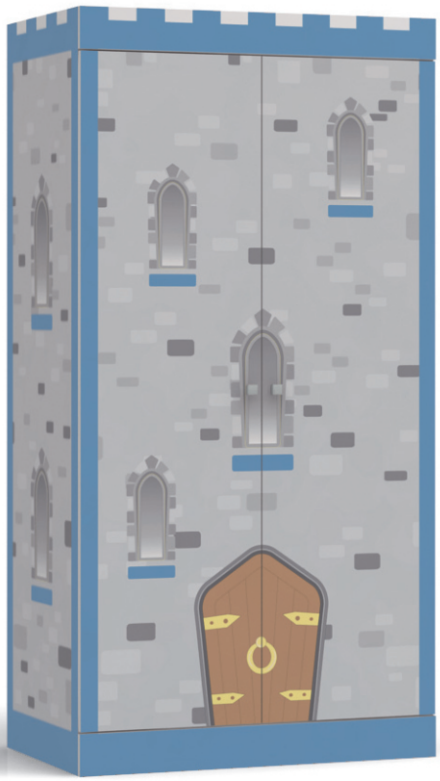

418/4726



397/9891