Care and Maintenance

General

This pushchair was designed and manufactured with quality materials and craftsmanship.
Always use the safety harness.

Lubricate moving parts regularly, especially the wheels, and lower parts of the chassis that tend to collect dirt.

Inspect regularly for:

- Worn parts. torn materials or stitching .
- Loose screws , bent or broken frame parts .
- Broken, damaged or missing parts.

Should any of the above be evident do not use and contact the Helpline:03456 400 800 for advice.

Care and Maintence:

Fabric parts may be cleaned in accordance with the fabric care labels. Do not machine wash.
Seat: Sponge clean only.
Basket: Hand wash only.
Do not leave the pushchair exposed to heat i.e. by a radiator or in direct sunlight.

If the pushchair chassis parts have been exposed to salt water we recommend that they be rinsed down with soapy water as soon as possible, after wards clean with a sponge.
Do not fold or store the product while wet and never store a damp environment as this can cause mildew to form.

If you need help or have damaged or missing parts, call the
Customer Helpline:03456 400 800
This product comply with the EN1888:2012.
Country of origin: China
Argos LTD, 489-499 Aveburv Boulevard, Central Milton Kevnes, MK9 2NW

Babystart Stroller

User Guide



Cat. No. : 402/3272 (D)

IMPORTANT! Keep these instructions for future reference
The vehicle is suitable fo child from birth up to 15kgs
Helpline : 03456 400 800



IMPORTANT: Keep these instructions for future reference


Thank you for choosing our product. Please always read all the instructions provided carefully before use and remember, Your child's safety may be affected if you don't follow these instructions.
The stroller is suitable for children under 36 months. The max load of the stroller is 15kgs. Never overload.

- **WARNING:** Never leave your child unattended.
- **WARNING:** Ensure that all the locking devices are engaged before use.
- **WARNING:** To avoid injury ensure that your child is kept away when unfolding and folding this product.
- **WARNING:** Do not let your child play with this product.
- **WARNING:** Always use the restraint system.
- **WARNING:** This product is not suitable for running or skating .
- **WARNING:** Do not use if any part is broken, torn or missing .
- **WARNING:** Use a harness as soon as your child can sit unaided.
- **WARNING:** It may be dangerous to leave your child unattended.
- **WARNING:** This seat unit is not suitable for children over 36 months.
- **WARNING:** Accessories which are not approved by the manufacturer shall not be used.
- **WARNING:** Avoid placing the pushchair near naked heat sources such as electric bar fires, gas fires, etc. or where a child could gain access to any other kinds of hazards.
- **WARNING:** Always use the crotch strap in combination with the waist belt.
- **WARNING:** Always use the harness provided and make sure the harness is correctly fitted.
- **WARNING:** Any load attached to the handle affects the stability of the pushchair.
- **WARNING:** Use the stroller for only one child at a time.
- **WARNING:** The maximum permissible loading for shopping basket is 5 kg.
- **WARNING:** The parking device shall be engaged when placing and removing the children.

Pushchair designed to be used from birth shall recommend the use of the most reclined position for new born babies.

Step 10

To Fit The Raincover:
Place the raincover over hood front. Fasten the velcro straps around the front legs to secure. The velcro straps position on the A,B and C as picture show. (fig 10)

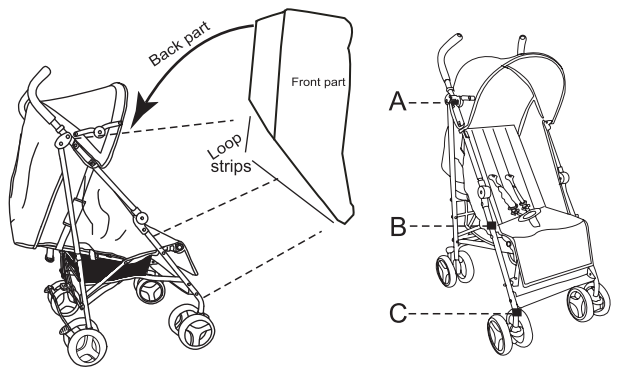


10

Fold


Step 11

To Fold :
Lift the the pedal upwards (step 1) and step down the second lock pedal(step 2). (fig11). Push the handles over and the pushchair will naturally catch on the side of your pushchair is engaged. (step 3) (fig12)

Note: always fold canopy before folding your pushchair.

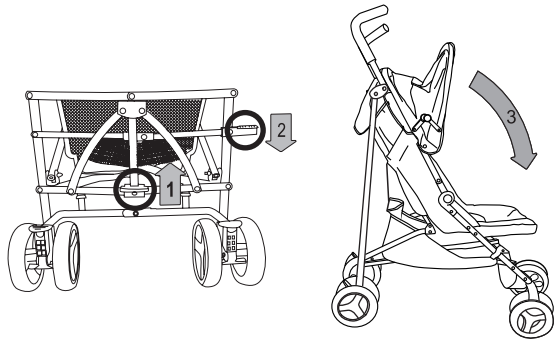


11

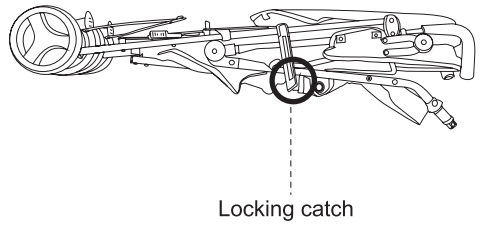

12

Step 7


Lock Swivel Wheel:
Your pushchair has lock front swivel wheels. To lock swivel wheels press the pedal down (step 1) and fix into position to secure (step 2). Repeat on both wheels. Push up to release.(fig 7)

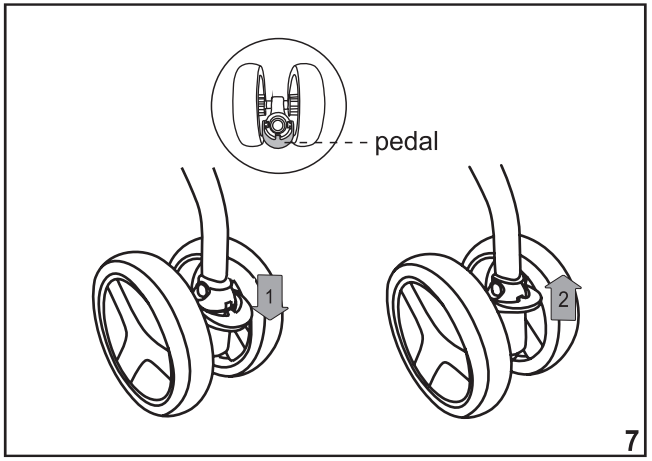

Step 8


Link Brake Operation:
To engage the brake push down brake locking pedal . Lift up pedals to release brake.

WARNING: Do not step on the steel bar to lock brake.
WARNING: The brake pedal shall be stepped down until the pushchair isn't moving

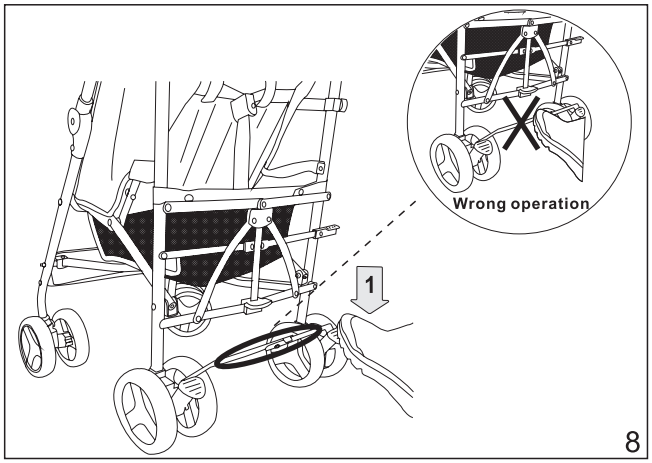


Step 9

To Recline Backrest:
Locate Backrest adjustment mechanism at the rear of the seat, squeeze the clip on the reclining harness and gently lower the back rest. To raise the backrest, squeeze the clip on the reclining harness and gently pull up the backrest to desired height.(fig8)

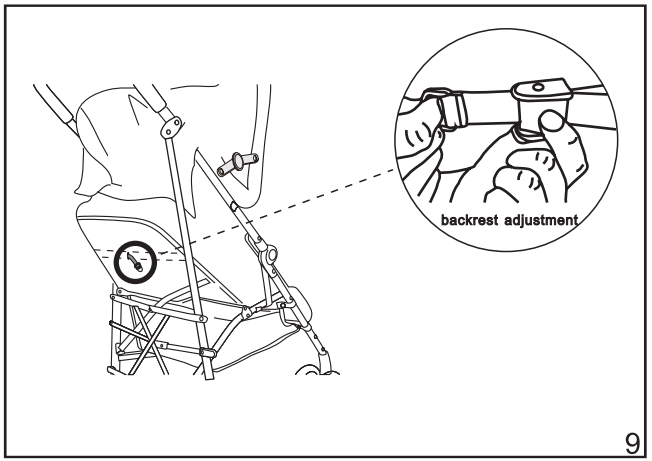


Part list


Front wheel

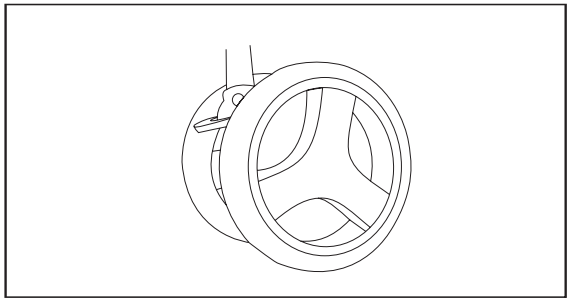

Frame with fabric

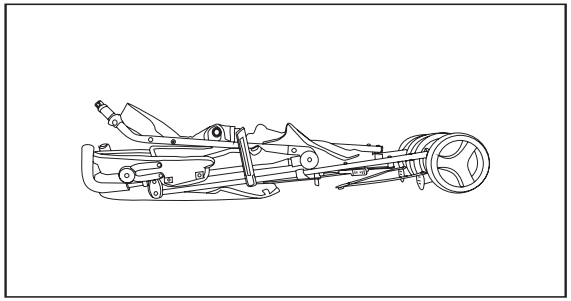

Raincover

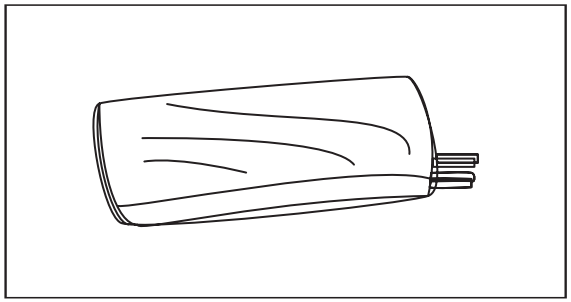


Assembly

Step 1

Unfold Frame:

Locate the locking catch on the side of the stroller and lift to release from the locking stud.(fig 1)

Unfold the pushchair using both hands. Press locking bar until it "clicks" into place.

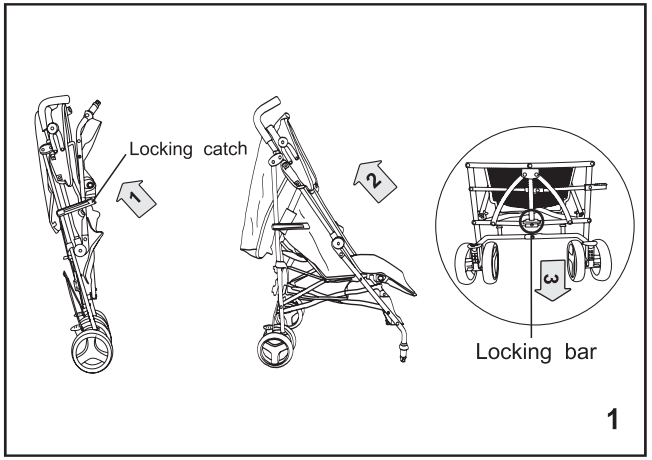

1


Step 2

Assemble The Front Wheels:

Attach the swivel wheels by locating the wheel under the plastic attachment joint.

Press locks on each side slide the wheel upwards and press until the wheel clicks into position.(fig 2)

Note: Ensure the pedal on right position before assemble the front wheels.

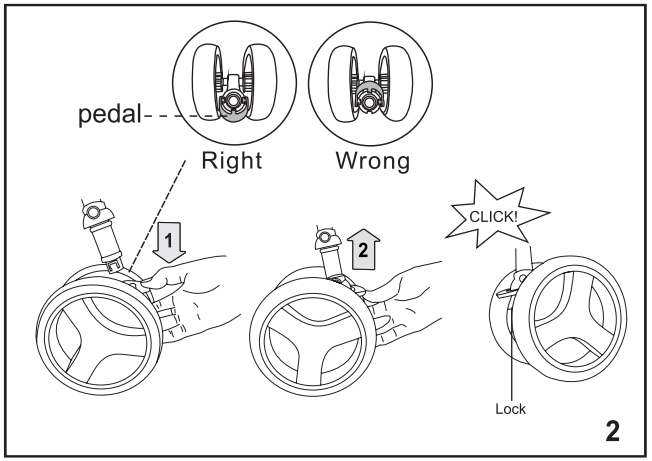


2

Step 3

Fit Canopy:

Fix the snap button of canopy each side and the back on backrest.(fig 3)

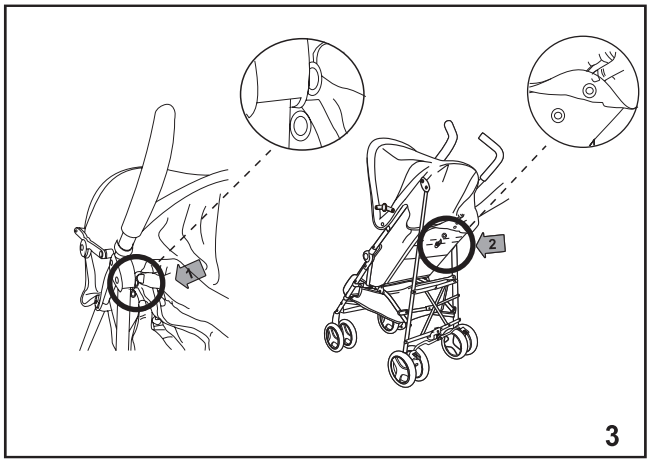


3

Use

Step 4

Adjust Canopy:

Your hood can be opened or closed by lowering or raising canopy hinge.(fig4)

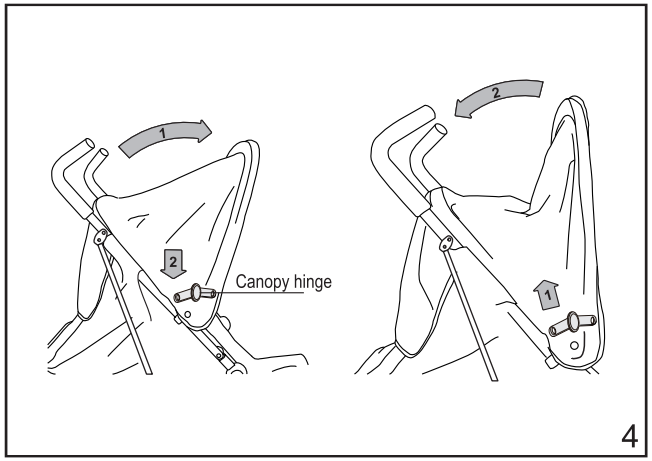


4

Step 5

Adjust Footrest:

Press the button on the footrest can adjustment the height .(fig 5)

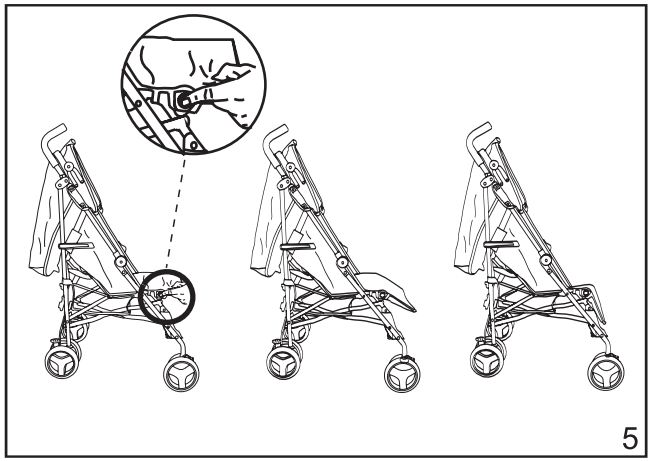

5

Step 6


Harness & Buckle:

To Fasten The Waist harness:
Insert both buckle clips into each side of the buckle. Listen for the "click".

To Release The Harness:
Squeeze the buckles and pull apart.

To Adjust the Buckle:
To adjust the shoulder straps move the slides as shown on.(fig 6)

Note: Can adjust the shoulder straps length according the baby height.

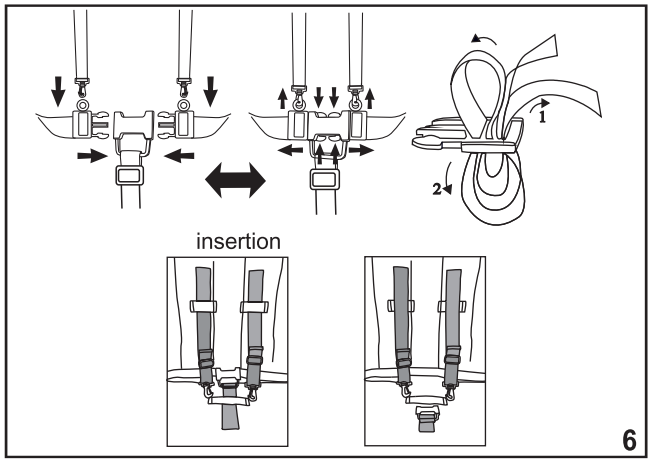

6