
Grafton - 2 Door 1 Drawer Robe

Assembly Instructions - Please keep for future reference

417/7953

404/4639

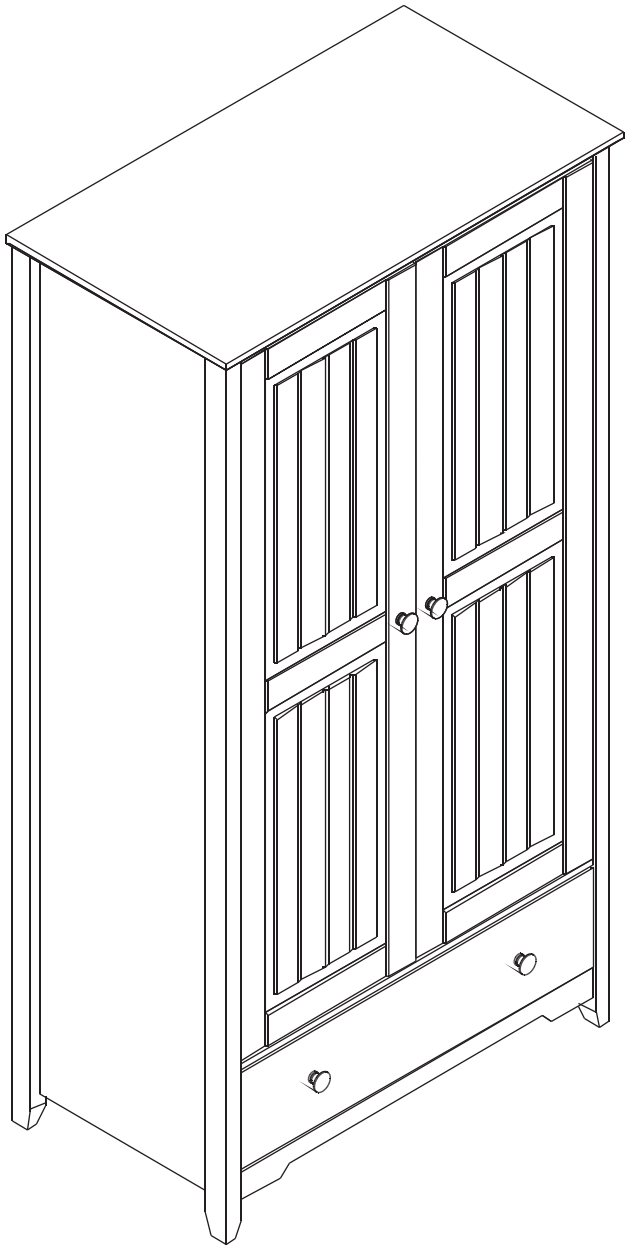

Dimensions

Width - 94cm
Depth - 52cm
Height - 181.8cm

Important – Please read these instructions fully before starting assembly

If you need help or have damage or missing parts, call the **Customer Helpline: 03456 400 800**

Issue 1 - 31/03/15

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.


• Assemble on a soft level surface to avoid damaging the unit or your floor.

• This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

• The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

• On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

• This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.

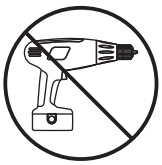

• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

• Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below

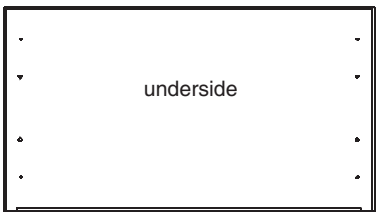


1 Top panel
(94 x 52cm)

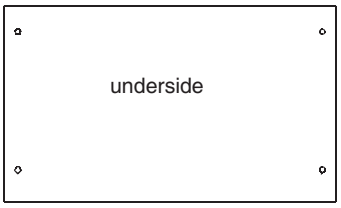

2 Base panel
(84 x 49.7cm)

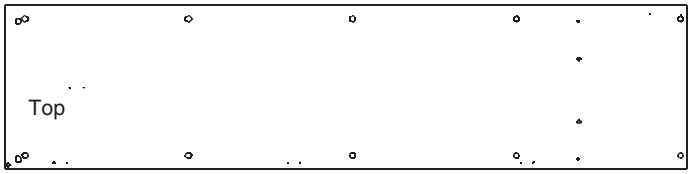


3 Left side panel
(173 x 41.5cm)

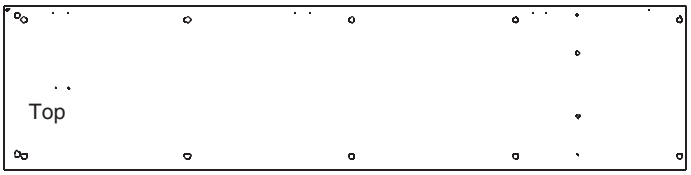

4 Right side panel
(173 x 41.5cm)




5 Right back foot
(180 x 4.5cm)




6 Right front foot
(180 x 4.5cm)



7 Left back foot
(180 x 4.5cm)




8 Left front foot
(180 x 4.5cm)



9 Back rail x 2
(84 x 6cm)



10 Top front rail
(84 x 6.5cm)



11 Bottom front rail
(84 x 6cm)

12 Hanging rail
(83.1 x 3.5cm)



13 Drawer front
(83.4 x 20cm)



14 Drawer left side
(45 x 15cm)




15 Drawer right side
(45 x 15cm)



16 Drawer bottom
(80 x 45cm)



17 Drawer back
(78.5 x 15cm)

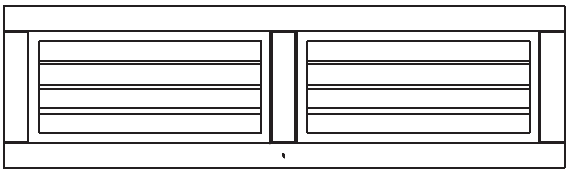

18 Door x 2
(142.5 x 41.5cm)




















19 Back panel x 2
(174 x 42.7cm)

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 03456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

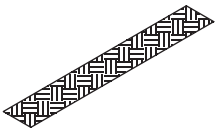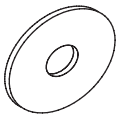A  Metal dowel x 40	**B** Locking nut x 40 	**C**  30mm Screw x 04
D  16mm Screw x 33	**E**  14mm Screw x 12	**F**  Nail x 55
G  22mm Bolt x 04	**H**  Wooden dowel x 34	**I**  Wall strap x 01
J  Washer x 01	**K**  25mm Screw x 01	**L**  Metal door knocker x 02
M  Door hinge x 06	**N**  Hinge plate x 06	**O**  Handle x 04
P  H profile 1670mm x 01	**Q**  Hanging rail support x 02	**R**  Right runner x 01 pair
S  Left runner x 01 pair		


Tools required




Phillips screwdriver (medium & large)

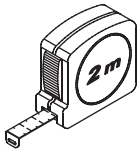

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Insert dowels Ⓗ into the indicated parts.

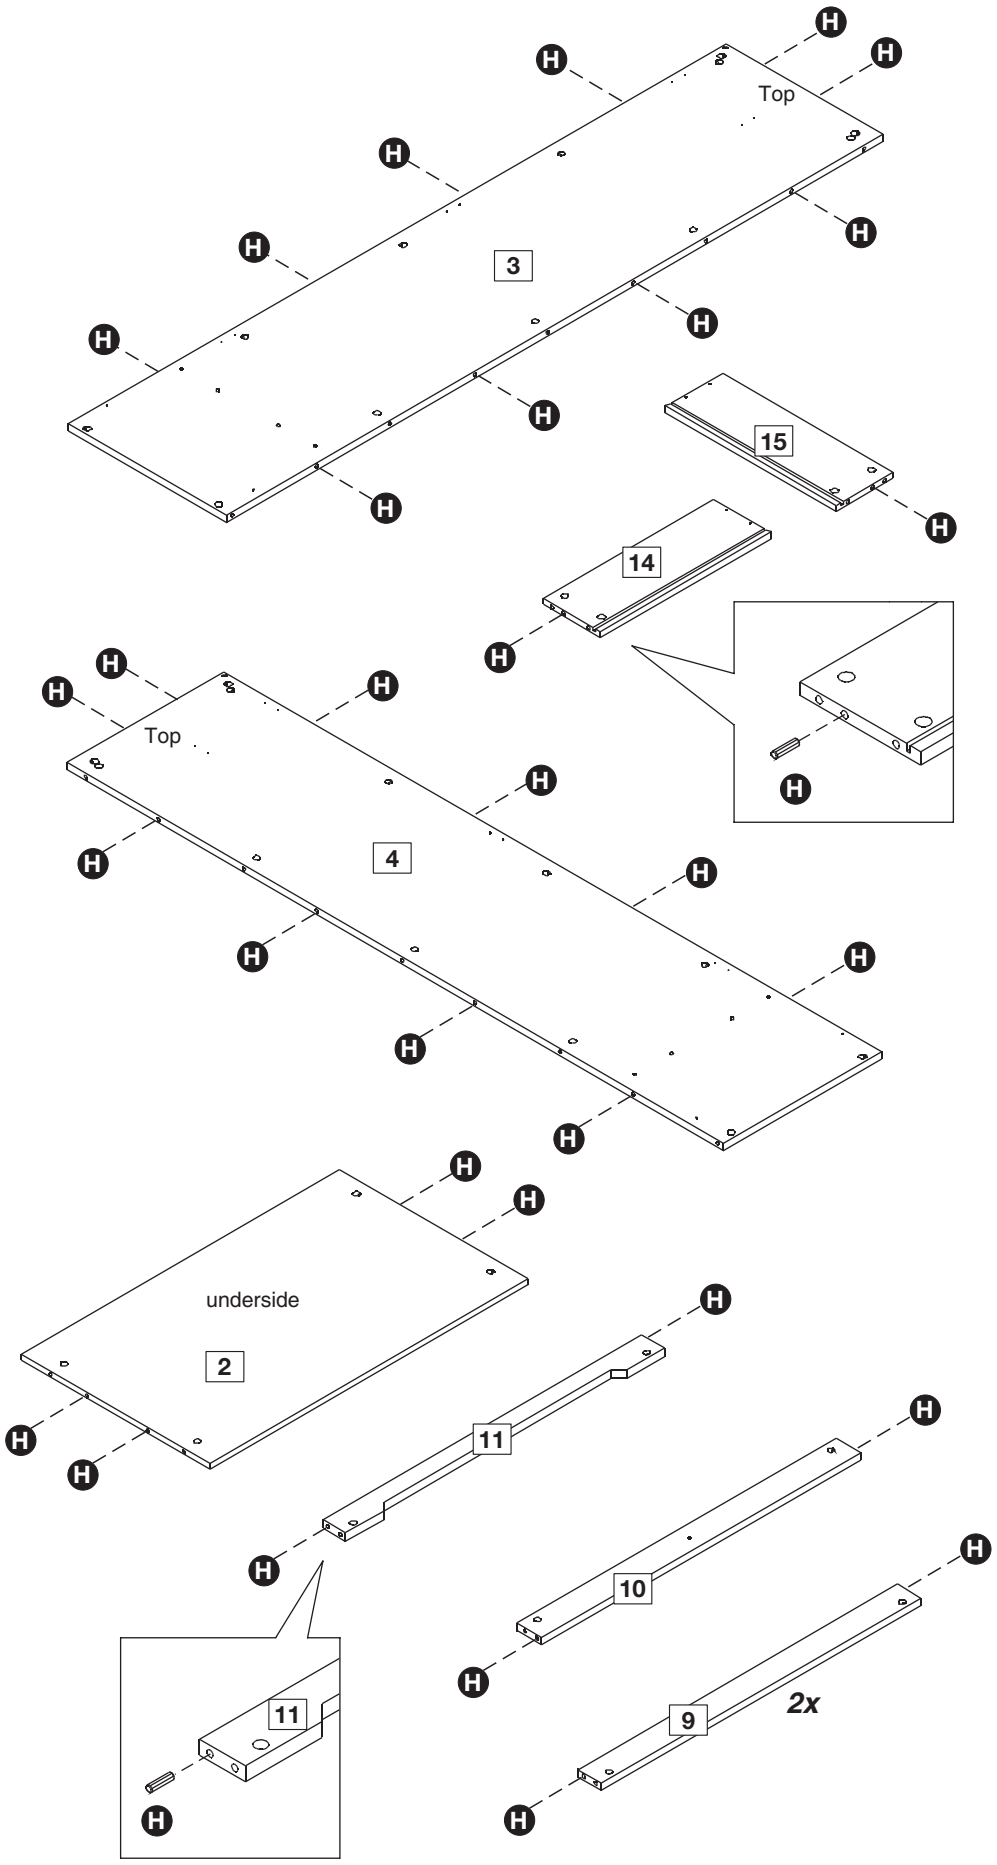

Assembly Instructions

Step **2**


Fitting metal dowels.

Screw metal dowels Ⓐ in the indicated parts.

Note: Insert metal dowels as far as shown.

Do not over tighten.

Continued next page.

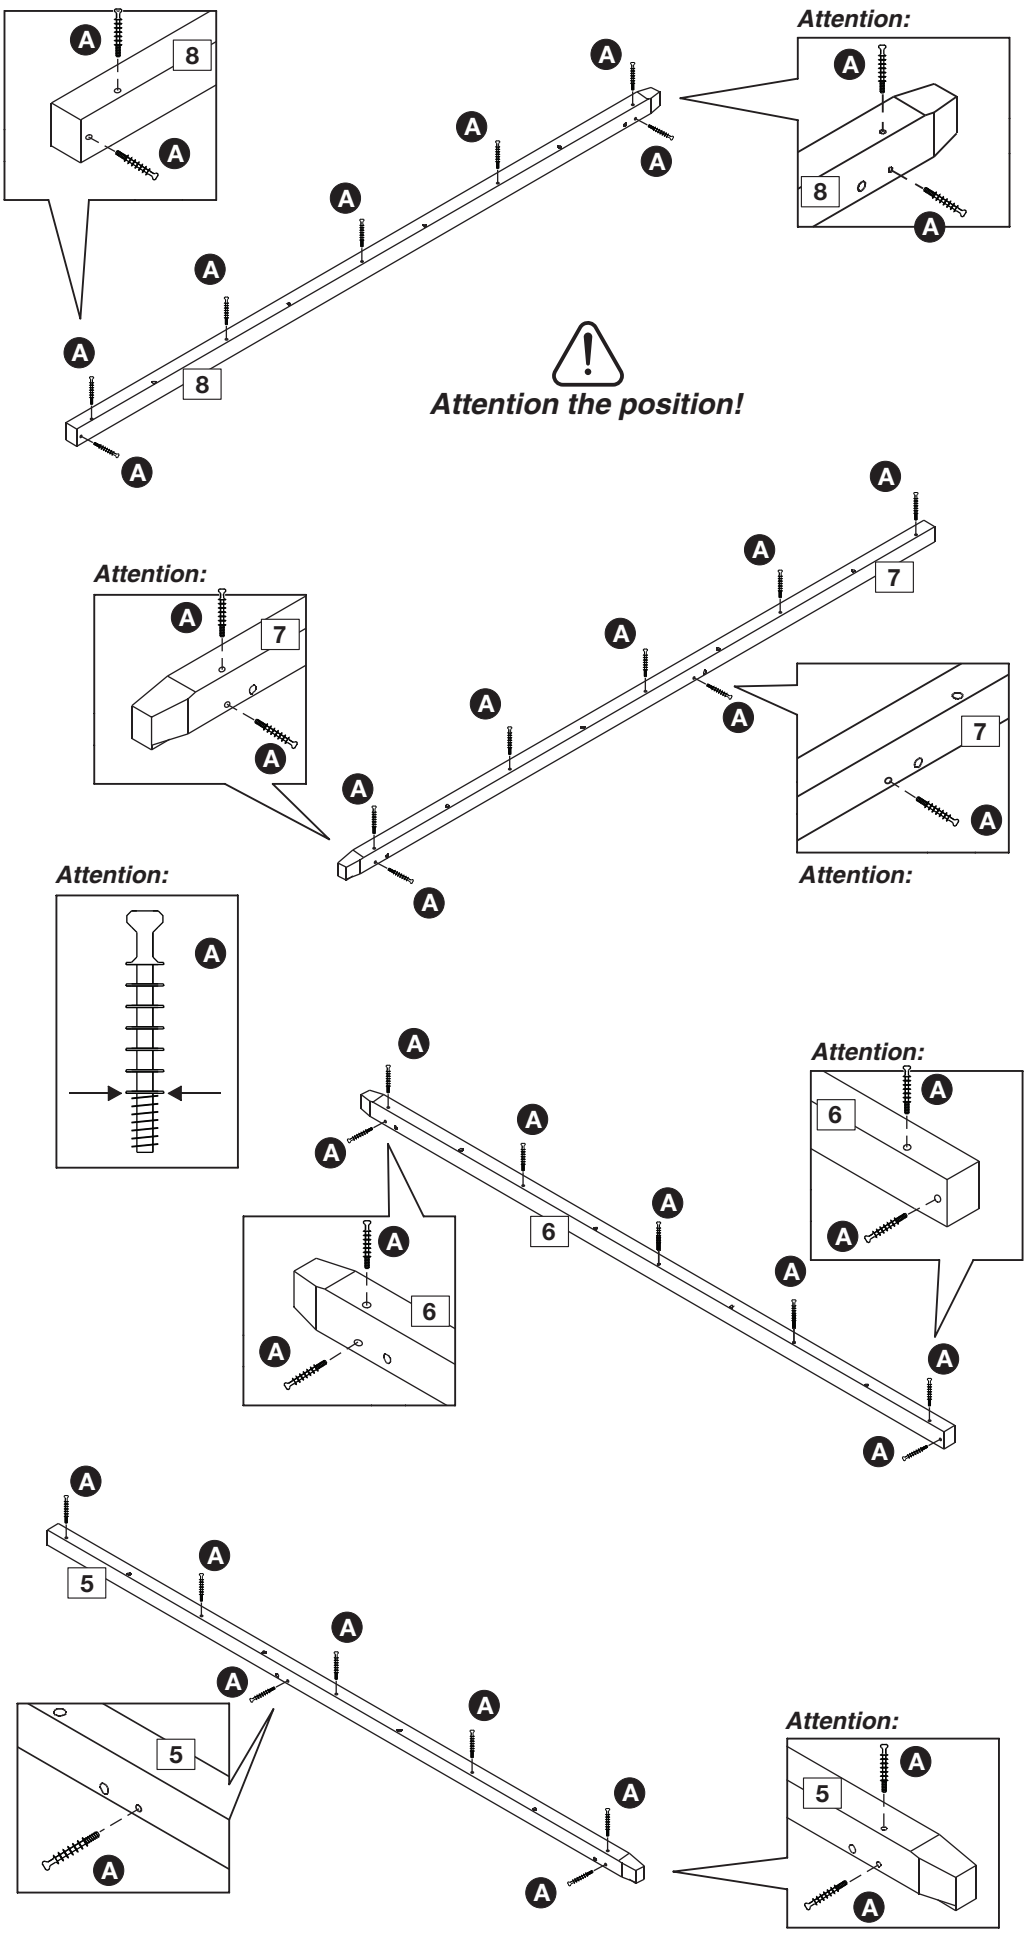

Assembly Instructions


Step 2 - continued

Fitting metal dowels.

Screw metal dowels Ⓐ in the indicated parts.

Note: Insert metal dowels as far as shown.

Do not over tighten.

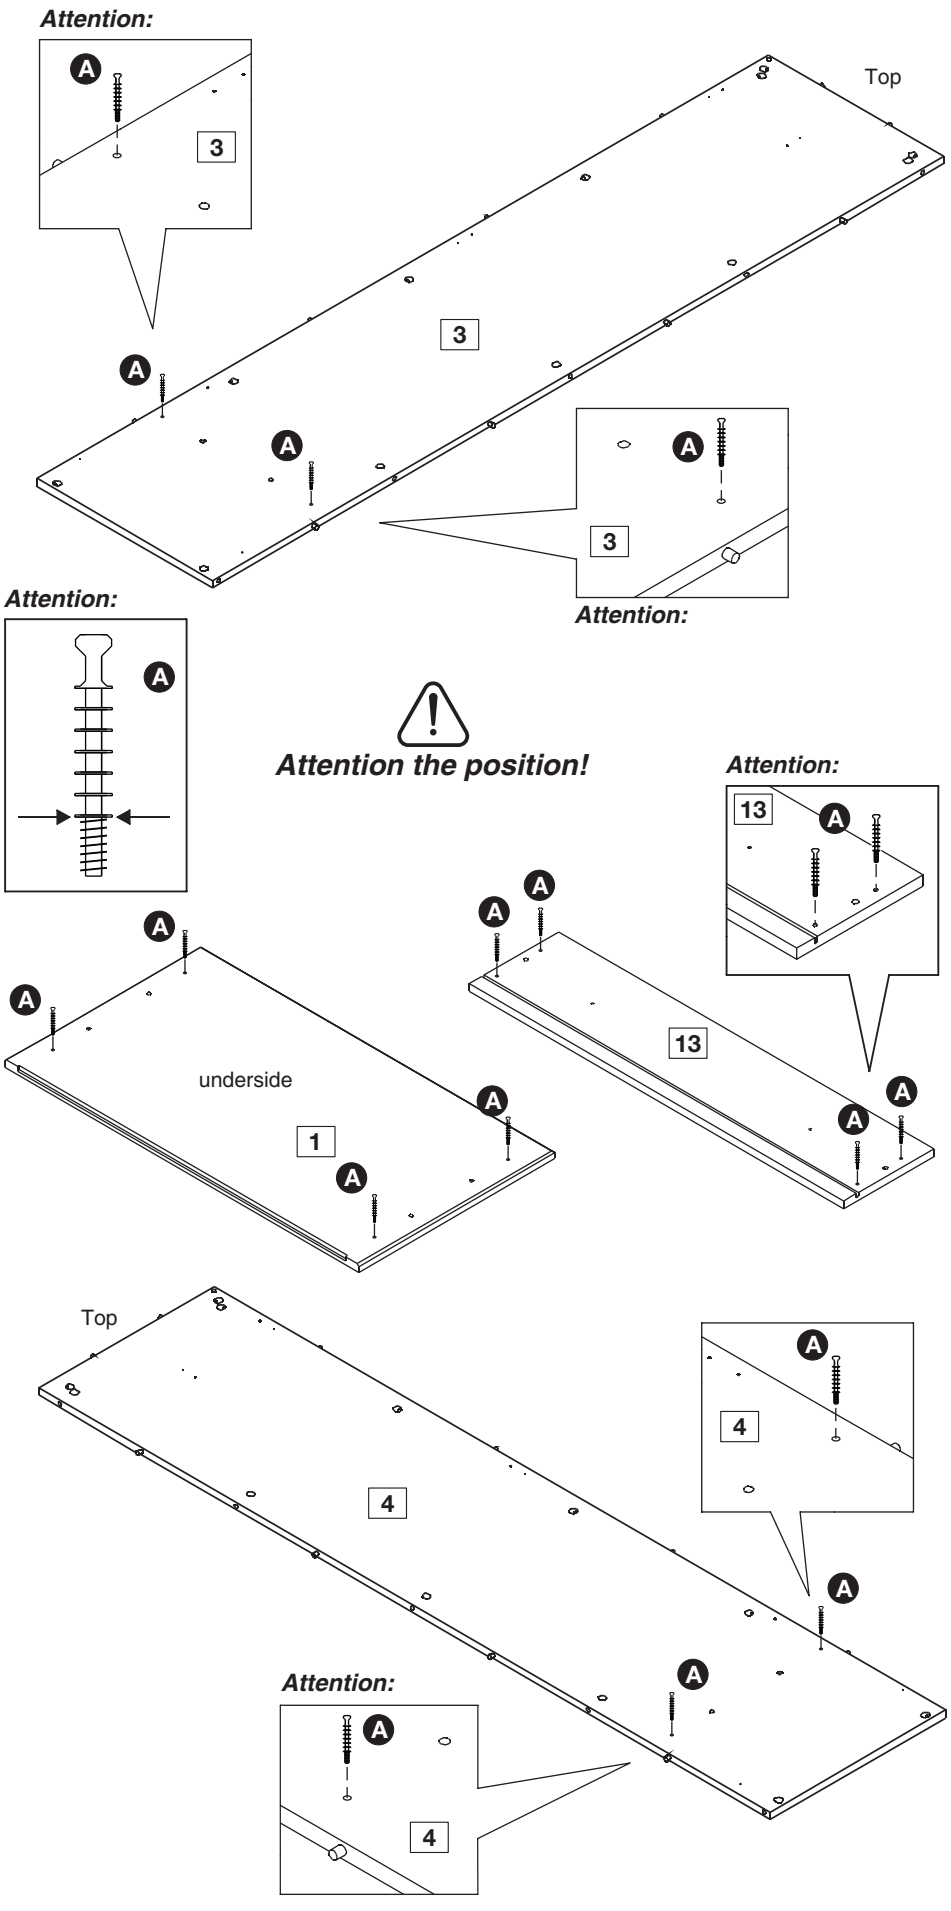

Assembly Instructions

Step **3**

Assembling the sides.

Note that feet are numbered!


Fit feet 7 and 8 to the left side panel 3 as shown.

Fit feet 5 and 6 to the right side panel 4 as shown.


Insert 20 locking nuts Ⓑ in the indicated parts.

Use a screwdriver to turn locking nuts Ⓑ clockwise to lock.

Do not over tighten.

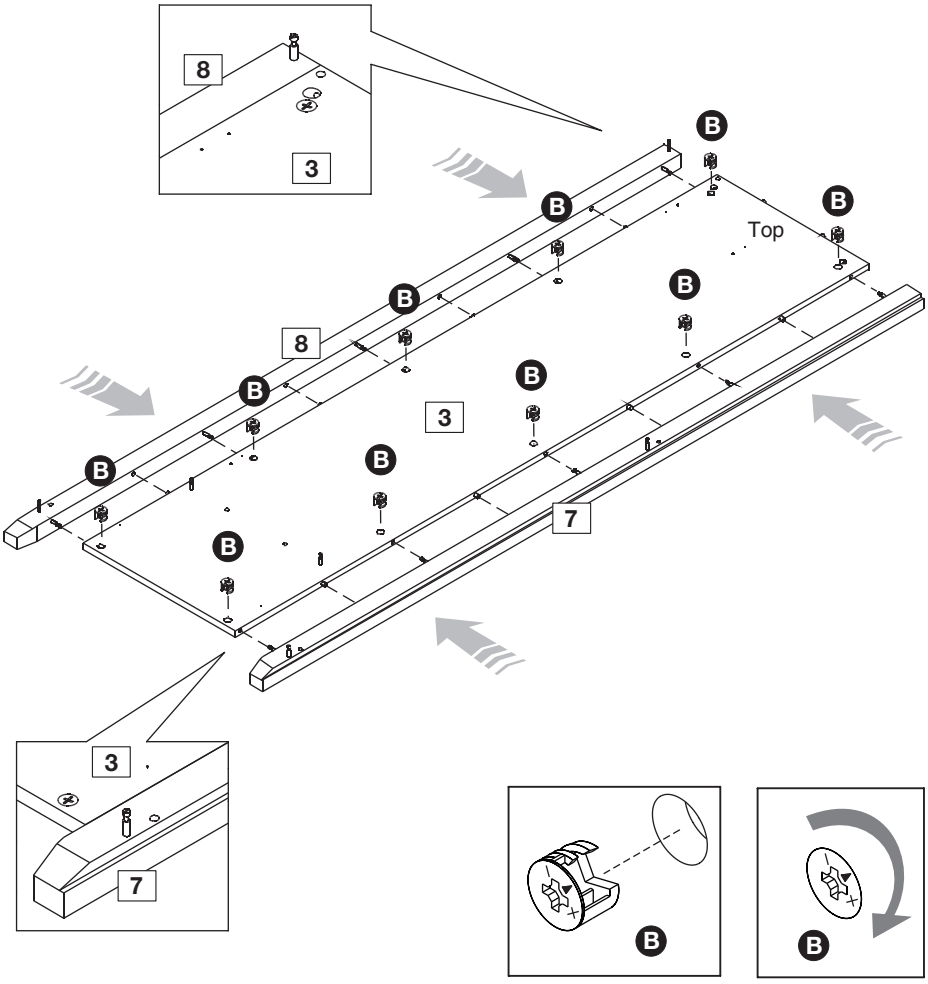

Attention the position!

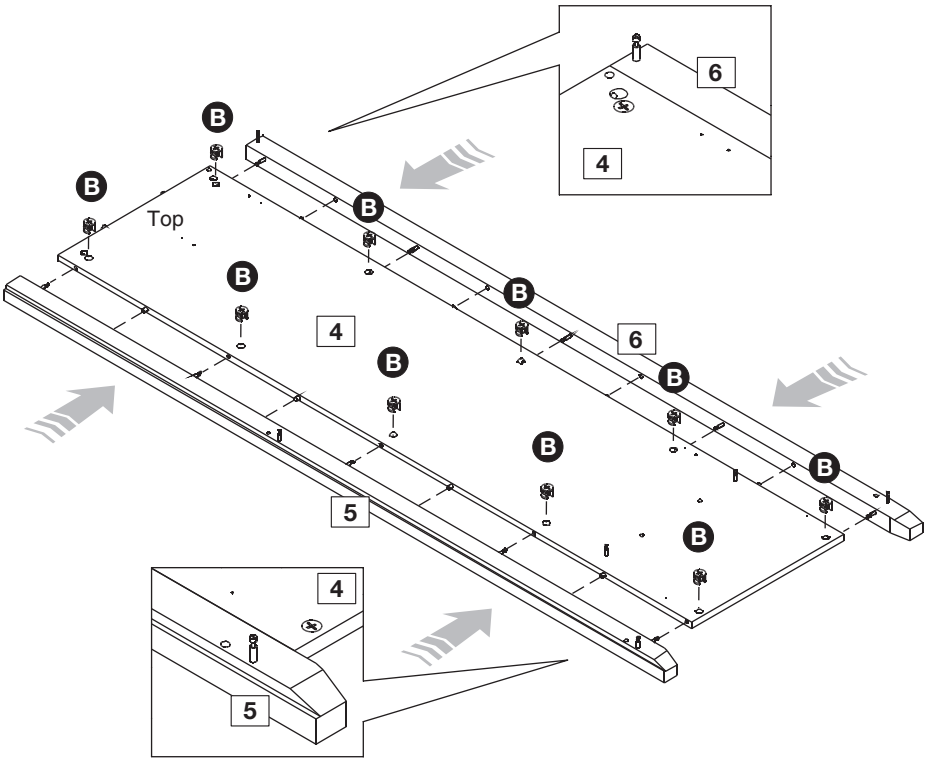


Assembly Instructions

Step 4

Fixing hinge plates.

a: Fix hinge plates Ⓝ into the pre drilled holes on side panels 3 and 4 using screws Ⓓ.

b: Fix hanging rail supports Ⓠ in the pre drilled holes on the right side panel 4 and left side panel 3 using screws Ⓓ.

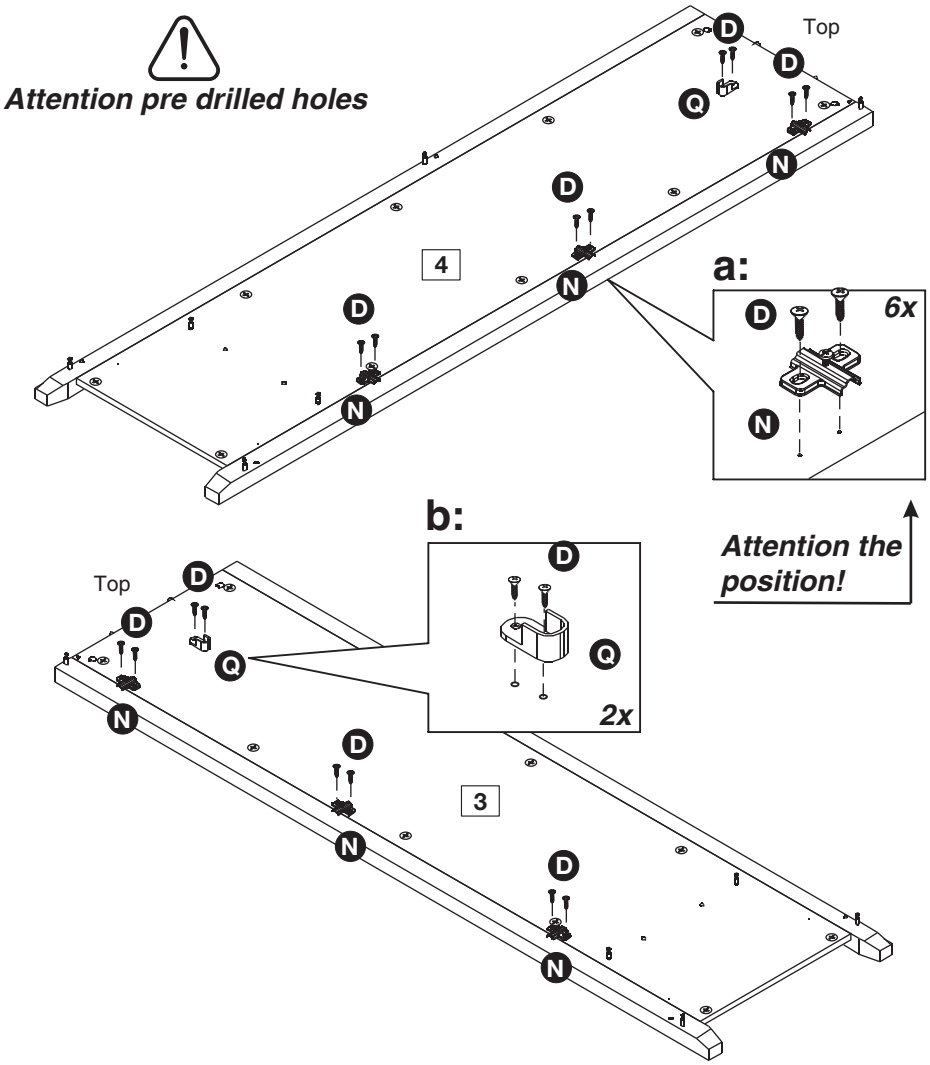


Step 5

Fixing runners.

Attach right runners Ⓡ to the pre drilled holes on the right side panel 4 using screws Ⓔ.

Important:
Make sure screws are fully inserted, otherwise, drawers may not open and close easily.

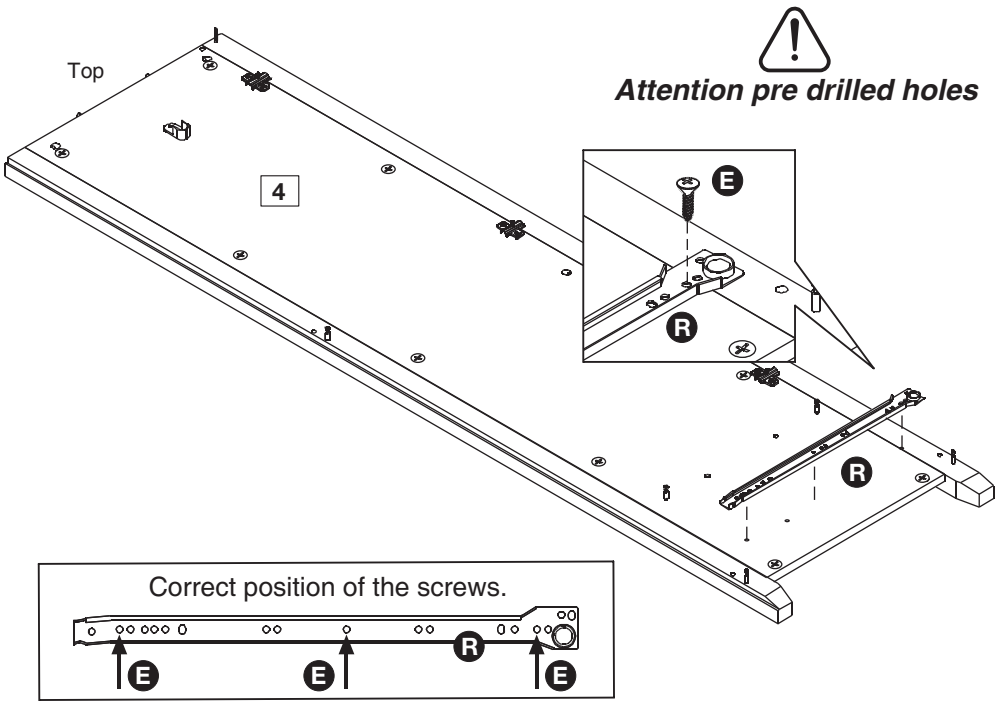


Continued next page.

Step 5 - continued

Fixing runners.

Attach left runners (S) to the pre drilled holes on the left side panel [3] using screws (E).


Important:
Make sure screws are fully inserted, otherwise, drawers may not open and close easily.

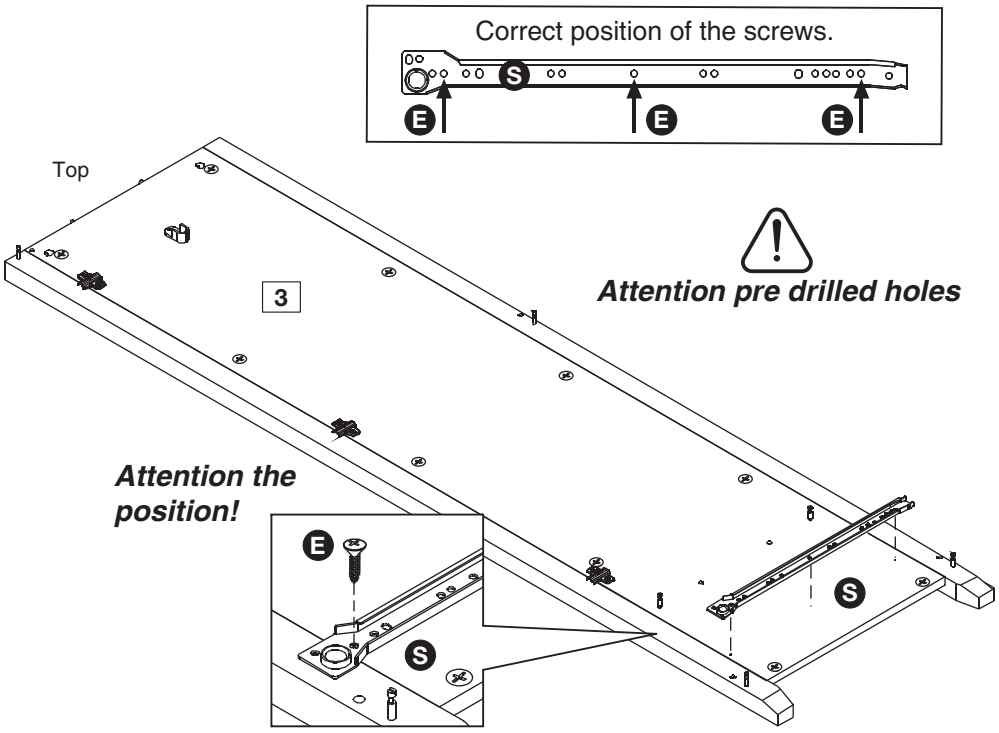


Step 6

Fixing door knocker.

Fix metal door knocker (L) to the pre drilled holes on base panel [2] and top front rail [10] using screws (D).

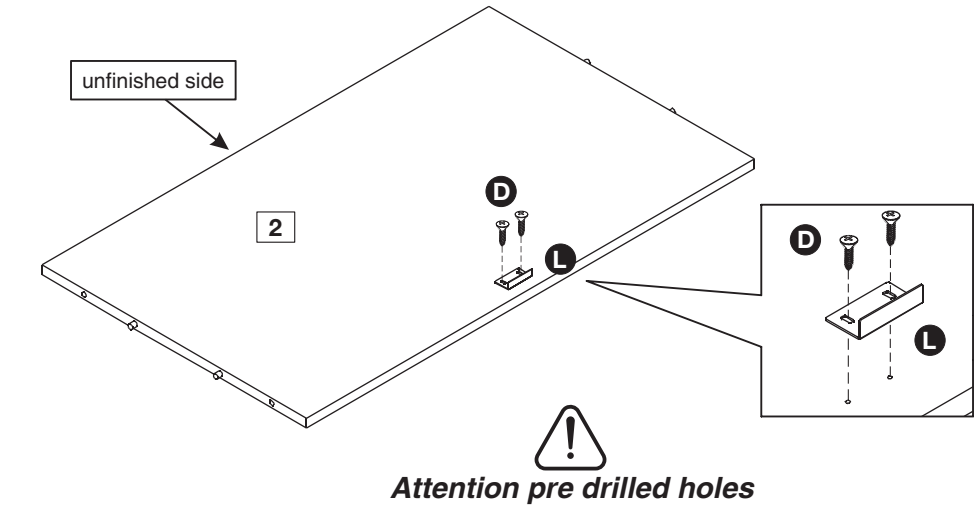

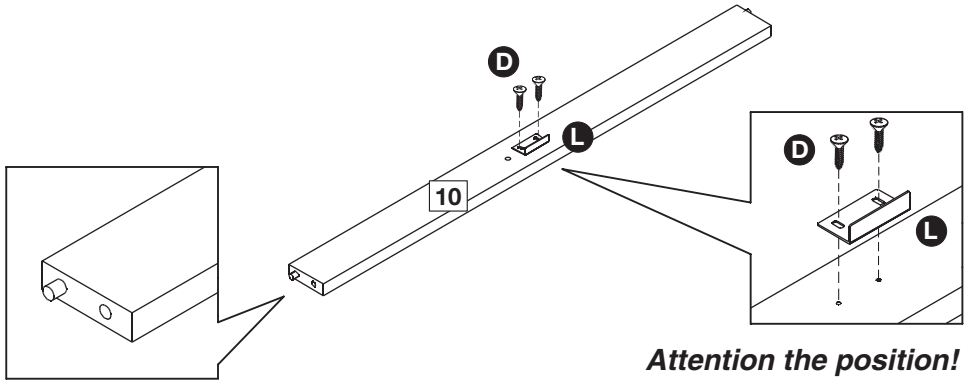

Step 7


Assembling the cabinet.

Fit parts 2 , 9 , 10 and 11 to left side panel 3 .

Insert 6 locking nuts B in the indicated parts.

Use a screwdriver to turn locking nuts B clockwise to lock.

Do not over tighten.

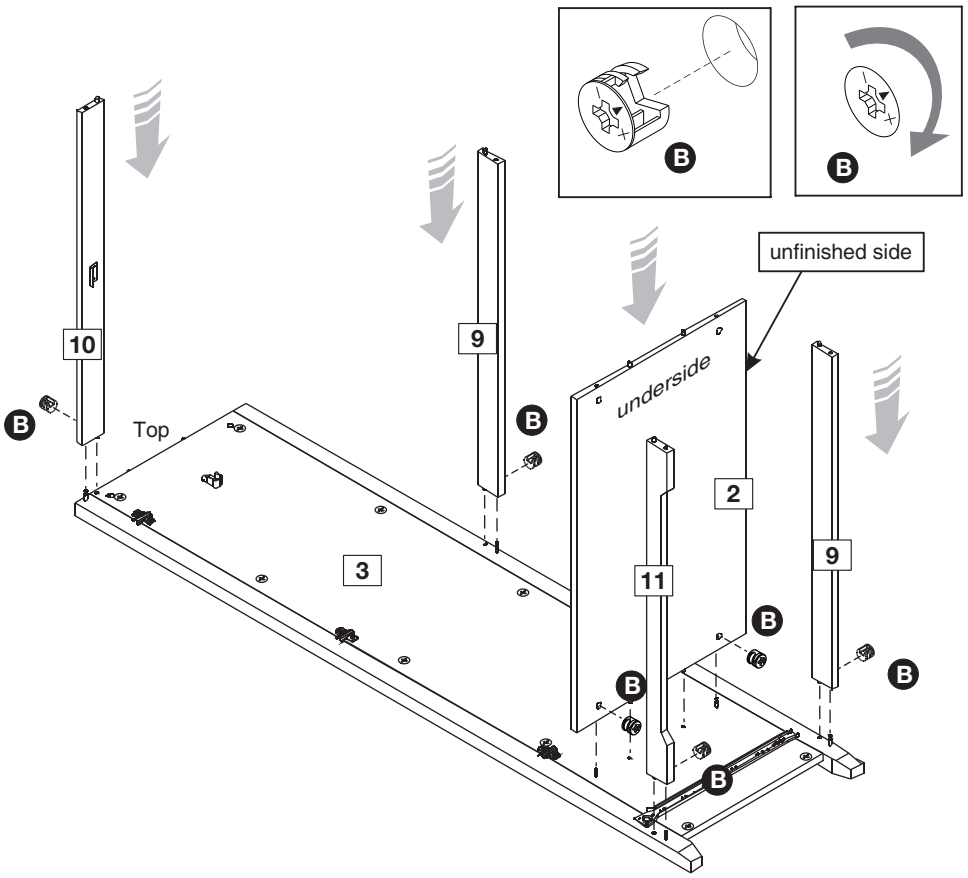

Step 8


Fixing right side panel.

Fit right side panel 4 on to cabinet.

Insert 6 locking nuts B in the indicated parts.

Use a screwdriver to turn locking nuts B clockwise to lock.

Do not over tighten.

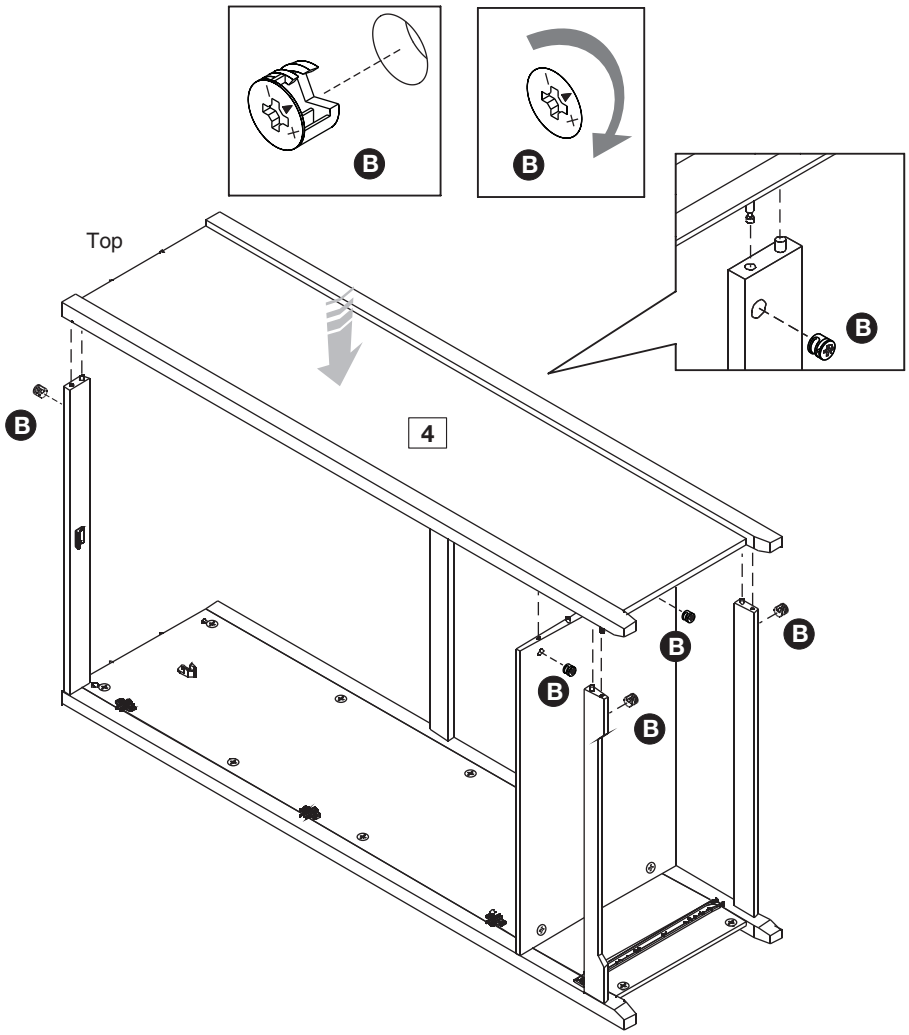

Step 9

Fixing the top panel.

With help, carefully turn the product with its face upwards.


Fit top panel 1 on to cabinet.

Insert 4 locking nuts B into side panels where shown.

Use a screwdriver to turn locking nuts B clockwise to lock.

Do not over tighten.

Fix top front rail 10 using screw K .

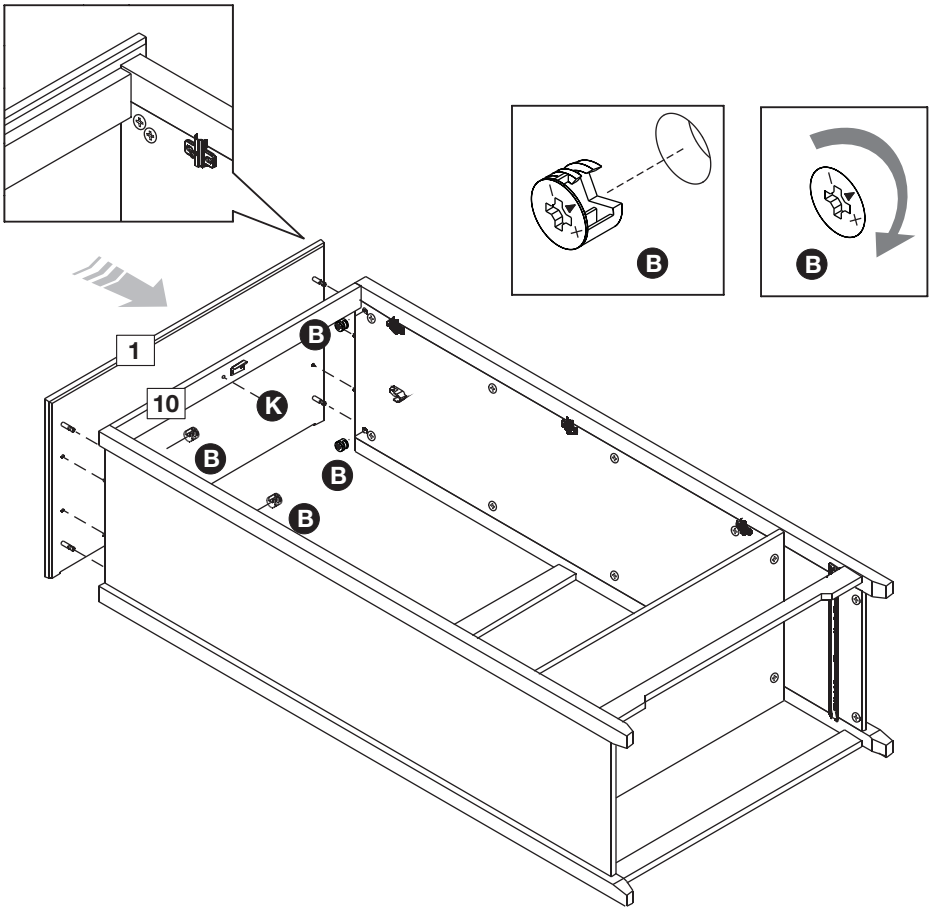

Step 10

Fixing back panel.

With help, carefully stand the product upright.


Important: Cabinet **MUST** be 'square' when back panels are attached.


a: Attach back panel 19 to the left side first using nails F .


b: Position H profile P onto back panel (just attach).


c: Carefully slot the second back panel 19 into profile and fix it to the cabinet using nails F .

Continued next page.

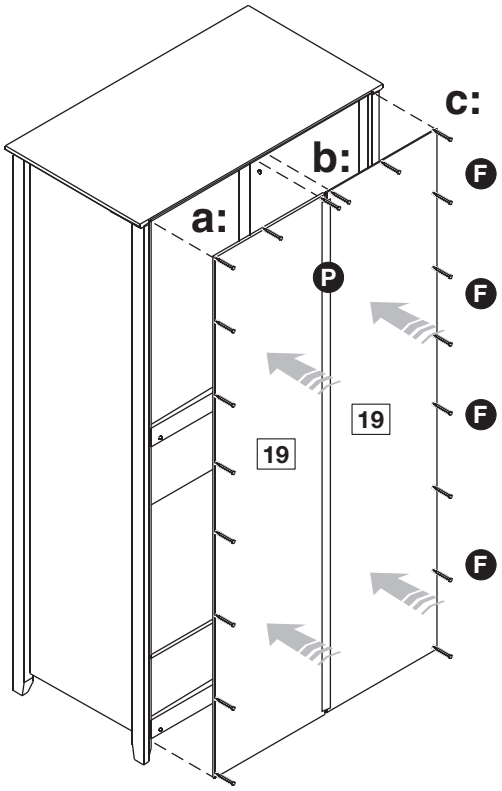

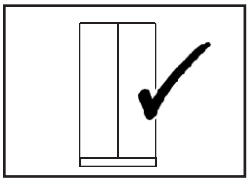

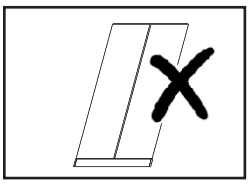


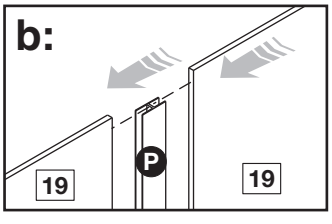


Step 10 - continued

Fix back panel 19 using nails F as shown.

Note: Attention to the measures.

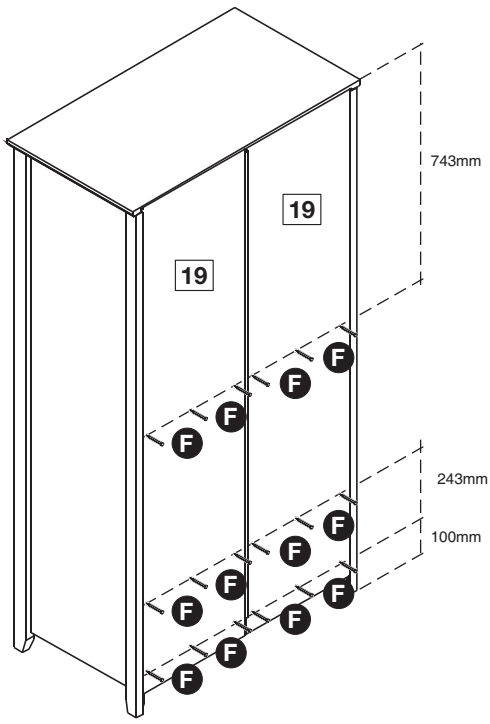


Attention the position!

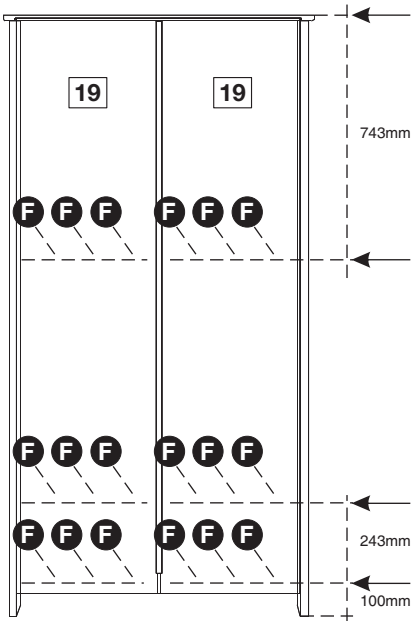

Step 11

Preparing the doors:


Fix door hinges M to the doors 18 using screws D.

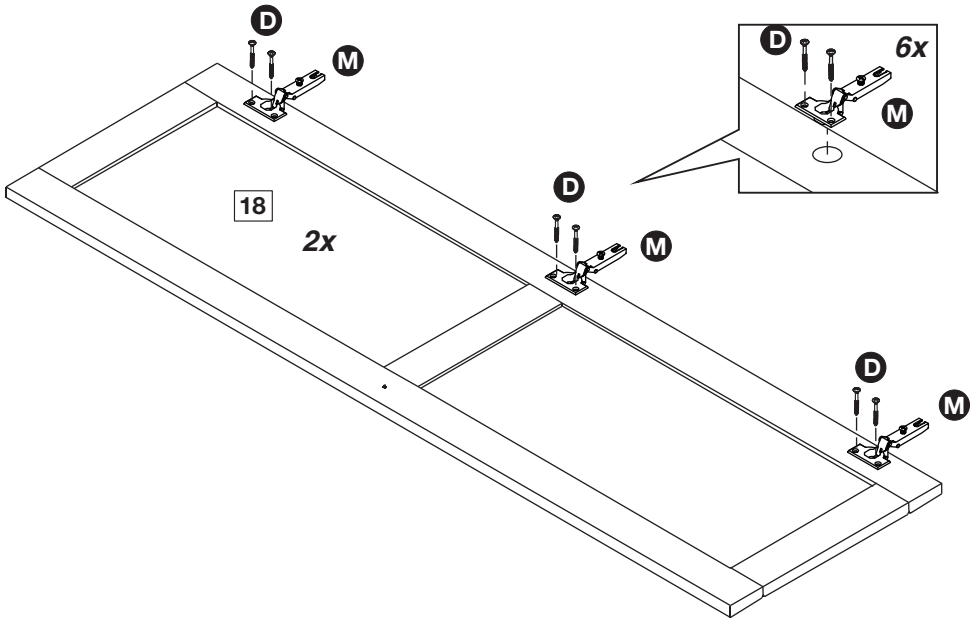

Step **12**

Attach handles.

Using bolts G attach handles O to the doors.

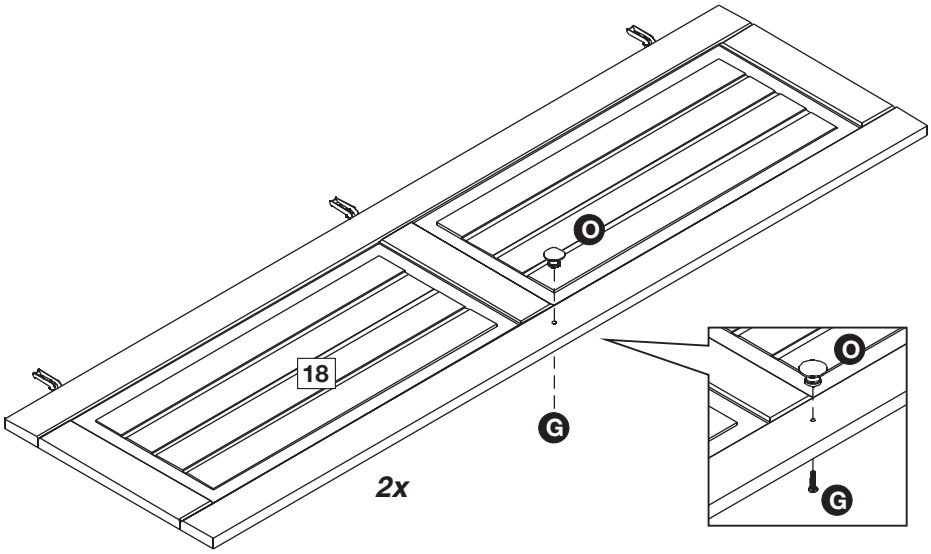

Step **13**


Assembling the drawers:


a: With help, fit drawer sides 14 and 15 to the drawer front 13 .

Insert 4 locking nuts B into drawer sides where shown.

Use a screwdriver to turn locking nuts B clockwise to lock.


Do not over tighten.

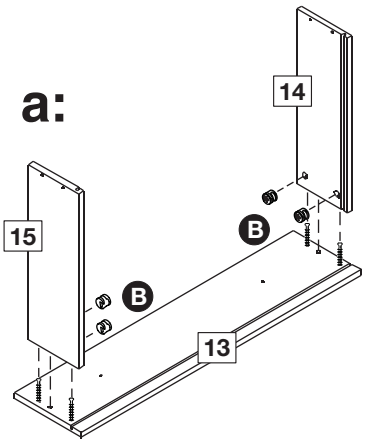

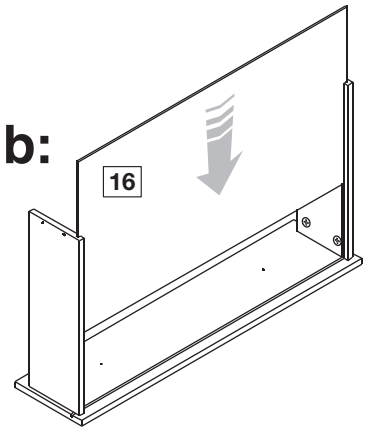



b: Slide drawer bottom 16 into slots on drawer sides.


c: Position drawer back 17 in place, then, press the drawer sides and fix using screws C.

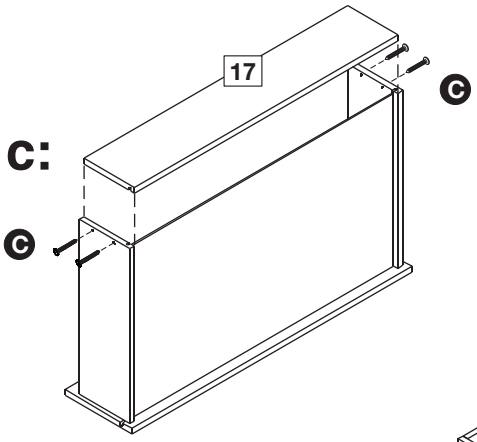

Using bolts G attach handles O to the drawer front.

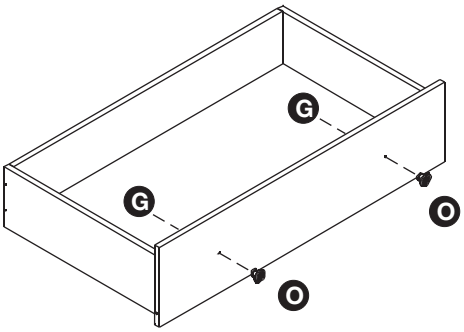

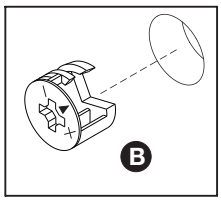

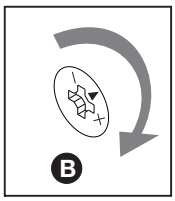


Step **14**


Fixing runners.

Attach right runner Ⓡ and left runner Ⓢ in the bottom edge of the drawer using screws Ⓔ.

Make sure runners are correctly positioned according to the diagram prior to fixing.

Correct position of the screws.

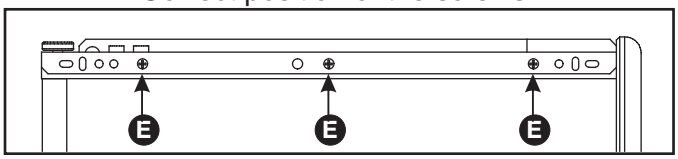


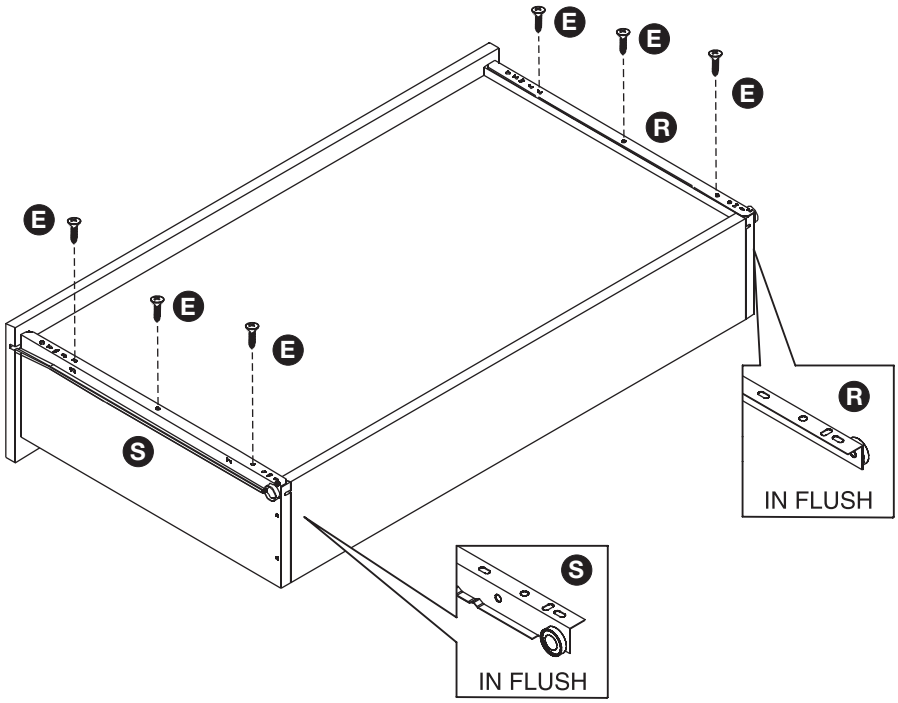

Step **15**

Hanging doors.

With help, slot doors hinges Ⓜ onto hinges plates Ⓝ and tighten screws. Hinge plates must be inserted in the screw in the back of the hinge.

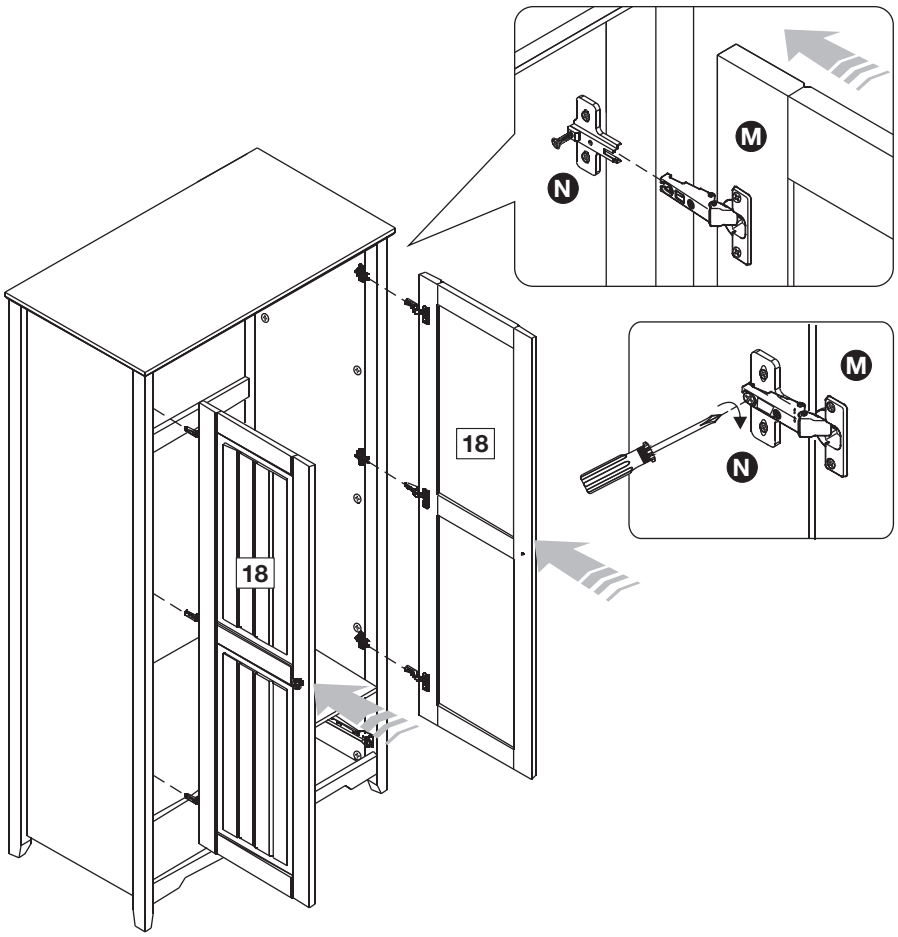

Continued next page.


Step **15** - continued


Hinge adjustment

a: To move doors up or down: loosen screws shown and move doors to suit.

Re-tighten screws.

a:

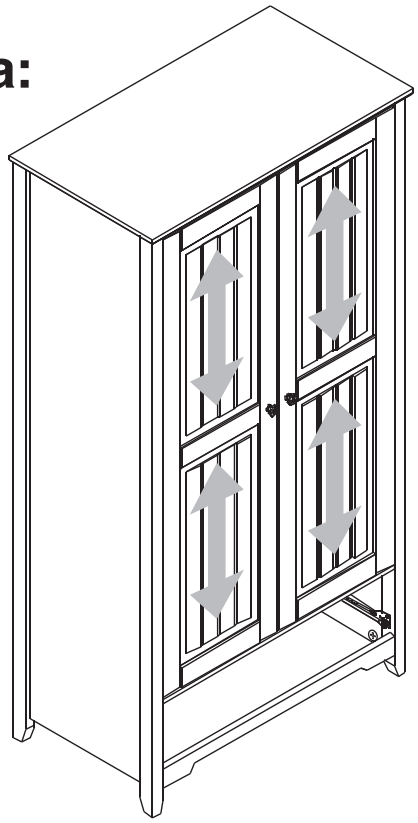


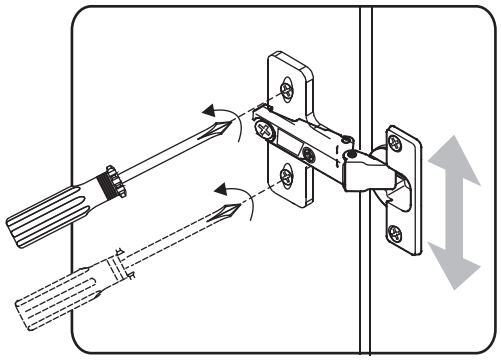


b: To move doors in or out: loosen screw shown and move doors to suit.

Re-tighten screws.

b:

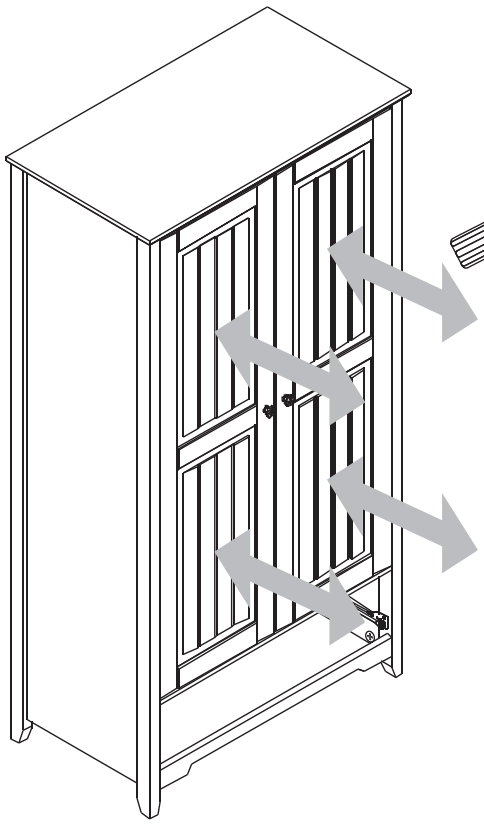

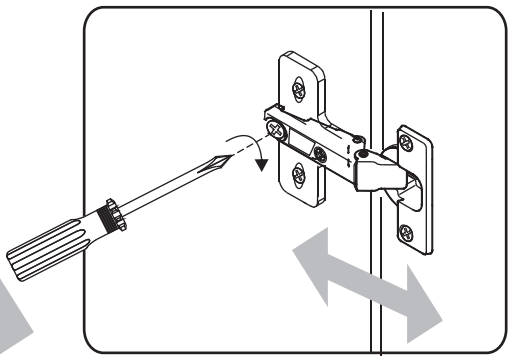


Continued next page.

Step **15** - continued

c: To move doors left or right: loosen screw shown and move doors to suit.


Re-tighten screws.

c:

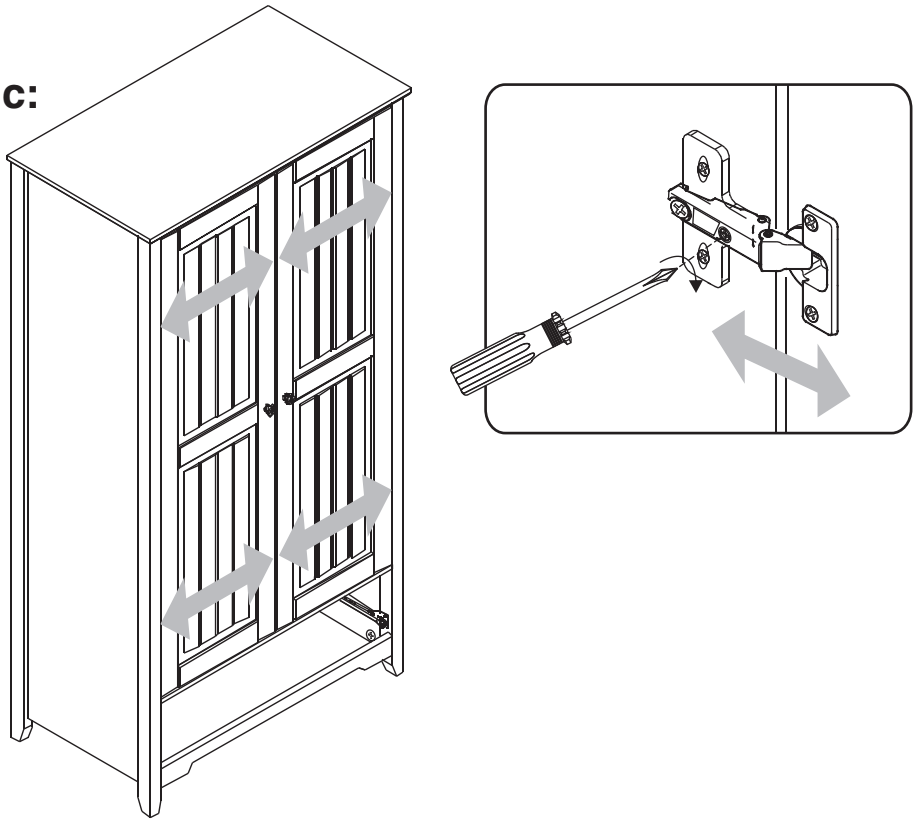


Step **16**


Place hanging rail 12 into the supports within the cabinet as shown.

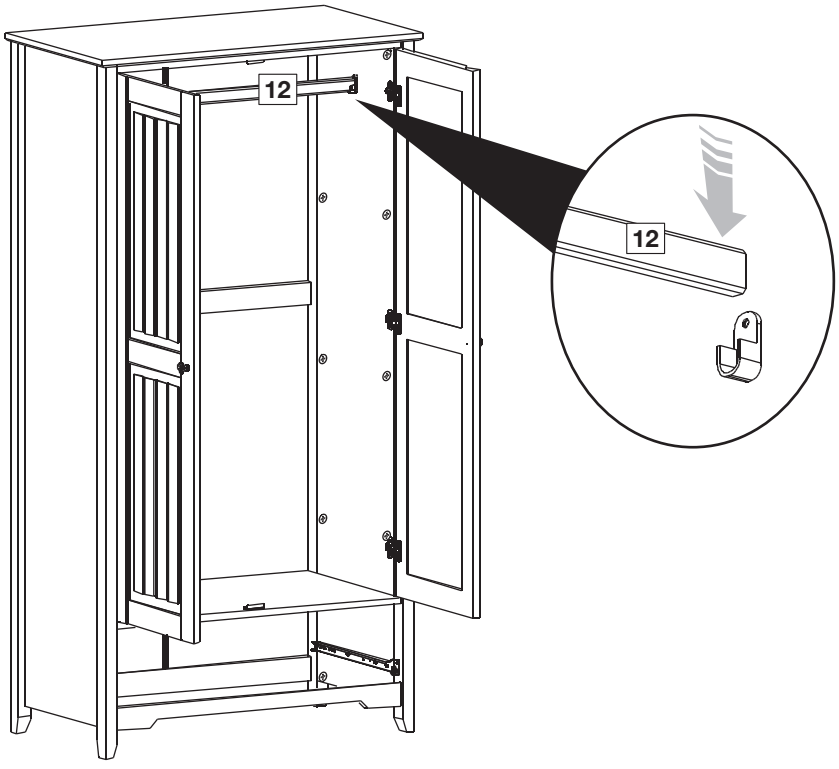

Step **17**

Hook the wheels of the runners on the back of the drawers over the wheels of the runners on the left and right sides, then hold the drawers level and slide backwards into position.

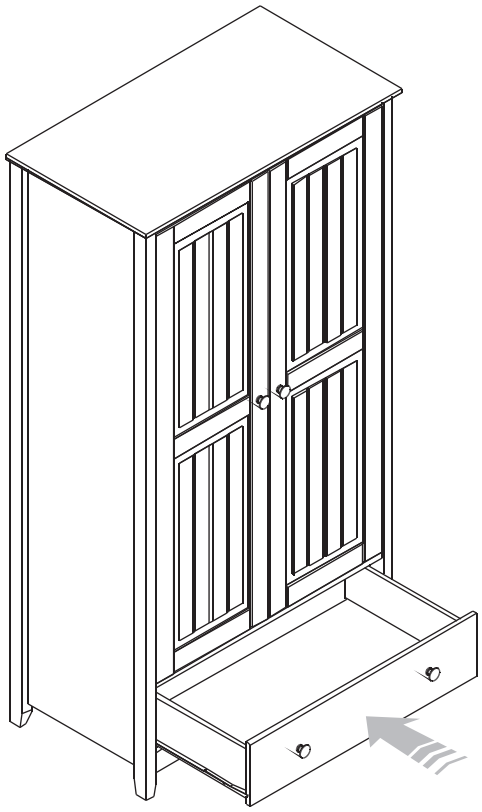


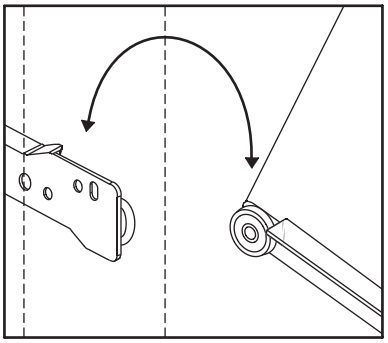


Step **18**

Fixing to wall.

Furniture must be fixed to a wall. Fix wall strap **I** to top of furniture using washer **J** and screw **D**. With help, move furniture into position.

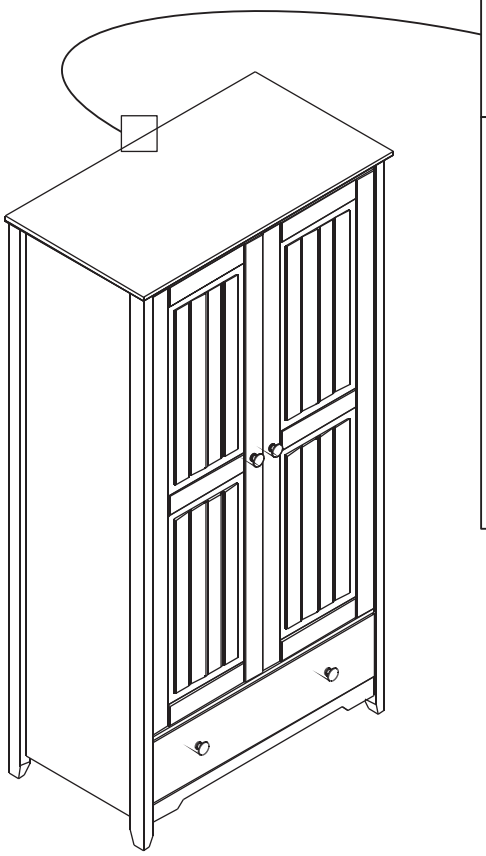

Note: Wall plugs not supplied. The correct type of fxing must be used for your wall, seek professional advice if in doubt.

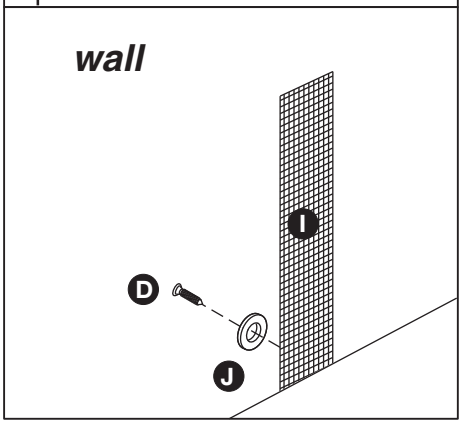


Assembly is complete.

If you need help or have damage or missing parts, call the **Customer Helpline: 03456 400 800**

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

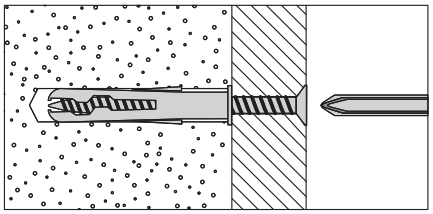


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

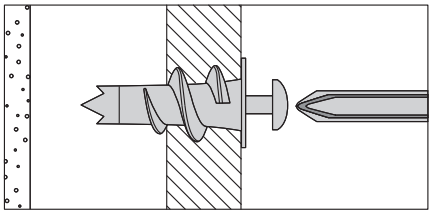


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

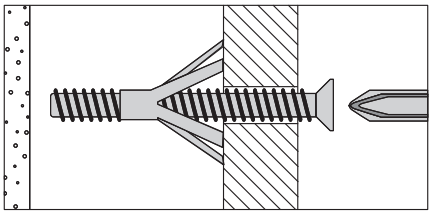


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

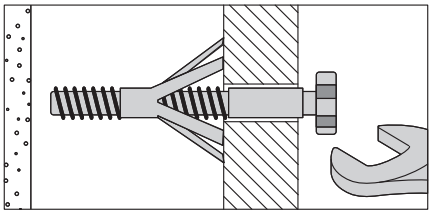


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

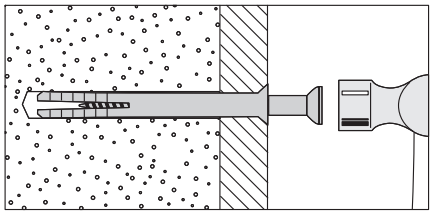

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

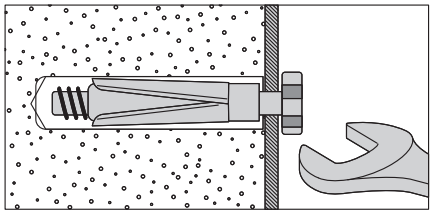

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.