
# Cheshire 2 door 1 drawer wardrobe

**Assembly Instructions** - Please keep for future reference | 4046699

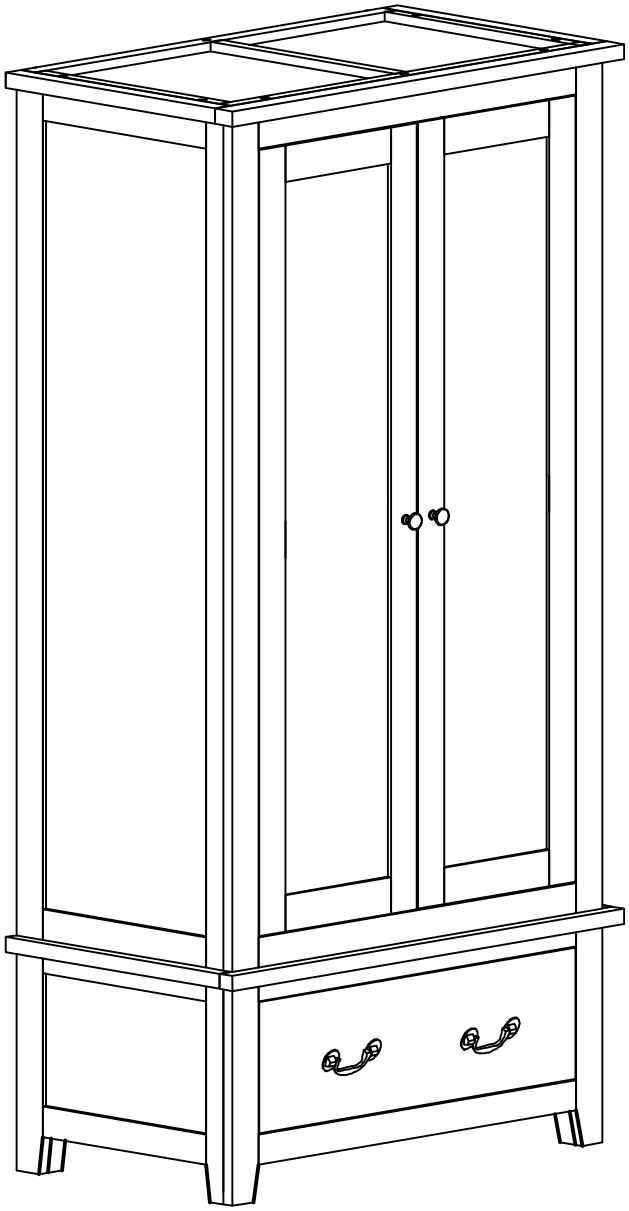

## Dimensions

Width - 90 cm
Depth - 52 cm
Height - 183 cm

**Important** - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 640 0800**

issue 1 - 29 04 15

# Safety and Care Advice

## Important - Please read these instructions fully before starting assembly

◦ Check you have all the components and tools listed on pages 2 and 3.

◦ Remove all fittings from the plastic bags and separate them into their groups.

◦ Keep children and animals away from the work area, small parts could choke if swallowed.


◦ Make sure you have enough space to layout the parts before starting.

◦ Do not stand on the product, this could cause damage.

◦ Assemble the item as close to its final position (in the same room) as possible.

◦ Assemble on a soft level surface to avoid damaging the unit or your floor.

◦ Parts of the assembly will be easier with 2 people. Look for this logo.

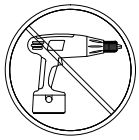

◦ We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.

◦ Dispose of all packaging carefully and responsibly.

## Solid Wood / Real Wood Veneers

- This product has been finished using natural materials. As a living material, you may notice some variation in the grain and colour shade between the different components.
- Unlike a synthetic or man-made material which has a uniform finish, a feature of natural wood is its variation in grain and colour. We wish to reassure you that this is quite normal and is not the result of any manufacturing fault.
- Where sheets of wood are joined together, a line may be detected. Again, this is normal and is not an imperfection.
- Nature wood and veneers often have random pale markings in the grain, there are medullary rays which are a natural unique feature of the wood.


## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- Always use a non-silicone based furniture polish. Silicone in furniture polishes can break down the lacquer finish.
- Use non-silicone bees wax to maintain the shine. Do not use furniture polish.
- Do not put hot dishes directly on the surfaces of the item.
- From time to time check that there are no loose screws on this unit.
- Any spills should be removed immediately with a soft clean damp cloth and dried immediately.
- Avoid keeping furniture in direct sunlight or close to any heat sources as this can cause cracking, discoloration or warping.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.
- Ensure the product is protected with mats and coasters when items are placed on the surfaces, to prevent scratching or demage.
- Never drag pieces of furniture across the floor as this will cause damage to the joints.


# Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 0345 640 0800**


## Please check you have all the parts listed below

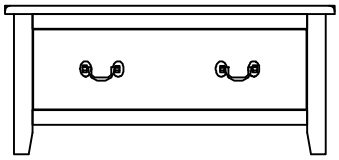


**1** Base (90 x 40.5 cm)

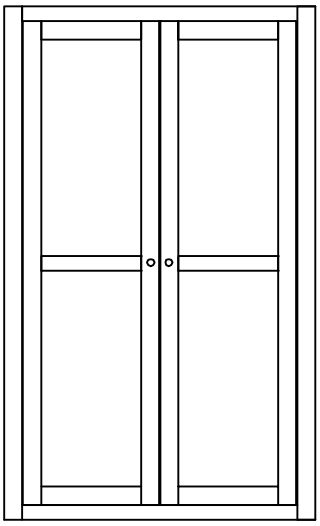


**2** Front panel
(85 x 140.2 cm)

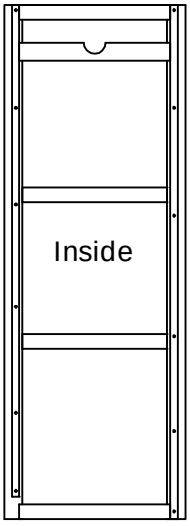


**3** Side panel (Right)
(49.5 x 140.2cm)

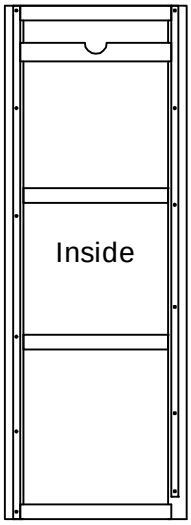



**4** Side panel (Left)
(49.5 x 140.2 cm)

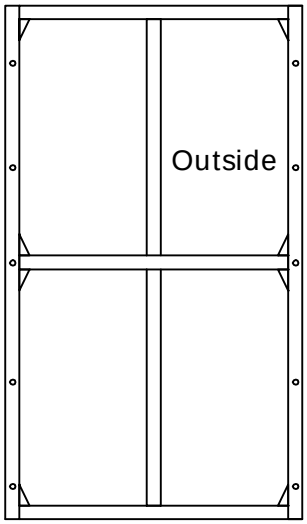


**6** Back panel
(81 x 140.2 cm)



**5** Hanging rail
(83 x 3 cm)

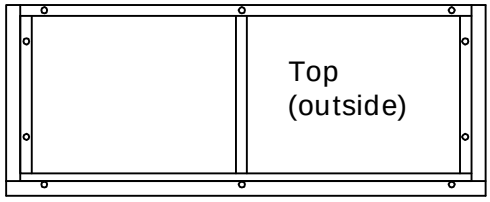





**7** Top panel
(90 x 52 cm)

# Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 0345 640 0800**

## Please check you have all the fittings listed below

***Note:*** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

| | | |
|---|---|---|
| A  M6x35 Bolt X 30 | B  M4X15 Screw X 2 | C  M4x40 Screw x 3 |
| D  M4x25 Screw X 2 | E  Handle x 2 | F  M6.5 Washer x 22 |
| G  Allen key x 2 | H  Wall strap x 2 | I  M4x25 Screw x 2 |

## Tools required




Phillips screwdriver



Ruler/tape measure

## Ruler - Use this ruler to help correctly identify the bolts



# Assembly Instructions

## Step 1

**Assembling side panels**


With help, carefully lay front panel 2 face down onto the floor.


***Warning:*** Front panel 2 is heavy. Lift with care. Also beware of the doors opening!

With help, assemble side panels 3 and 4 to front panel 2 using fixings A and F as shown.

***Note:*** Ensure hanging rail slots in both panels are correctly aligned at the top.



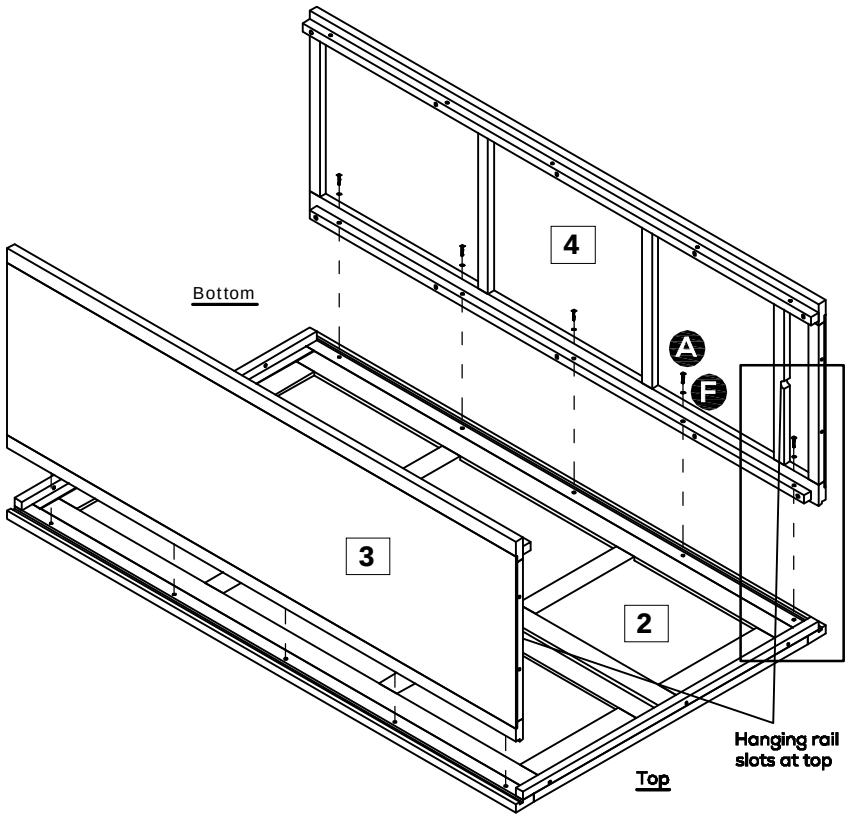

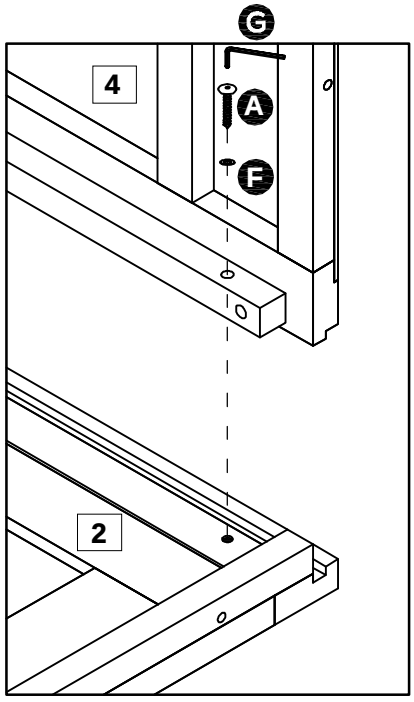
# Assembly Instructions


## Step 2

**Assembling back panel**

With help, assemble back panel 6 to side panels 3 and 4 using fixings A and F.



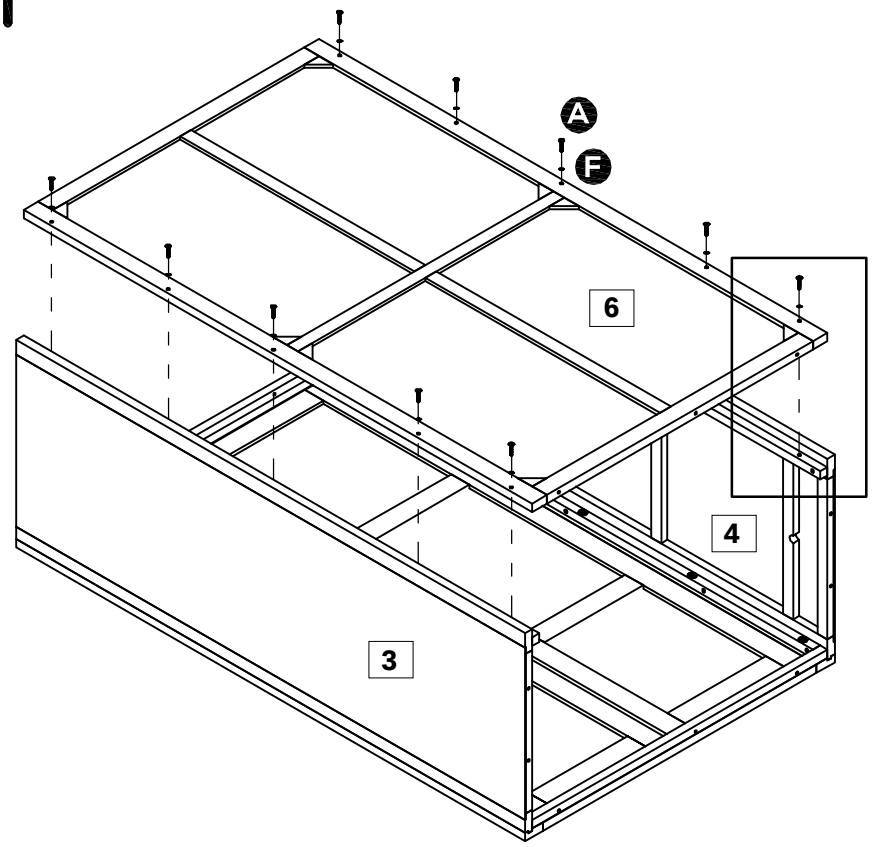

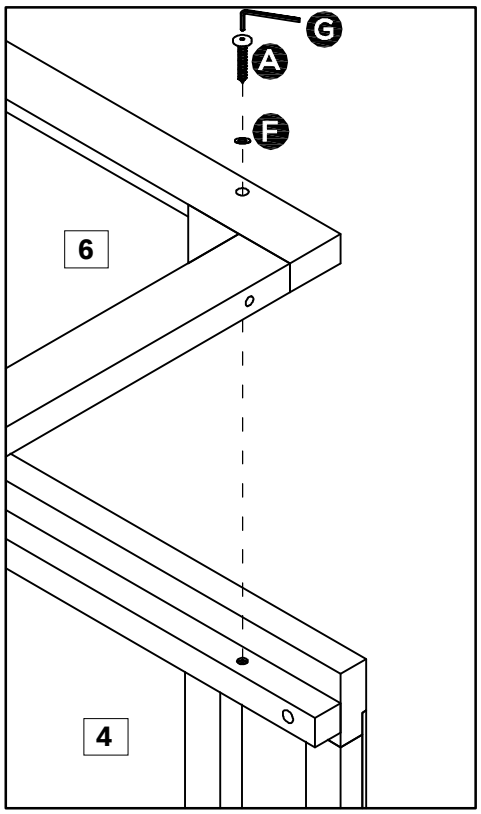



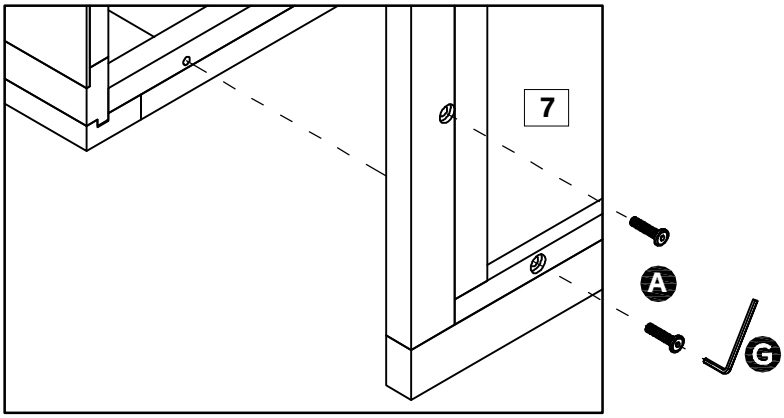
# Assembly Instructions

## Step 3

**Assembling top panel**

Carefully locate top panel 7 into position and secure using fixings A .

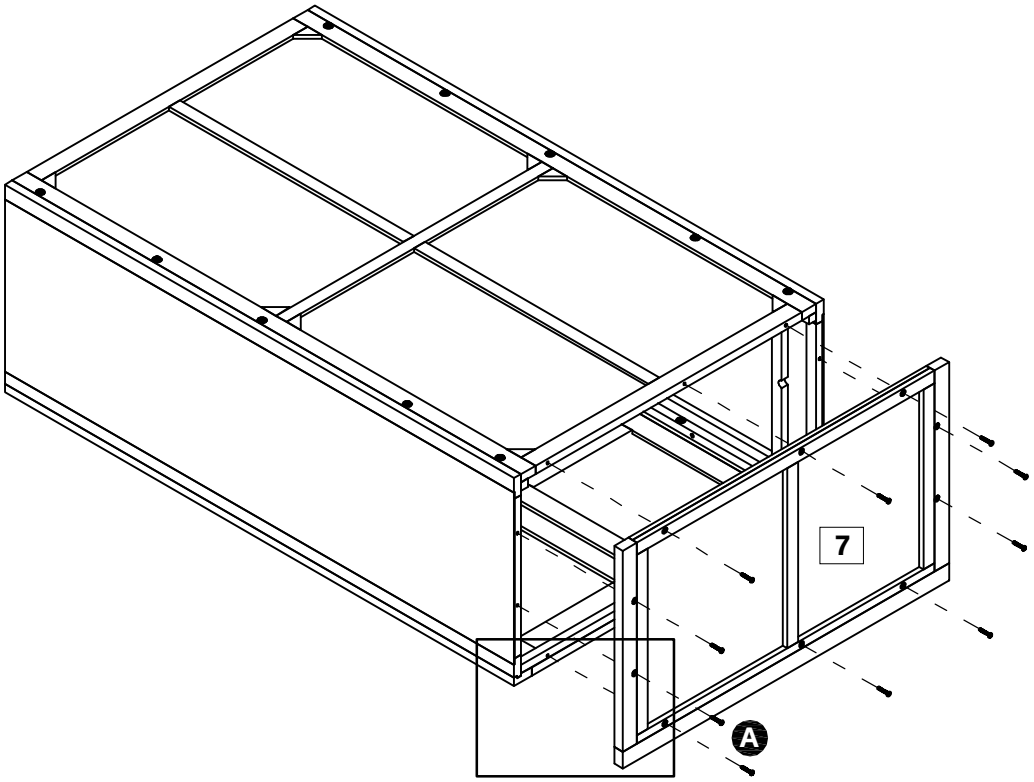





# Assembly Instructions

## Step 4

**Locating hanging rail**

Locate hanging rail [5] into the slots in the side panels as shown.

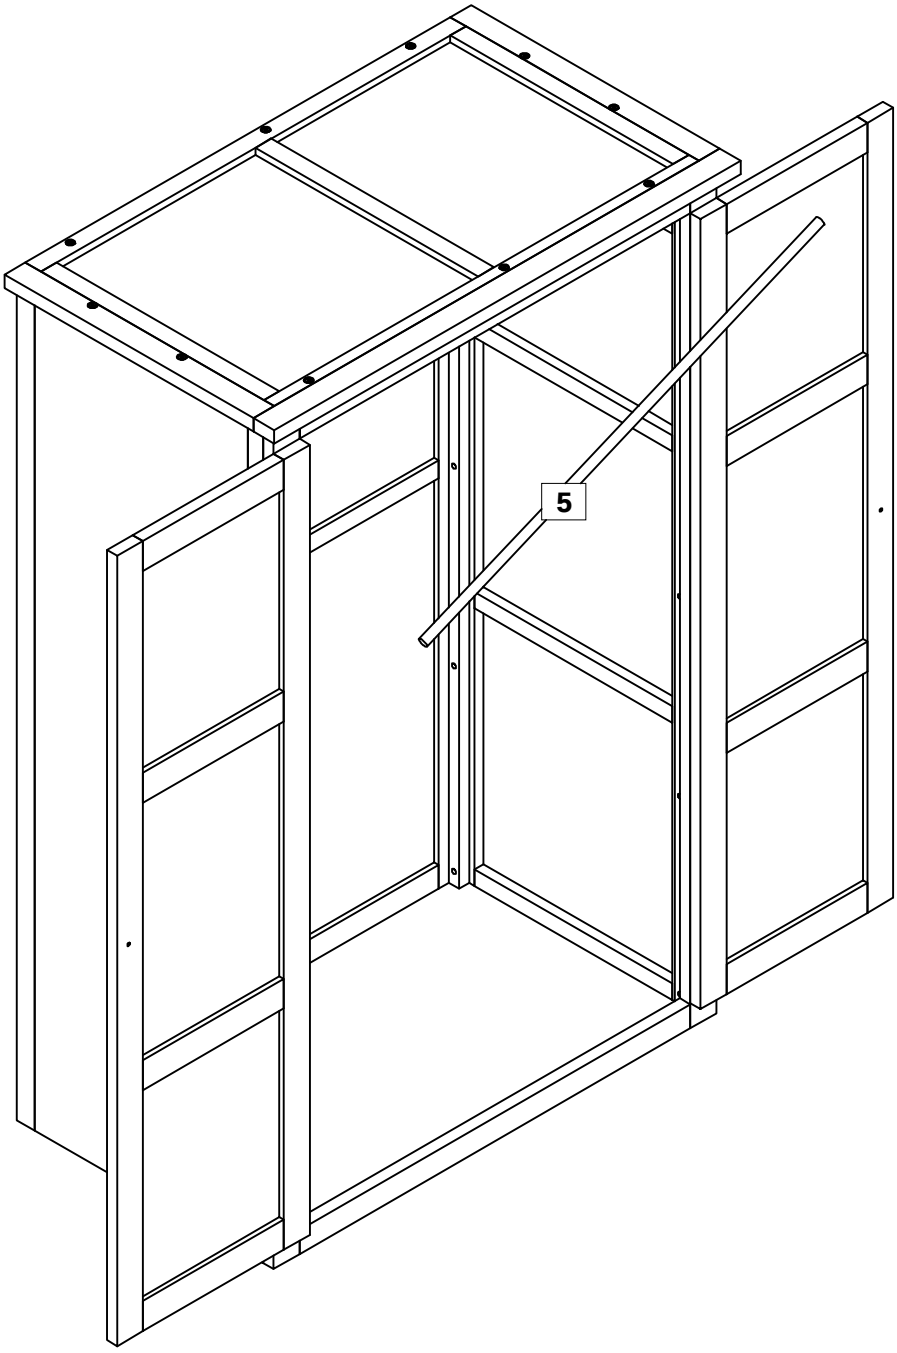

# Assembly Instructions

## Step 5

**Locating upper unit onto base**


With help, carefully locate the upper unit into position on top of base 1 .


***Warning:***
The wardrobe is heavy. Lift with care to avoid injury. Also beware of opening doors.

Carefully align both units equally at both sides and flush at the back.

Secure the two units together using screws B as shown.



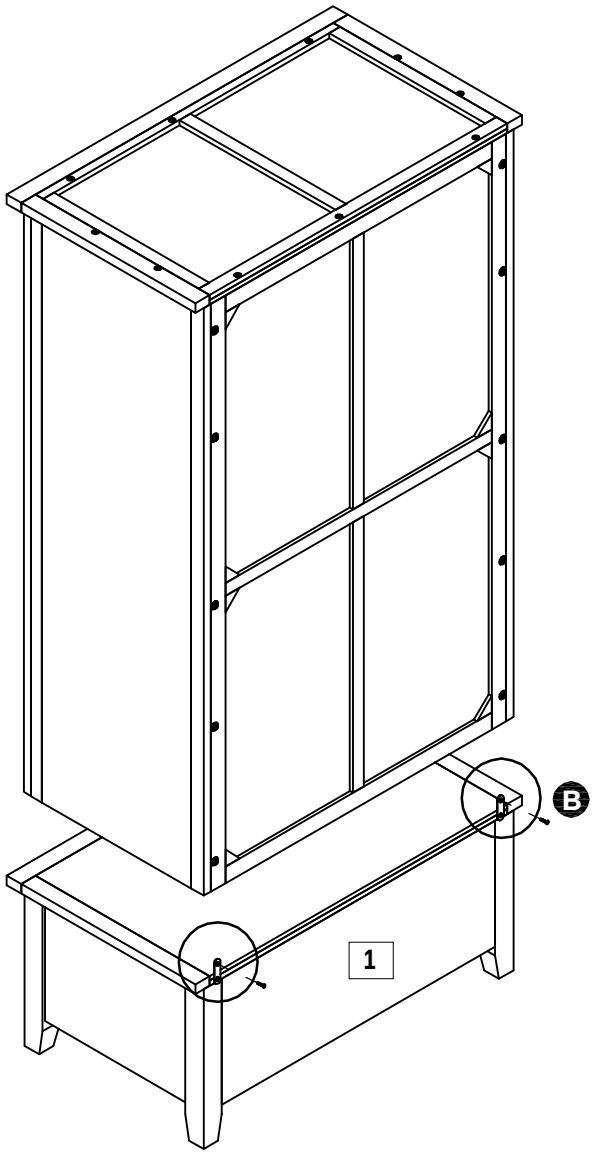

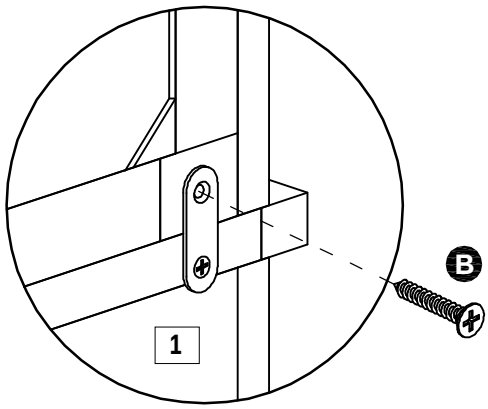
# Assembly Instructions


## Step 6

**Securing upper unit**

Open both doors as shown.

Further secure the upper unit using screws C as shown.

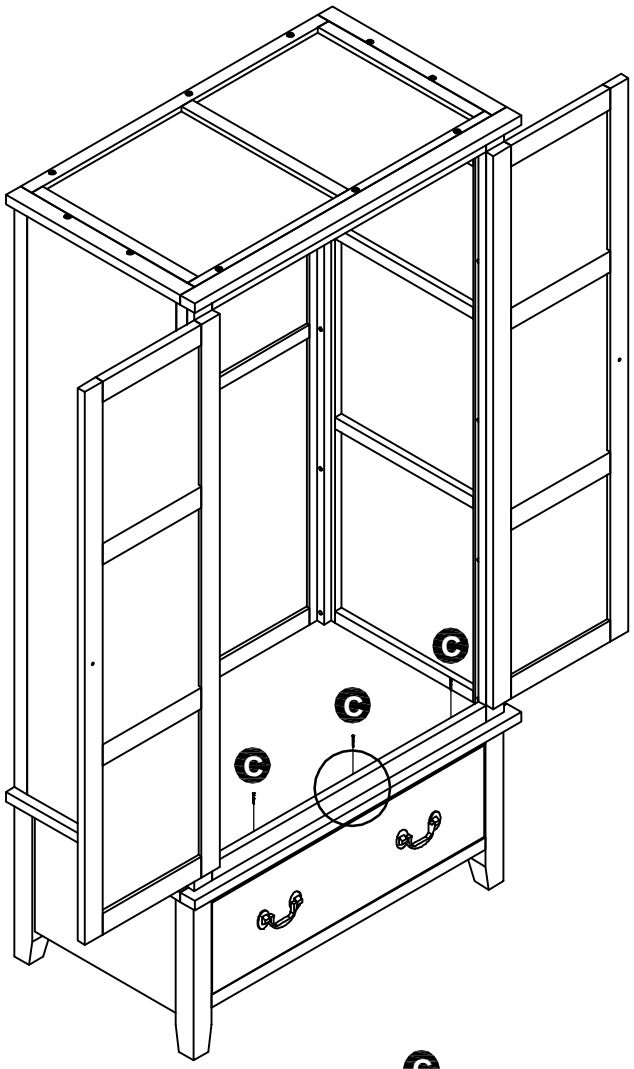

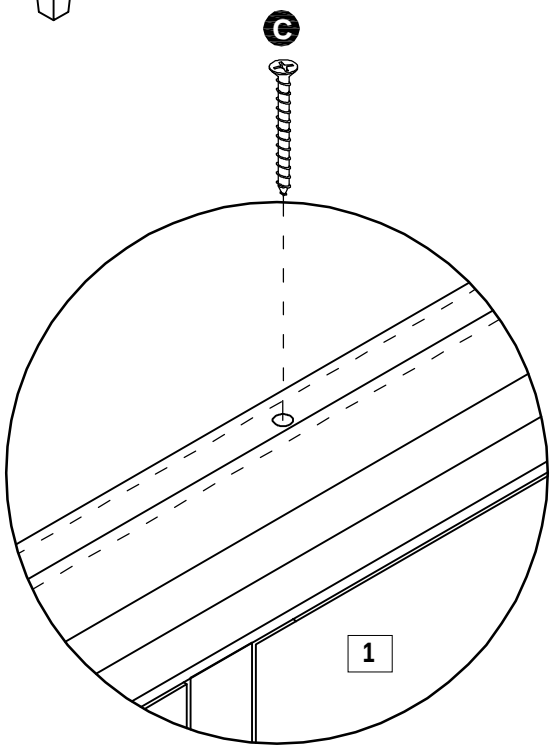



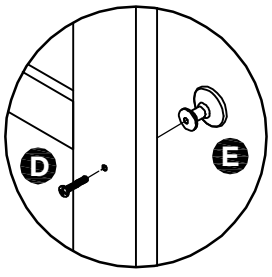
# Assembly Instructions

## Step 7

**Assembling handles**

Assemble handles E to doors using screws D.

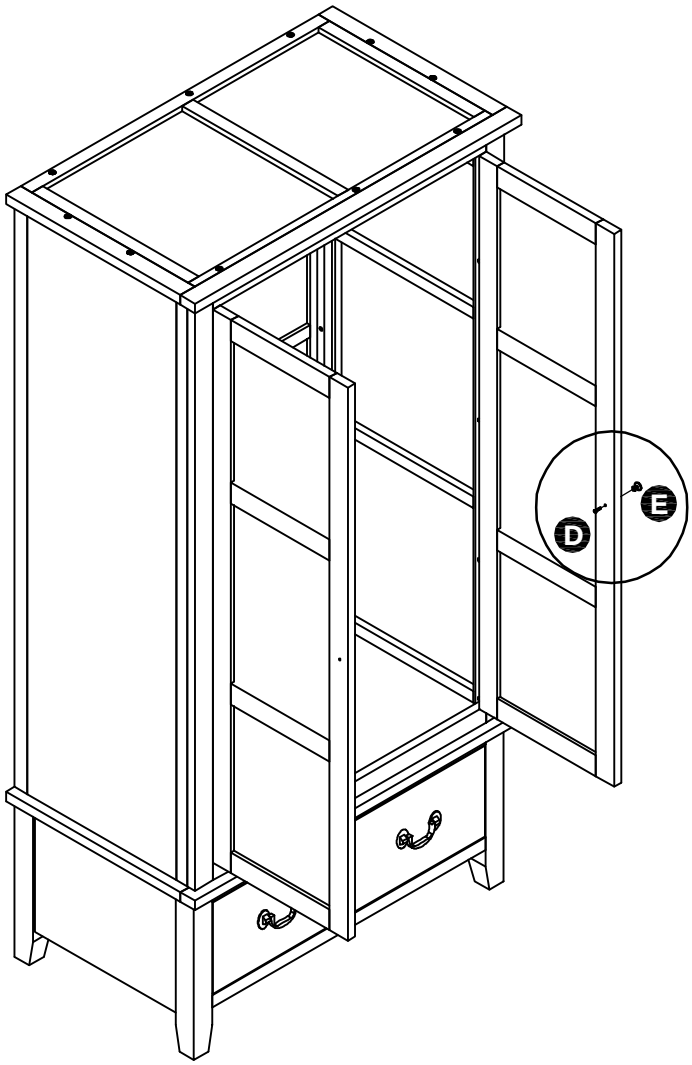

# Assembly Instructions

## Step 8



**Fixing to the wall**

It is recommended that the unit is fixed to the wall to ensure stability.

Assemble wall straps (H) to the back of the unit using fixings (I) and (F).

With help, move the unit to the desired location. Mark the fixing hole locations on the wall and remove the unit.


Drill the wall and fit suitable plugs for your wall type.

***Note:*** Wall plugs are not supplied.

***Warning:*** Before drilling. Check the wall for hidden pipes or cable.

Re-position the unit and secure the wall straps to the wall.

***Note:*** Screws are not supplied.

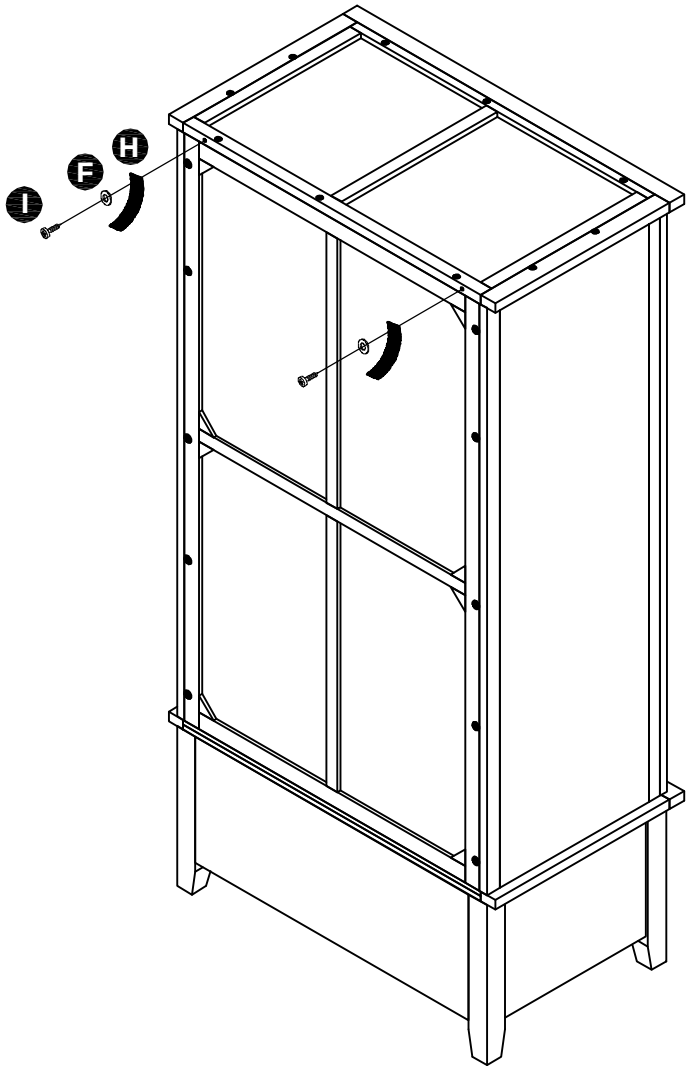


**Assembly is complete**

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 640 0800**
**Home Retail Group, 489-499 Avebury Boulevard, Saxon Gate West. Central Milton Keynes MK9 2NW**