
elmley solid oak media ladder shelf

Assembly Instructions - Please keep for future reference | 404/8790

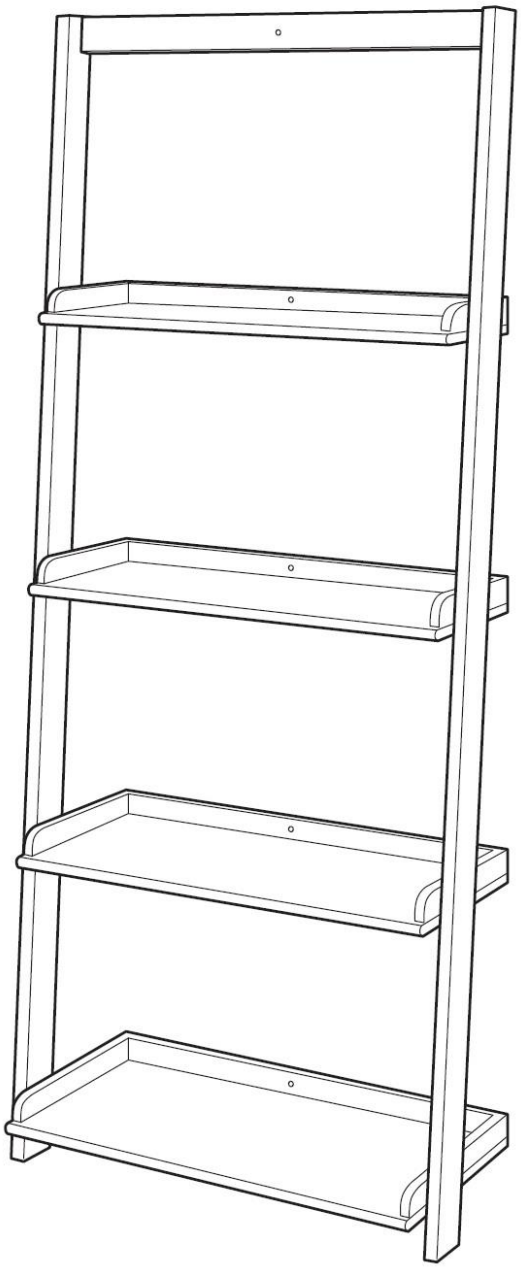

Dimensions

Width - 63.5 cm
Depth - 26.5 cm
Height - 169 cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 640 0800

Issue 2 - 27/7/2015

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

Warning : Do not use this item as ladder.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.

• Regularly check and ensure that all bolts and fittings are tightend properly.


Components - Parts

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 640 0800**

Please check you have all the parts listed below




1 Leg x 2 (170 x 6 x 1.6 cm)




2 Top Rail (60 x 4.8 x 1.6 cm)




3 Top Shelf (60 x 16.5 x 4.6 cm)



4 Second Shelf (60 x 18.2 x 4.6 cm)

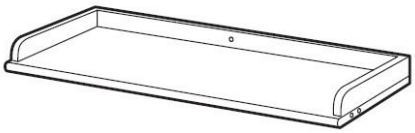

5 Third Shelf (60 x 22.4 x 4.6 cm)


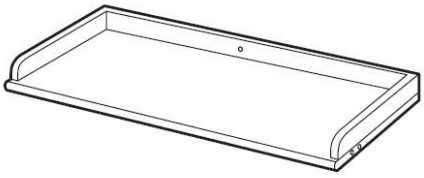


6 Bottom Shelf (60 x 26.6 x 4.6 cm)


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 	B 	C 	D 
Bolt x 10	Dowel x 10	Screw x 5	Wall plug x 5

Tools required



Phillips screwdriver


Assembly Instructions

Step 1

Attaching shelves and top rail

Attach the leg 1 to top rail 2, shelves 3, 4, 5 and 6 by inserting dowels B into holes as shown.

Then fix bolts A through the holes and tighten using a phillips screwdriver.

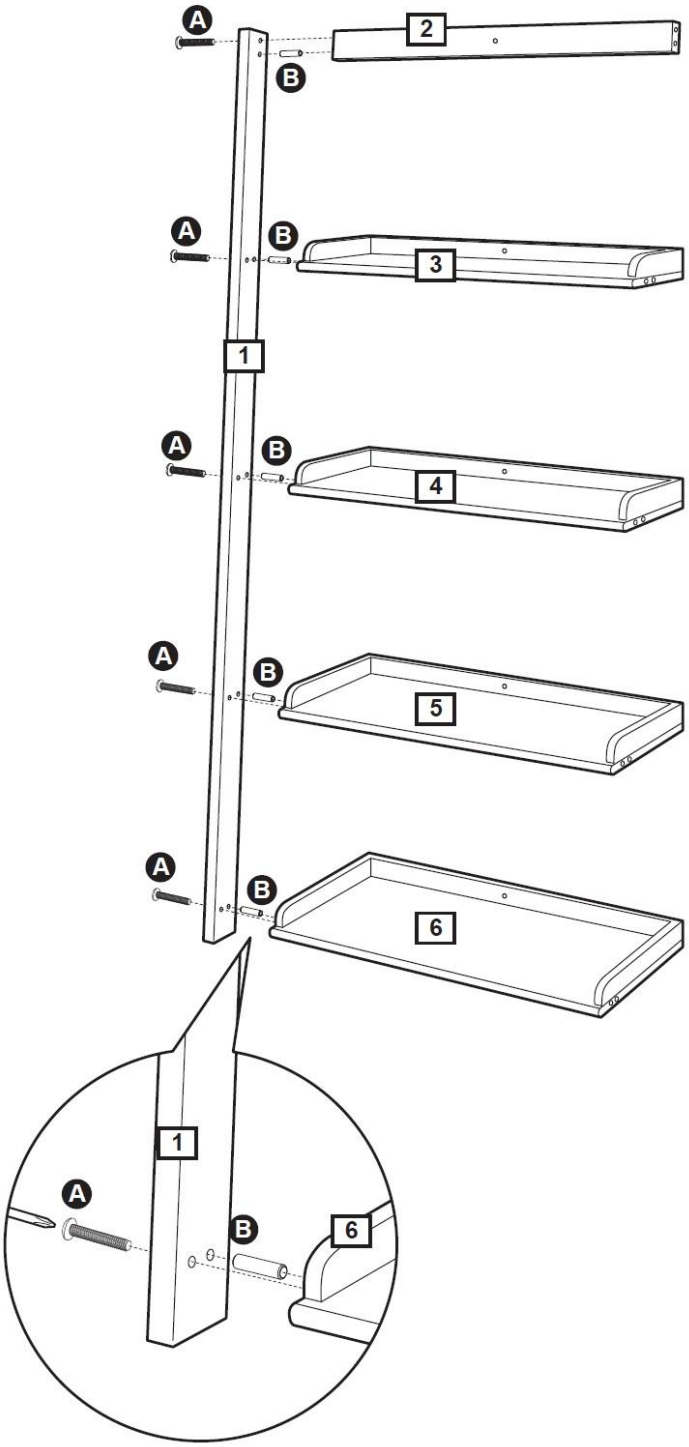


Step 2

Attaching other leg

Attach the other leg 1 to top rail 2, shelves 3, 4, 5 and 6 by inserting dowels B into holes as shown.

Then fix bolts A through the holes and tighten using a phillips screwdriver.

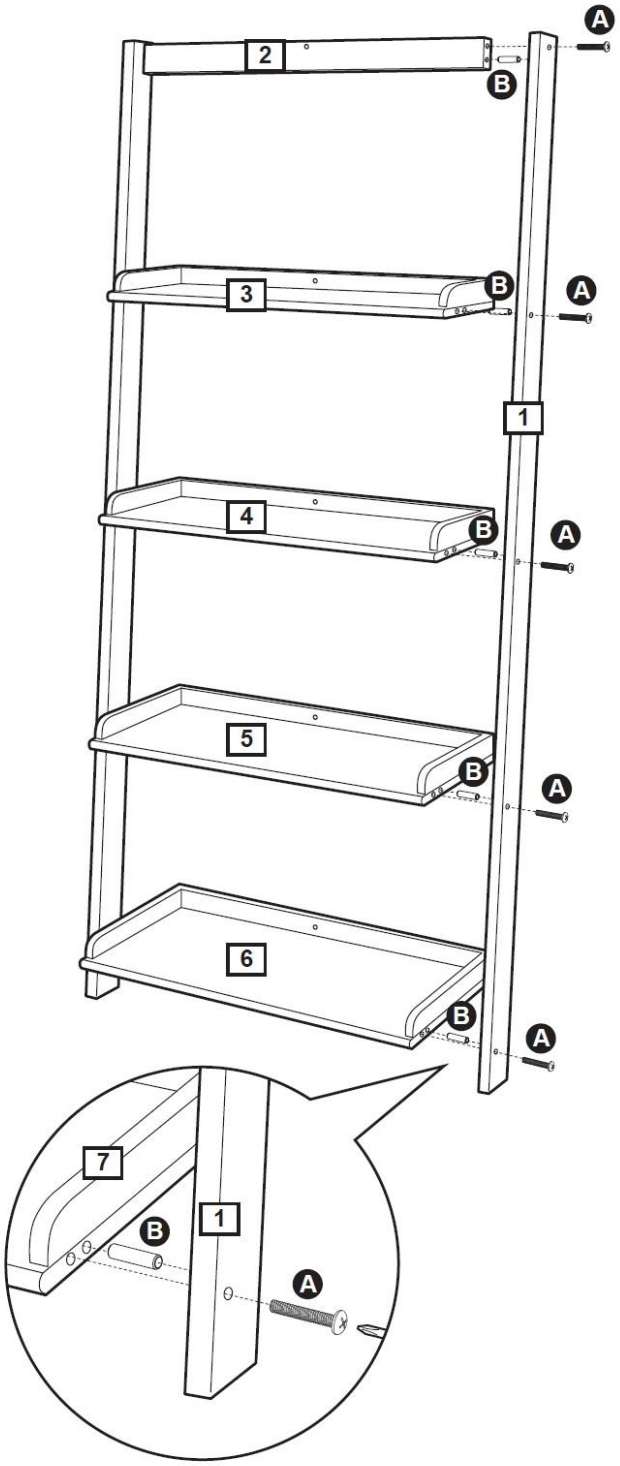

Step 3

Fixing to wall

The shelf must be fixed to a wall.


Move the shelf into position on the wall. Mark fixing hole on wall aligned to the holes on the rail 2 & shelves 3, 4, 5, 6 then remove shelf. Drill 7mm hole and insert wall plug D.

Note: Before drilling, check wall for hidden pipes and cables.

Reposition the shelf and fix screws C through holes on the shelves as shown. Tighten screws using a phillips screwdriver.

Note: Wall plugs supplied are for solid walls only. The correct type of fixing must be used for your wall, seek professional advice if in doubt.

Assembly is complete.

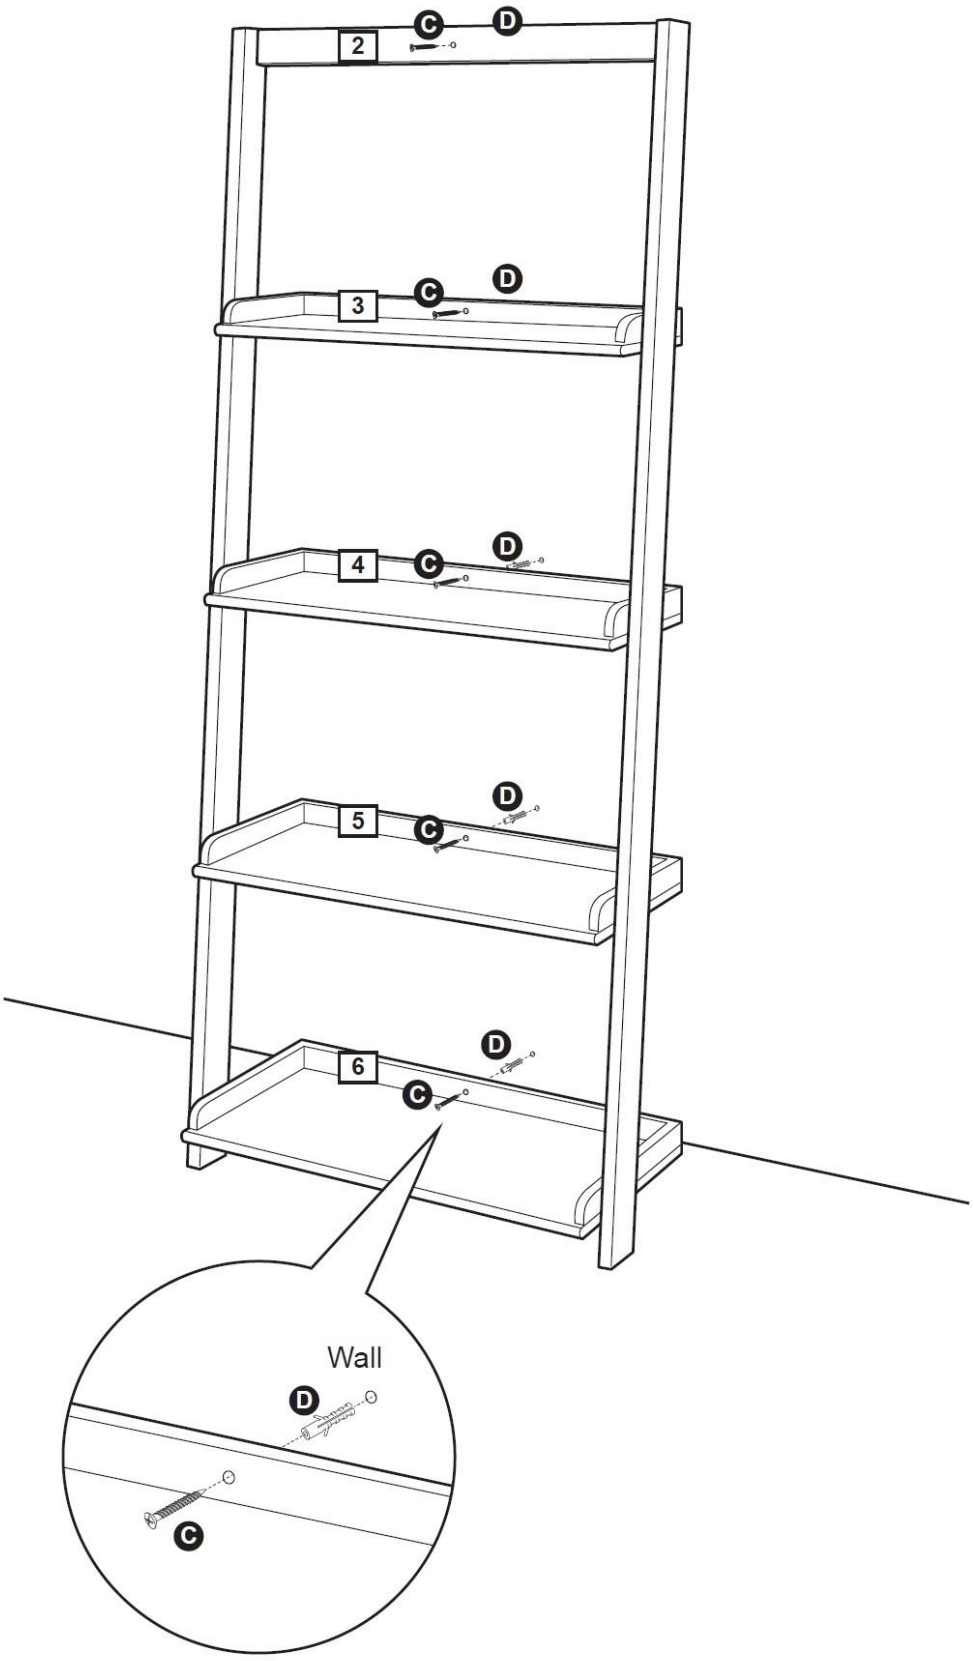

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 640 0800

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fxings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.

Hints:

1: ***General rule***: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well ftted and are a tight ft in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "**General Purpose**" **wall plug**

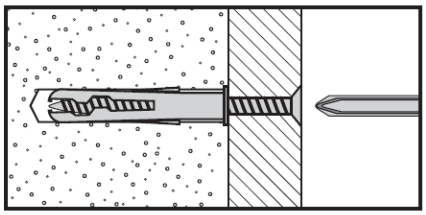


Generally aerated blocks should not be used to support heavy loads, use a specialist ftting in this case. For light loads, general purpose wall plugs can be used.

No.2 "**Plasterboard**" **wall plug**

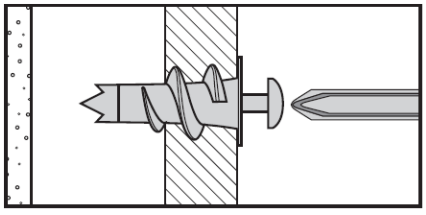


For use when attaching light loads on to plasterboard partitions.

No.3 "**Cavity Fixing**" **wall plug**

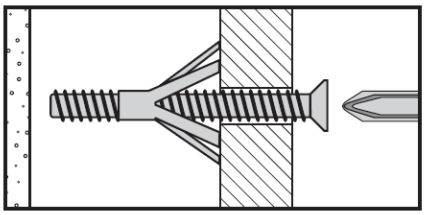


For use with plasterboard partitions or hollow wooden doors.

No.4 "**Cavity Fixing-Heavy Duty**" **wall plug**

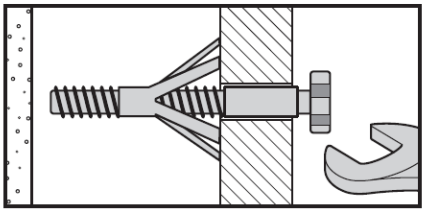


For use when ftting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "**Hammer Fixing**" **wall plug**

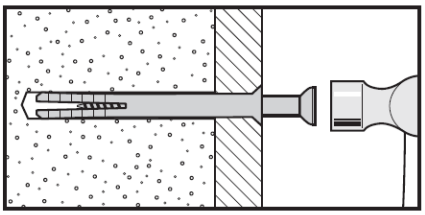

For use with walls stuck with plasterboard. The hammer fxing allows it to be fxed to the wall rather than the plasterboard. Always check the fxing is secure to the retaining wall.

No.6 "**Shield Anchor**" **wall plug Heavy loads**

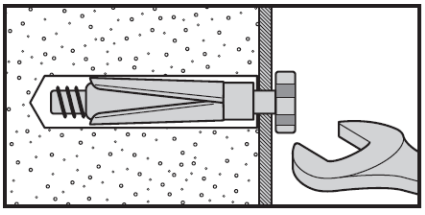

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the ftting and location to ensure your safety in and around the home.

Fitting: From time to time check the ftting to ensure the wall plugs or screws do not become loose.

Revision 2 - 7/10/09