Grafton - 3 Drawers Chest

Assembly Instructions - Please keep for future reference

397/7697

408/6295



Dimensions

Width - 83cm
Depth - 43cm
Height - 86cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400 800**

Issue 1 - 05/05/15

Safety and Care Advice

Important – **Please read these instructions fully before starting assembly**

· Check you have all the components and tools listed on pages 2 and 3.

· Remove all fittings from the plastic bags and separate them into their groups.

· Keep children and animals away from the work area, small parts could choke if swallowed.


· Make sure you have enough space to layout the parts before starting.

· Assemble on a soft level surface to avoid damaging the unit or your floor.

· This product contain Natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

· Do not stand or put weight on the product, this could cause damage.

· Assemble the item as close to its final position (in the same room) as possible.

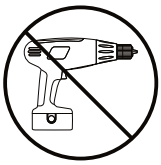

· We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

· Parts of the assembly will be easier with 2 people.

· Dispose of all packaging carefully and responsibly.

Care and maintenance

· Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

· Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


· From time to time check that there are no loose screws on this unit.

· This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: *if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below




1 Right back foot (84.2 x 4.5cm)




2 Left front foot (84.2 x 4.5cm)

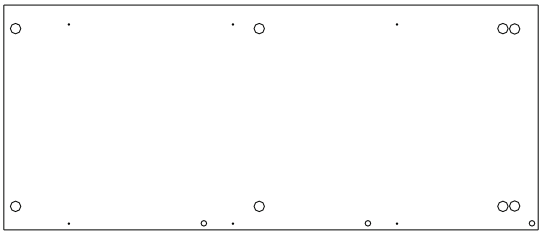

5 Right side panel (77.2 x 32.5cm)

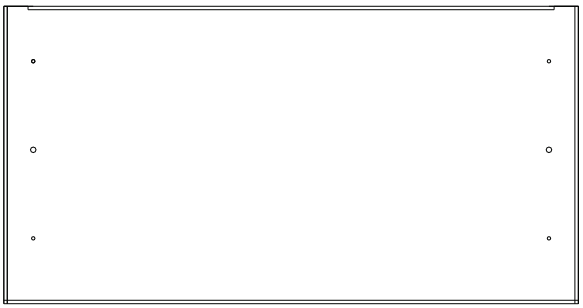


7 Top panel (83 x 43cm)



8 Drawer bottom x3 (68.9 x 35cm)




9 Back panel x 2 (78.2 x 37.2cm)




3 Left back foot (84.2 x 4.5cm)




4 Right front foot (84.2 x 4.5cm)

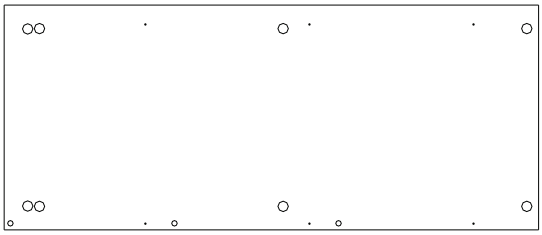

6 Left side panel (77.2 x 32.5cm)

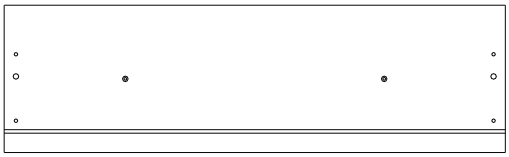


10 Drawer front x 3 (72.4 x 21.3cm)




11 Front rail x 3 (73 x 6.5cm)




12 Back rail (73 x 6cm)




13 Bottom front rail (73 x 6cm)



14 Drawer back x 3 (67.5 x 15cm)



15 Drawer left side x 3
(35 x 15cm)













16 Drawer right side x 3
(35 x 15cm)

Components - Fittings


If you have damaged or missing components, call the Customer Helpline: **03456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

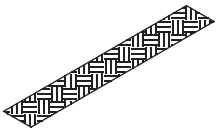A  Metal dowel x 38	**B** Locking nut x 38 	**C**  30mm Screw x 12
D  16mm Screw x 1	**E**  14mm Screw x 30	**F**  Nail x 25
G  22mm Bolt x 06	**H**  Wooden dowel x 26	**I**  Wall strap x 01
J  Washer x 01	**L**  Right runner x 03 pair	**M**  Left runner x 03 pair
N  Handle x 06	**O**  H profile 712mm x 01	


Tools required




Phillips screwdriver (medium & large)

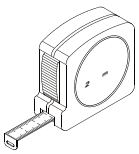

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


Fitting Metal dowels.

Screw metal dowels (A) in the parts indicated.

Note: Insert metal dowels as far as shown.

Do not over tighten.


Insert dowels (H) into the indicated parts.

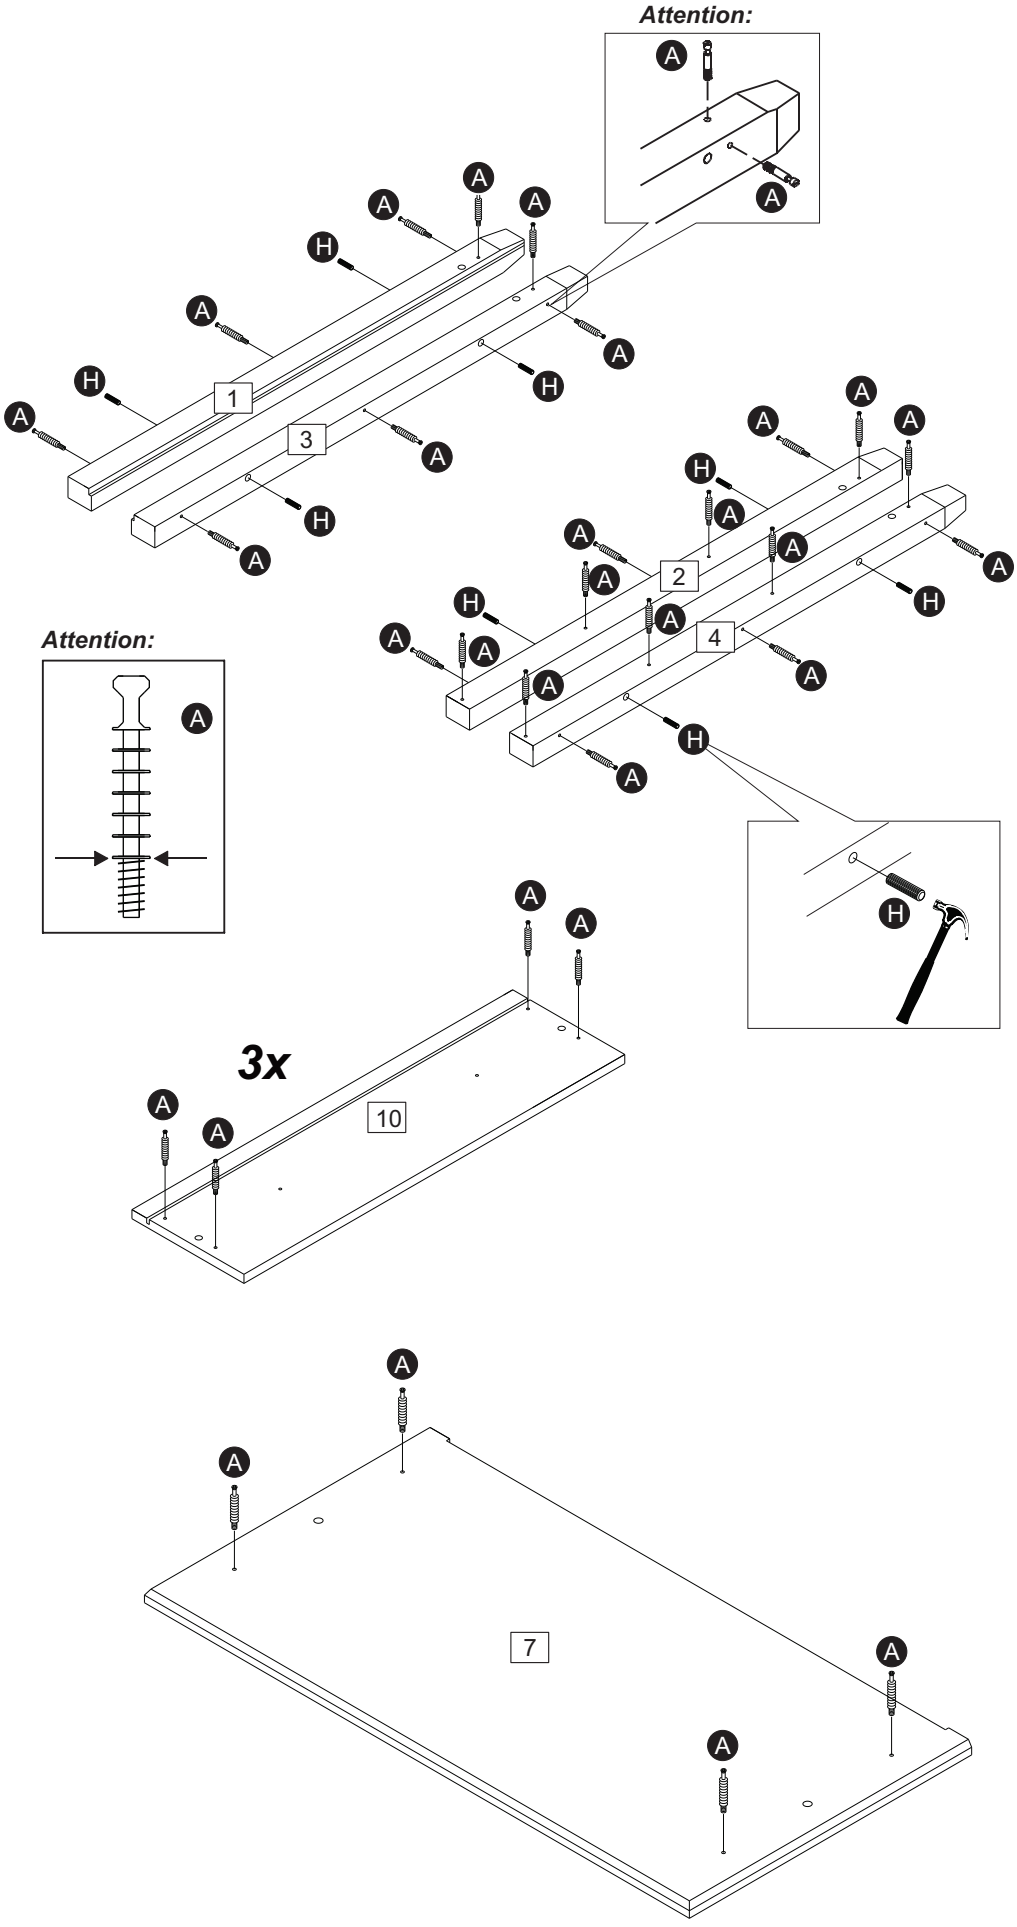


Assembly Instructions

Step 2

Insert dowels (H) into the indicated parts.

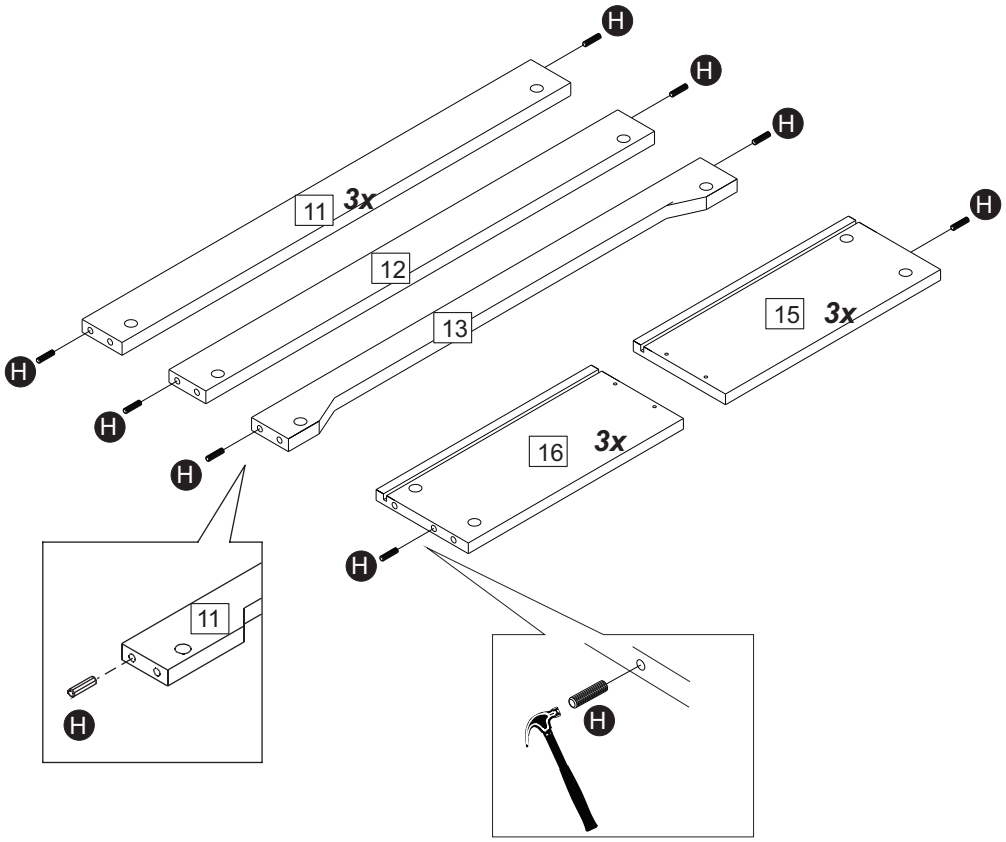

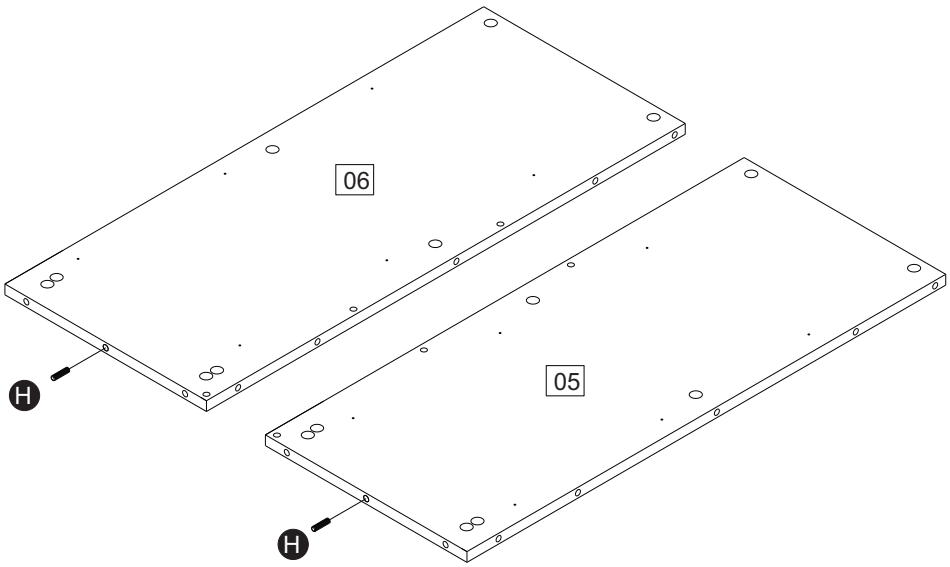


Assembly Instructions

Step 3

a) Fit side panel 6 , left front leg 02 and left back leg 03 together as shown.

b) Insert locking nuts B where shown. Use a screwdriver to turn locking nuts clockwise to lock.


Do not over tighten.

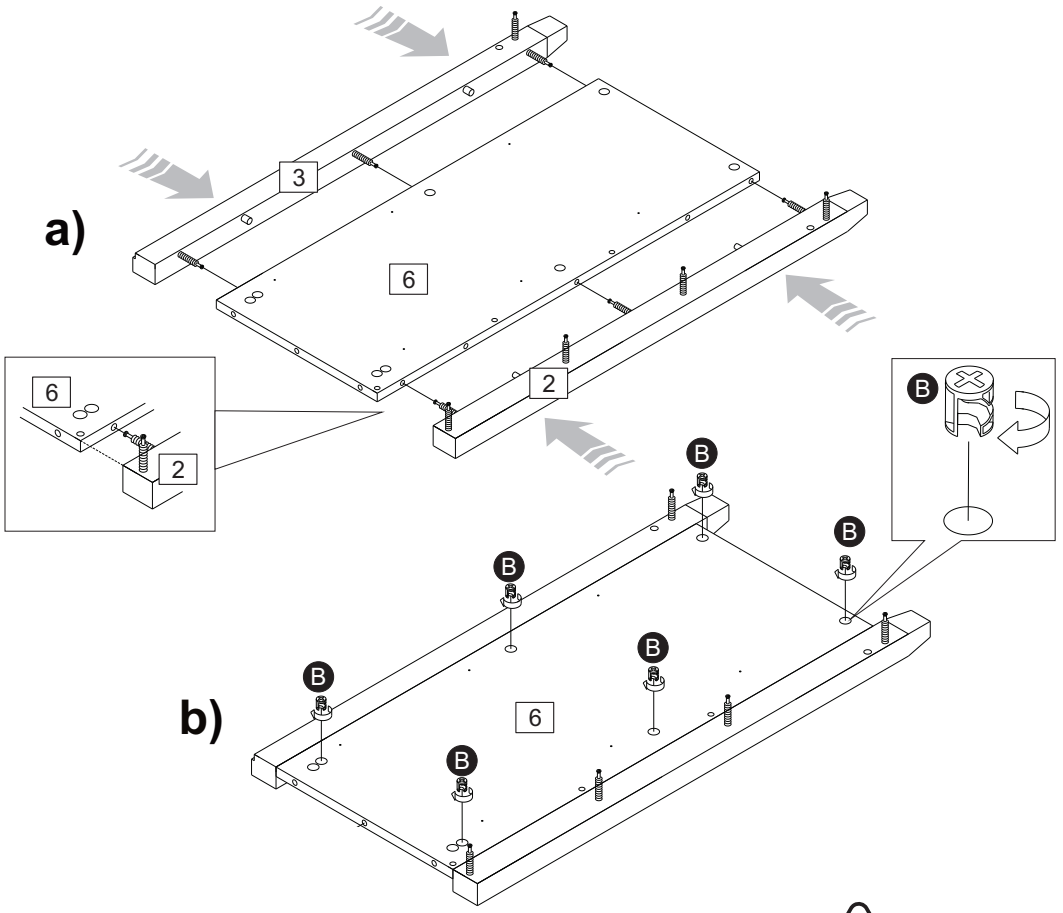

Step 4

Fixing runners.

Attach left runners M to the pre drilled holes on the left side panel 6 using screws E.

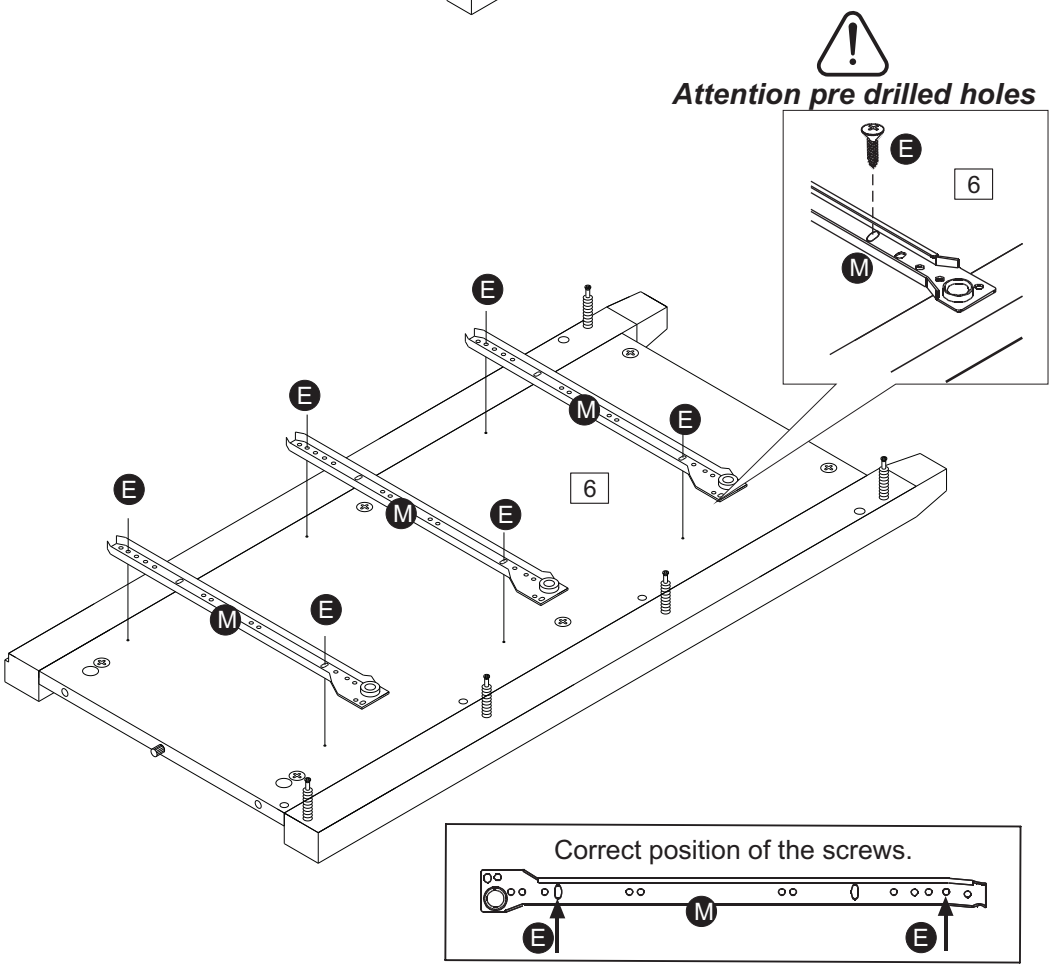


Assembly Instructions

Step 5

a) Fit side panel 05 , right front leg 04 and right back leg 01 together.

b) Insert locking nuts B where shown. Use a screwdriver to turn locking nuts clockwise to lock.


Do not over tighten.

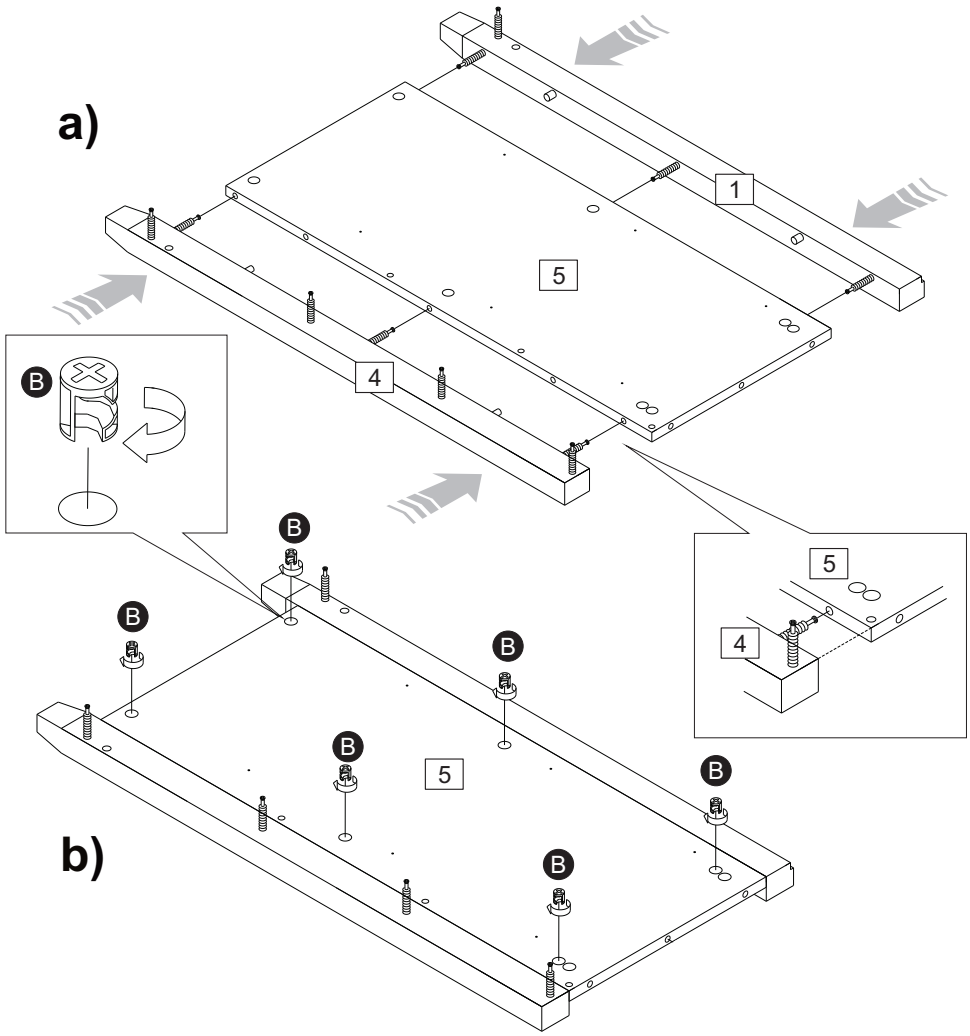

Step 6

Fixing runners.

Attach left runners L to the pre drilled holes on left side panel 5 using screws E.

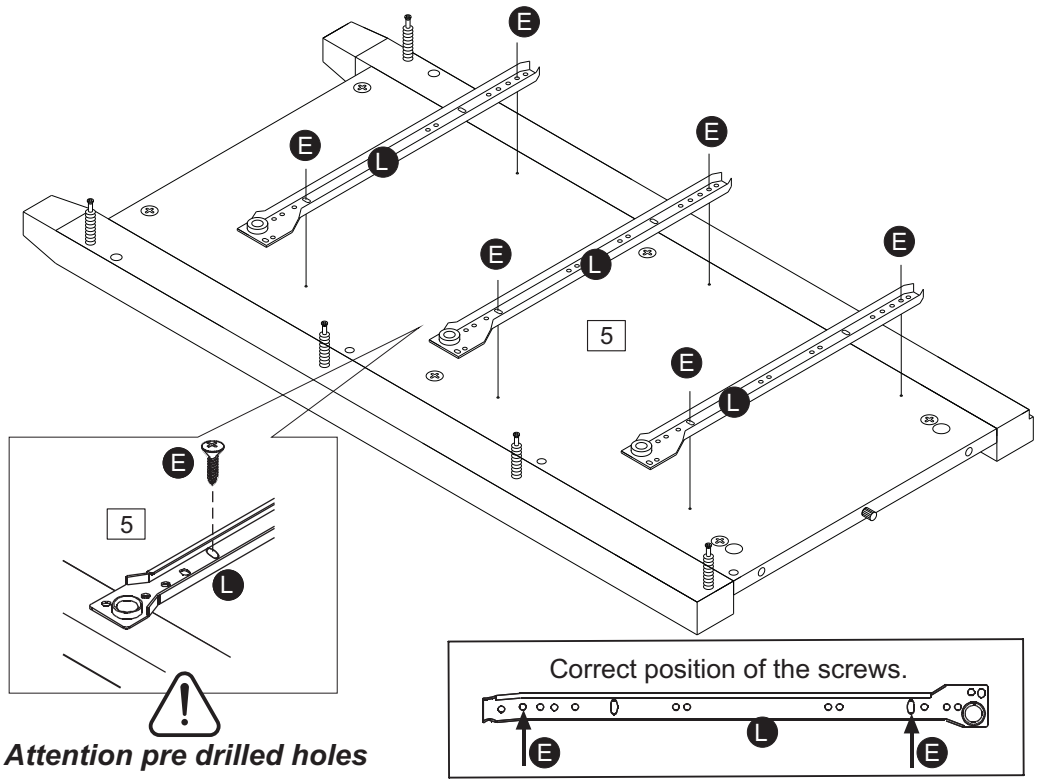


Attention pre drilled holes

Assembly Instructions

Step 7

Assembling the cabinet.

Fit parts 12 , 11 , 13 on the left side panel 6 as shown.

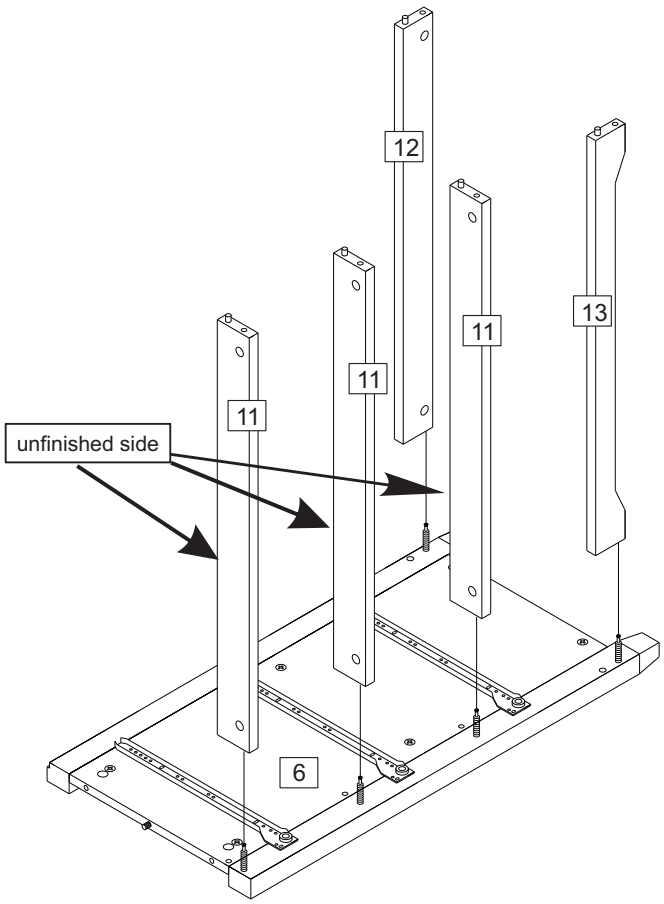



Step 8


Insert 5 locking nuts B in the indicated parts.

Use a screwdriver to turn locking nuts B clockwise to lock.

Do not over tighten.

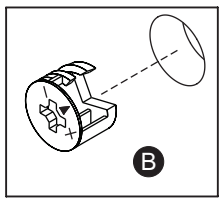

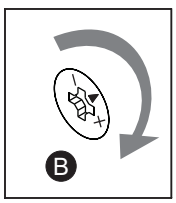

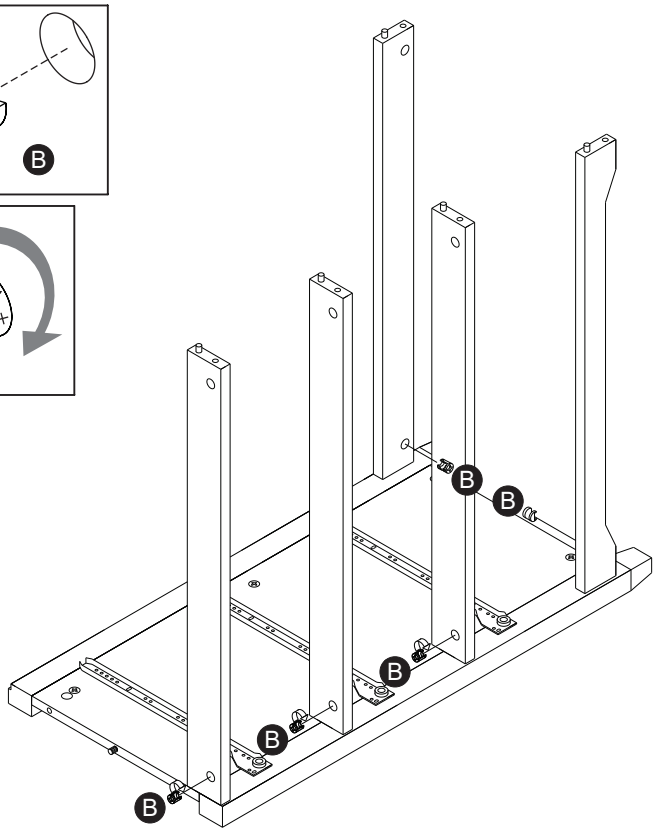


Assembly Instructions

Step 9

Fixing right side panel.

Fit right side panel 5 on to cabinet.

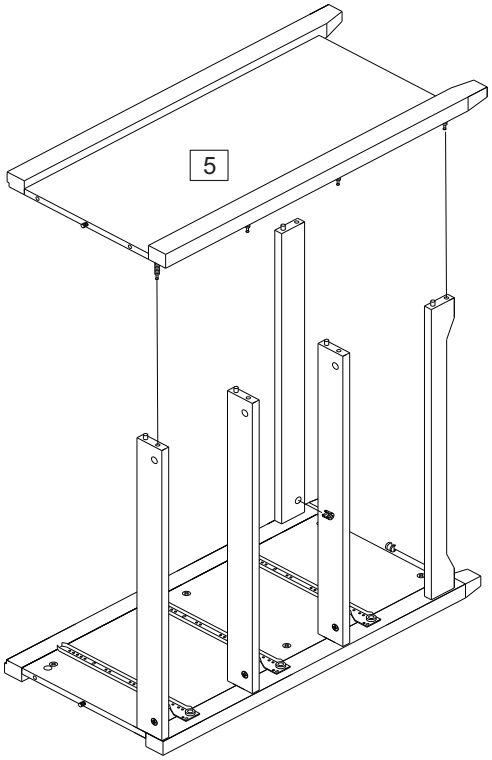



Step 10


Insert 5 locking nuts B into rails where shown.

Use a screwdriver to turn locking nuts B clockwise to lock.

Do not over tighten.

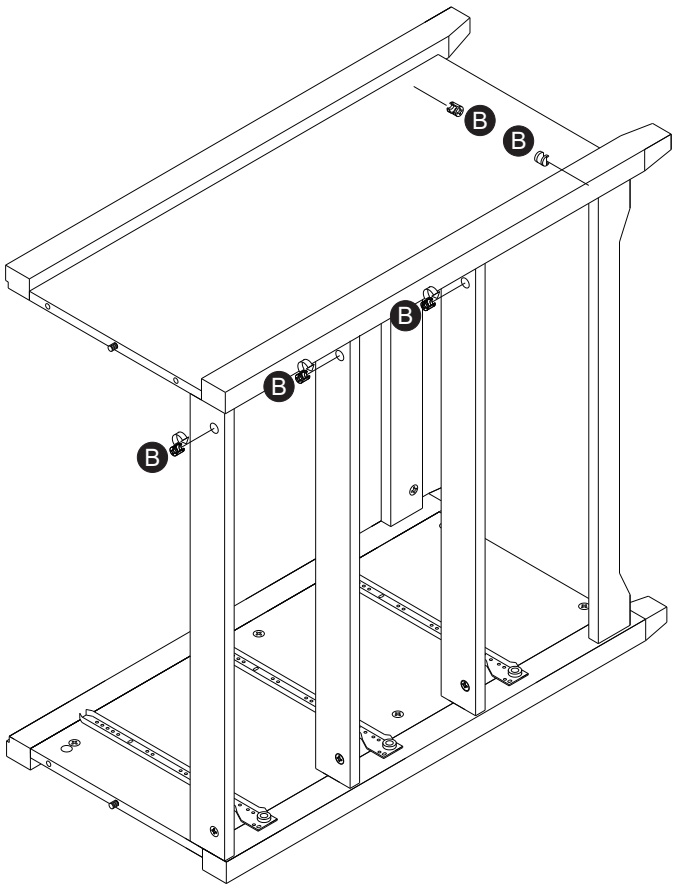

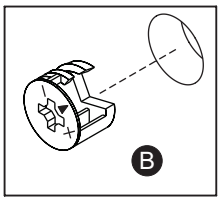

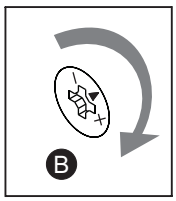

Assembly Instructions

Step 11


Fixing the top panel.


Fit top panel 7 on to cabinet.


Insert 4 locking nuts B into top panel where shown.

Use a screwdriver to turn locking nuts B clockwise to lock.

Do not over tighten.

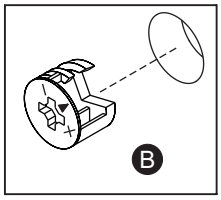

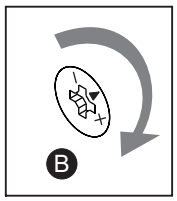

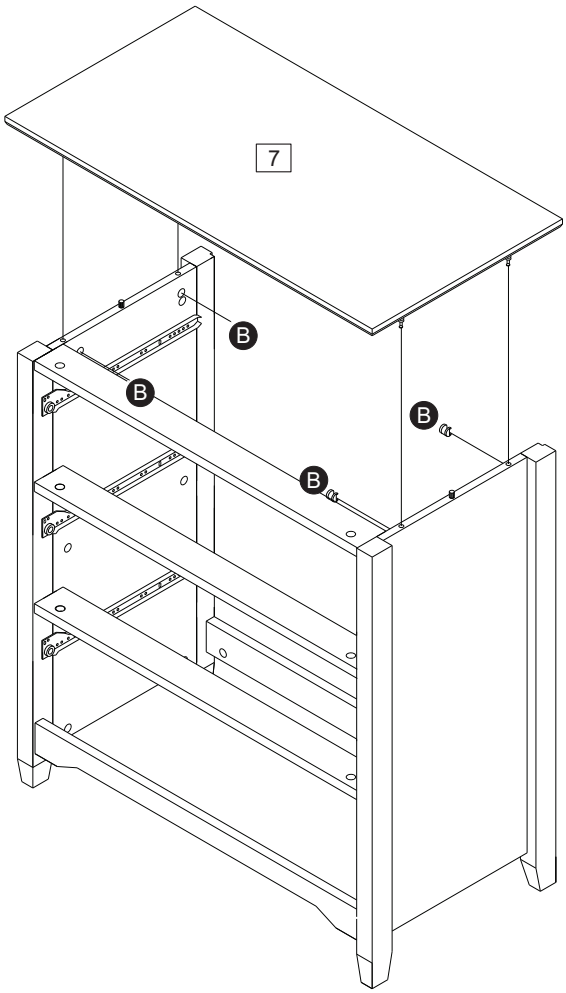

Step 12

Fixing back panel.


Important: Cabinet **MUST** be 'square'when back panels are attached.


a: Attach the back panel 09 to the left side first using nails F.

b: Position H profile O onto back panel (just attach).

c: Carefully slot the second back panel 09 into profile and fix it to the cabinet using nails F.

Note: Attention to the measures.

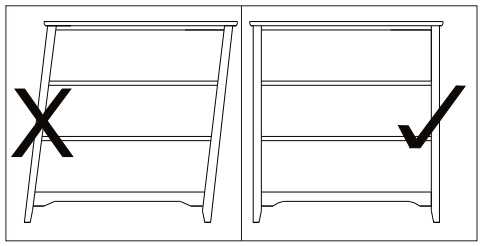

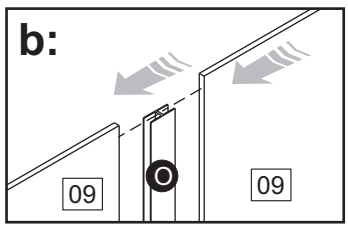

Assembly Instructions

Step 13


Assembling the drawers:


a: Fit drawer sides 16 and 15 to the large drawer front 10.

Insert 4 locking nuts B into drawer sides where shown.


Use a screwdriver to turn locking nuts B clockwise to lock.

Do not over tighten.

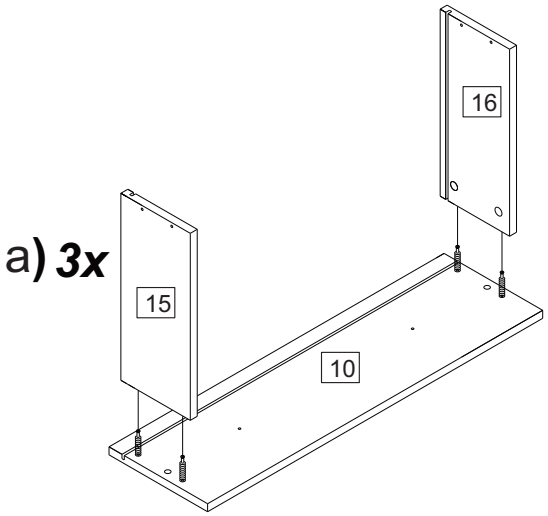

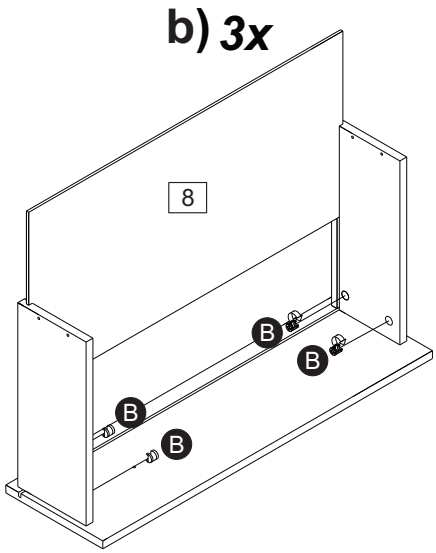



b: Slide large drawer bottom 08 into slots on drawer sides.

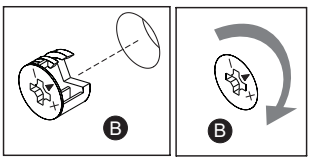

c: Position large drawer back 14 in place, press the drawer sides and fix using screws C .

Using bolts G attach handles N to the drawer front.

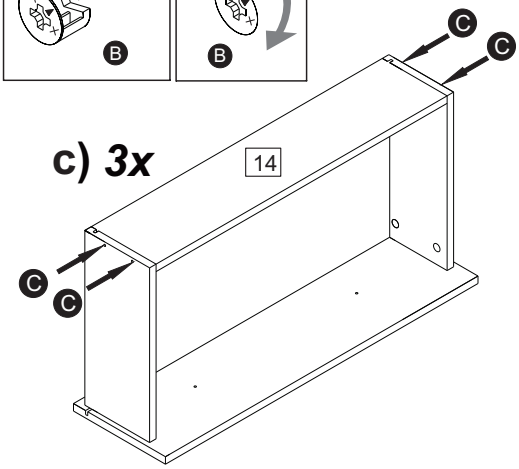

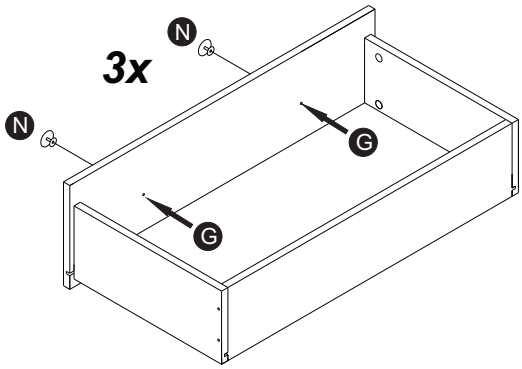



Step 14

Fixing runners.

Attach right runners L and left runners M in the bottom edge of the drawers using screws E as shown.

Make sure runners are correctly positioned according to the diagram prior to fixing.

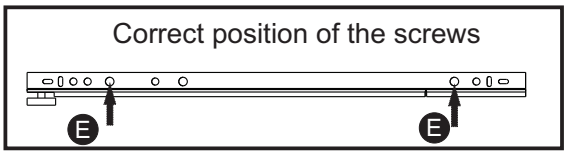


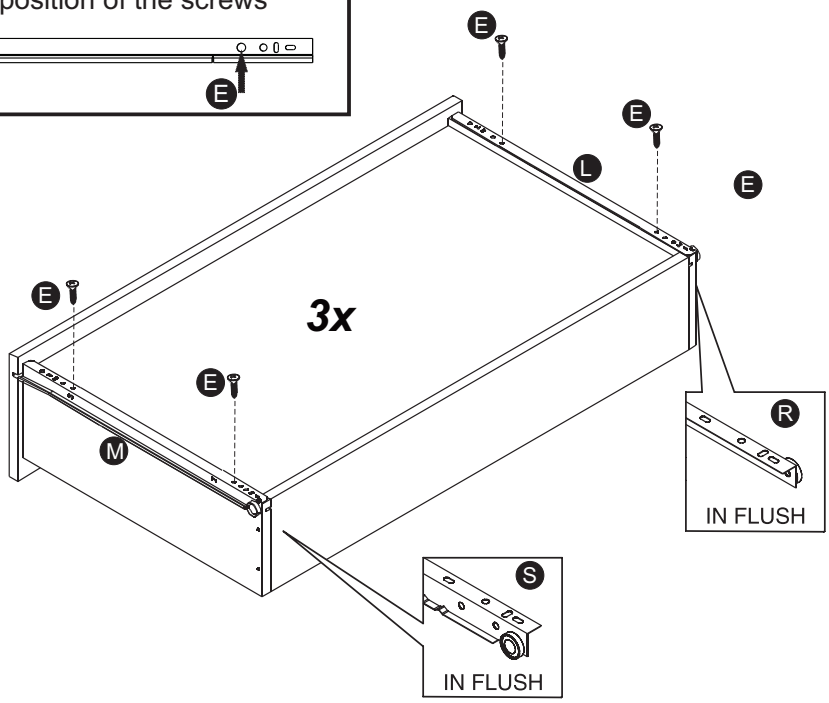


Assembly Instructions

Step 15

Hook the wheels of the runners on the back of the drawers over the wheels of the runners on the left and right sides, then hold the drawers level and slide backwards into position.

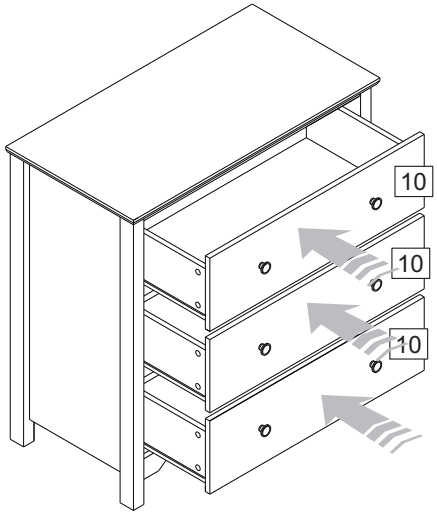

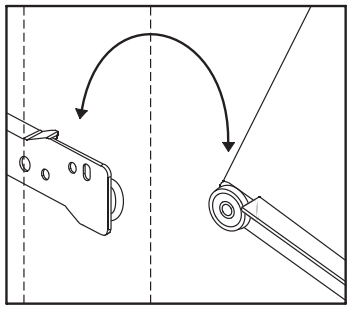


Step 16


Adjusting drawers.


To move drawers up or down:

Loosen the screws in the runners in the side panels, adjust the drawers to suit and once drawers are aligned retighten screws.

Then, add 1 screw Ⓔ in the hole in each runner of the side panels and middle panel as indicated.

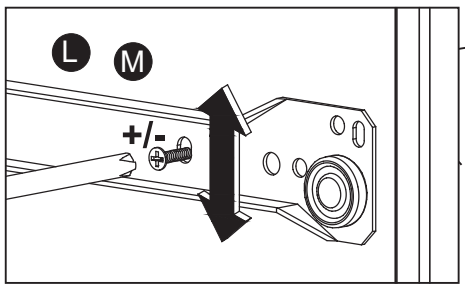

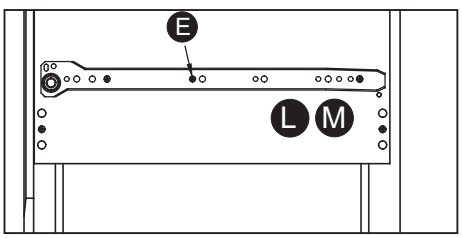

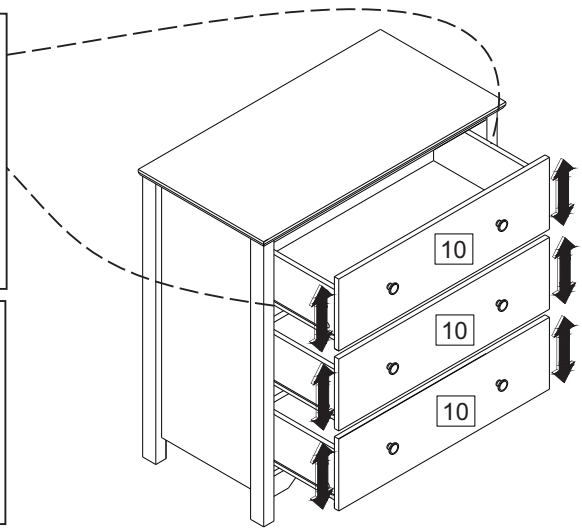


Step 17


Fixing to wall.

Furniture must be fixed to a wall. Fix wall strap Ⓘ to top of furniture using washer Ⓙ and screw Ⓓ. With help, move furniture into position.

Assemble is complete

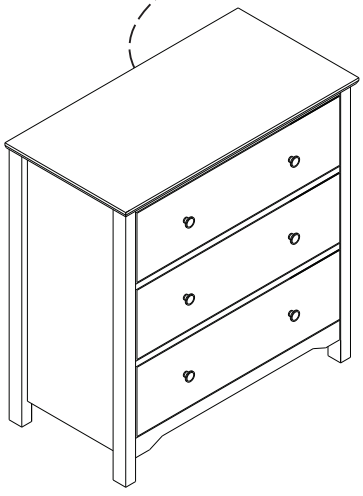

Note: Wall plugs not supplied. The correct type of fxing must be used for your wall, seek professional advice if in doubt.

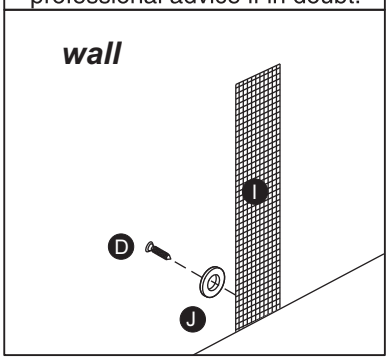


If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400 800**

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

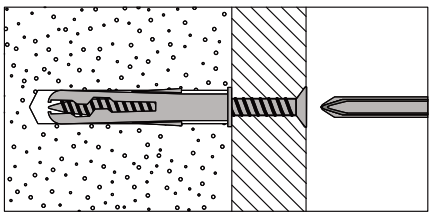


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

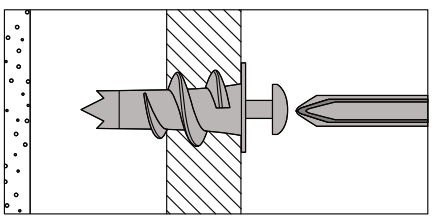


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

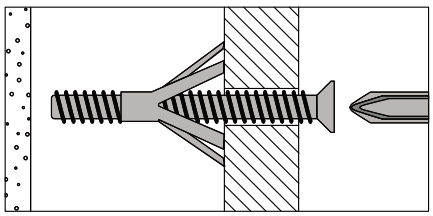


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

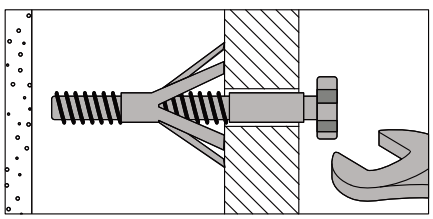


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

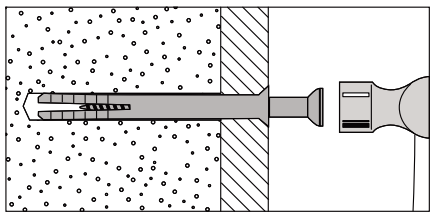

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"ShieldAnchor" wall plug Heavy loads**

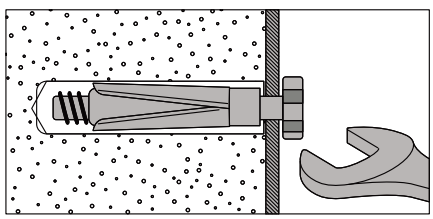

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.