Care and Maintenance

General

This pushchair was designed and manufactured with quality materials and craftsmanship.
Always use the safety harness.

Lubricate moving parts regularly, especially the wheels, and lower parts of the chassis that tend to collect dirt.

Inspect regularly for:

- Worn parts, torn materials or stitching .
- Loose screws ,bent or broken frame parts .
- Broken, damaged or missing parts.

Should any of the above be evident do not use and contact the Helpline:03456 400 800 for advice.

Care and Maintenance:

Fabric parts may be cleaned in accordance with the fabric care labels. Do not machine wash.
Seat: Sponge clean only.
Basket:Hand wash only.
Do not leave the stroller exposed to heat i.e. by a radiator or in direct sunlight.

If the stroller chassis parts have been exposed to salt water we recommend that they be rinsed down with soapy water as soon as possible, afterwards clean with a sponge.
Do not fold or store the product while wet and never store a damp environment as this can cause mildew to form.

If you need help or have damaged or missing parts, call the
Argos Aftersales Helpline:03456 400 800
This pushchair has been designed to comply with the EN1888:2012.
Country of origin: China
Argos LTD, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW

FISHER-PRICE and associated trademarks are owned by Mattel, Inc. and used under license from Mattel Europa B.V. ©2015 Mattel, Inc. All Rights Reserved.

Fisher-Price

JOY OF LEARNING

From Birth Pushchair With Footmuff User Guide



Cat.NO.:411/3412

Helpline:03456 400 800

up to 33lbs / 15kg


IMPORTANT: KEEP FOR FUTURE REFERENCE

Thank you for choosing our product. Please always read all the instructions provided carefully before use and remember your child's safety may be affected if you don't follow these instructions.
The stroller is suitable for children under 36 months. It is recommended to use the most reclined position for new born babies. The max load of the stroller is 15kg. Never overload.


- **WARNING:** Do not use if any part is broken,torn or missing .
- **WARNING:** Never leave your child unattended.
- **WARNING:** Always use the restraint system
- **WARNING:** This seat unit is not suitable for children over 36 months.
- **WARNING:** Accessories which are not approved by the manufacturer shall not be used.
- **WARNING:** Avoid placing the stroller near naked heat sources such as electric bar fires, gas fires, etc. or where a child could gain access to any other kinds of hazards.
- **WARNING: Always use the crotch strap in combination with the waist belt.**
- **WARNING:** Always use the harness provided and make sure the harness is correctly fitted.
- **WARNING: Any load attached to the handle affects the stability of the stroller.**
- **WARNING: Ensure that all the locking devices are engaged when putting in or taking out the child.**
- **WARNING: This product is not suitable for running or skating .**
- **WARNING:** To avoid injury ensure that your child is kept away when unfolding and folding this product.
- **WARNING:** Do not let your child play with this product.
- **WARNING:** Use the stroller for only one child at a time.
- **WARNING:** The maximum permissible loading for shopping basket is 3 kg.
- **WARNING:** Ensure that all the locking devices are engaged before use.

Part list


Front wheel

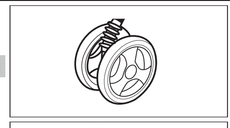


Canopy

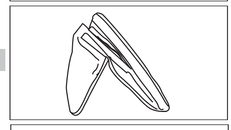

Frame with fabric cover

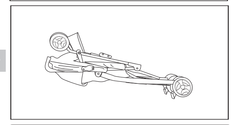


Footmuff

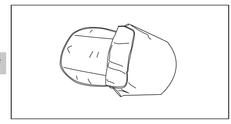

Assembly

Step 1


Unfold frame:
Locate the locking catch on the side of the stroller and lift to release from the locking stud (fig 1). Unfold the stroller by using both hands. Press the pedal until it "clicks" into place.

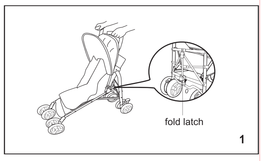

1

Step 2


Assemble the front wheel:
Insert front wheel assembly into wheel axle sleeve,until it "clicks". Repeat for the other side.

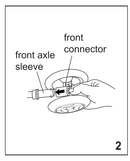

2

Step 3

To Fit Canopy:
As shown in the picture, insert canopy plug into canopy base slot.Repeat for the other side.

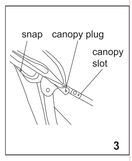


3

Step 4

Adjusting Canopy:


Your hood can be opened or closed by lowering or raising canopy hinge(fig4).

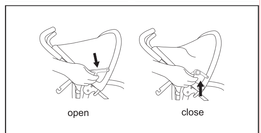

4


Step 5

Fitting Canopy:
Fasten the back of the canopy by using the buttons (fig 5a)

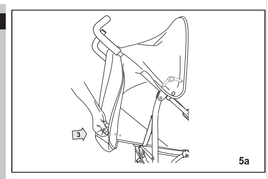

5a

Make sure the back of the hood is secured when the backrest is in upright position (fig 4b)

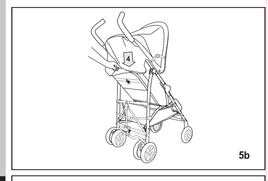


5b

Using the safety harness

Step 6

Harness & Buckle:
To fasten the waist harness, insert both buckle clips into each side of the buckle. Listen for the "click". To release the harness,squeeze the buckles and pull apart. To adjust the shoulder straps and move the slides as shown on.(fig 6)

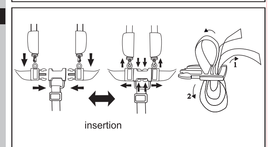


6

Use

Step 7


Backrest adjustment
Hold the belt end with one hand, and press the adjust button with another hand to raise or lower seat angles.

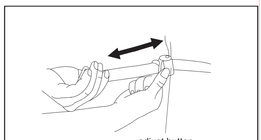

7


Step 8

Leg-rest adjustment
Press left & right button underneath to lower down or raise leg-rest

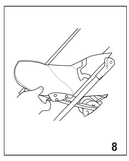
8

Step 9


Brake
Step down on left & right brake pedals to park stroller. Uplift to release braking.
NOTE: Make sure left & right pedals are stepped on when stroller isn't moving.

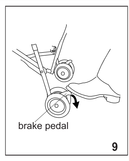

9

Step 10


Using the cushion
Bind the buttonhole B & C with the straps B & C as the picture shown. Pull out the crotch strap A from the seat. Then fasten the harness with the crotch strap.

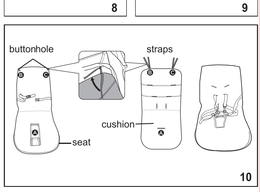

10

Step 11

Using the footmuff
Using the zipper to assemble the footmuff and cushion. Then fix the buttons on both sides of the seat.

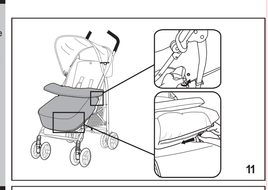

11

Fold


Step 1

Lift the pedal upwards and then pull the trigger on the right until lock is released (fig1).

Push the handles over and then the pushchair will naturally catch on the side of your stroller .
Note:always fold canopy before folding your pushchair.(fig2).

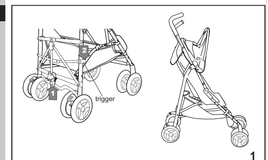

1

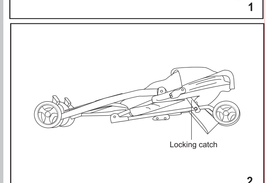

2