
Castle - Chest of Drawers

Assembly Instructions - Please keep for future reference

412/5819

429/9790

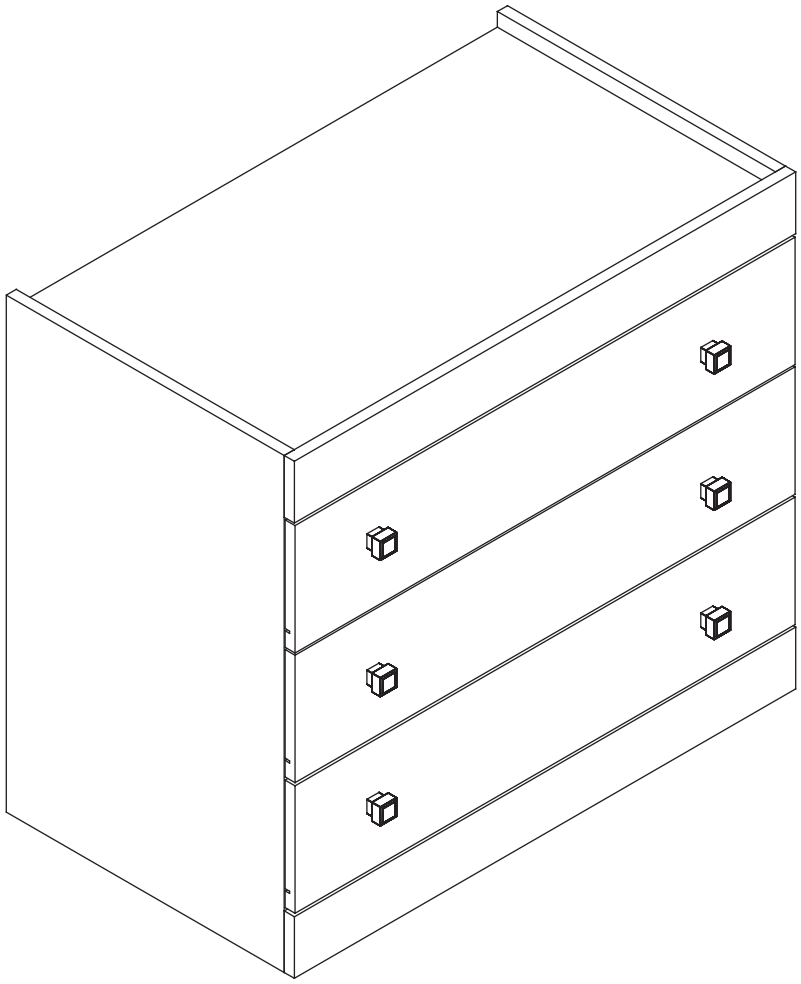

Dimensions

Width - 75cm
Depth - 43cm
Height - 67.5cm

Important – Please read these instructions fully before starting assembly

If you need help or have damage or missing parts, call the **Customer Helpline: 03456 400 800**

Issue 1 - 31/03/15

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.


• Assemble on a soft level surface to avoid damaging the unit or your floor.

• This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

• The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

• On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

• This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.

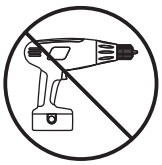

• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

• Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below

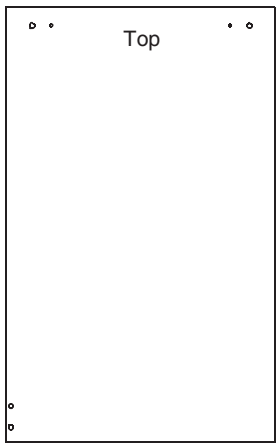


1 Right side panel
(67 x 41.6cm)

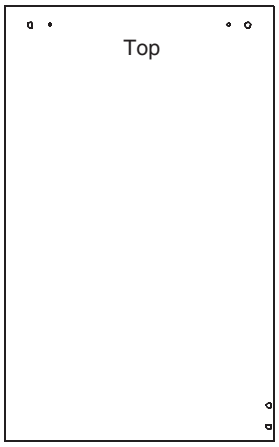


2 Left side panel
(67 x 41.6cm)




3 Top panel
(72 x 41.6cm)




4 Top front frame
(75 x 8cm)



6 Unfinished bottom back frame
(72 x 8cm)



5 Bottom front frame
(75 x 8cm)



7 Drawer front x 3
(74.8 x 16.5cm)




8 Drawer right side x 3
(40 x 12cm)




9 Drawer left side x 3
(40 x 12cm)



10 Drawer back x 3
(66.6 x 12cm)



11 Back panel x 2
(74 x 28cm)





















12 Drawer bottom x 3
(67.9 x 39.8cm)

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 03456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

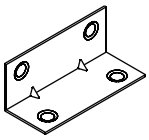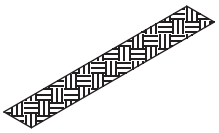A  40mm Screw x 06	**B**  20mm Screw x 12	**C**  14mm Screw x 48
D  Nail x 04	**E**  Nail x 29	**F**  Wooden dowel x 40
G Plastic cap x 10 	**H** L shaped bracket x 06 	**I** Plastic bracket x 12 
J Plastic feet x 04 	**K**  Right runner x 03 pair	**L**  Left runner x 03 pair
M  H profile 720mm x 01	**N**  25mm Screw x 06	**O**  Washer x 02
P  Wall strap x 01	**Q**  Handle x 06	**R**  Metal dowel x 10
S  Locking nut x 10	**T**  16mm Screw x 01	**U**  Silicone stopper x 06


Tools required




Phillips screwdriver (medium & large)

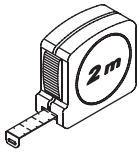

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Insert dowels (F) into the indicated parts.

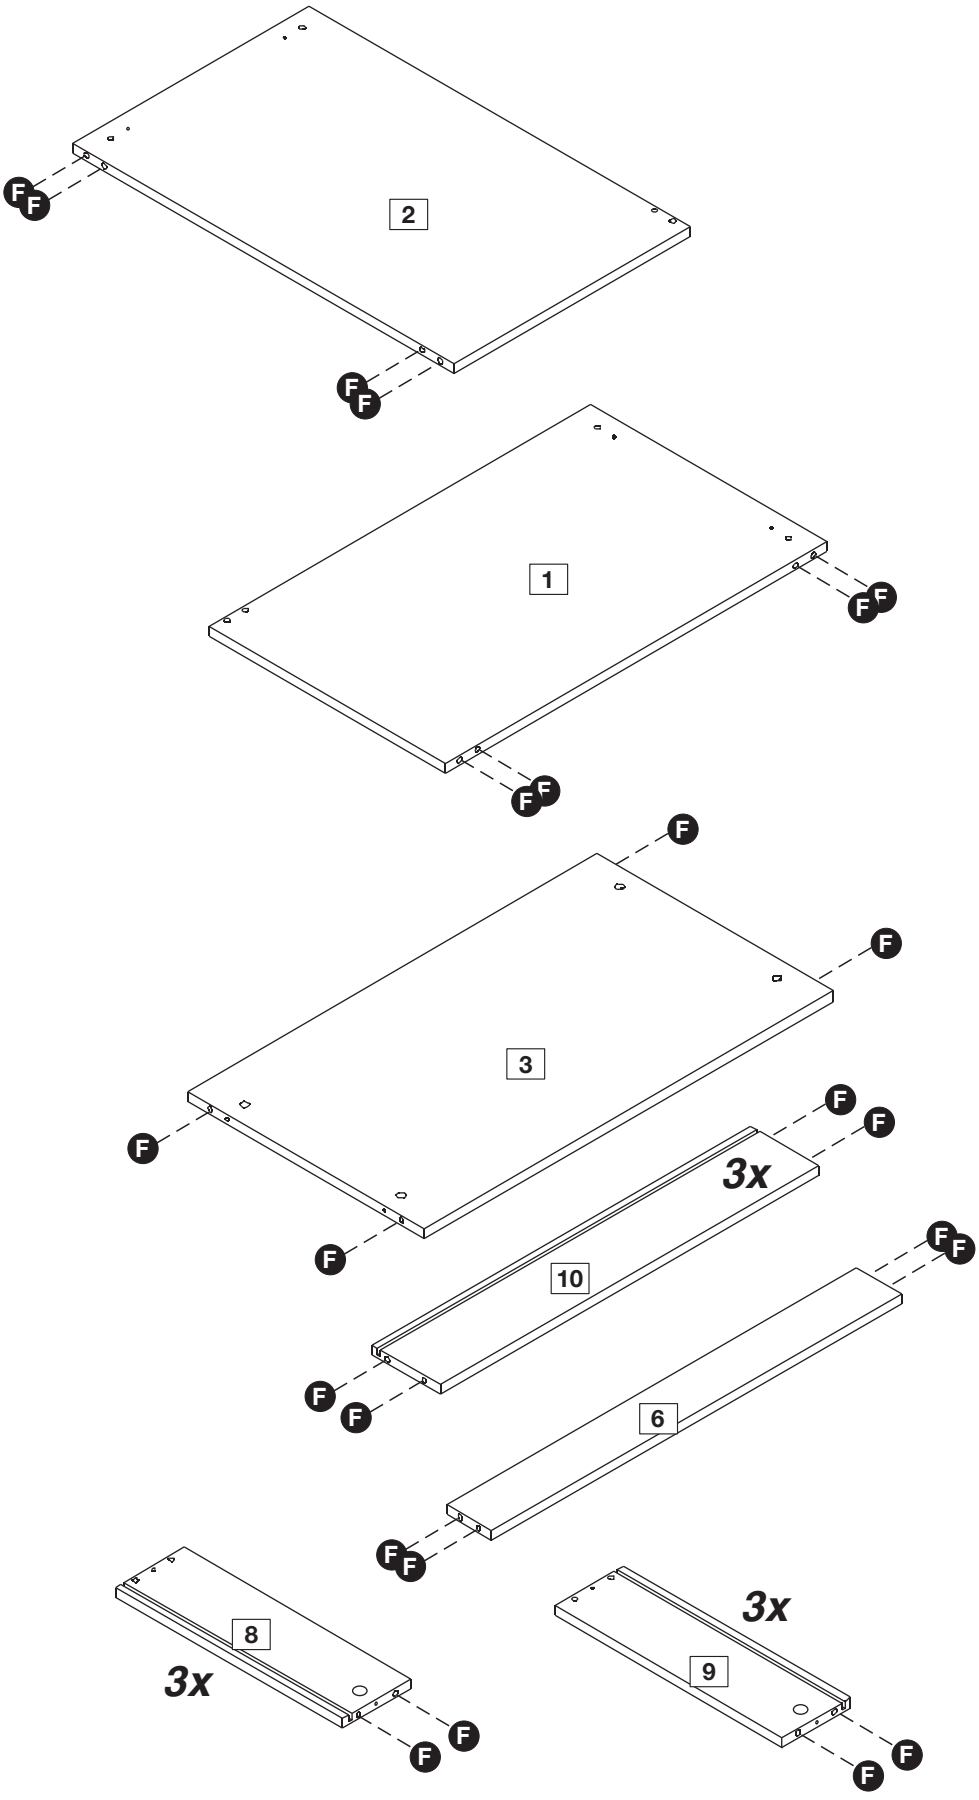


Step 2

Fixing runners.

Attach right runners K to the pre drilled holes on the right side panel 1 using screws C.

Attach left runners L to the pre drilled holes on the left side panel 2 using screws C.

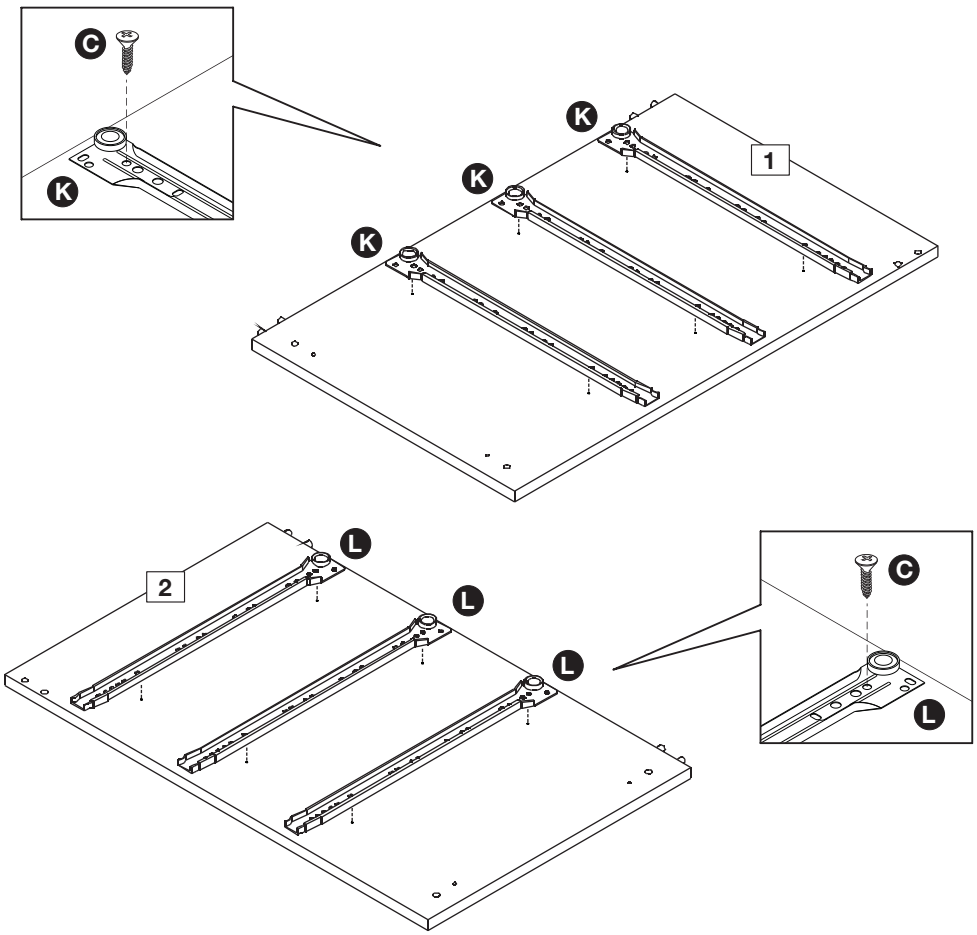


Step 3

Fitting Metal dowels.

Screw metal dowels R into right side panel 1, left side panel 2 and drawer front 7 .

Note: Insert metal dowels as far as shown.

Do not over tighten.

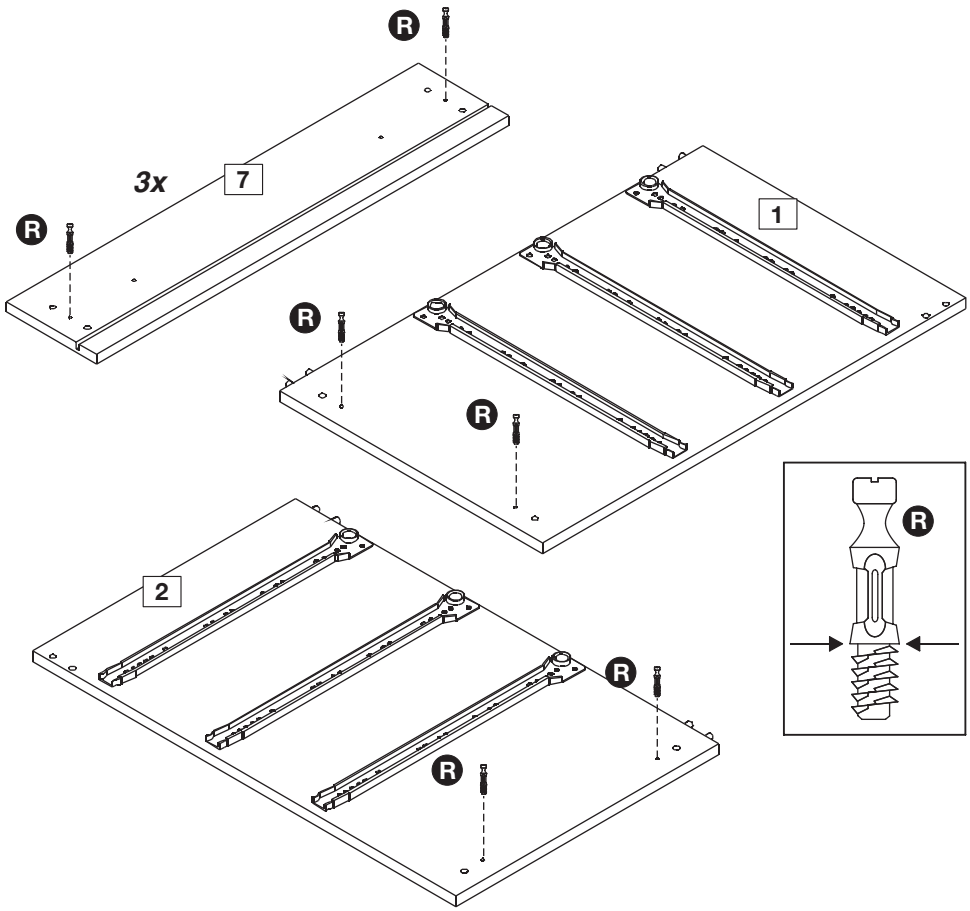


Assembly Instructions

Step 4

Fixing L shaped brackets.

Fix L shaped brackets H in the indicated parts using screws C as shown.

Attention: Leave **1mm** space from the edge of the bar and panels as shown.

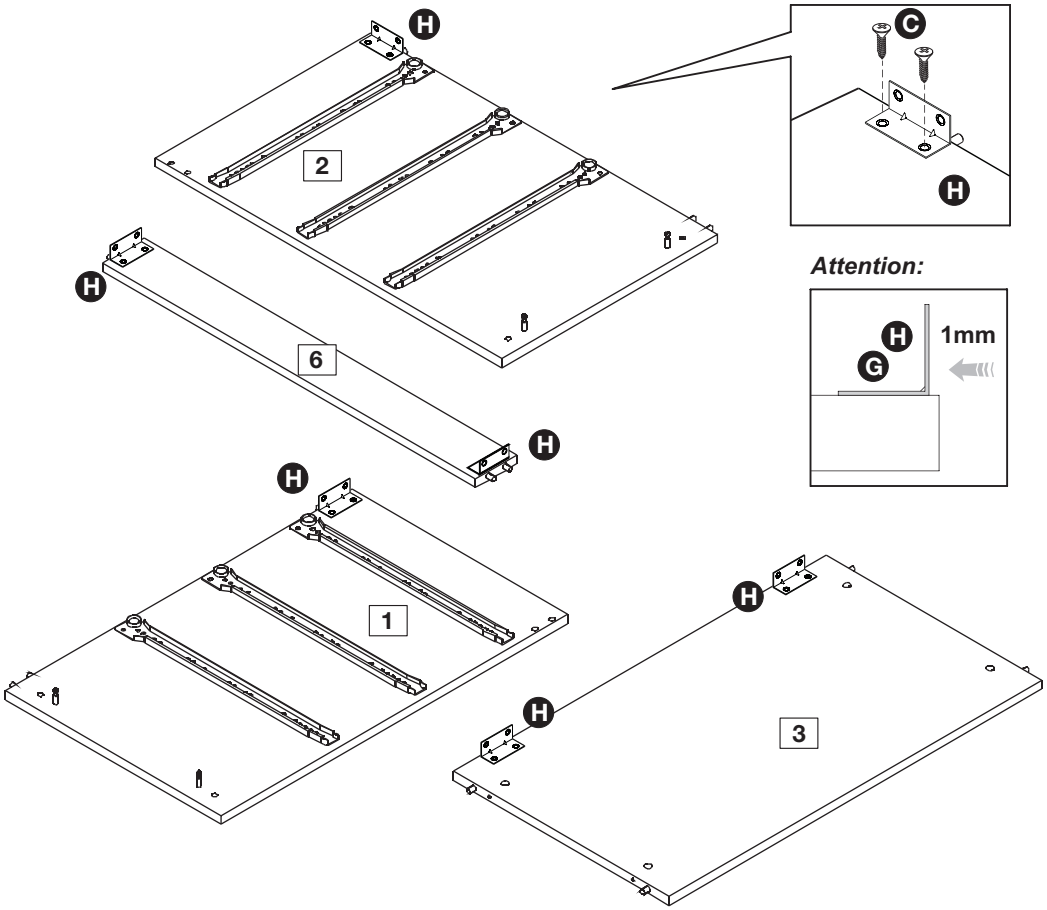

Step 5

Assembling the cabinet.

Fit top panel 3 on to left side panel 2.


Insert 2 locking nuts S into top panel where shown.

Use a screwdriver to turn locking nuts S clockwise to lock.

Do not over tighten.

After screwing locking nuts, insert plastic caps G.

Fix unfinished bottom frame 6 using screws C.

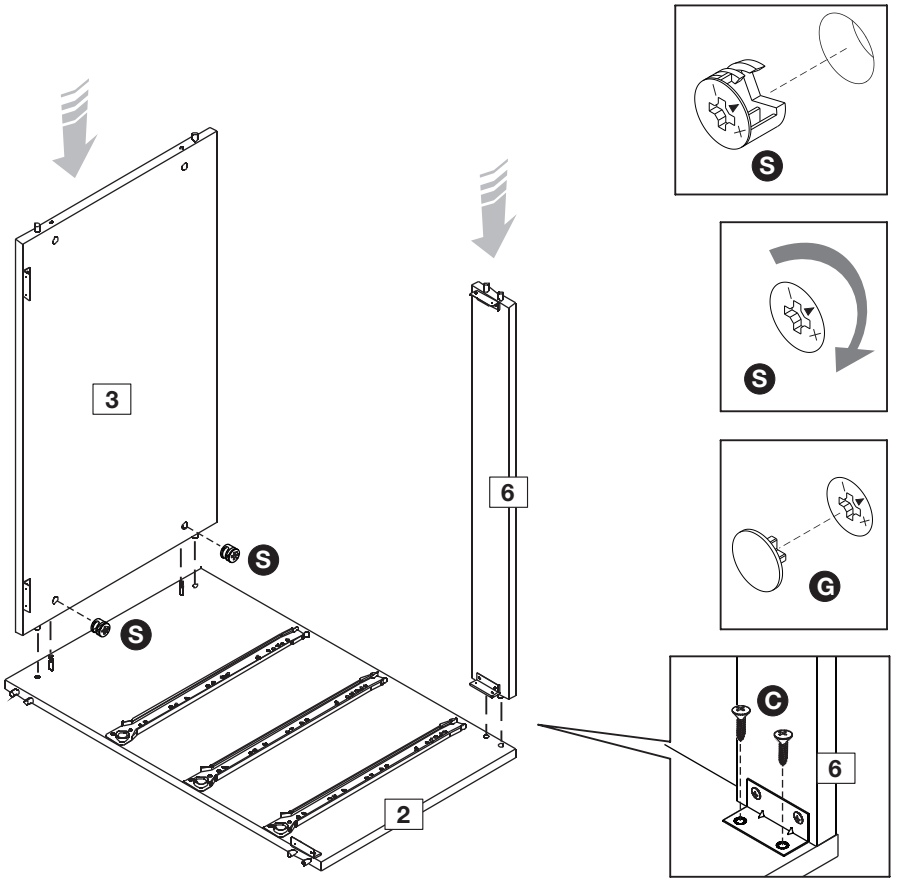

Step 6

Fixing right side panel.

Fit right side panel 1 on to cabinet.


Insert 2 locking nuts S into top panel where shown.

Use a screwdriver to turn locking nuts S clockwise to lock.

Do not over tighten.

After screwing locking nuts, insert plastic caps G .

Fix unfinished bottom frame 6 using screws C .

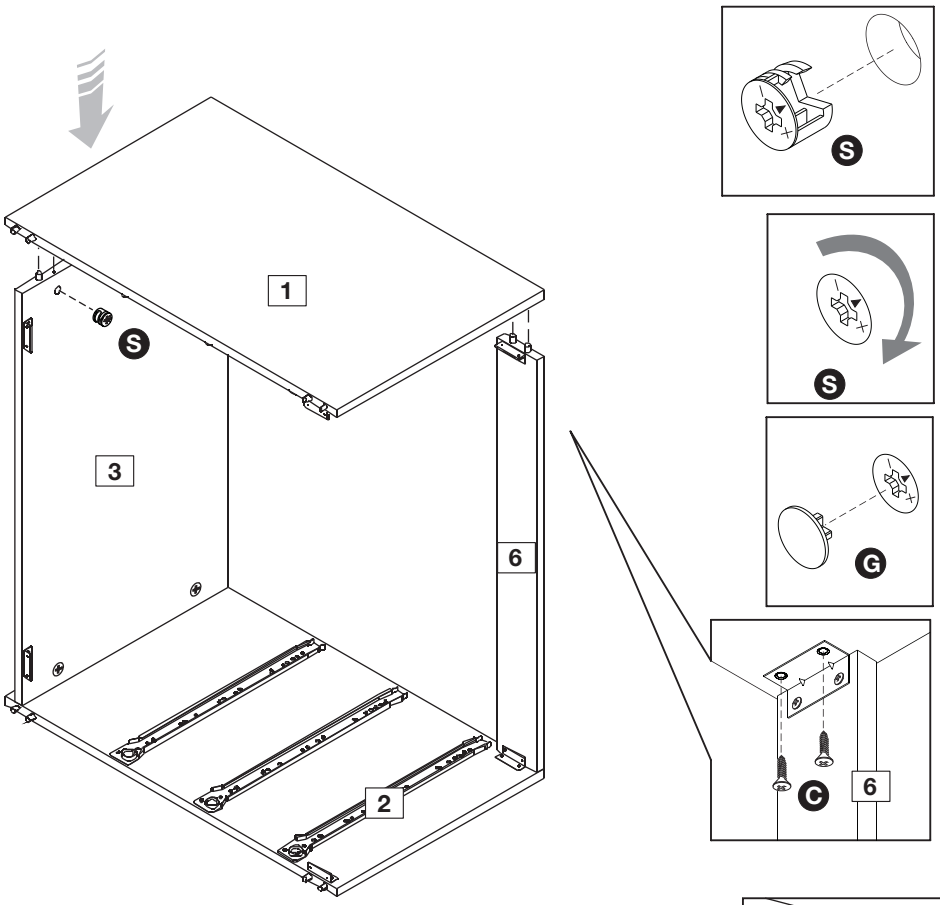


Step 7

Fixing the frames.

With help, carefully turn the product with its face upwards.

Fix top front frame 4 and front frame 5 using screws C as shown.

Finished sides to face outside and finished edges to face up.

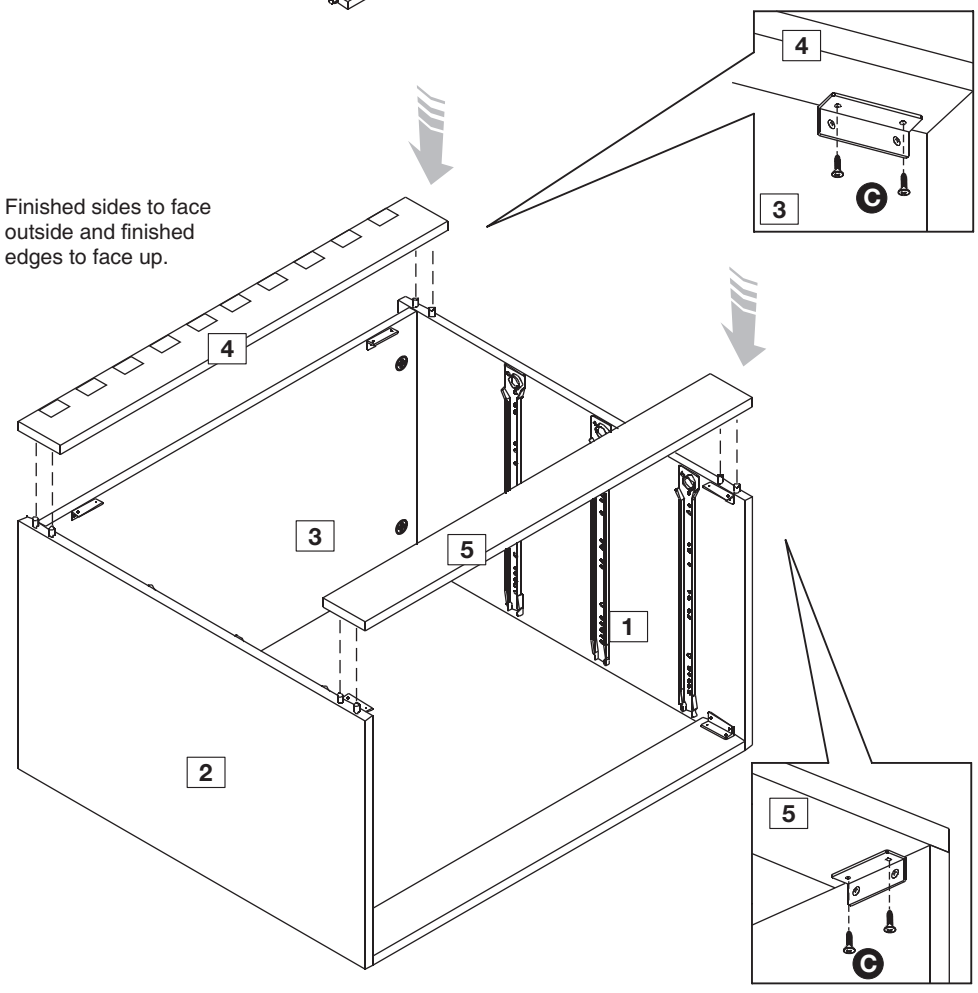

Step **8**

Fixing back panel.


With help, carefully stand the product upright.


Important: Cabinet **MUST** be 'square' when back panels are attached.

a: Attach back panel 11 to the top side first using nails E.

b: Position profile M onto back panel (just attach).

c: Carefully slot the second back panel 11 into profile and fix it to the cabinet using nails E.

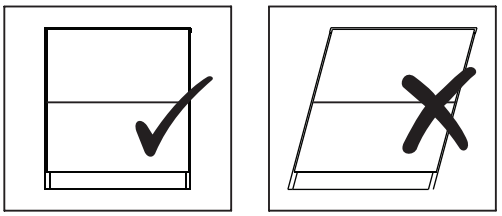

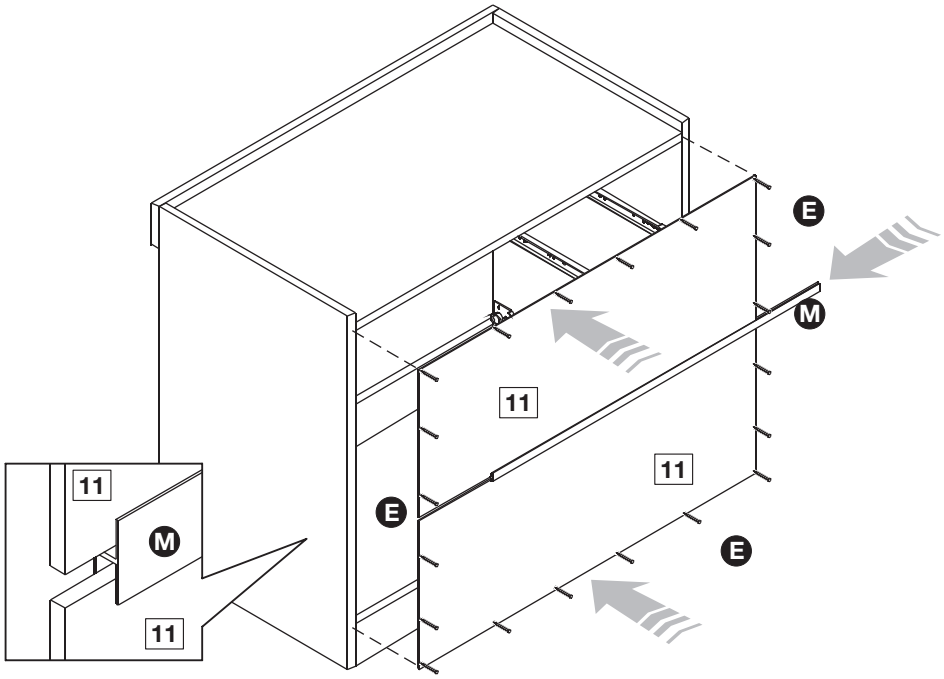

Step **9**


Attach plastic feet.

With help, carefully lay down the product.

Attach plastic feet J in the bottom edge of the right and left side panels using nails D.

Make sure nails are fully nailed.

After attach plastic feet, with help, carefully stand the product upright.

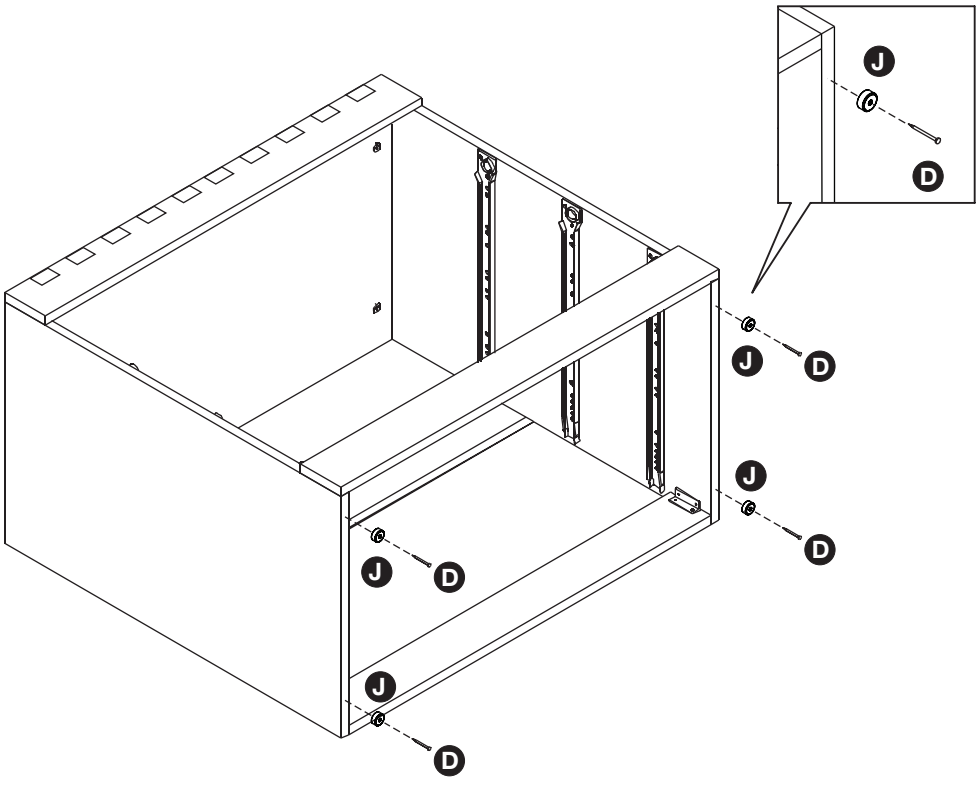

Assembly Instructions

Step **10**

Assembling the drawers:

a: Fix drawer sides 8 and 9 to the drawer back 10 using screws A .

b: Slide drawer bottom 12 into slots on drawer sides.

c: With help, fit drawer front 7 to the drawer sides.

Fix drawer sides to the drawer front 7 using screws C as shown.


Insert 2 locking nuts S into drawer sides where shown.


Use a screwdriver to turn locking nuts S clockwise to lock.


Do not over tighten.


After screwing locking nuts, insert plastic caps G .


Using screws N attach the handles Q to the drawer front.

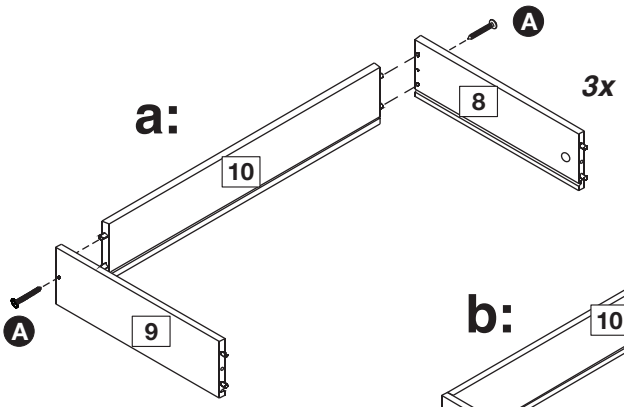


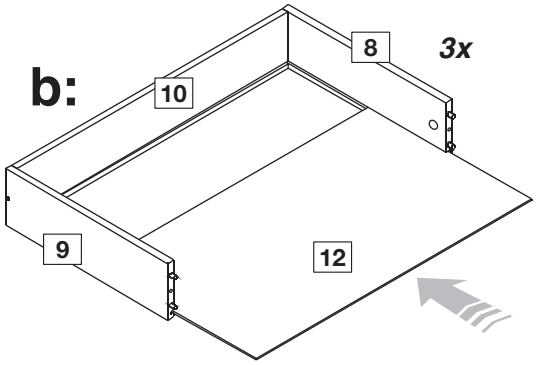


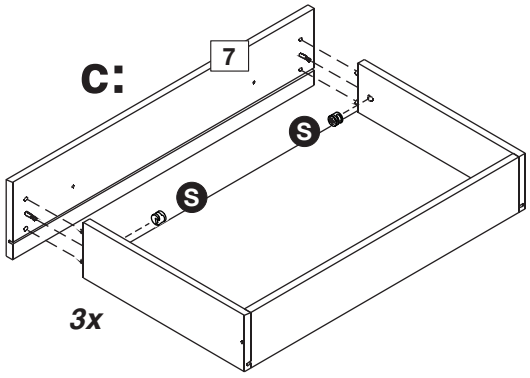

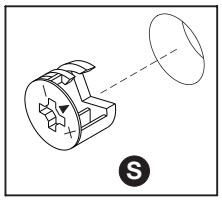

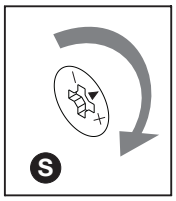

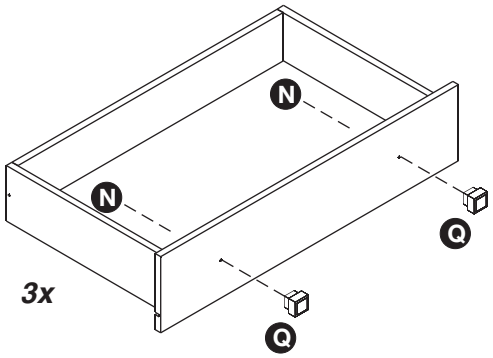

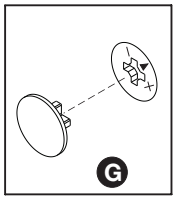


Step **11**

Attach plastic bracket.

Attach plastic bracket I in the bottom drawer using screws B .

Attach silicone stopper U in both sides of the drawer front as shown.

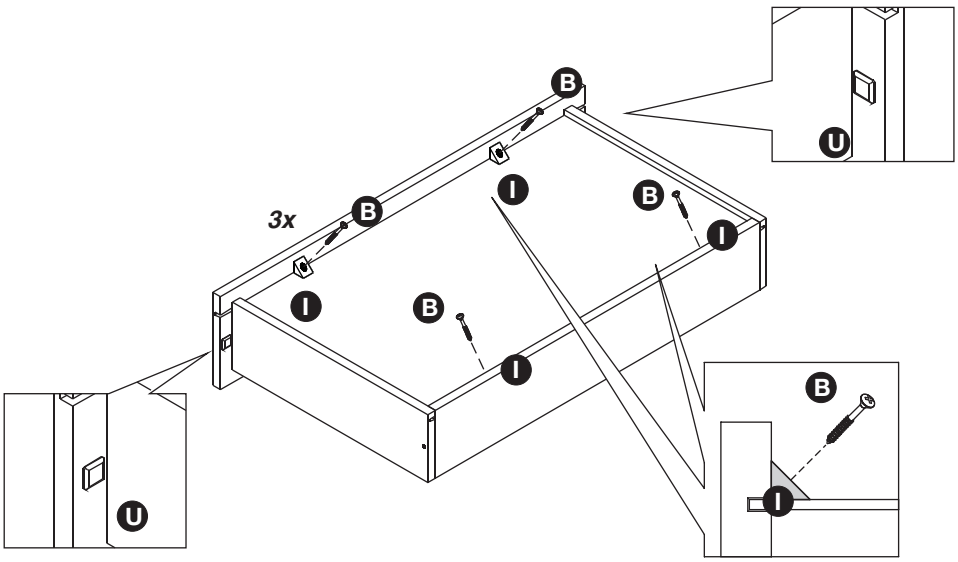



Step **12**

Fixing runners.

Attach right runners K and left runners L in the bottom edge of the drawers using screws C as shown.


Make sure runners are correctly positioned according to the diagram prior to fixing.

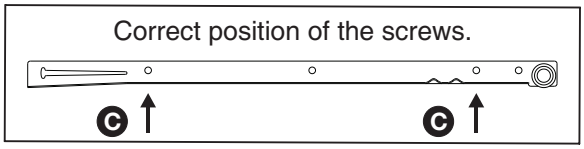

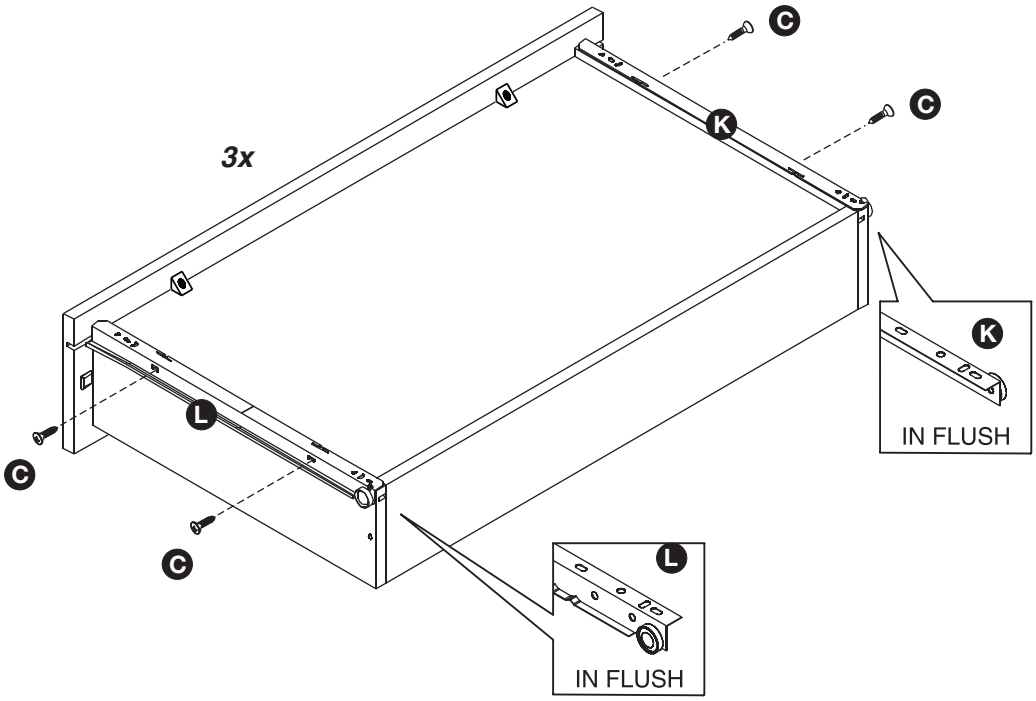

Step **13**


Hook the wheels of the runner on the back of the drawers over the wheels of the runners on the left and right sides, then hold the drawers level and slide backwards into position.

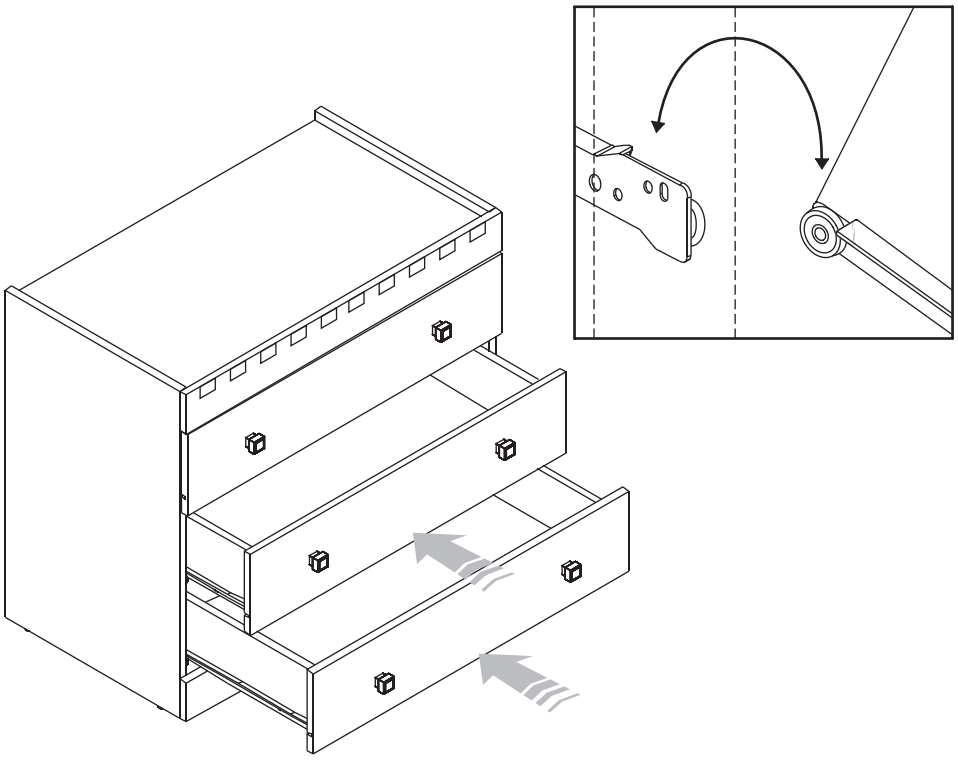

Step **14**

Fixing to wall.

Furniture must be fixed to a wall. Fix wall strap **P** to top of furniture using washer **O** and screw **T**. With help, move furniture into position.

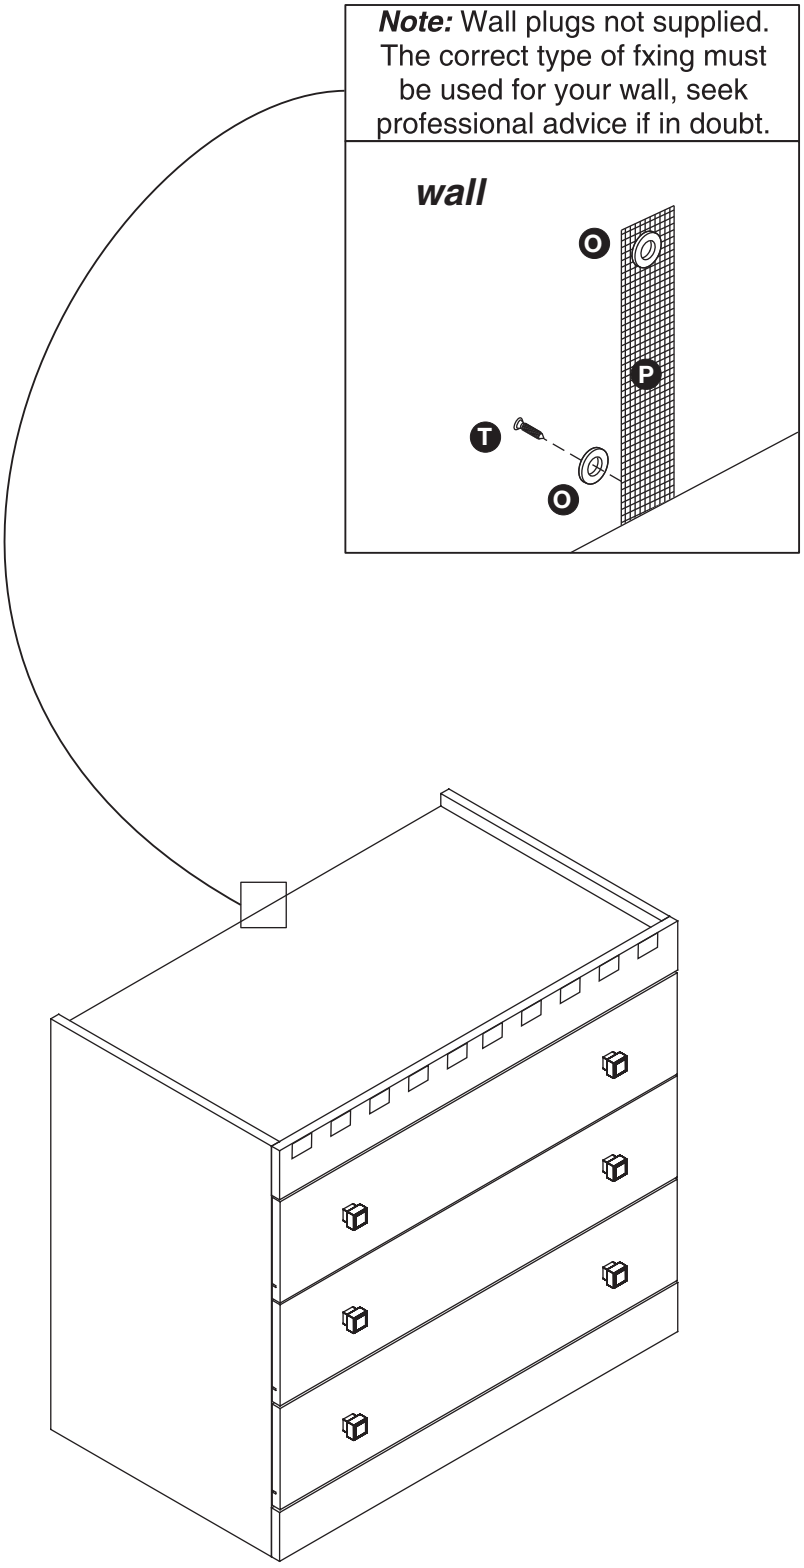


Assembly is complete.

If you need help or have damage or missing parts, call the **Customer Helpline: 03456 400 800**

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

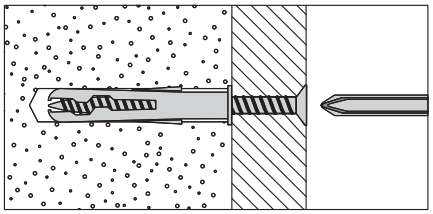


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

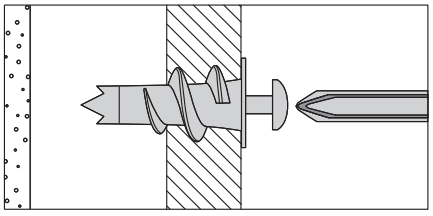


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

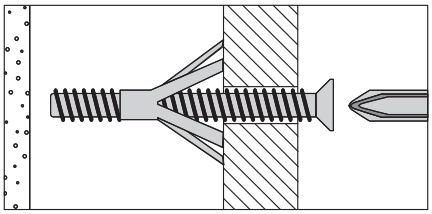


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

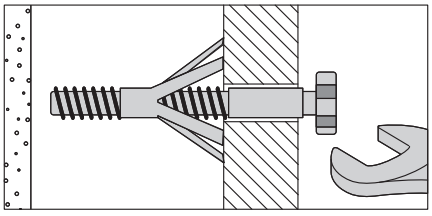


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

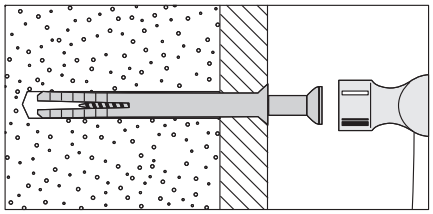

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

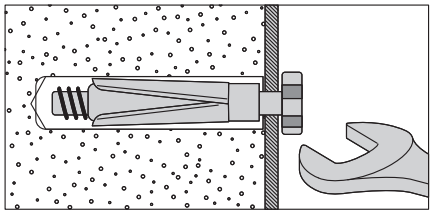


For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

412/5819

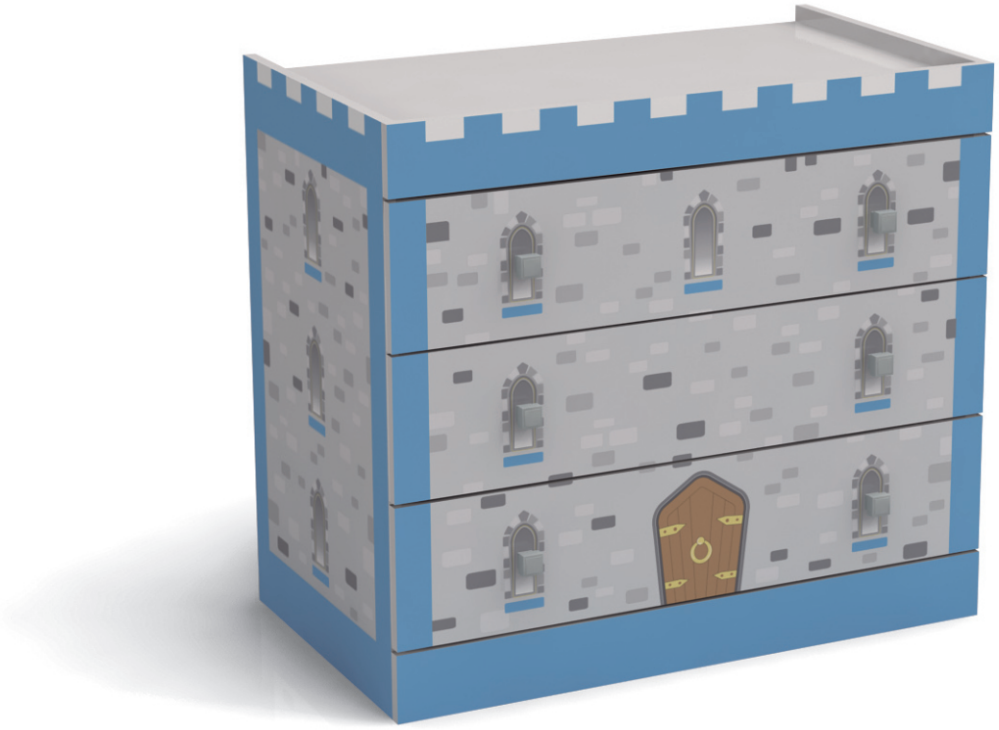

429/9790

