IMPORTANT: KEEP FOR FUTURE REFERENCE

Important — Keep these instructions for future reference

WARNING! Never leave your child unattended.Always keep child in view when in stroller.
WARNING! Ensure that all the locking devices are engaged before use.
WARNING! To avoid injury ensure that your child is kept away when unfolding and folding this product.
WARNING! Do not let your child play with this product.
WARNING! Always use the restraint system.
WARNING! Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
WARNING! Only one child for one stroller.
WARNING! Never place or hang parcels, bags or accessories on the handle or canopy. The stroller may tip over or the canopy may collapse.
WARNING! Use a harness as soon as your child can sit unaided
WARNING! This stroller is for use by one child in each seating area only.
WARNING! It affects the stability if you put anything on the handle bar.
WARNING! Ensure that your child does not sit in the stroller for longer than 1 hour at a time.
WARNING! This stroller is suitable for 0-36 months.
WARNING! For new born baby, do not recline seat back to sitting position (should be in full reclining position) as the baby doesn't have ability to control its head.
WARNING! When folding, unfolding or adjusting before using stroller, keep child away from moving parts.
WARNING! Do not put more than 15 kg in each stroller seat.
WARNING! Never place more than 5 kg in the per storage basket. If weight is exceeded, hazardous unstable conditions may exist.
WARNING! The thickness of the mattress in the seat can not be more than 25 mm.
WARNING! Please adjust the shoulder belt to the lowest level when the child is less than 6 months, and you must use the safety harness.
WARNING! If your child needs to sleep remove him from the car seat and place in carrycot or travel cot.
WARNING! This product is not suitable for running or skating
WARNING! Make sure the brake system is engaged when putting in or taking out the child.
WARNING! Only replacement parts supplied or recommended by the manufacturer/distributor shall be used.

Fisher-Price™

JOY OF LEARNING

Travel System User Guide



up to	33lbs
	15kg

Cat.NO.:412/6148

Helpline:03456 400 800

- Infinite backrest adjustment
- Removable front toy tray in order to take baby in and out
- Self-standing when folded, easy for carrying and storing

Fisher-Price STROLLER

If you need help or have damaged or missing parts, call the
Argos Aftersales Helpline:03456 400 800
This pushchair has been designed to comply with the EN1888:2012.
Country of origin: China
Argos LTD, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW

FISHER-PRICE and associated trademarks are owned by Mattel, Inc. and used under license from Mattel Europa B.V. ©2015 Mattel, Inc. All Rights Reserved.

WARNING! Please use the spare parts from manufacturer or distributor.
WARNING! This product is not suitable for running or skating.
WARNING! Please keep away from sources of fire.

MAINTENANCE:

To avoid risk of injury to your baby, please check and maintain the stroller periodically.


- If it does not fold or unfold smoothly, check carefully and operate as the instructions specified to avoid unwanted damage.
- When installing and using, you must make sure all parts are used as per instructions.
- Do not store this stroller or use it in areas exposed to high or low temperature or humidity.
- Do not overload this stroller.


CAUTION:

The iconography in this manual is to better illustrate the operation means and structure of the product. When there are some differences between the practical and the inset, the practical is confirmed. Please note that changes made be made to this product to improve the quality, structure and appearance of this product


Fisher-Price STROLLER


Parts list

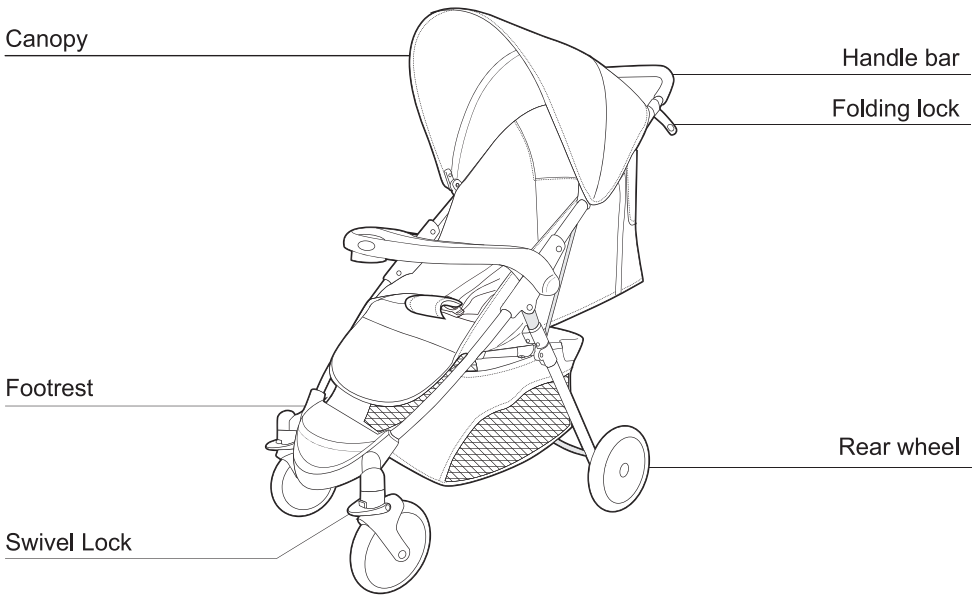

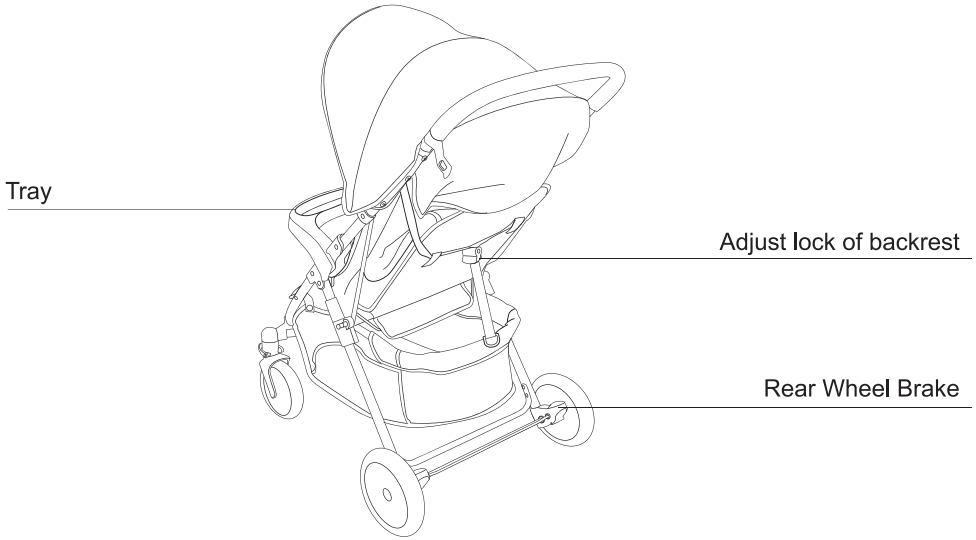

Open and Installing

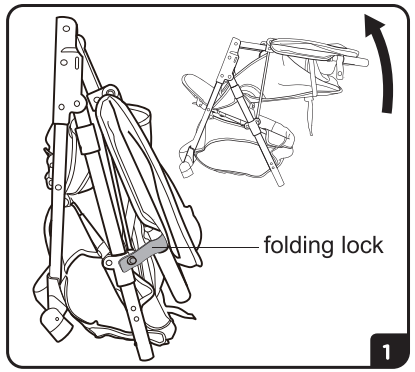


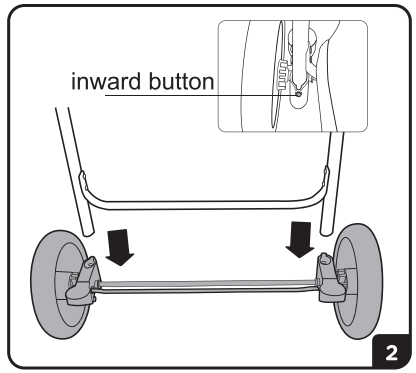


1 **Open the frame:** Release the folding lock at side of frame, hold the handle bar and pull the frame upwards, until you hear a ‘click’, then it is locked in position.

NOTE: Ensure that the frame has been opened before use.

2 **Rear wheels installation:** Align the rear wheel mount with spring pin on the rear bracket, then insert it until you hear a ‘click’ and the pins pop up. Depress the pins and then directly pull them out.

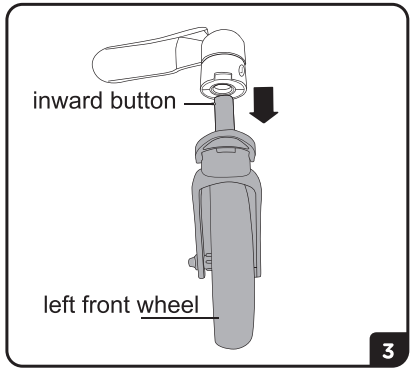


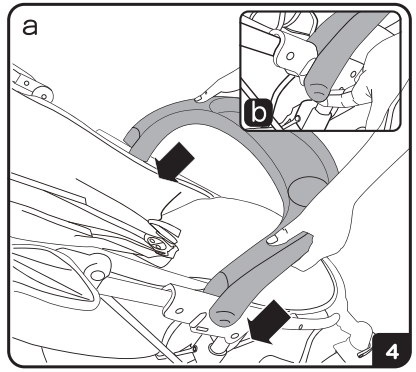


3 **Front wheels installations:** Insert the axle of front wheel assembly into the hole until it ‘clicks’. Depress the dismounting button and pull out to detach front wheels.

4 **Tray:** Set tray disk into the tray socket at the same time. When there is a "Click", the tray will be settled. Pull out the tray with your both hands at the same time, then it will be dismantled.

Using

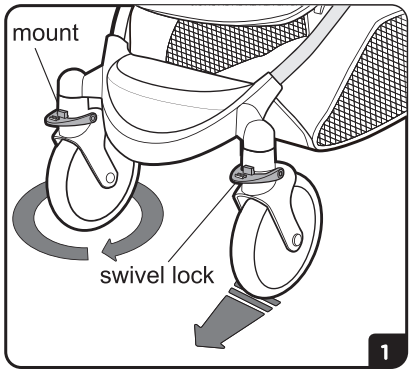


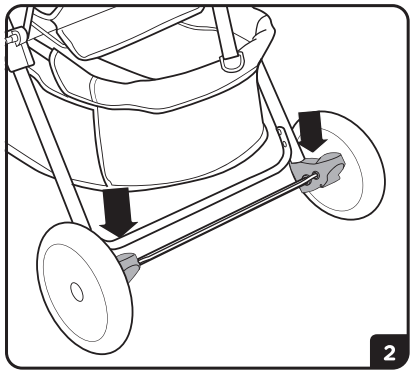


1 Swivel Lock: As shown in picture,pull up the swivel lock buttons on both sides,then the stroller can go in a straight line. Push down swivel lockbuttons on both sides, then the wheels can go freely in any directions.


2 Rear brake: As fig 2, Step down on either left or right brake pedal to set the brake, and lift it up to release.

NOTE: Both the left and right brake pedals should be pressed down when the stroller is not moving.

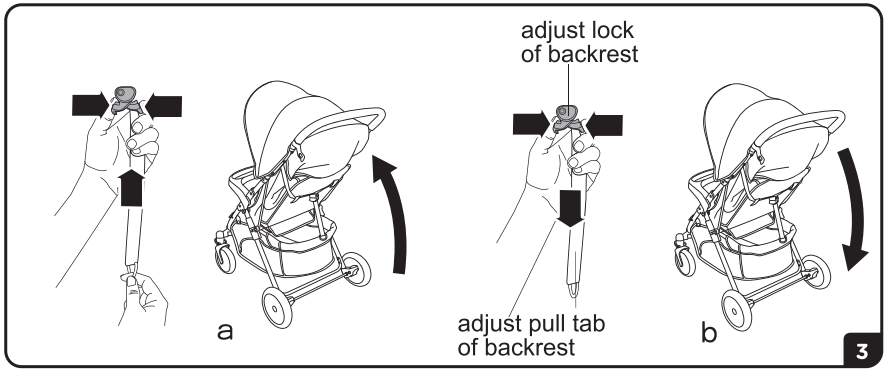


3 Backrest adjustment: To raise seat, hold the pull tab of backrest with one hand, depress the adjust lock and push forward with another hand, then backrest can be adjusted to a more upright position. To recline seat, depress the adjust lock and take the pull tab backward.

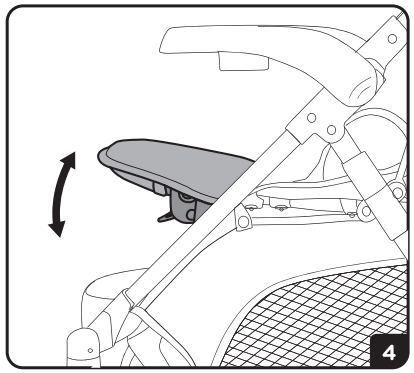

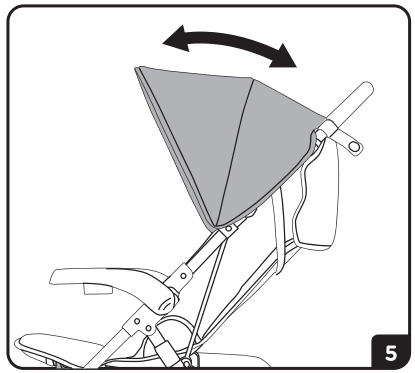

4 Leg rest: Depress the adjust buttons on both sides to adjust leg rest as Figure 4.

5 Adjust canopy: Pull or push the canopy strip front per picture, the canopy can be adjusted.

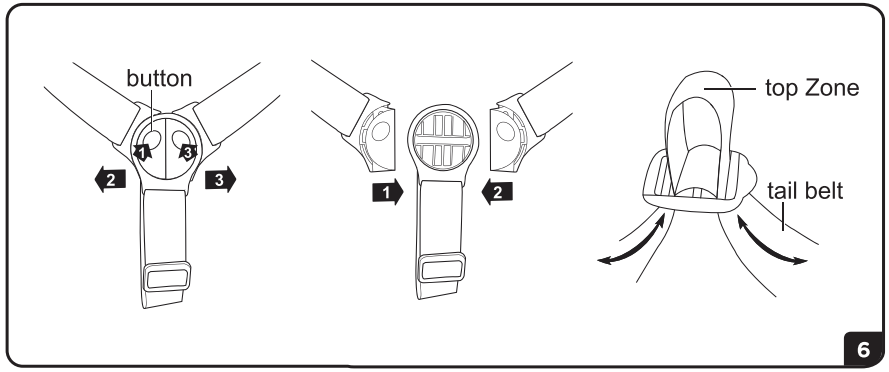

6 Harness system


Release: press the two buttons in the middle to release.

Fasten: insert 2 clips into the socket until "clicks".

Harness adjustment


Shorten: draw out top zone, then draw out tail belt, lock it.

Elongate: draw out top zone, then shorten tail belt, then lock it.

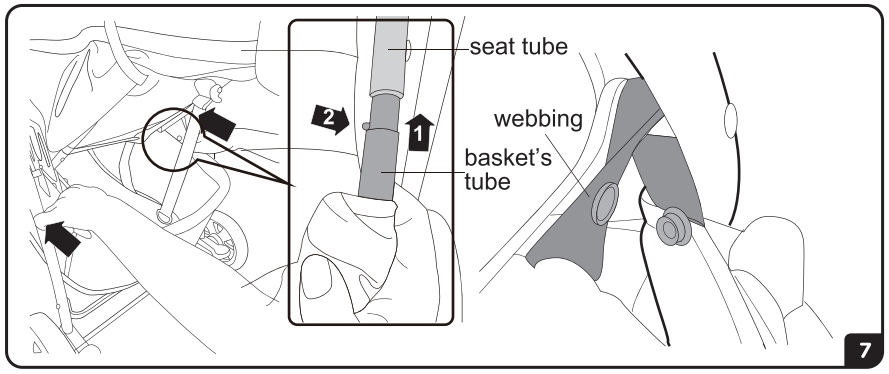


7 Basket installation: Align the basket's tube mount with pin on the seat tube, then insert it until you hear a 'click' and the pin pops up. At the end bypass the basket before buckling around on both sides of the support bar on either side of the cloth inside, button on the buckle.

Folding

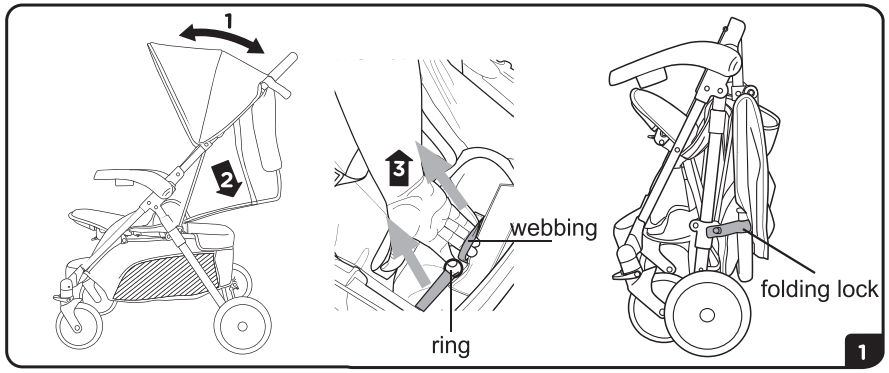


1 Folding:
step 1 Close the canopy first
step 2 adjust backrest at the lowest position
step 3 lift up the two fold straps under the pocket in the seating area at the same time as shown until the folding hook closes up. Self-standing after folding.


Car seat installations

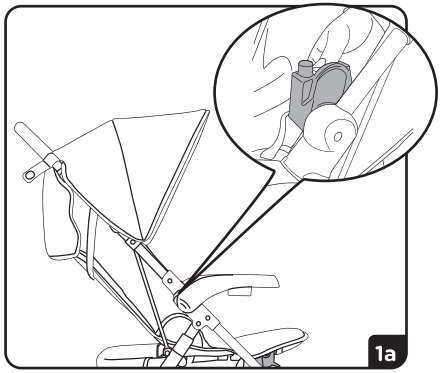


1a Install car seat adapter
Slide adapter into slot on the inside of hinge. Repeat for the other side.
Please note that releasing button of adapter should be on the front side.

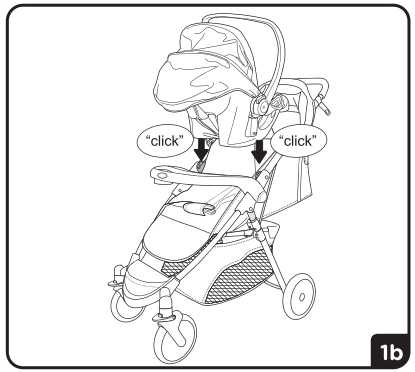


1b Install car seat
Close canopy. Adjust backrest to the lowest position. Put car seat into adapters until it clicks in.

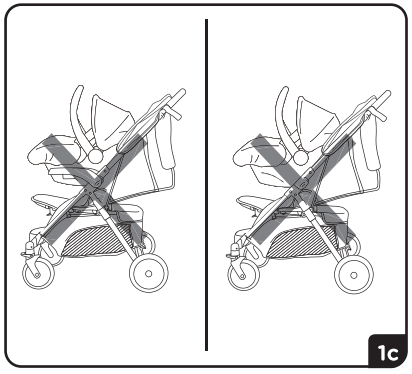

1c Note: Baby in the car seat should face parent during pushing.
Do not install car seat forward facing when bumper bar is removed.

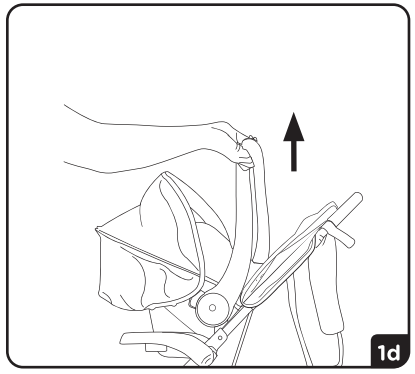

1d Lift car seat to check if it is install -ed properly and locked.

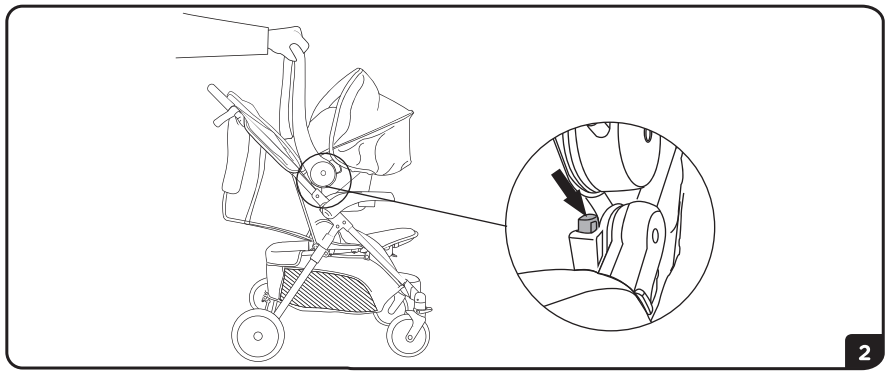

2 Take off car seat

Press down releasing button on left adapter(forward facing), then press down releasing button on right side, lift car seat at the same time to take it off stroller.

Care and Maintenance

General

This pushchair was designed and manufactured with quality materials and craftsmanship.
Always use the safety harness.

Lubricate moving parts regularly, especially the wheels, and lower parts of the chassis that tend to collect dirt.

Inspect regularly for:

- Worn parts，torn materials or stitching .
- Loose screws，bent or broken frame parts .
- Broken, damaged or missing parts.

Should any of the above be evident do not use and contact the Helpline:03456 400 800 for advice.

Care and Maintenance:

Fabric parts may be cleaned in accordance with the fabric care labels. Do not machine wash.

Seat: Sponge clean only.

Canopy/Basket:Hand wash only.

Do not leave the stroller exposed to heat i.e. by a radiator or in direct sunlight.

If the stroller chassis parts have been exposed to salt water we recommend that they be rinsed down with soapy water as soon as possible, afterwards clean with a sponge.
Do not fold or store the product while wet and never store a damp environment as this can cause mildew to form.