450W Panel Heater

INSTRUCTION MANUAL



IT IS IMPORTANT THAT YOU READ THESE INSTRUCTIONS BEFORE USING YOUR NEW PANEL HEATER AND WE STRONGLY RECOMMEND THAT YOU KEEP THEM IN A SAFETY PLACE FOR FUTURE REFERENCES

Thank you for choosing a Argos Value Panel Heater. It is a remarkably versatile product, which offers a choice of 450 watt boosted heating in winter. This Argos Value heater has been designed and manufactured to high standards of engineering and with proper use and care, as described in this manual, this appliance will give you years of useful service. Please read these instructions carefully.

GENERAL CARE AND SAFETY GUIDE

- Read all instructions before using this appliance and keep them for future reference.
- Use only the voltage specified on the rating plate of the heater.
- Do not cover the heater in any manner as the appliance may overheat and become a fire risk.
- Keep all objects at least 1.5 meter from the front, sides and rear of the appliance when it is using on the floor
- Do not place appliance close to a radiant heat source.
- Do not position the heater in front of, or immediately below, a wall socket.
- Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.
- Do not use the appliance to dry clothes.
- Do not insert or allow foreign objects to enter any ventilation, as this may cause an electric shock, fire or damage to the appliance.
- Do not operate any appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical or mechanical adjustment, service or repair.
- This appliance is intended for household use only and not for commercial or industrial use.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- The most common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning air vents and grilles.
- Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
- Do not connect the appliance to the mains voltage until completely assembled and adjusted.
- This appliance heats up slightly when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Switch off and use handles where provided when moving.
- Always operate on a flat horizontal surface.
- Do not operate with cord set coiled up as a build up of heat is likely, which could be sufficient to become a hazard.
- The use of an extension cord with this appliance is not recommended.
- Do not remove plug from power socket until the appliance has been switched off.
- Do not remove plug from power socket by pulling flex - always grip plug.
- Always unplug appliance when not in use.
- Do not allow cord to come in contact with heated surfaces during operation.
- Do not run cord under carpeting, throw rugs or runners etc. Arrange cord away from traffic areas so that it will not be tripped over.
- Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area.


- Do not store appliance while it is still hot.
- This appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure they do not play with the appliance.
- The appliance must not be located immediately below a socket-outlet.
- Do not use this appliance in the immediate surrounds of a bath, a shower or a swimming pool or other liquids.
- If the supply cord is damaged, it must be replaced by a qualified electrical person in order to avoid a hazard.
- Do not use this appliance outdoors, or on wet surfaces. Avoid spilling liquid on the appliance.
- Always switch off the heater at the controls and at the power outlet then unplug heater from the power outlet when not in use.
- Do not run the cord under carpeting or cover the cord with run runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.
- This applianceis not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

CAUTION

If you use this heater in conjunction with a thermal control, a program controller, a timer or any other device that switches on the heater automatically, remember to observe all safety warnings at all times.

KNOWING YOUR HEATER

1. Hook
2. Foot
3. Back cover
4. ON/OFF switch
5. Front cover
6. Power cord

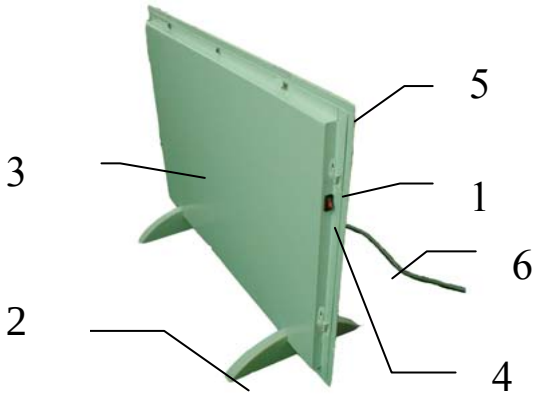

FITTING THE FEET

1. Remove all the packaging from the heater.
2. Remove the 2 feet and the screws from the packaging.
3. Place the heater upside down.
4. Place the feet over the base of the heater align the holes in the feet with the 2 small holes in the base of the panel heater and tighten the screws.
5. Turn the heater the correct way up – your heater is now ready for use.

WALL MOUNTING (Optional)

Note : It will be useful to ask someone to help you for at this stage.

Prior to fixing the heater, ensure that there is at least a 50mm clear space around all sides of the heater to any fixtures and furniture and 150mm to any fabric and soft furnishings.

Ensure the wall is sound and can support the heater. Choose a mounting location away from out of easy reach of children. Draw two horizontal lines apart 200mm on the wall and mark off two vertical lines 585mm apart. Ensure there is at least a 50mm clear space around all sides of the heater to any fixture and furniture and 150mmm to any fabric and soft furnishings. Drill a hole at each intersection and fit the wall plugs. Fix the screw to the holes leaving 5mm of the screw exposed. Hang the heater onto the screws. Ensure the heater is fixed properly before connect to the mains.

BEFORE DRILLING ANY HOLES ENSURE THAT THEIR PORITION IS AWAY FROM HIDDEN CABLES AND PIPES.

OPERATING INSTRUCTIONS

1. Choose a suitable location for the heater, taking into account the safety instructions.
2. Insert the plug of the heater into a suitable mains socket.
3. Turn on the heater by switching the ON/OFF switch on the side panel to "I".
4. Turn off the heater by switching the ON/OFF switch on the side panel to "0".

CLEANING

Before cleaning your heater, disconnect the power by removing the plug. Do not use detergents, abrasive cleaning powder or polish of any kind as this may cause damage to the paint work. Allow the heater to cool, then wipe with a dry cloth to remove dust and a damp cloth (not wet) to clean off stains. Be careful not to allow moisture into the heater.

OVERHEAT SAFETY DEVICE

Your heater is fitted with a safety device the switches off the heater in the event of overheating. Should the heater stop working, turn the heater off. Wait at least 10 minutes for the protection system to reset before attempting to restart the heater. If the heater fails to operate or the safety device switches the heater off again, return heater to your nearest service center for examination or repair.

CARE AND MAINTENANCE

The heater requires regular cleaning to ensure trouble free operation:

- Always turn off unplug the heater from the mains supply before cleaning.
- Use a damp cloth to wipe the exterior of the heater to remove dust and dirt.
- Ensure the heater is dry before plugging back into the mains supply.
- If the heater has collected dust or divert inside the unit or around the element, have the unit cleaned by a qualified service agent. Do not operate the heater in this condition.

CONNECTION TO POWER

- Before connecting, check that the voltage indicated on the rating label of the appliance corresponds with the mains voltage in your home. If this is not the case, consult your dealer and do not use.

- This product is fitted with a 13A plug complying with BS1363. If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and appropriate plug fitted following the wiring instructions. The plug removed must be disposed of safely as insertion into a mains socket is likely to cause an electrical hazard.

For your own safety read the following instructions carefully before attempting to connect this unit to the mains.


You should only plug the appliance into a 230V-240V AC, 50Hz supply. Connecting it to other power sources may damage the appliance.

The wires in this mains lead are coloured in accordance with the following code:
BLUE = NEUTRAL
BROWN=LIVE
GREEN + YELLOW = EARTH

IMPORTANT

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The blue wire must be connected to the terminal marked with the letter N or coloured black.
- The brown wire must be connected to the terminal marked with the letter L or coloured red.
- The green and yellow wire must be connecting to the terminal marked with the letter E or the earth symbol. (⏚).

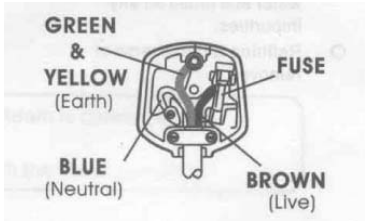

If a 13 Amps (BS 1363) plug is used, it must be fitted with a 13 Amp Fuse conforming to BS1362 and be ASTA approved. If in doubt consult a qualified electrician who will be pleased to do this for you.



Caution
To prevent electric shock disconnect from the mains before removing the cover

This unit must be earthed. This equipment must be disconnected from the mains when not in use. Do not allow this unit to be exposed to rain or moisture.



WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.

Argos

PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalided if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW