
Assembly Instructions

Step 1
Attching seat frame and back frame


a. fix seat frame 6 and back frame 5 by using screw A

b.put the cushion onto the metal frame.

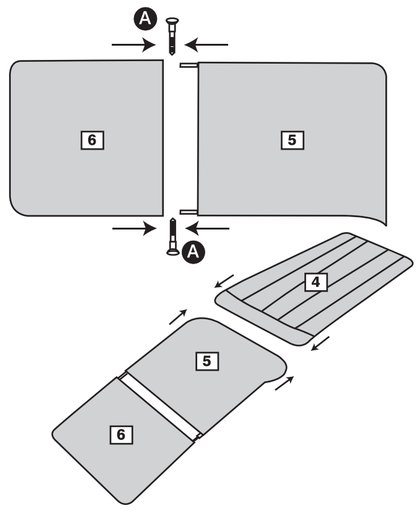


Step 2
Attaching the armrest

Fix support bars 3 onto armrest 1 by using screw B and nut D. then fix support bar 3 onto armrest 2 by using screw B and nut D

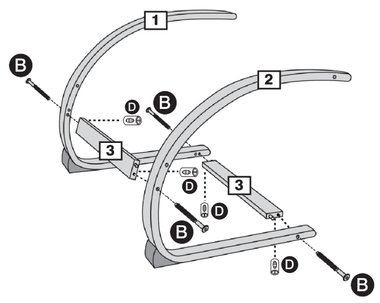

Step 3
Attching the cushion

Using screw C to fix the cushion onto the armrest, finally tighten all the screws by using Allen key.

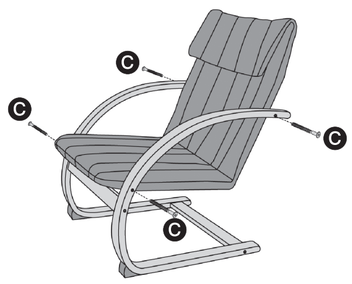

BENTWOOD CHAIR

Assembly Instructions - Please keep for future reference

404/9768

424/4240



Dimensions

Width - 44
Depth - 50
Height - 65
Seat Height - 28

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call zhe Argos Aftersales helpline 0345 640 0800 489-499 Avebury Boulevard Milton Keynes MK92NW,Argos Limited

Issue 2 - 10/04/14

⚠ Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Notes:

- Maximum load for this chair is 80kgs,personalinjury could result if the chair is subjected to higher load.
- Do not use this chair on uneven ground.
- Adult assembly is required.
- The chair is suitable for children under 3-10 years old.
- Please retain the information relatin to this product for further reference.
- Always follow the instructions provided for the assembly,use and maintance of the product.
- To avoid puncturing place on a clean even surface free from stones and other sharp debris.


- Argos Co.,Ltd
489-499 Avebury Bovlevard Saxon Gate West,Central Milton Krynes, Bucks,Mk92NW

Components

Please check you have all the Components listed below

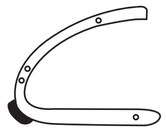


1 Right armrest（45 x 39cm）

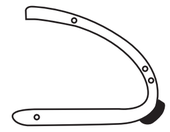


2 Left armrest（45 x 39cm）




3 Support bar X 2（36 x 4cm）

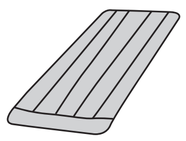

4 Cushion（97.5 x 39cm）

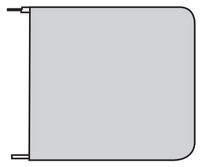

5 Back frame（36 x 47cm）


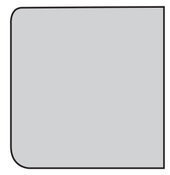


6 Seat frame（33 x 35cm）

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline:** 0345 640 0800

Please check you have all the fittings listed below

A  15mm Screw x 2 (The screws have been attached on the back frame 5)	B  80mm Screw x 4	C  55mm Screw x 4
D  Nut x 4	E  Allen key x1	

Ruler - Use this ruler to help correctly identify the screws

