
Cheshire 3 door 3 drawer wardrobe

Assembly Instructions - Please keep for future reference

4271660

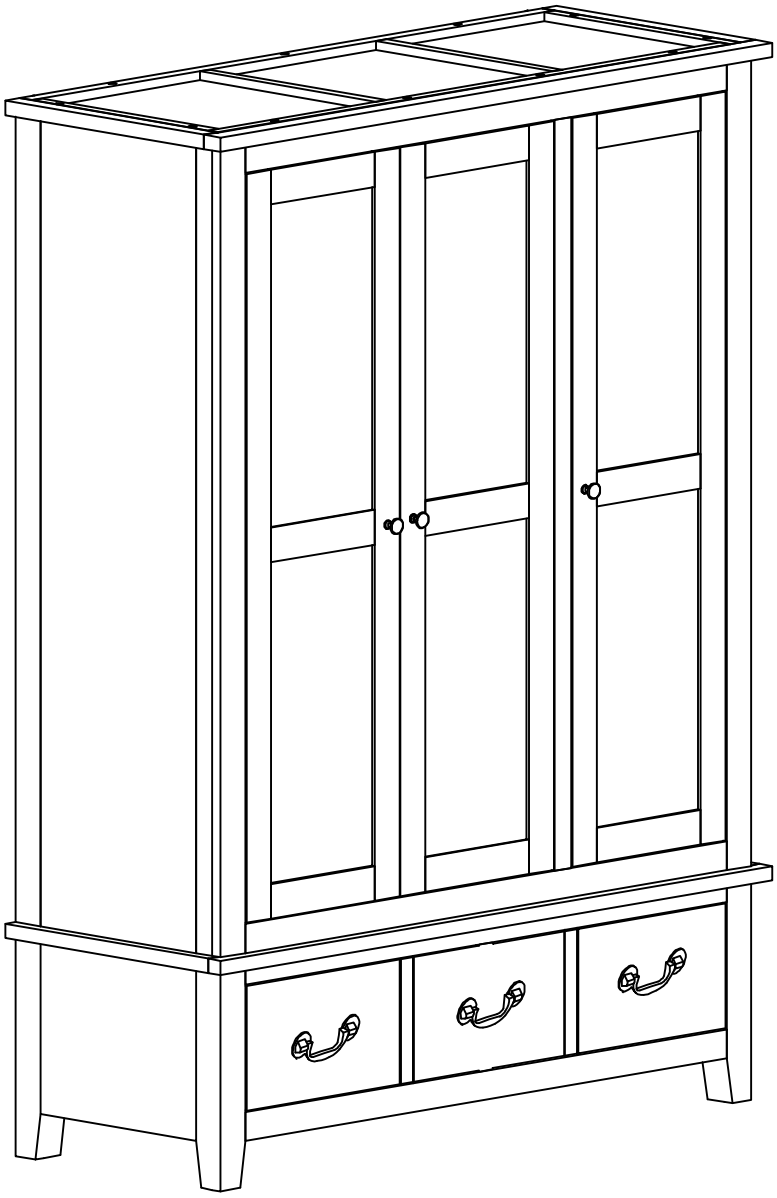

Dimensions

Width - 131 cm
Depth - 52 cm
Height - 183 cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 640 0800**

issue 1 - 29 04 15

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

◦ Check you have all the components and tools listed on pages 2 and 3.

◦ Remove all fittings from the plastic bags and separate them into their groups.

◦ Keep children and animals away from the work area, small parts could choke if swallowed.


◦ Make sure you have enough space to layout the parts before starting.

◦ Do not stand on the product, this could cause damage.

◦ Assemble the item as close to its final position (in the same room) as possible.

◦ Assemble on a soft level surface to avoid damaging the unit or your floor.

◦ Parts of the assembly will be easier with 2 people. Look for this logo.

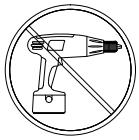

◦ We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.

◦ Dispose of all packaging carefully and responsibly.

Solid Wood / Real Wood Veneers

- This product has been finished using natural materials. As a living material, you may notice some variation in the grain and colour shade between the different components.
- Unlike a synthetic or man-made material which has a uniform finish, a feature of natural wood is its variation in grain and colour. We wish to reassure you that this is quite normal and is not the result of any manufacturing fault.
- Where sheets of wood are joined together, a line may be detected. Again, this is normal and is not an imperfection.
- Nature wood and veneers often have random pale markings in the grain, there are medullary rays which are a natural unique feature of the wood.


Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- Always use a non-silicone based furniture polish. Silicone in furniture polishes can break down the lacquer finish.
- Use non-silicone bees wax to maintain the shine. Do not use furniture polish.
- Do not put hot dishes directly on the surfaces of the item.
- From time to time check that there are no loose screws on this unit.
- Any spills should be removed immediately with a soft clean damp cloth and dried immediately.
- Avoid keeping furniture in direct sunlight or close to any heat sources as this can cause cracking, discoloration or warping.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.
- Ensure the product is protected with mats and coasters when items are placed on the surfaces, to prevent scratching or demage.
- Never drag pieces of furniture across the floor as this will cause damage to the joints.


Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 0345 640 0800**


Please check you have all the parts listed below

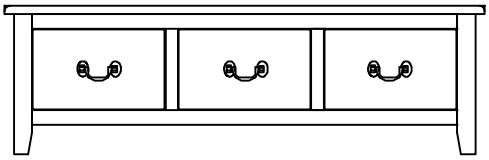


1 Base (131 x 40.5 cm)

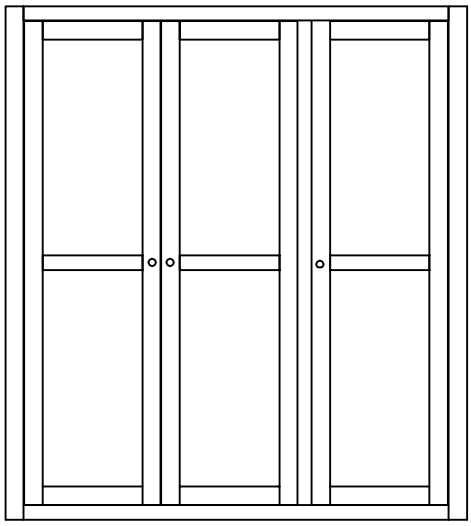


2 Front panel
(126 x 140.2 cm)

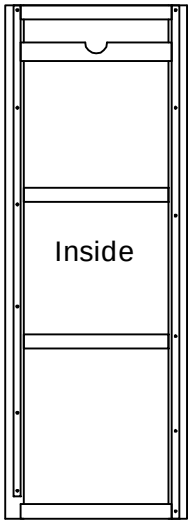


3 Side panel (Right)
(49.5 x 140.2 cm)

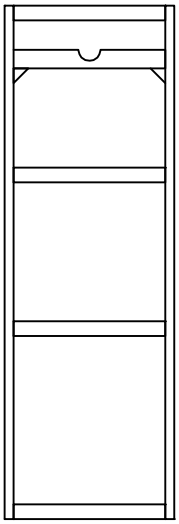

4 Divider
(46.4 x 140 cm)

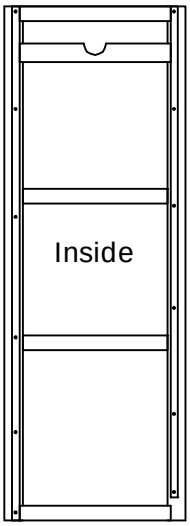


5 Side panel (Left)
(49.5 x 140.2 cm)

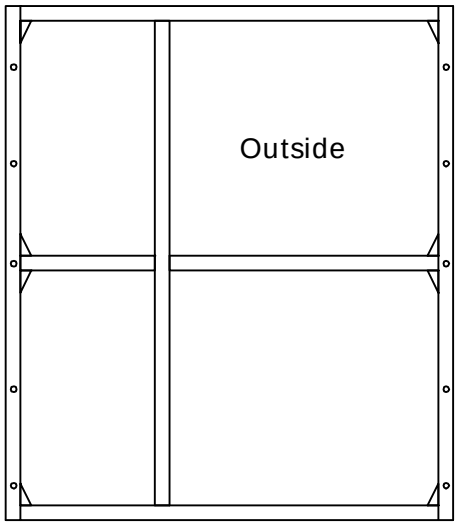

8 Back panel
(122 x 140.2 cm)

6 Hanging rail (Short)
(41.4 x 3 cm)

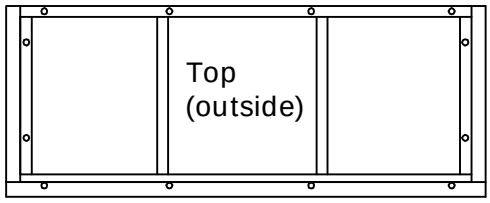

7 Hanging rail (Long)
(81.5 x 3 cm)




9 Top panel
(131 x 52 cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 0345 640 0800**

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  M6x35 Bolt X 40	B  M4X15 Screw X 3	C  M4x40 Screw x 4
D  M4x25 Screw X 3	E  Handle x 3	F  M6.5 Washer x 30
G  Allen key x 2	H  Wall strap x 2	I  M4x25 Screw x 2

Tools required




Phillips screwdriver



Ruler/tape measure

Ruler - Use this ruler to help correctly identify the bolts



Assembly Instructions

Step 1

Assembling side panels and divider


With help, carefully lay front panel [2] face down onto the floor.


Warning: Front panel [2] is heavy. Lift with care. Also beware of the doors opening!

With help, assemble side panels [3], [5] and divider [4] to front panel [2] using fixings (A) and (F) as shown.

Note: Ensure hanging rail slots in all panels are correctly aligned at the top.



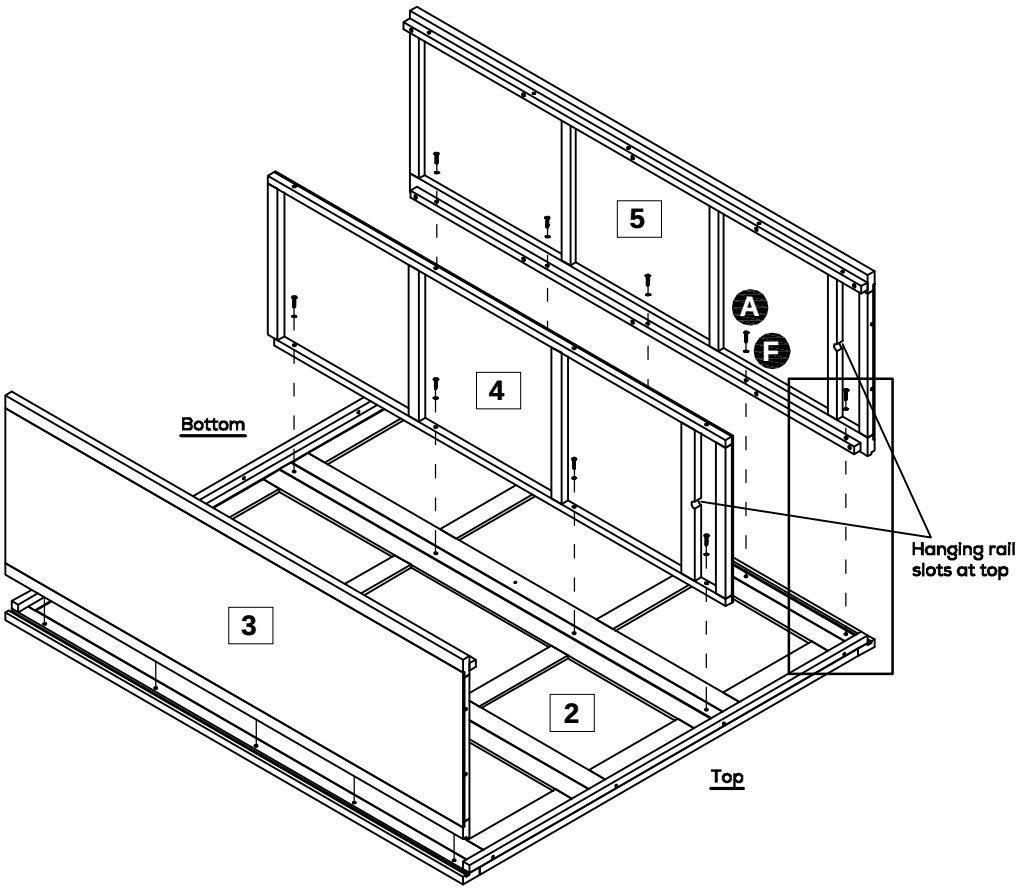

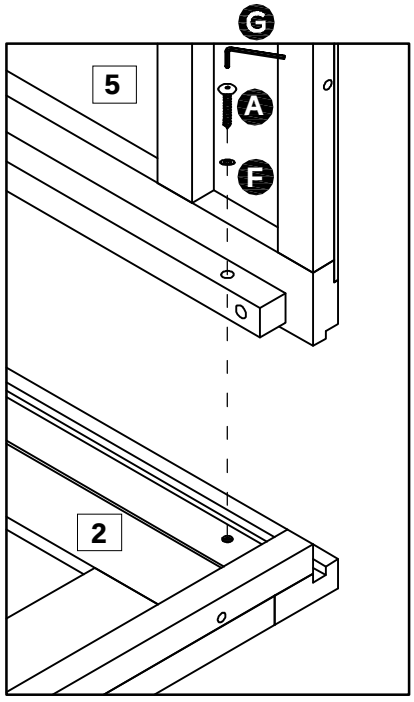



Assembly Instructions

Step 2

Assembling back panel

With help, assemble back panel 8 to side panels 3 and 5 using fixings A and F.

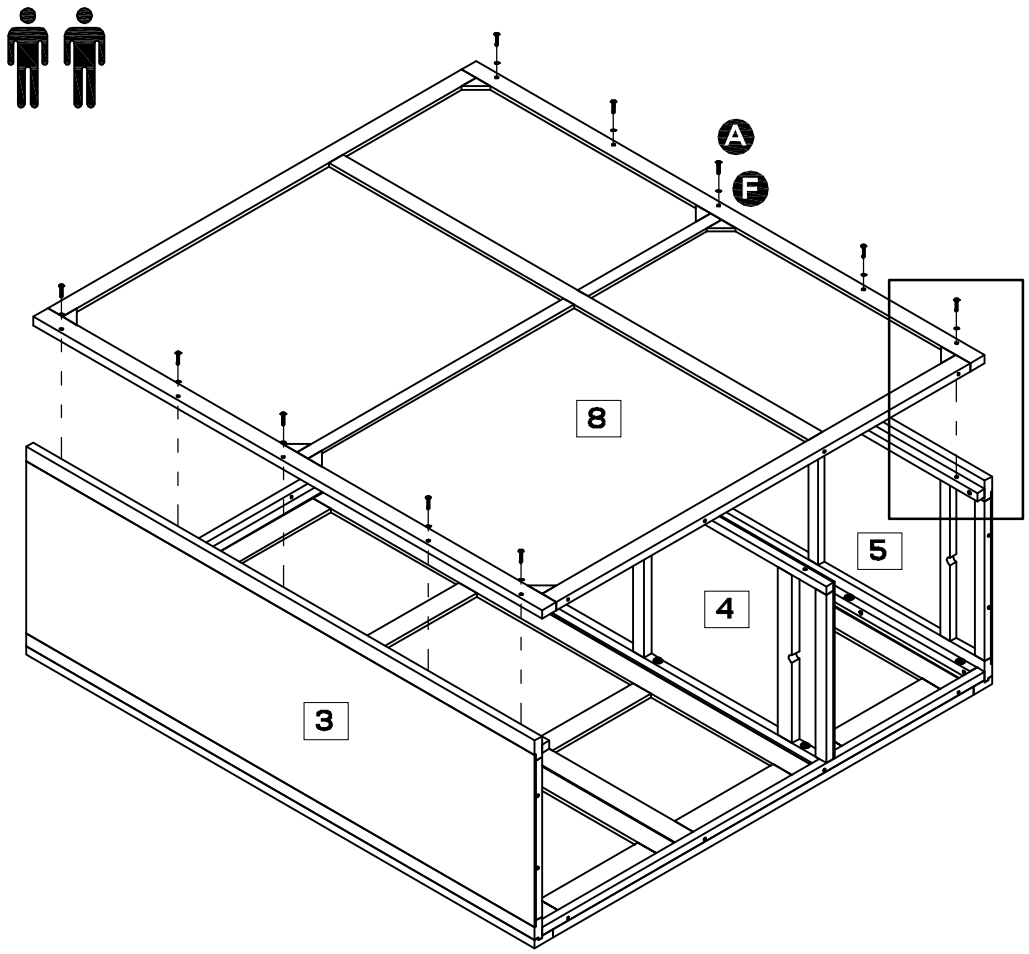

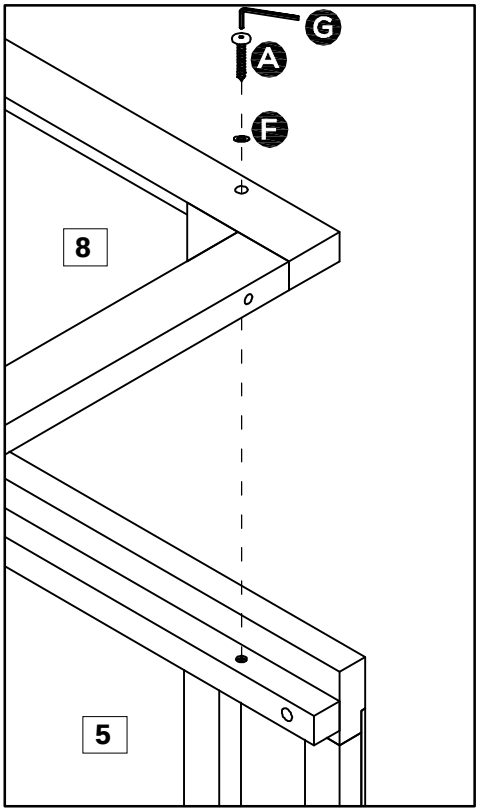



Assembly Instructions

Step 3

Assembling top panel

Carefully locate top panel 9 into position and secure using fixings A .

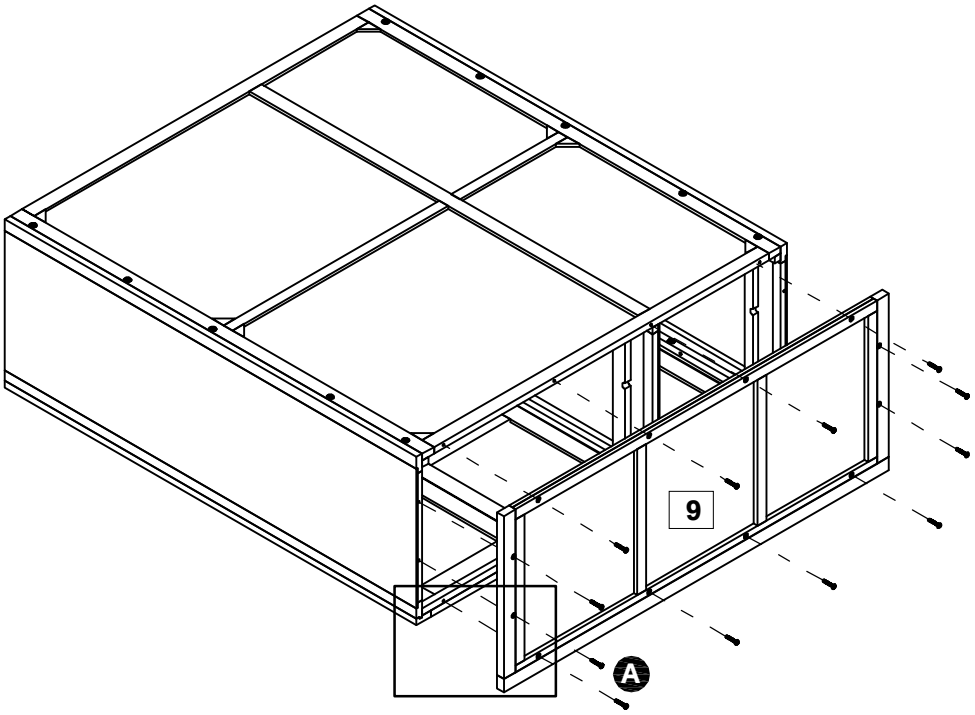

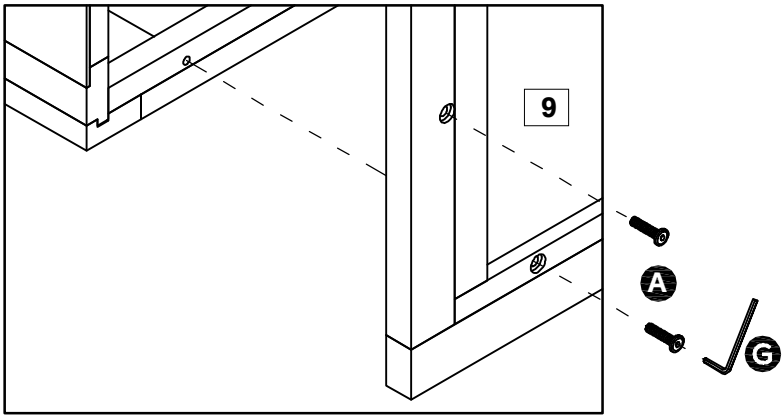

Assembly Instructions

Step 4


Securing divider


With help, stand the frame upright.

Warning:
The wardrobe is heavy. Lift with care and beware of opening doors.

Open the doors and secure divider 4 to back panel 8 using fixings A and F.



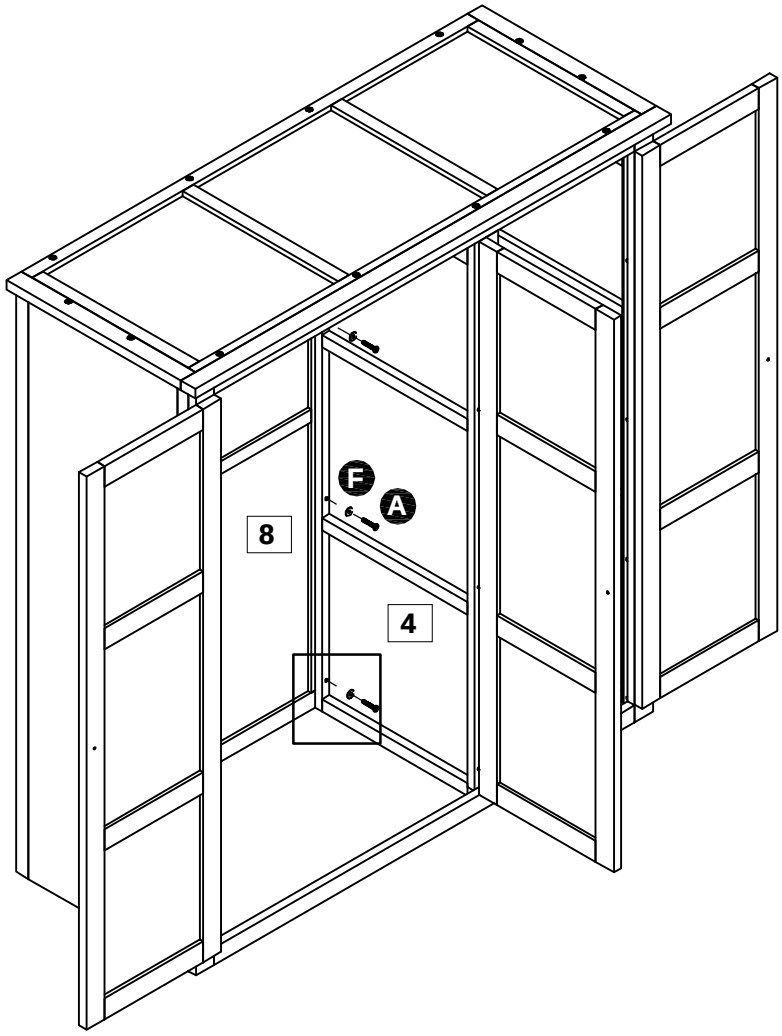

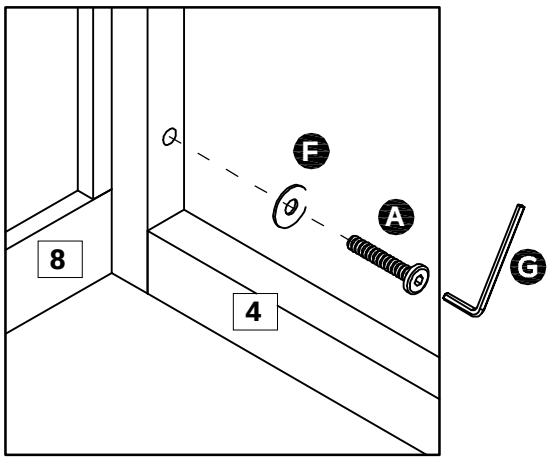


Assembly Instructions

Step 5

Locating hanging rails

Locate both hanging rails [6] and [7] into the slots in the side panels and divider as shown.

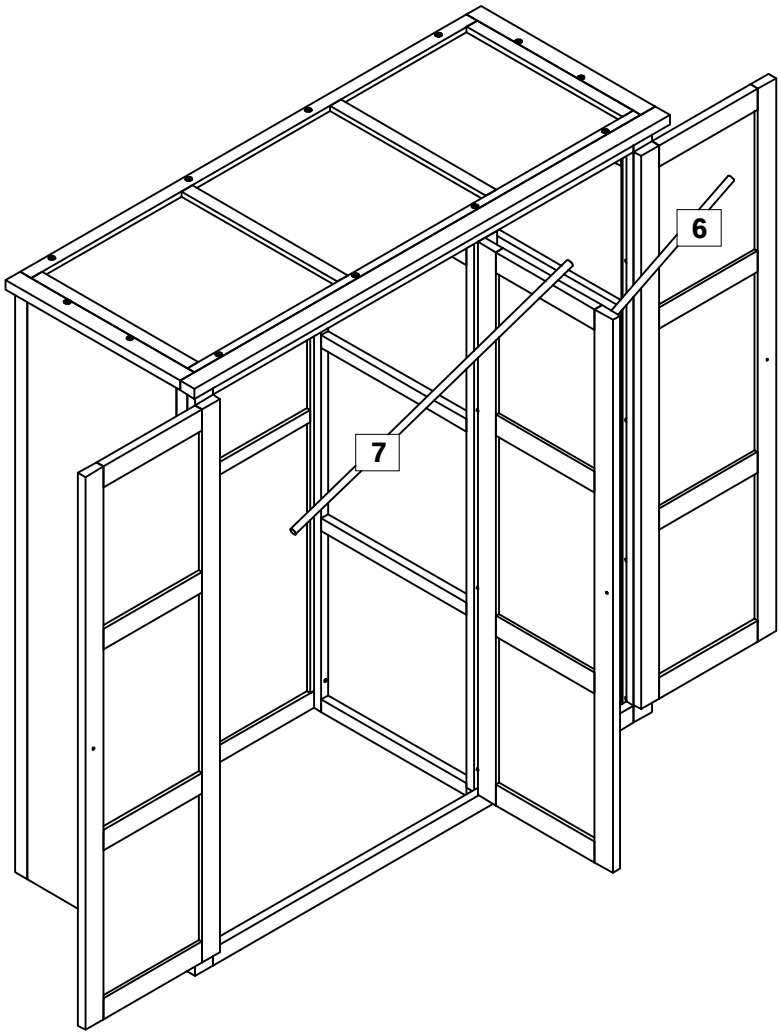

Assembly Instructions

Step 6

Locating upper unit onto base


With help, carefully locate the upper unit into position on top of base 1 .


Warning:
The wardrobe is heavy. Lift with care to avoid injury. Also beware of opening doors.

Carefully align both units equally at both sides and flush at the back.

Secure the two units together using screws B as shown.



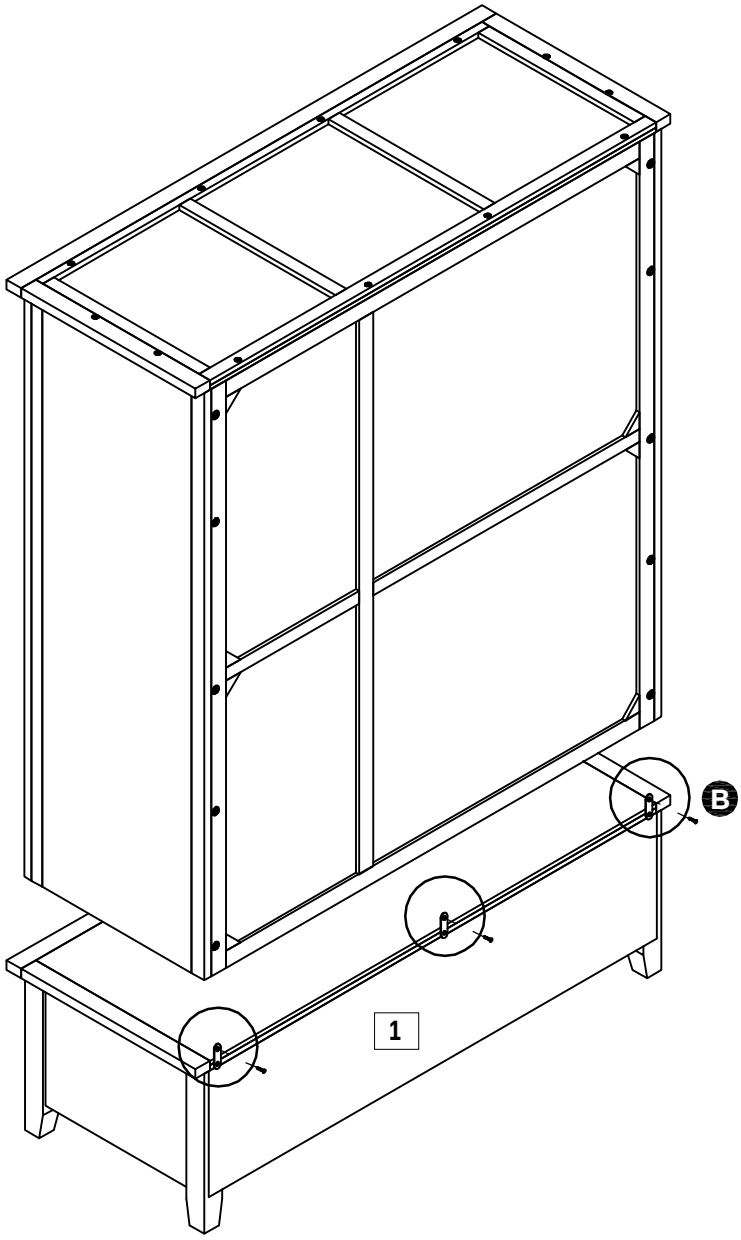

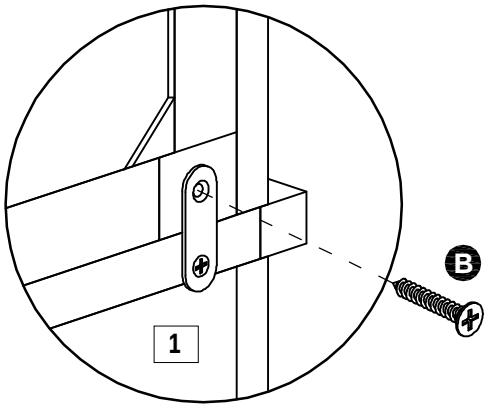


Assembly Instructions

Step 7

Securing upper unit

Open the 3 doors as shown.

Further secure the upper unit using screws C as shown.

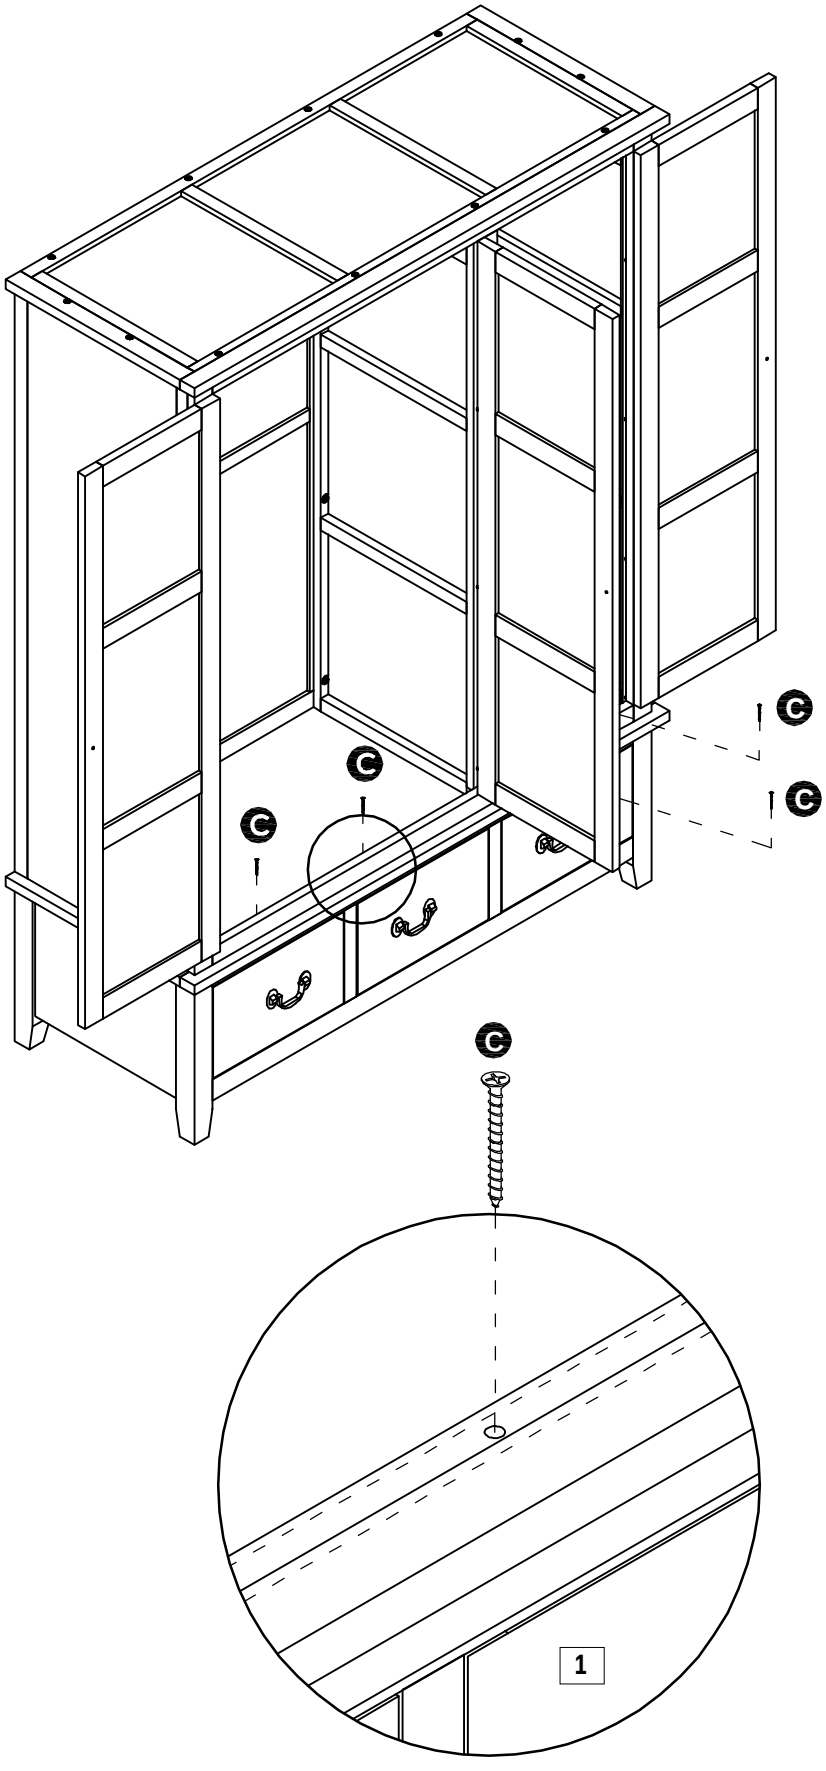


Assembly Instructions

Step 8

Assembling handles

Assemble handles E to doors using screws D.

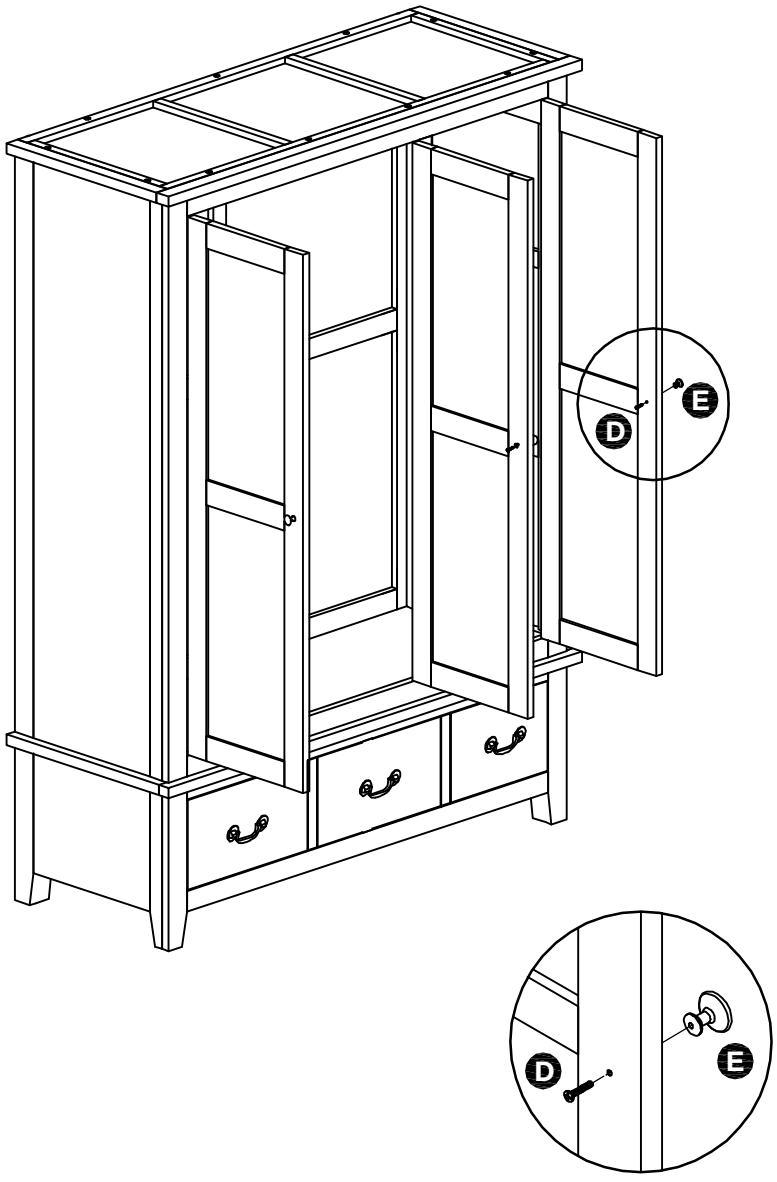

Assembly Instructions

Step 9



Fixing to the wall

It is recommended that the unit is fixed to the wall to ensure stability.

Assemble wall straps (H) to the back of the unit using fixings (I) and (F).

With help, move the unit to the desired location. Mark the fixing hole locations on the wall and remove the unit.


Drill the wall and fit suitable plugs for your wall type.

Note: Wall plugs are not supplied.

Warning: Before drilling. Check the wall for hidden pipes or cable.

Re-position the unit and secure the wall straps to the wall.

Note: Screws are not supplied.

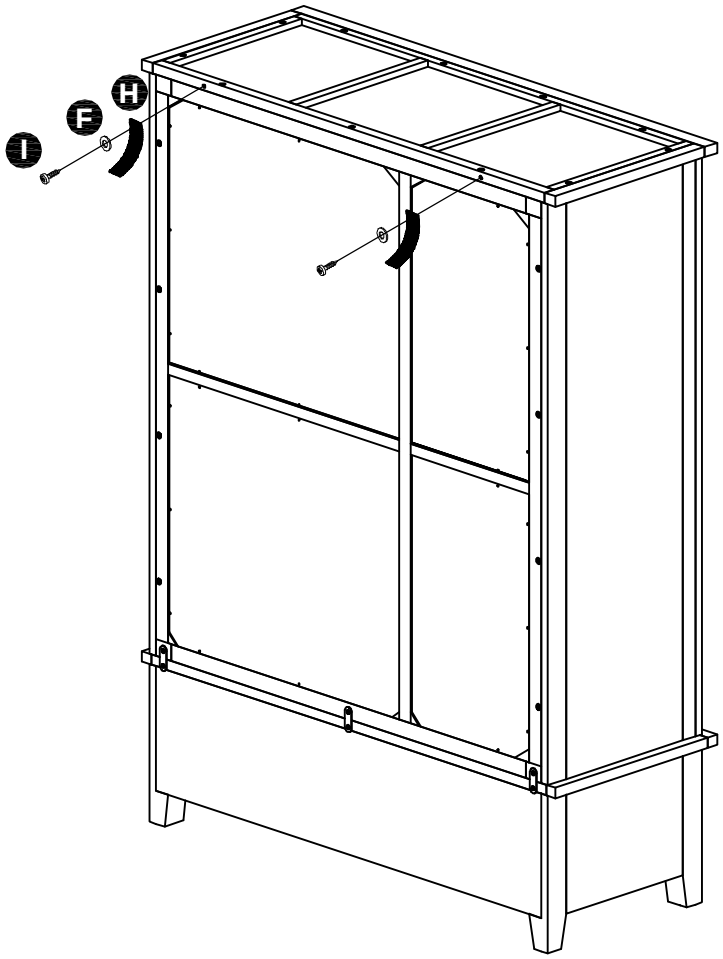

Assembly is complete

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 640 0800**
Home Retail Group, 489-499 Avebury Boulevard, Saxon Gate West. Central Milton Keynes MK9 2NW