
Mia Hearts / Stars 2 Door Wardrobe

Assembly Instructions - Please keep for future reference


Hearts 2463834

Stars 4553326

Hearts

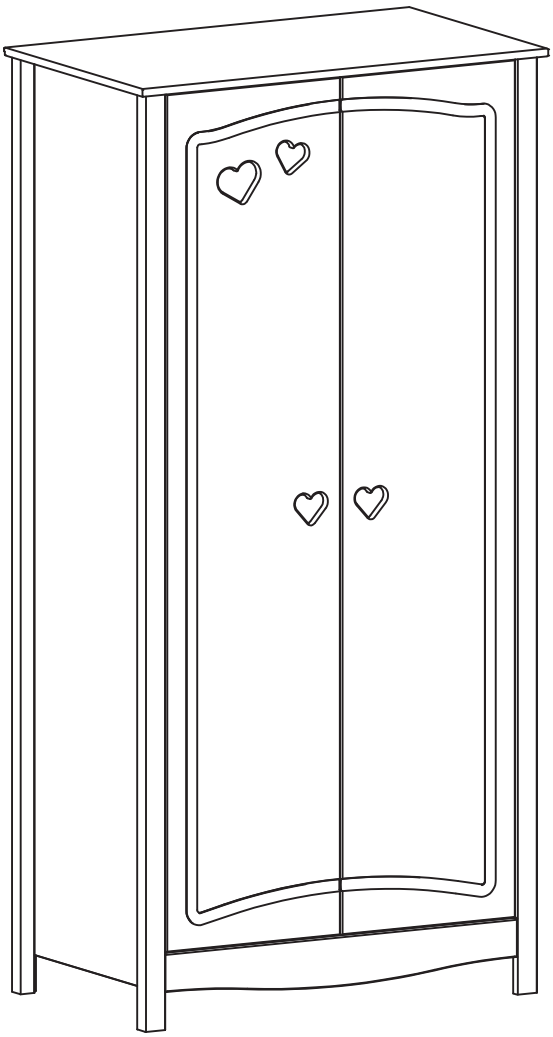

Stars

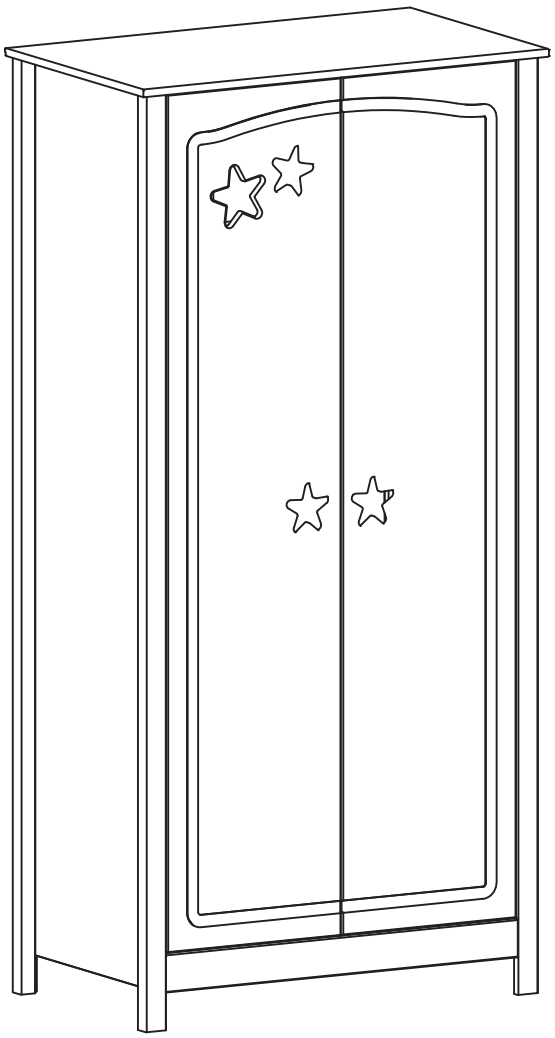

Dimensions

Width : 88.5 cm
Depth : 52.3 cm
Height: 181.2 cm

Assembly Instructions - Please keep for future reference

If you need help or have damaged or missing parts, call the **Argos Customer Helpline: 03456 400 800**

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Argos Customer Helpline: 03456 400 800**


Please check you have all the panels listed below

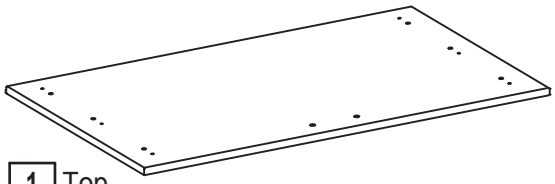

1 Top
(88,5 cm x 52,3 cm)

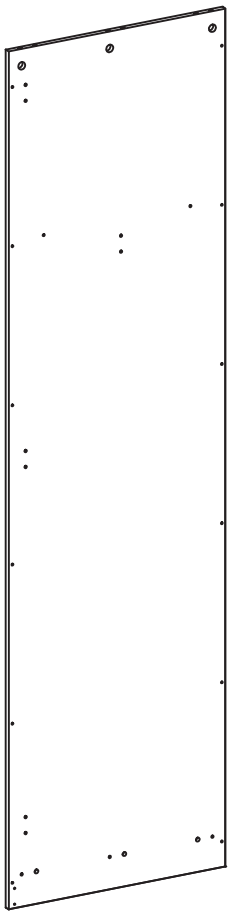


2 Side, left
(172,5 cm x 47,3 cm)

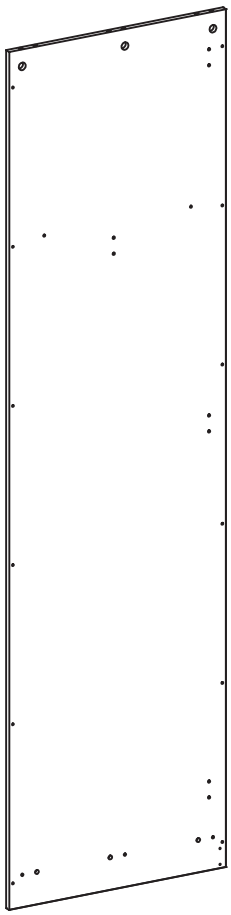

3 Side, right
(172,5 cm x 47,3 cm)




4 Post x 4
(179,7 cm x 4,4 cm)

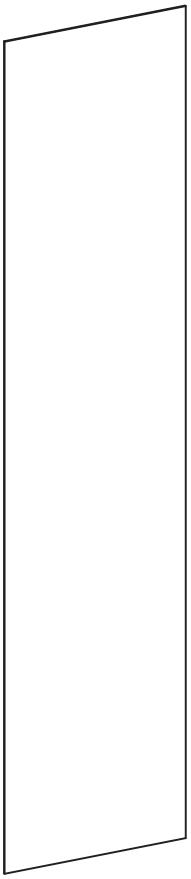


5 Back x 2
(167,3 cm x 39,5 cm)




6 H-profile
(163 cm x 1,7 cm)

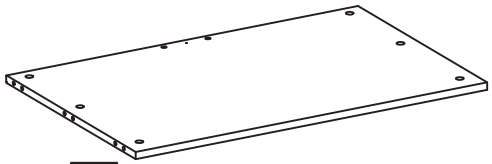

7 Bottom
(76,7 cm x 48,9 cm)

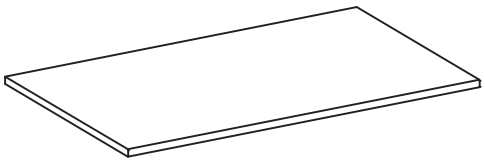


9 Shelf
(76,7 cm x 46,5 cm)

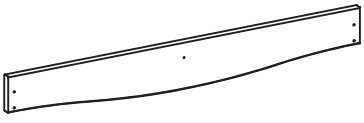


8 Front rail
(76,7 cm x 9,5 cm)



10 Hanging rail
(75,7 cm x 2,2 cm)

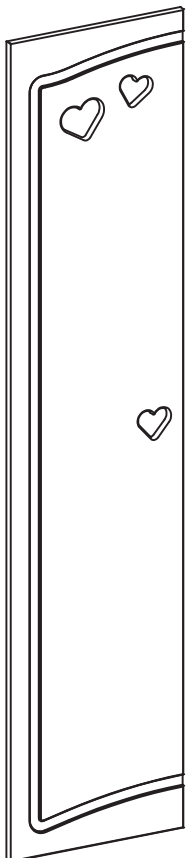

11 Door, left
(164,6 cm x 37,9 cm)



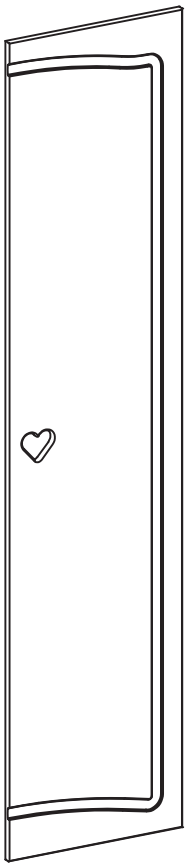


12 Door, right
(164,6 cm x 37,9 cm)

Components - Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

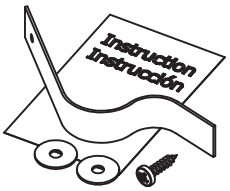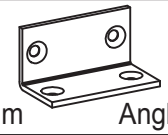Aa  ø7.8 x 40mm Wooden dowel x 12	**Bo**  ø3 x 12mm Screw x 20	**Ca**  ø15 x 10.5mm Cam x 12
Cb  ø5 x 8, cc34mm Bolt x 12	**Di**  1.2 x 15mm Nail x 50	**Fh**  Wall strap and instruction x 1
Fl  Support for hanger rail - 15mm x 2	**Fr**  Shelf support x 4	
Jb  ø4 x 25mm Screw x 24	**Kb**  ø5.8 x 8mm Screw x 4	**Ko**  ø4,2 x 9,5mm Screw x 8
Mc  0mm Crossplate x 6	**Mf**  ø26mm Cup hinge x 6	**Pc**  Magnet, adjustable x 4
Pd  35 x 12 x 1mm Magnet catch x 4	**Vl**  44 x 23 x 23mm Angle x 2	**Vn**  Angle 23 x 23 x 24mm x 1


Tools required



Phillips screwdriver
(Medium & large)




Hammer



Flatblade screwdriver
(Medium)


Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Assembly of the wardrobe.

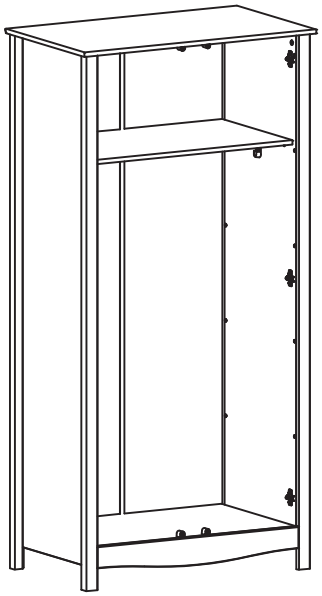

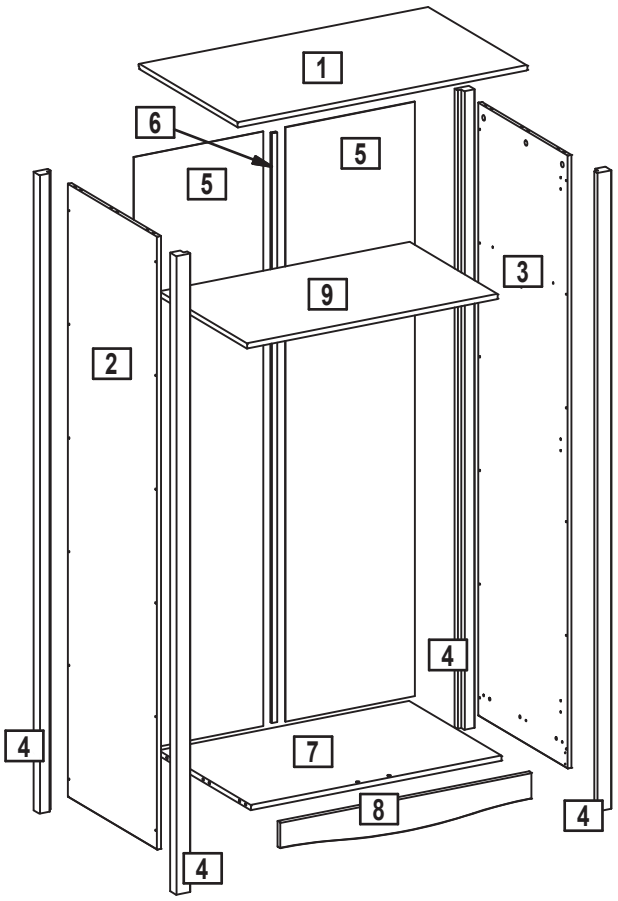


Step 1.1

Fix the posts 4 onto the sides 2 and 3 using screws Jb into the holes indicated.
The top of the posts 4 and the sides 2 and 3 must be flush.

Jb



ø4 x 25mm Screw x 24

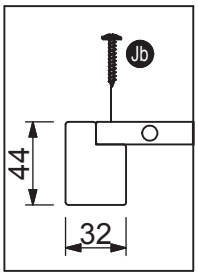

Assembly Instructions


Step 1.2

Knock the dowels Aa into the holes indicated on the sides 2 and 3.

Use a small hammer.

Screw the bolts Cb into the holes indicated on the sides 2 and 3.

Aa	Cb
ø7.8 x 40mm Wooden dowel x 6	ø5 x 8, cc34mm Bolt x 6

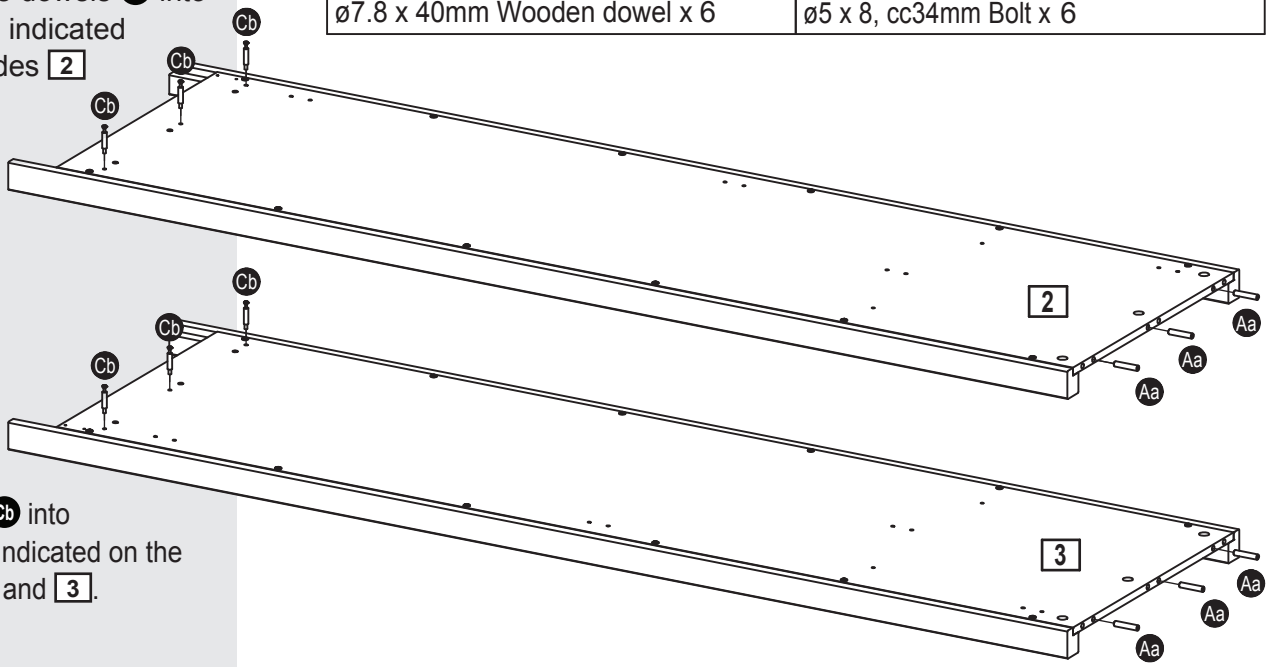


Step 1.3

Fix the Crossplates Mc to the sides 2 and 3 using the pre-mounted screws.
Note the details.

Position the Crossplates Mc exactly as shown.

Fix the supports for hangerrails Fl onto the sides 2 and 3 using screws Bo.


Bo	Fl
ø3 x 12mm Screw x 2	Support for hanger rail - 15mm x 2
Mc	
0mm Crossplate x 6	

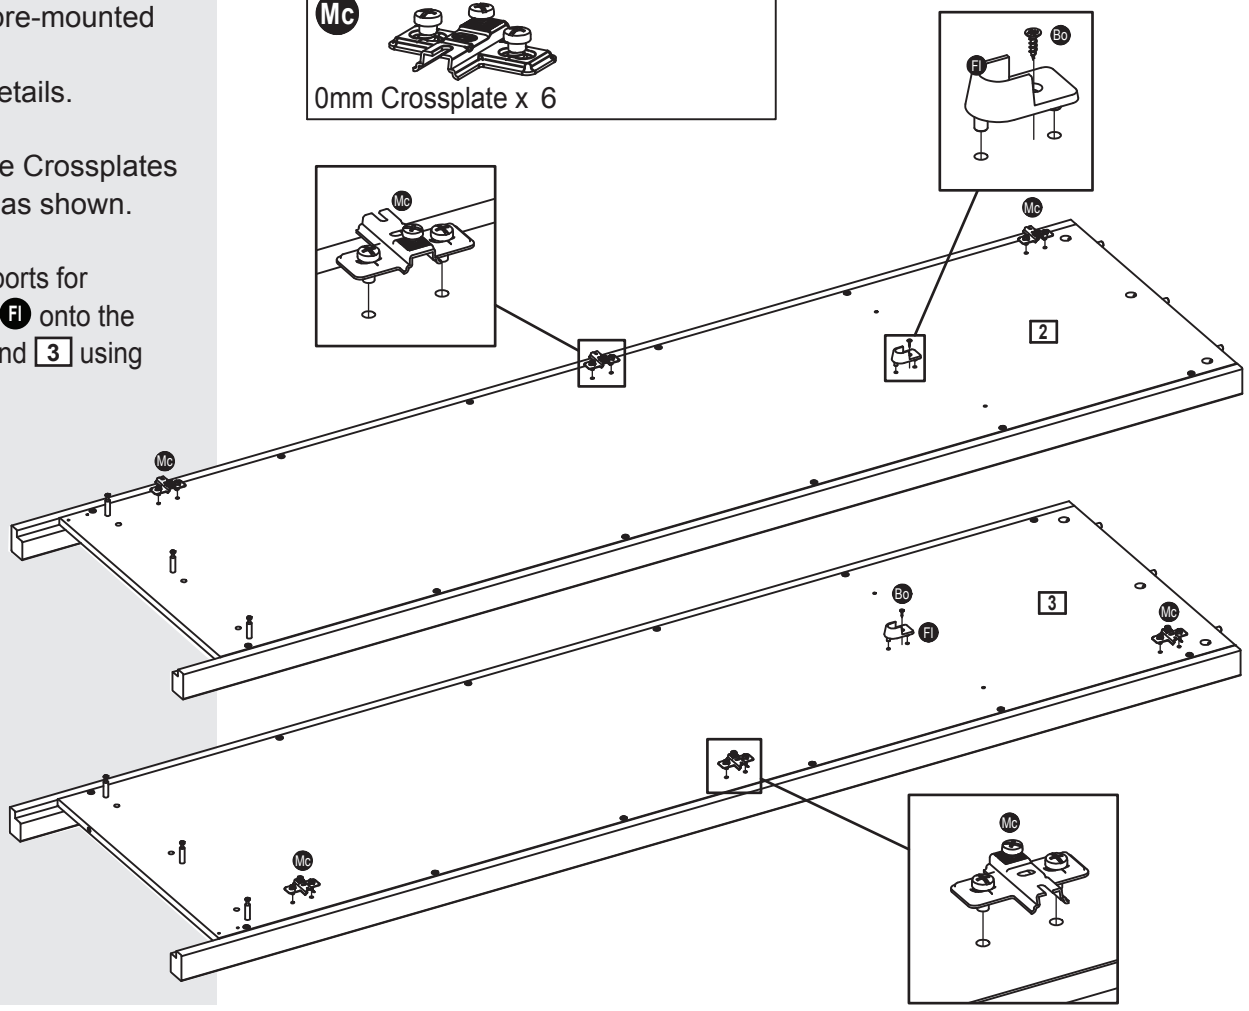


Assembly Instructions

Step 1.4

Fix the angles Vl using screws Ko into the holes indicated on the front rail 6.

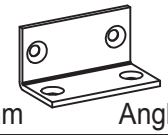Bo  ø3 x 12mm Screw x 1	Ko  ø4,2 x 9,5mm Screw x 4
Vl  44 x 23 x 23mm Angle x 2	Vn  Angle 23 x 23 x 24mm x 1

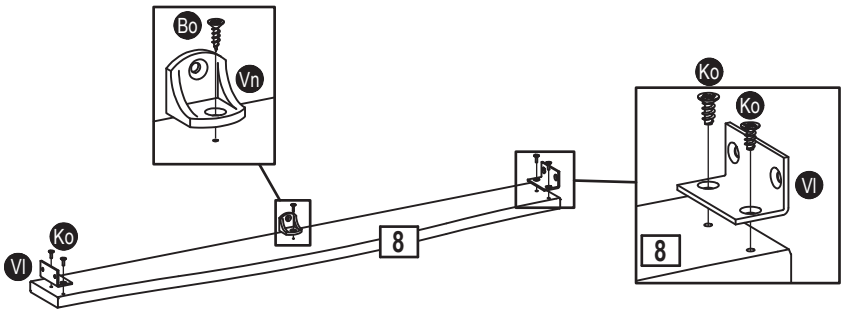


Step 1.5

Knock the dowels Aa into the holes indicated on the bottom 7 using a small hammer.

Press the magnets Pc into the holes indicated on the bottom 7.

Aa  ø7.8 x 40mm Wooden dowel x 6	Pc  Magnet, adjustable x 2

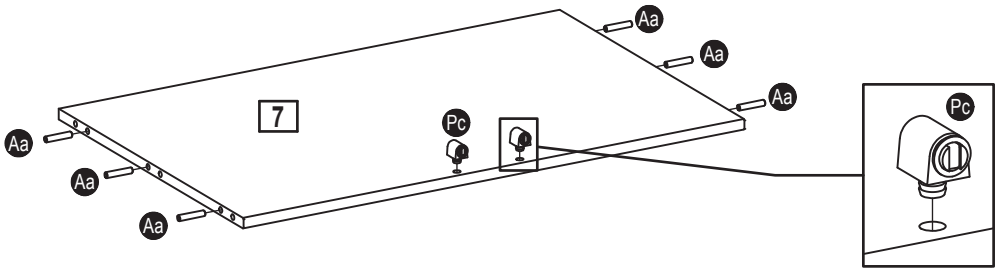


Step 1.6

Place the sides 2 and 3 onto the bottom 7.

Push cams Ca into the holes indicated on the bottom 7. Arrows pointing towards the sides 2/3.

Turn the cams Ca to the right to fix the sides 2 and 3.

Ca  ø15 x 10.5mm Cam x 6

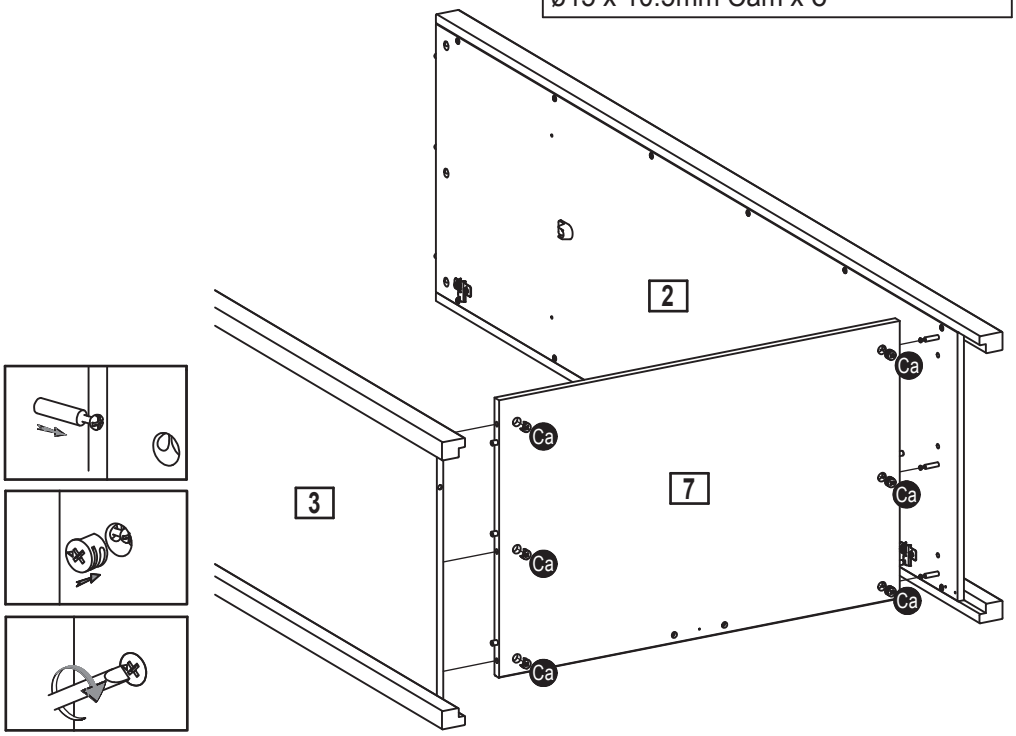

Assembly Instructions

Step 1.7

Screw the bolts Cb into the holes indicated on the top 1.


Press the magnets Pc into the holes indicated on the top 1.

Cb

ø5 x 8, cc34mm Bolt x 6

Pc

Magnet, adjustable x 2

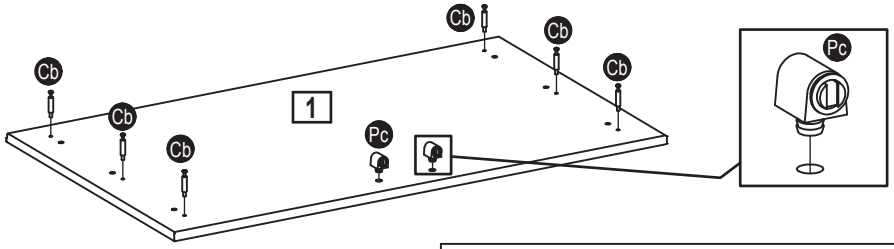

Step 1.8


Place the top 1 onto the sides 2 and 3.

Push cams Ca into the holes indicated on the sides 2 and 3. Arrows pointing towards the top 1.

Turn the cams Ca to the right to fix the top 1.

Ca

ø15 x 10.5mm Cam x 6

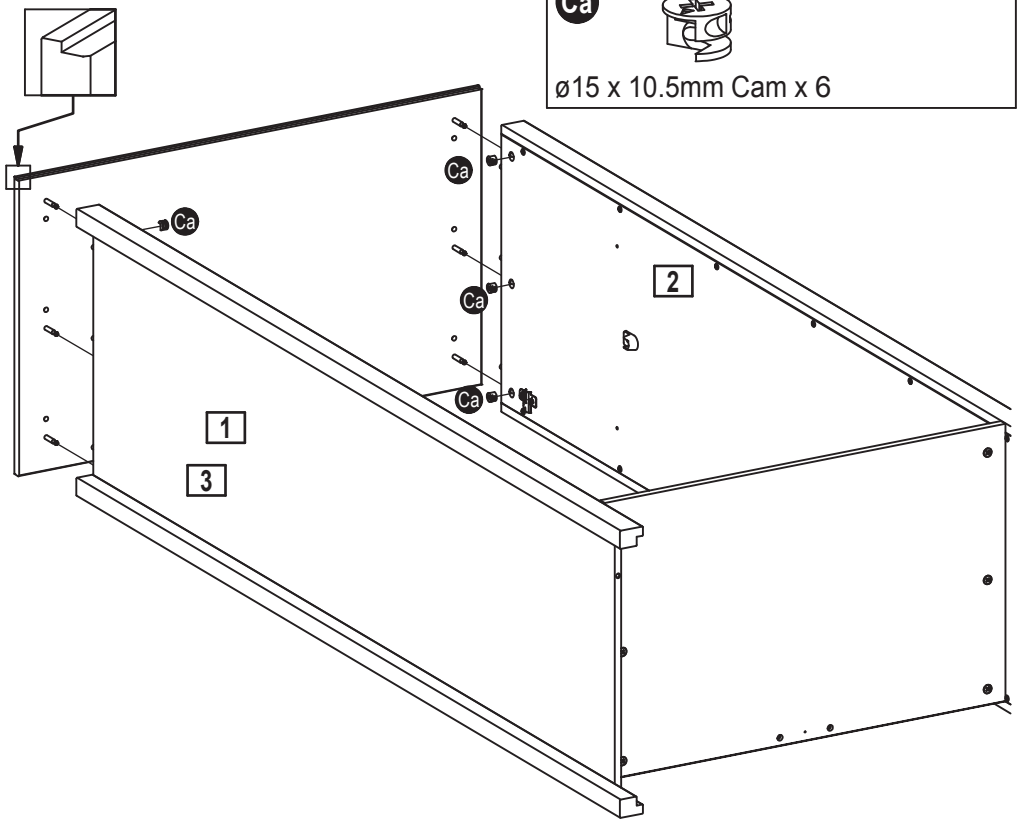

Step 1.9


Place the front rail 8 as shown.

Fix the angles Vl to the sides using screws Ko.

See detail.

Ko

ø4,2 x 9,5mm Screw x 4

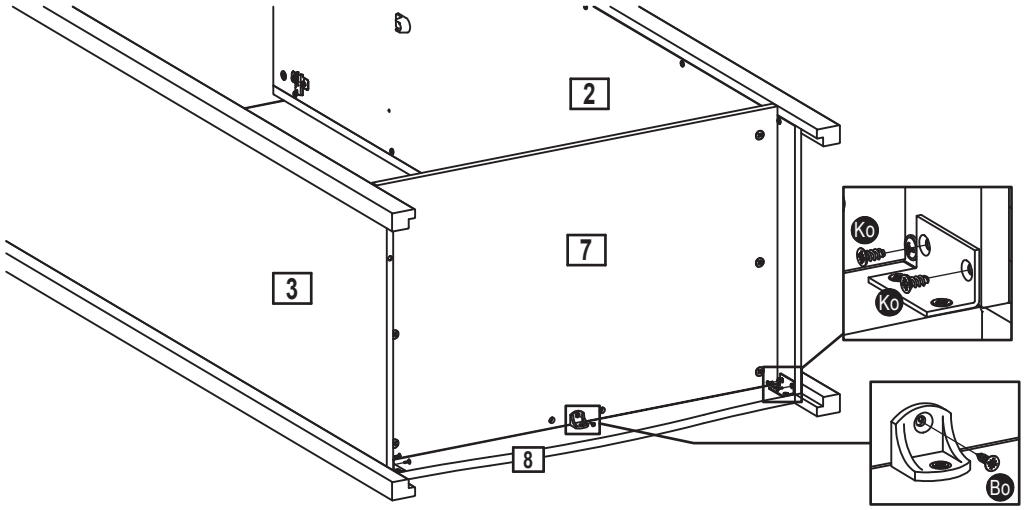

Assembly Instructions


Step 1.10

Place the backs 5 into the rabbet on the top 1 into the H-profile 6 and onto the posts 4.

Important!
Make sure the angle between the top 1 and the posts 4 is 90° when the backs 5 is attached.

Fix the backs 5 to the top 1, the posts 4 and the bottom 7 using nails Di.

Use a small hammer.

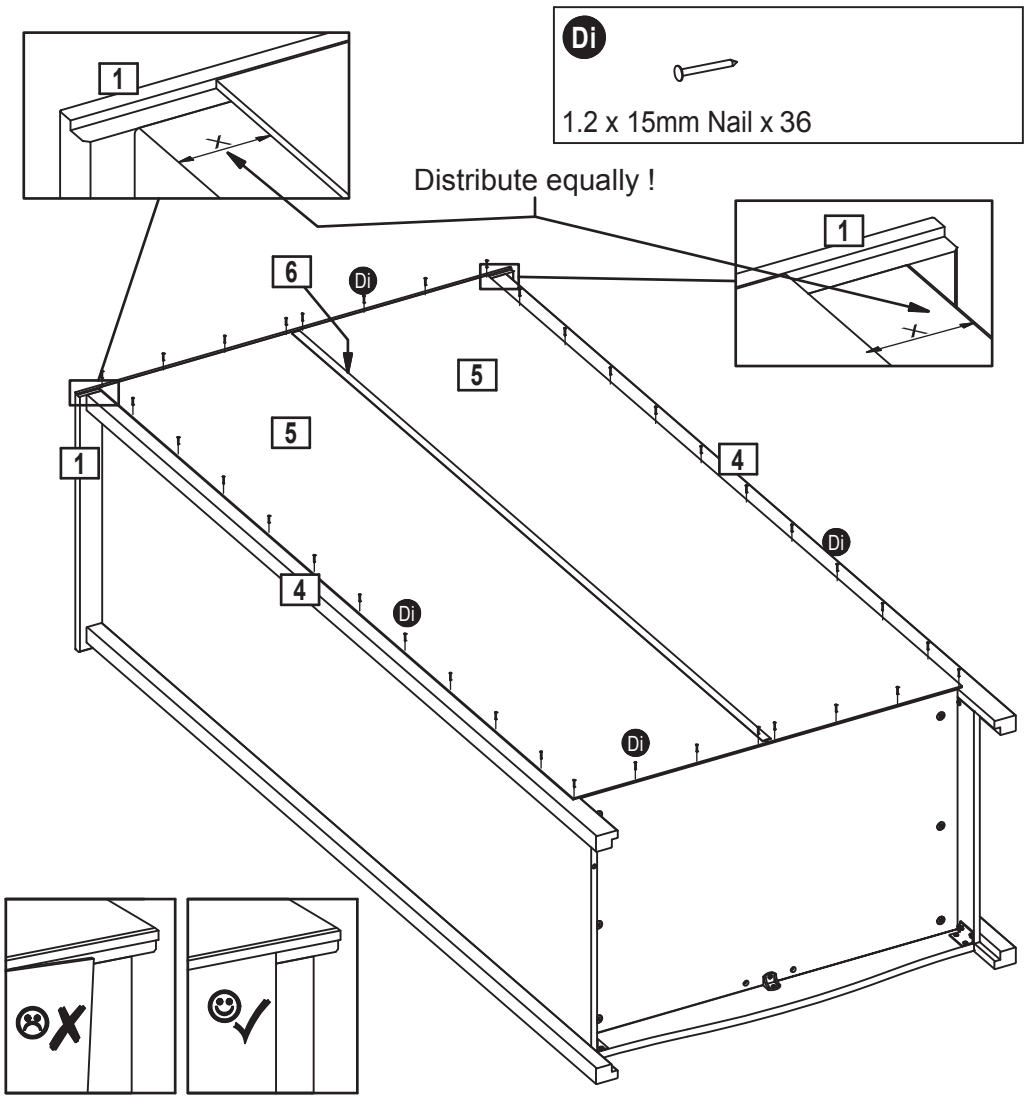

Di

1.2 x 15mm Nail x 36

Step 1.11


Important!
The wardrobe is heavy. Lift with care.

Its recommended that the wardrobe is fixed to the wall.

Use the fittings Fh. Follow the instructions included with the fittings.

Fix the shelf supports Fr to the 2 and 3 using screws Kb into the holes indicated.

Lower the shelf 9 onto the shelf supports Fr.

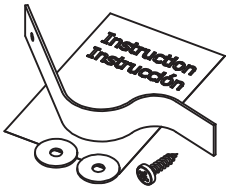

Fh

Wall strap and instruction x 1




Fr

Shelf support x 4



Kb


ø5.8 x 8mm Screw x 4

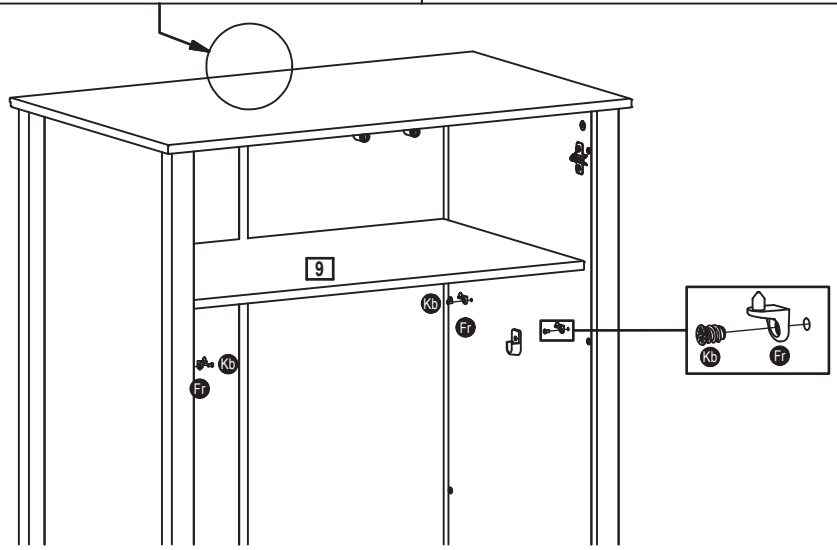


Assembly Instructions

Step 2

Assembly of the doors.

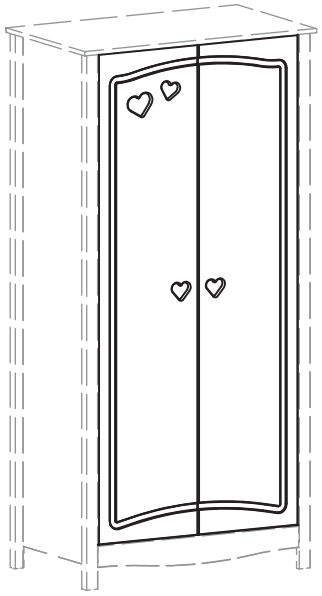

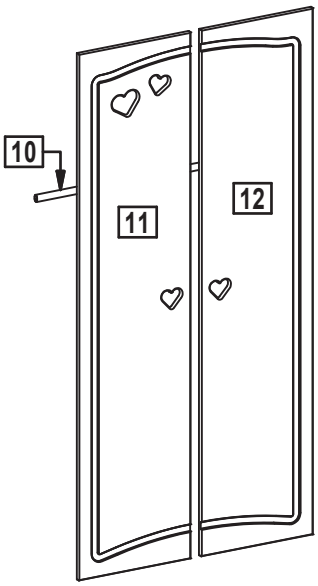


Step 2.1

Place the cup hinges Mf into the holes indicated on the doors 11 and 12. Fix the hinges using screws Bo.

Fix the magnet catches Pd using screws Bo into the holes indicated.

Bo  ø3 x 12mm Screw x 16	Mf  ø26mm Cup hinge x 6
	Pd  35 x 12 x 1mm Magnet catch x 4

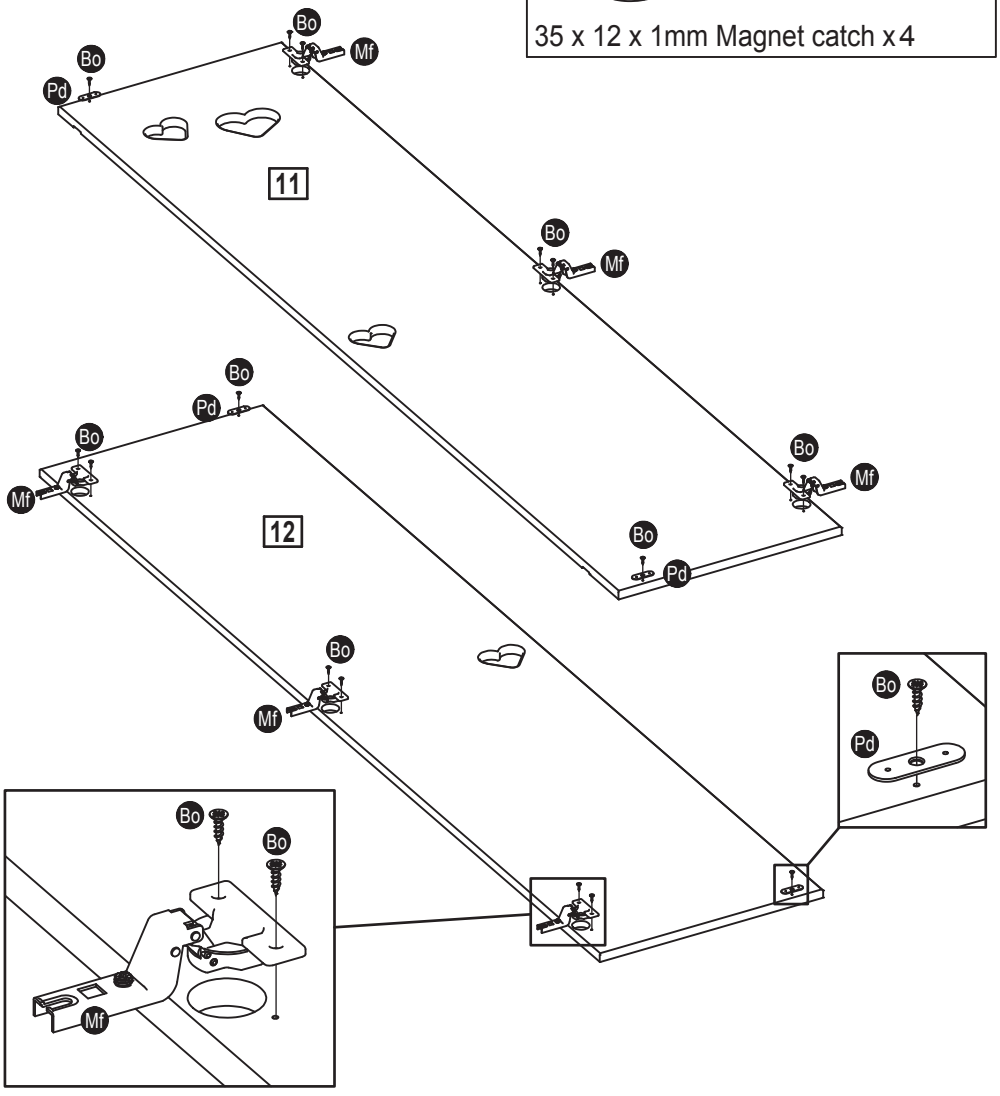

Assembly Instructions


Step 2.2


Place the hanger rail 10 into the supports Fl.

Slide the cup hinges Mf onto the crossplates Mc.


Fix the hinges using the premounted screw in the crossplates.


See details below on how to fit the cup hinge Mf onto the cross plate Mc.

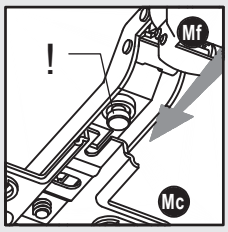

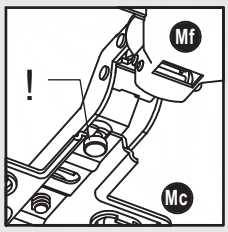

Adjust the magnets Pc.

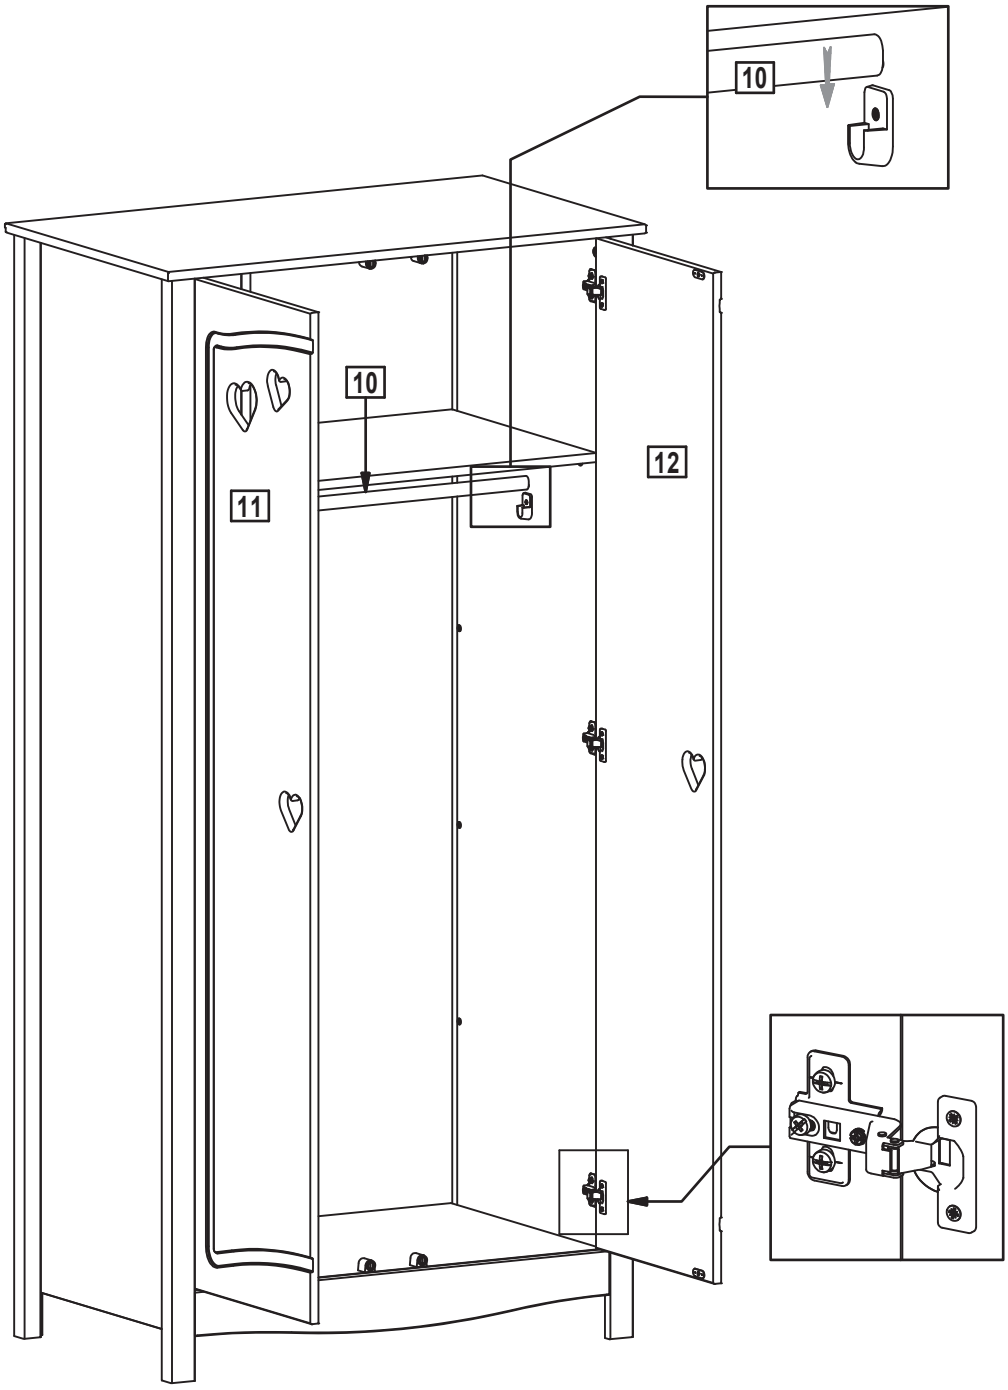

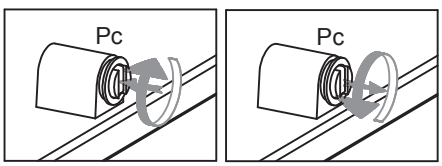


Assembly Instructions

Step 2.3


Adjusting the doors left/right.

a:
To adjust the door towards the left hand side - turn the adjusting screw to the right.


b:
To adjust the door towards the right hand side - turn the adjusting screw to the left.

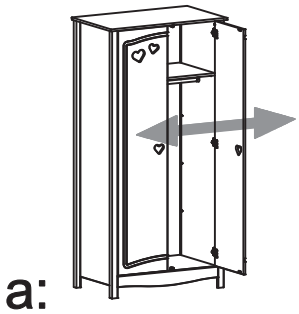

a:

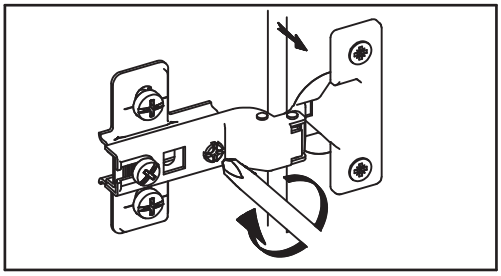

b:

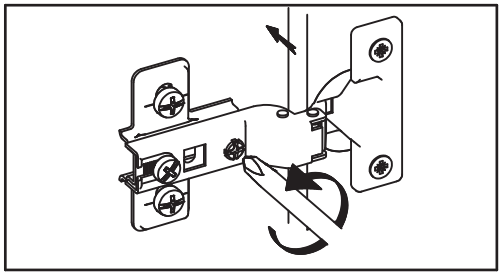


Adjusting the doors forwards/backwards.


a:
Loosen the fixing screw.

b:
Push the cup hinges / the door forwards OR backwards to adjust.


c:
Tighten the fixing screws of ALL the crossplates.

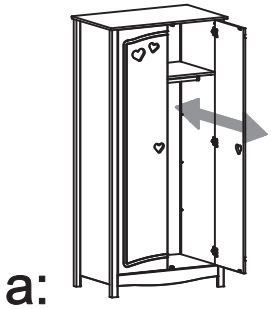


a:

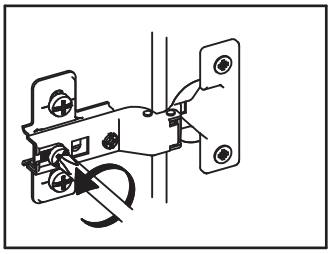

b:

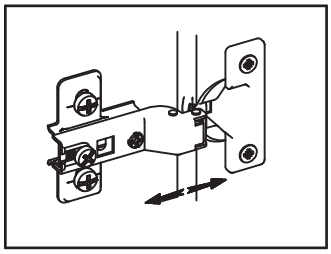

c:

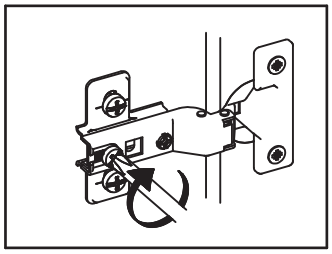


Adjusting the doors up/down.


a:
Loosen the two pre-mounted screws of each crossplate, BUT ONLY as much as it will allow the cross plate to move up and down.

b:
Push the the door up OR down to adjust.


c:
Tighten the pre-mounted screws of ALL the crossplates.

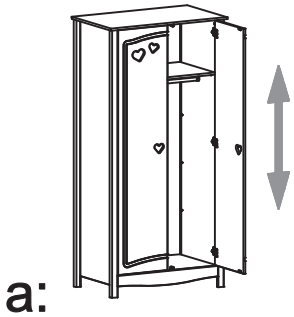


a:

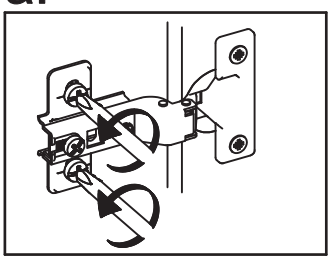

b:

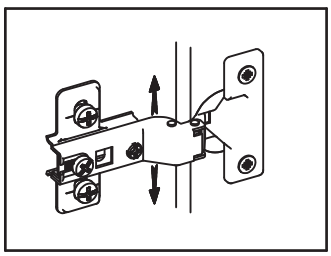


c:

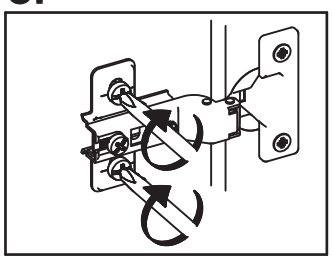

If you need help or have damaged or missing parts, call the **Argos Customer Helpline: 03456 400 800**
Home Retail Group - 489-499 Avebury Boulevard - Saxon Gate West - Central Milton Keynes MK9 2NW

A Guide to

Wall Mounting & Fixings

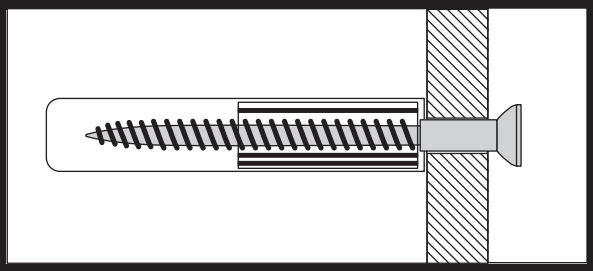

IMPORTANT:

When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


HINTS:

1) General Rule ⚠ Always use a larger screw and wall plug if you are not sure.
2) Ensure you use the recommended drill bit to match the wall plug and hole size.
3) Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4) Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic tile to avoid splitting or cracking.
5) Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plaster board.

No.1 "Standard" Wall Plug
General Wall Materials

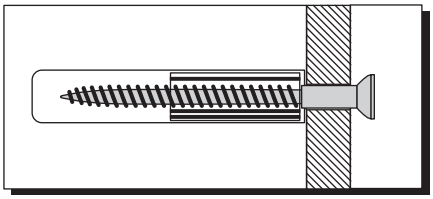


These come in various sizes and are made from plastic or sometimes wood fiber.

No.2 "General Purpose" Wall Plug
Aerated / Breeze Block

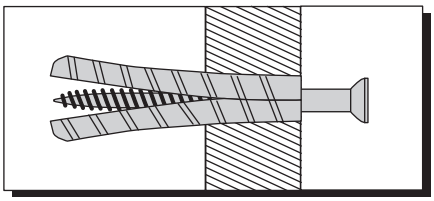


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case.
For light loads, a General Purpose Plug can be used.

No.3 "Shield Anchor" Wall Plug
Heavy Loads

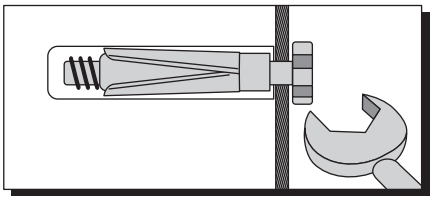


For use with heavier loads such as TV & HiFi Speakers and Satellite Dishes etc.

No.4 "Cavity Fixing" Wall Plug

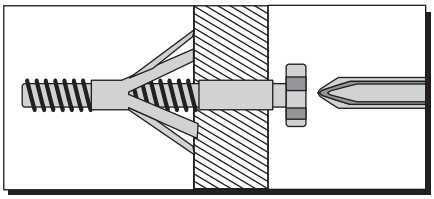


For use with plaster board partitions or hollow wooden doors.

No.5 "Cavity Fixing - Heavy Duty" Wall Plug

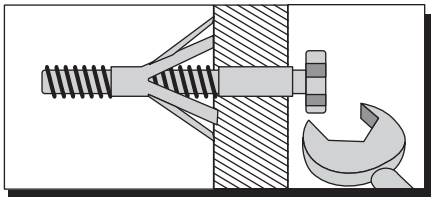

For use when fitting or supporting heavy loads such as shelving, wall cabinets, coat racks.

No.6 "Hammer Fixing" Wall Plug

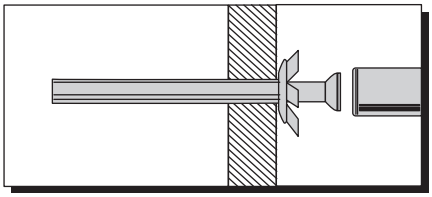

For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

CARE & MAINTENANCE

⚠ **SAFETY**

Always check the fitting and location to ensure your safety in and around the home.

⚠ **FITTING**

From time to time check the fitting to ensure the wall plugs or screws do not become loose.