Care and Maintenance

General

This pushchair was designed and manufactured with quality materials and craftsmanship. Always use the safety harness.

Lubricate moving parts regularly, especially the wheels, and lower parts of the chassis that tend to collect dirt.

Inspect regularly for:

- Worn parts, torn materials or stitching .
- Loose screws, bent or broken frame parts .
- Broken, damaged or missing parts.

Should any of the above be evident do not use and contact the Helpline: 03456 400 800 for advice.

Care and Maintenance:

Fabric parts may be cleaned in accordance with the fabric care labels. Do not machine wash.
Seat: Sponge clean only.
Basket: Hand wash only.
Do not leave the stroller exposed to heat i.e. by a radiator or in direct sunlight.

If the stroller chassis parts have been exposed to salt water we recommend that they be rinsed down with soapy water as soon as possible, afterwards clean with a sponge.
Do not fold or store the product while wet and never store a damp environment as this can cause mildew to form.

If you need help or have damaged or missing parts, call the **Argos Aftersales Helpline:03456 400 800**

This pushchair has been designed to comply with the EN1888:2012.
Country of origin: China


Argos LTD, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW

FISHER-PRICE and associated trademarks are owned by Mattel, Inc. and used under license from Mattel Europa B.V. ©2015 Mattel, Inc. All Rights Reserved.

Fisher-Price

Reversible Pushchair
Users Guide

APPROVED

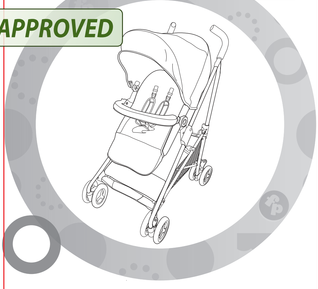

Cat.NO.:455/7652


Helpline:03456 400 800

up to 33lbs / 15kg

IMPORTANT: KEEP FOR FUTURE REFERENCE

WARNING! Never leave your child unattended. Always keep child in view when in stroller.
WARNING! Ensure that all the locking devices are engaged before use, when putting in or taking out the child.
WARNING! To avoid injury ensure that your child is kept away when unfolding and folding this product.
WARNING! Do not let your child play with this product.
WARNING! Always use the restraint system.
WARNING! Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
WARNING! Never place or hang parcels, bags or accessories on the handle or canopy. The stroller may tip over or the canopy may collapse.
WARNING! This stroller is for use by one child in each seating area only.
WARNING! Ensure that your child does not sit in the stroller for longer than 1 hour at a time.
WARNING! This stroller is suitable for 0 - 36 months.
WARNING! For new born baby, do not recline backrest to sitting position (should be in full reclining position) as the baby doesn't have ability to control its head.
WARNING! When folding, unfolding or adjusting before using stroller, keep child away from moving parts.
WARNING! Do not put more than 15 kg in each stroller seat.
WARNING! Never place more than 5 kg in each storage basket. If the weight is exceeded, hazardous unstable conditions may exist.
WARNING! Never place more than 0.5 kg in the parent tray.
WARNING!The thickness of the seat can not be more than 25 mm.
WARNING! Please adjust the shoulder belt to the lowest level when the child is less than 6 months, and you must use the safety harness.
WARNING! Always use the crotch strap in combination with the waist belt
WARNING! Only replacement parts supplied or recommended by the manufacturer/distributor shall be used.
WARNING! This product is not suitable for running or skating.
WARNING! Please keep away from fire.
Complies with EN 1888:2012.


Part list

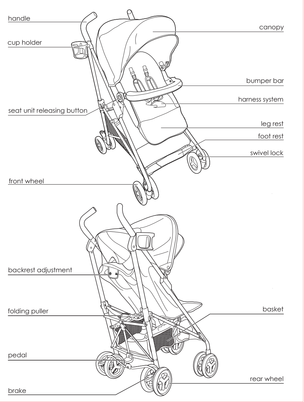

Assembly


Step 1

Unfold frame
Unlock the storage latch.
Hold onto the handles with both hands, press down on the fold latch with your foot until the stroller opens up and "Click's" into place".
CHECK TO MAKE sure the stroller is locked in the fully open position before using it.

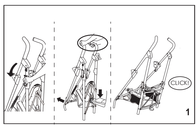


Step 2

To attach front wheels
Push wheel onto front leg tube until it clicks into place. Repeat on other side.
Pull on wheels to make sure both of them are attached.

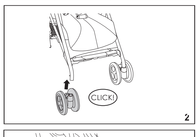


Step 3

To attach rear wheels
Push wheel onto rear leg tube until it clicks into place. Repeat on other side.
Pull on wheels to make sure both of them are attached.

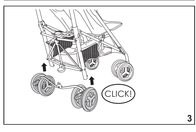


Step 4

Seat unit installation
Insert the seat unit adapter into the mount until you hear a "click". Repeat on the other side. The seat unit can be installed reversibly.
Taking off seat unit:
Press the release buttons on both sides and lift the seat unit to take the seat unit off.

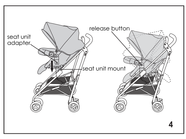


Step 5

Attach canopy as shown
Fasten hook and loop tape on the rear of the canopy as shown.

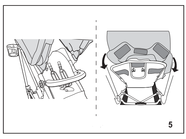


Step 6

Bumper bar installation
Align bumper bar pin with notch and slide post into hole.
Press release buttons on both sides and pull bumper bar out to release.

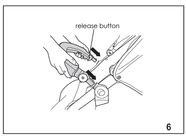


Step 7

Cup holder installation
To attach cup holder, rotate cup holder and slide down on the mount as shown.

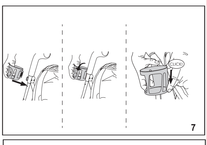


Step 8

Backrest adjustment
Squeeze the backrest adjustment pull downwards to lower backrest. Push backrest directly to raise .

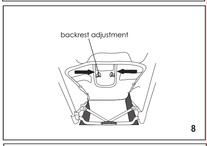


Step 9

Canopy adjustment
Pull the canopy directly as arrow direction in Fig. 9 to open and close.

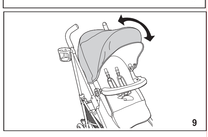


Step 10

Front wheel locking
Swivel wheels lock for use on rough surfaces, such as gravel or stones.

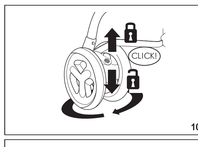


Step 11

Rear wheel braking
When packing the stroller always depress the brake by trying to push stroller, make sure both wheels are well locked.
Lift the brake to release wheel locking.

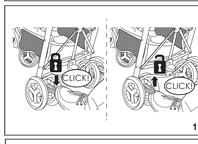

Step 12


To adjust legrest
Squeeze buttons inside the seat pad on either side of stroller as shown. Rotate up or down until it clicks into place.

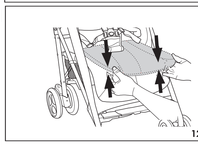

Step 13


Restraint system adjustment
To shorten safety belt: draw out top zone and then tail belt, lock it.
To elongate safety belt: draw out top zone, shorten tail belt, then fasten.

NOTE: Shoulder belt must be adjusted to the lowest position and buckled up when the stroller is used for new borns.

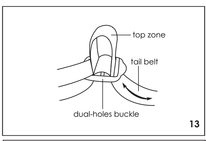

Step13a


Fasten
Bring 2 clips together and plug them into the buckle until you hear a "click" .

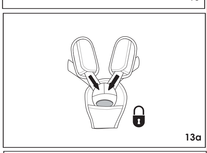

Step 13b


Loosen
Press 2 buttons on both sides and pull out 2 clips with another hand to release.

NOTE: The length of safety belt can be adjusted according to the height of child.

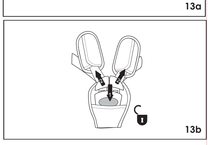


Step 14

Unlocking fixed stroller frame
Squeeze the button in the circle shown in the figure and pull it upward to unlock it.

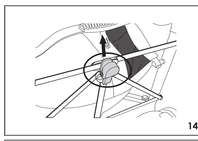

Step 14a

Folding
Using one of your hands to pull up on the handle strap to fold the stroller.
Once the stroller is folded, you should hear 3 clicks on the auto-lock latch.

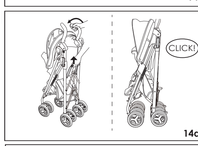

Step 14b

Carrying
The stroller can be carried using the handle strap located on the left of the stroller.

