
Phoenix 4 Cube Unit

Assembly Instructions - Please keep for future reference

719/3020

719/1132

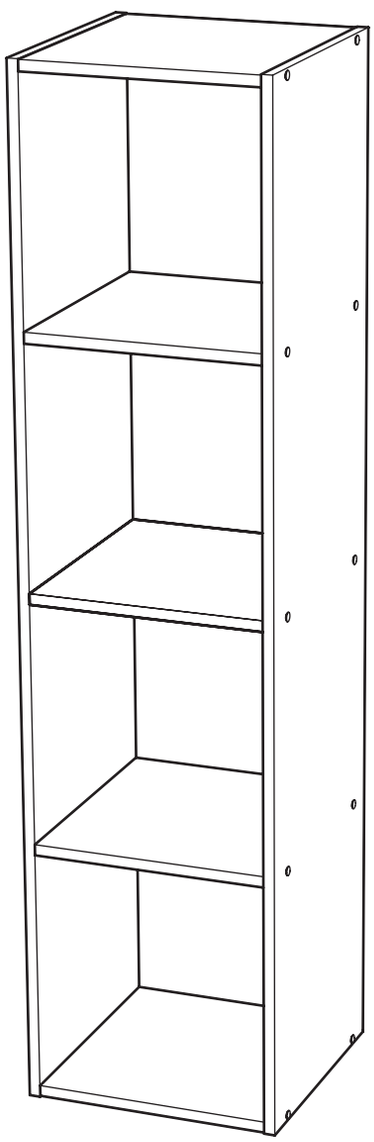

Dimensions

Width - 35cm

Depth - 35cm

Height - 140cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline**: **08456 400800**

issue 1 9/02/'10

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand on the panels, this could cause damage.
- Assemble the unit as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/ drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.
- ***Warning:*** The unit weighs approximately 17kgs. **Please lift with care**.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- Assembly to be carried out by the competent adult only.
- From time to time check that there are no loose screws on this unit.
- During assembly children should be kept away from the product due to the potential risk of injury.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.
- Do not use this item if any components are missing or damaged.


• “IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE”.

- Argos Ltd. MK9 2NW.
- The maximum weight of the children user: 50kgs.
- Regularly check all fastenings to ensure that they are properly tightened.
- This product is suitable for children in the age of 6 or above.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline:08456 400800**

Please check you have all the panels listed below

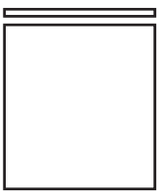


1 Shelf x 5 (32 x 34.9cm)

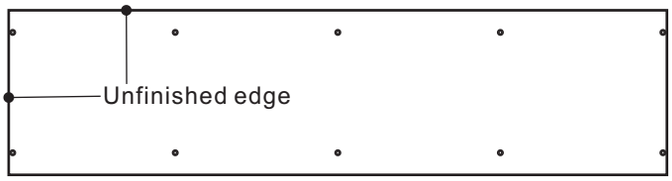

3 Left side (140 x 35cm)



2 Back (139.8 x 34.8cm)



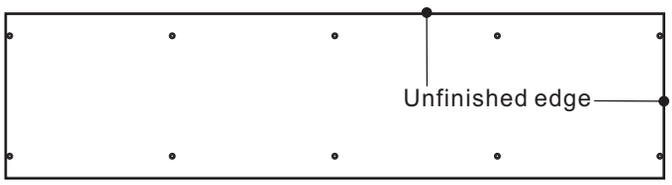


4 Right Side (140 x 35cm)


Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  45mm Screw x 20	**B**  15mm Screw x 26	**C**  Cap x 20
D  Wall strap x 1	**E**  12mm Screw x 1	**F**  Wall plug x 1
G  26mm Screw x 1	**H** Metal plate x 1 	

Tools required




Phillips screwdriver (medium & large)



Ruler/tape measure

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions


Step 1

Fitting the shelves

a: Use Screws Ⓐ to fix the Left side [3], Right side [4] onto Shelves [1]. Use Caps Ⓒ to cover the holes on the unit.

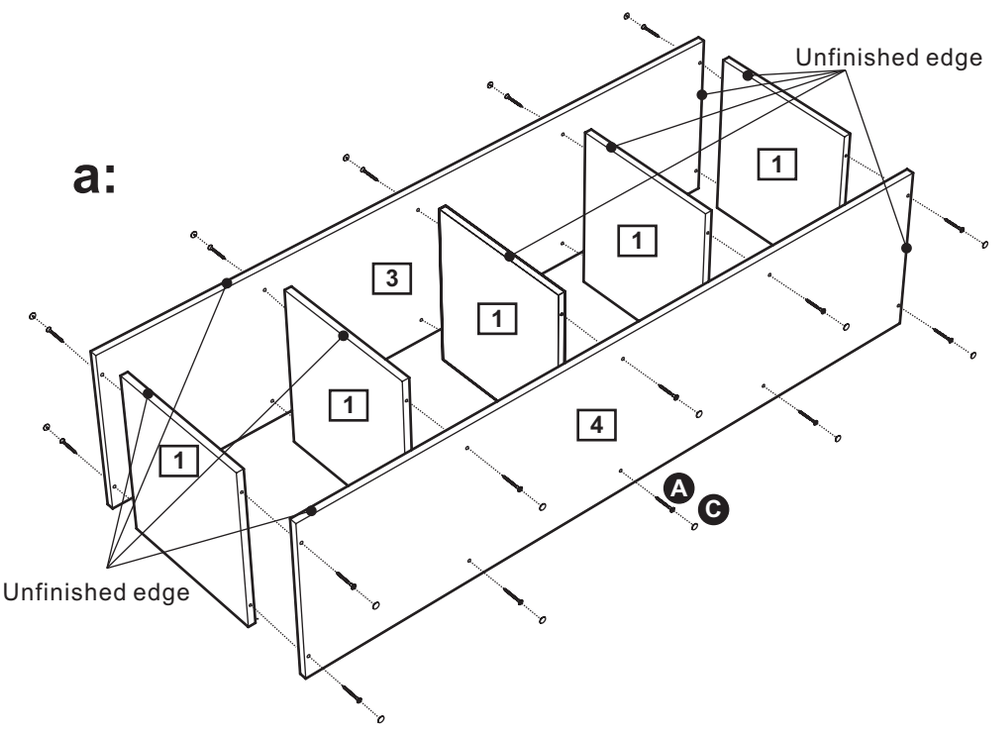

b: Use Screws Ⓑ to fix Back [2] onto the unit.

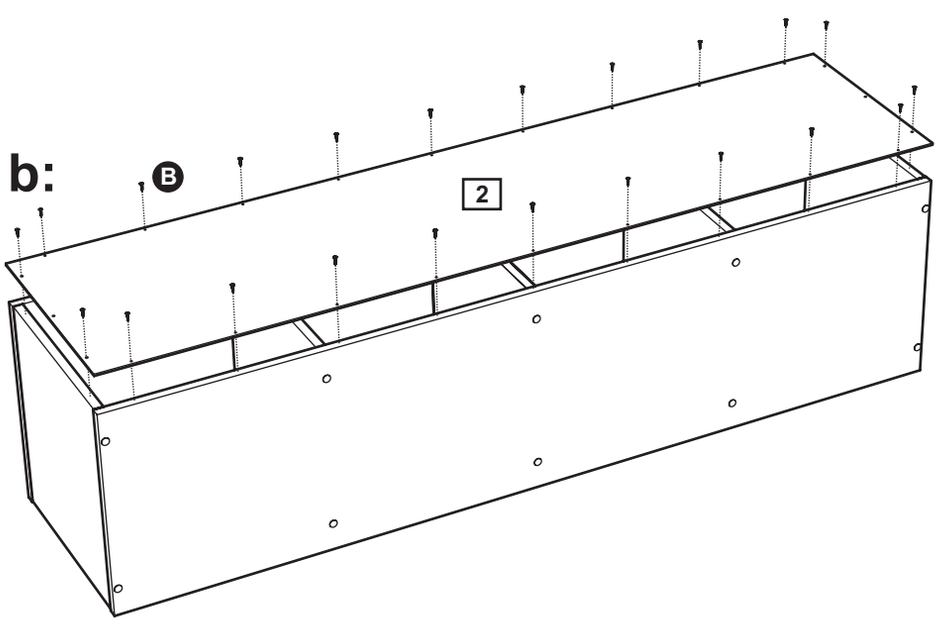

Assembly Instructions

Step 2

Fixing to wall

Note: It would be useful to ask someone to help you at this stage.

It is strongly recommended that the unit is attached to the wall using Wall straps D.

Important: When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs supplied are suitable for supporting the unit. Consult a qualified tradesperson if you are not sure.

a: Use Screws E to fix the Wall straps D onto the back of the unit .


b: With help, place the unit in the intend position.

c: Drill a hole in the wall at an appropriate position and insert Wall plugs F (Masonry walls only).


To secure the unit, fix Wall straps D to the wall using Screws G (Masonry walls only).

Assembly is complete.


a:

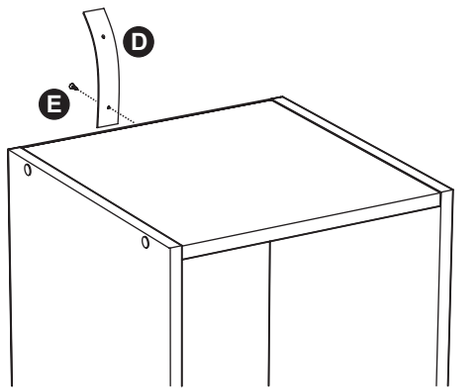

b:

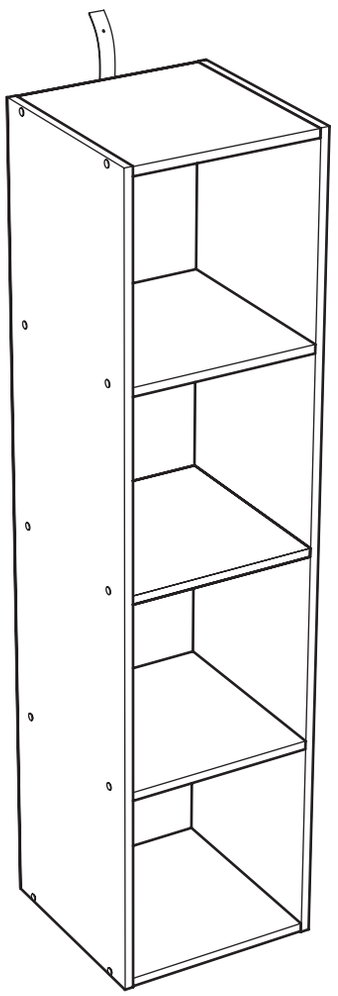

c:

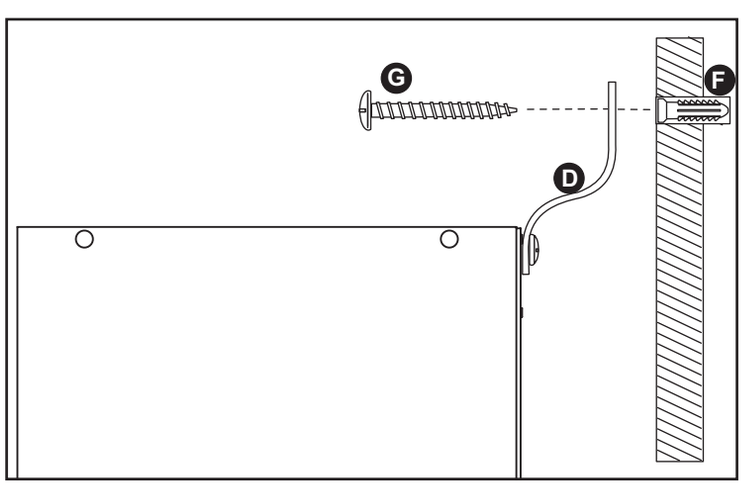

Assembly Instructions

Fixing with another unit

Note: It would be useful to ask someone to help you at this stage.

It is strongly recommended that the unit is attached to the wall using Wall straps D.

Important: When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs supplied are suitable for supporting the unit. Consult a qualified tradesperson if you are not sure.


a: Use Screws B to fix the Metal plate H of link another unit from the back.

b: Use Screw E to fix the Wall strap D onto the back of the unit .

c: With help, place the unit in the intend position.

d: Drill a hole in the wall at an appropriate position and insert Wall plug F (Masonry walls only).

To secure the unit, fix Wall strap D to the wall using Screw G (Masonry walls only).

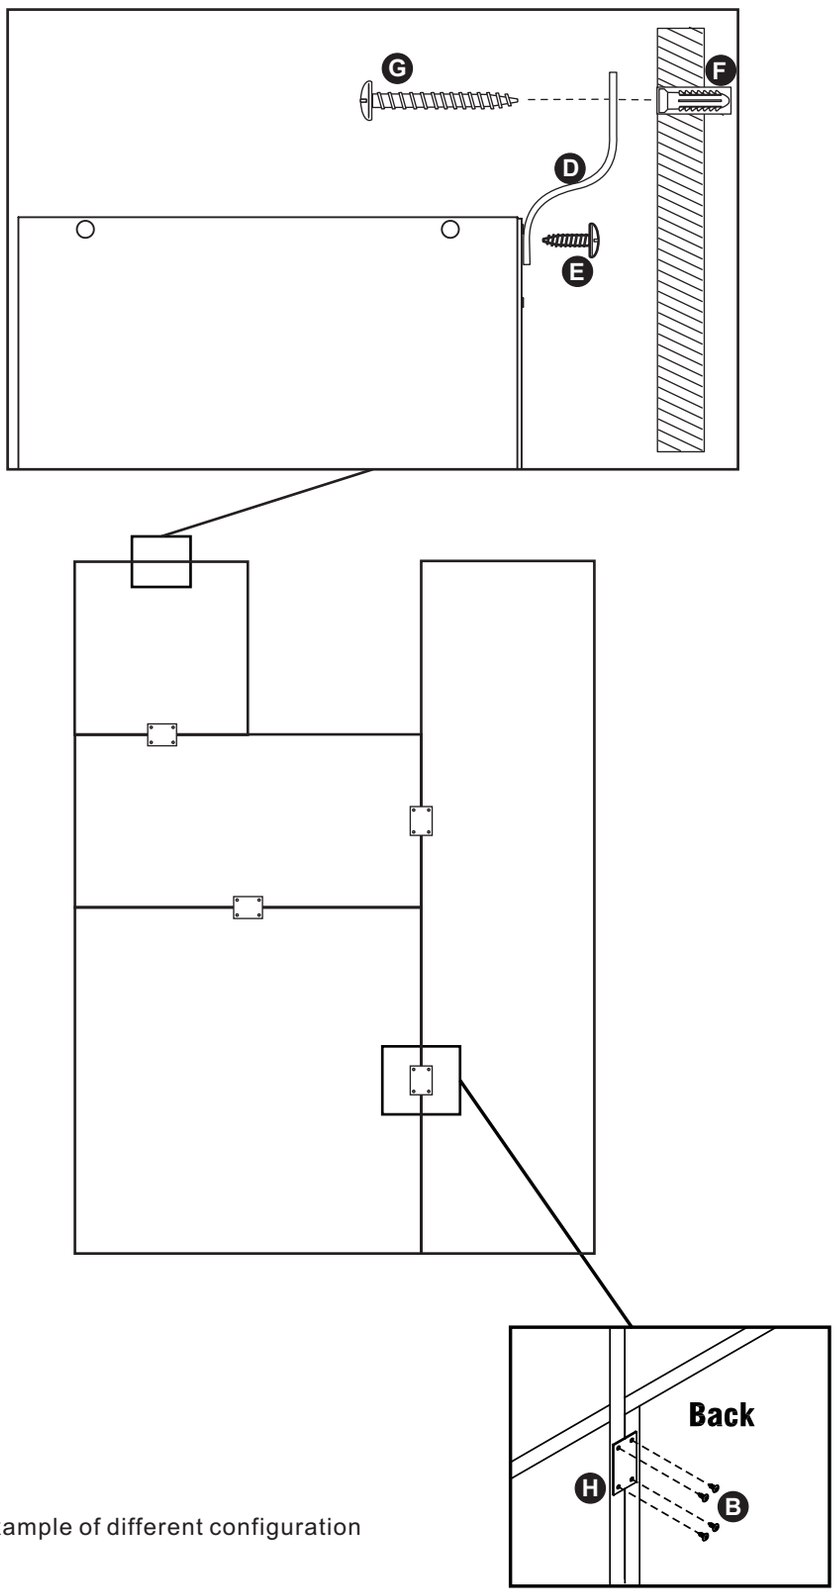

Example of different configuration

If you need help or have damaged or missing parts, call the **Customer Helpline : 08456 400800**

A Guide to - **Wall Mounting** & **Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fxings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. **Consult a qualifed tradesperson if you are unsure**.

Hints:

1: ***General rule***: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well ftted and are a tight ft in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "**General Purpose**" **wall plug**

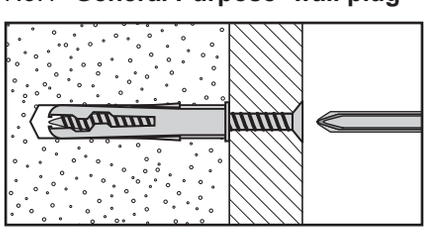


Generally aerated blocks should not be used to support heavy loads, use a specialist ftting in this case. For light loads, general purpose wall plugs can be used.

No.2 "**Plasterboard**" **wall plug**

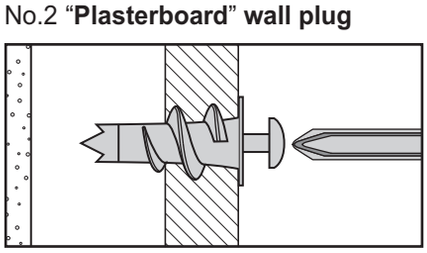


For use when attaching light loads on to plasterboard partitions.

No.3 "**Cavity Fixing**" **wall plug**

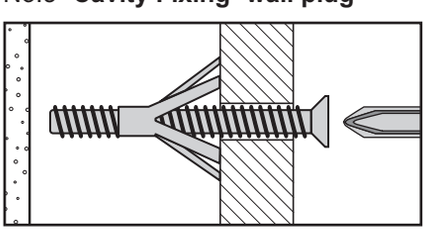


For use with plasterboard partitions or hollow wooden doors.

No.4 "**Cavity Fixing-Heavy Duty**" **wall plug**

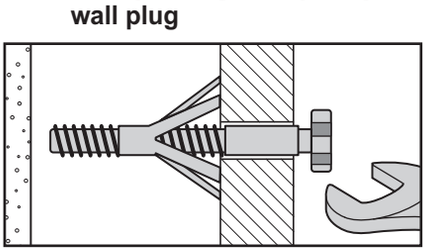


For use when ftting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "**Hammer Fixing**" **wall plug**

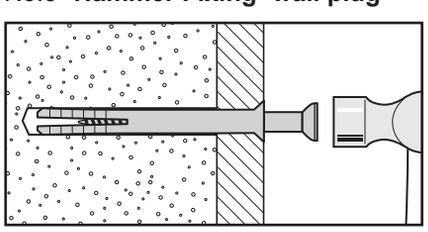

For use with walls stuck with plasterboard. The hammer fxing allows it to be fxed to the wall rather than the plasterboard. Always check the fxing is secure to the retaining wall.

No.6 "**Shield Anchor**" **wall plug Heavy loads**

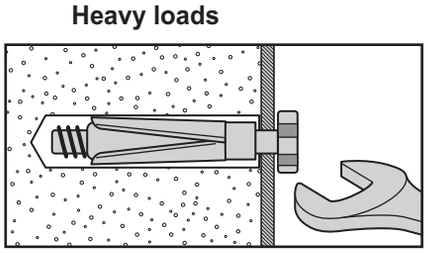

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the ftting and location to ensure your safety in and around the home.

Fitting: From time to time check the ftting to ensure the wall plugs or screws do not become loose.

Revision 2 - 7/10/09