BUSH

Instruction manual
Bush Spira B2 5” Smartphone



Bush_Spira_B2_5_Android_cover(AC50CPL).indd 1 25/11/2015 11:03:10

Table of contents

Package contents.....2
Description of the phone.....3
Getting started.....6
3G data & WiFi connection.....10
Google &Contacts.....12
Hints & tips for Android™.....14
Improving security on your Bush Phone.....16
Troubleshooting.....20

For more information, please consult the FAQs on the vendors website such as www.argos.co.uk. Make sure to read them before considering any product return. As we are often updating and improving our products, your device's software may have a slightly different appearance or modified functionality than presented in this Quick Start Guide.

Bush_Spira B2_5_Android_book(AC50CPL).indd 1 26/11/2015 11:28:50

Package Contents

Check your product box for the following items:
- Bush 5” Android
- Battery
- Headset
- USB cable
- 1 screen protector
- 1 extra white back cover
- 1 clear TPU case
- Charger
- Quick start guide
- Warranty Legal & Safety notices

The supplied items are designed only for your device and may not be compatible with other devices.
Unapproved accessories may cause your device to malfunction.

Bush_Spira B2_5_Android_book(AC50CPL).indd 2 26/11/2015 11:28:50

Description of the phone

① Micro-USB port

② Headset jack

③ Front camera


④ Phone speaker

⑤ Light sensor

⑥ Recent apps

⑦ Home/Google NOW

⑧ Back

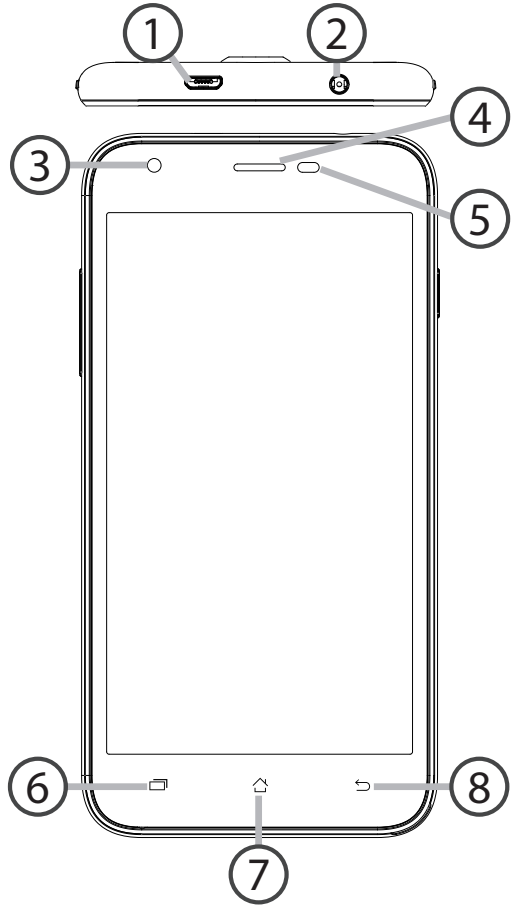

Bush_Spira B2_5_Android_book(AC50CPL).indd 3 26/11/2015 11:28:50

Description of the phone


⑨ Flash light

⑩ Camera

⑪ ON/OFF button

⑫ Volume buttons

⑬ Loudspeaker

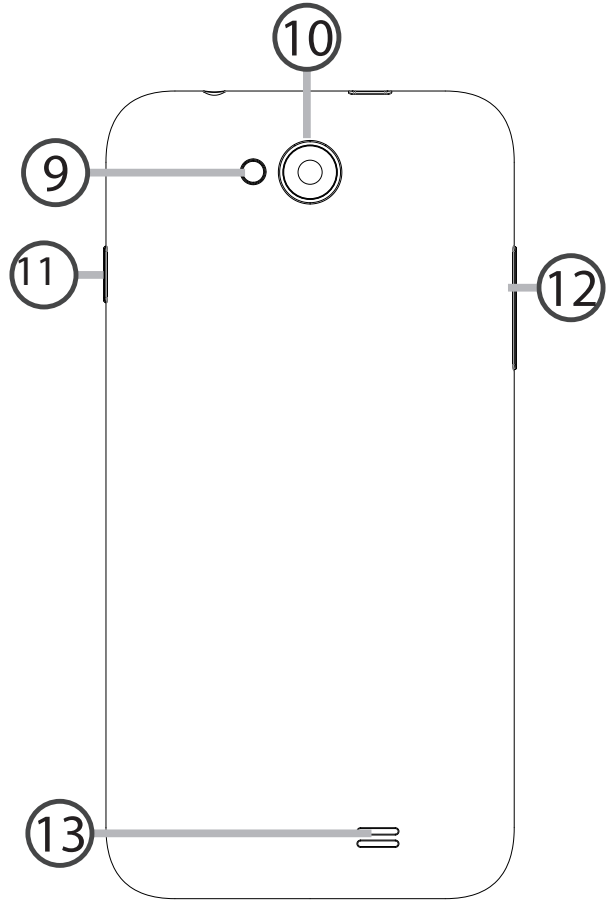

Bush_Spira B2_5_Android_book(AC50CPL).indd 4 26/11/2015 11:28:51



ON/OFF: when the device is off, long press to turn on. When the device is on, short press to turn off the screen and long press to display options.



Volume +/-: press +/- to adjust the volume. When you press the button, notification options are displayed. You can select the most appropriate one.



Recent apps: press to display recent apps.



Home: short press to return to the homescreen, long press to access Google Now.



Back: press to go back to the previous screen.



Micro-USB port: plug the provided cable to charge the device or to connect it to a computer.



Headphone jack: connect the provided earphones to make hand-free calls.



Camera & Flash: take pictures or make movies. To extend movies duration, insert a micro-SD card (max 32GB). Activate the flash option in a dark environment and use it as a torch through the quick settings.

Bush_Spira B2_5_Android_book(AC50CPL).indd 5 26/11/2015 11:28:52


Assembling

After you have unpacked your mobile phone box:

1. Remove the device's back cover using the notch.
2. Insert your SIM card or Memory card in the corresponding slot.
3. Insert the device's battery.
4. Replace the back cover.

3G/2G	slot 1	When inserting your SIM card or micro-SD card (max 32GB), make sure to follow the illustration, otherwise you may damage the slot or the card. The 2G slot is below the 3G/2G slot.
2G	slot 2	
Micro-SD card	slot 3 (Maximum capacity 32 GB)	

Bush_Spira B2_5_Android_book(AC50CPL).indd 6 26/11/2015 11:28:52

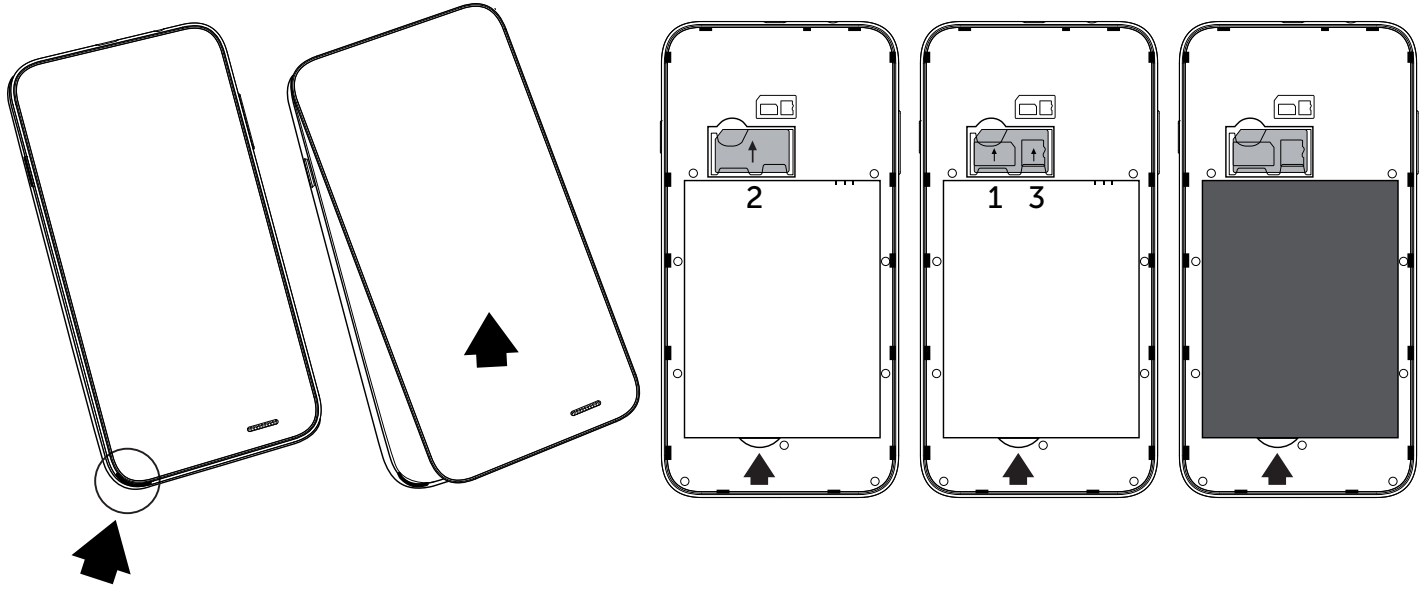

Lift the back cover using the notch

Bush_Spira B2_5_Android_book(AC50CPL).indd 7 26/11/2015 11:28:52

Getting started

Turning on

1. Plug the charging cable in the Micro-USB port and connect it to its charger.
Before using your device for the first time, charge its battery completely.
2. Press and hold the ON/OFF button to turn on the device.
The first time you start up your tablet, the installation wizard will help you set up your device.
3. Follow the onscreen instructions.
If you have inserted a SIM card, you may need to enter a PIN code. Beware of typing a wrong PIN code.


Tip:
Your device goes in standby mode when you do not use it for a specified period of time. To wake up your device, press the ON/OFF button. To set the duration, go to Settings > Display > Sleep.


Bush_Spira B2_5_Android_book(AC50CPL).indd 8 26/11/2015 11:28:52


On your homescreen

1. Swipe right	to access Google Now
2. Press	to access all your apps
3. Hold your finger on an app	to move it right and create a new homescreen.
4. Say “Ok Google”	to launch the search page.

5. Touch and pull down the status bar to display it. Touch again the bar to reveal the quick settings.



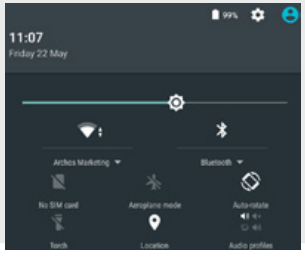

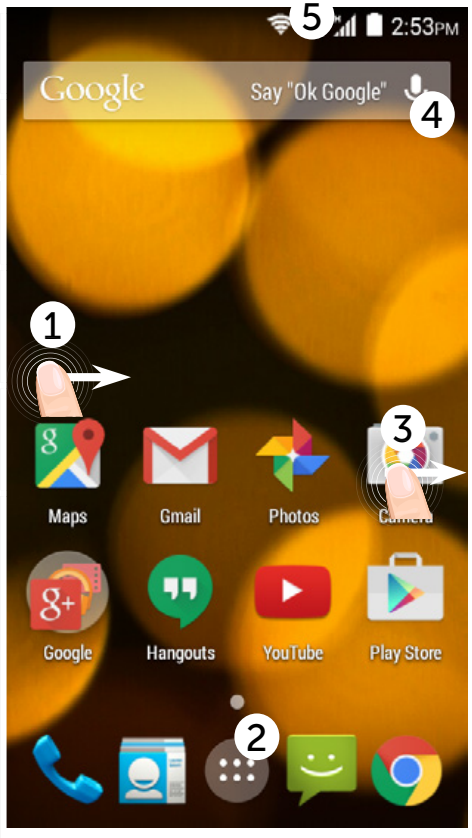

Bush_Spira B2_5_Android_book(AC50CPL).indd 9 26/11/2015 11:28:53

3G data & WiFi connection


3G connection

In order to get mobile data you must have the appropriate service from your network provider; some plans are for calls and texts only. For most major networks your SIM will connect with the network automatically. However, some networks may require you to do some manual set up to get started. In this case you will get a message from them telling you how to set up. Check to see if you already have network connection before making any changes in settings. Note that you will only be able to get mobile data (3G) if the area you are in is covered by signal from your network provider. When connected to the 3G network, the 3G icon is displayed in the status bar. If 3G is not available your phone will default to lower bit rate services (2G).

Activating the mobile data

Activating/Deactivating the mobile data

1. Touch and pull down the status bar to display it.
2. Touch the bar again to reveal the quick settings.
3. Select the Settings icon.
4. In Wireless & networks, select Data usage, then the SIM card tab.
5. Slide the Mobile data switch to turn on/off.

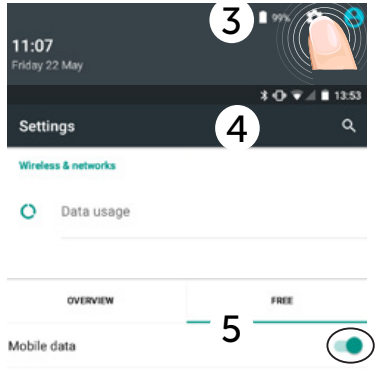

Bush_Spira B2_5_Android_book(AC50CPL).indd 10 26/11/2015 11:28:53


WiFi connection

WARNING: Make sure that you are in a WiFi zone. You can access the WiFi settings quickly from the status bar.

1. Touch and pull down the status bar to display it.


2. Touch again the bar to reveal the quick settings.

3. Select the WiFi icon to activate the WiFi connection .

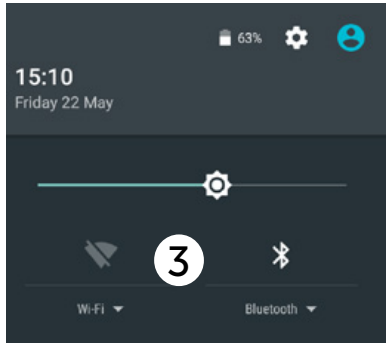

4. Open the selection of available WiFi networks by touching the small down arrow.

5. Touch the name of network you want to connect to. Private networks are shown with a lock icon and will require you to enter your password.

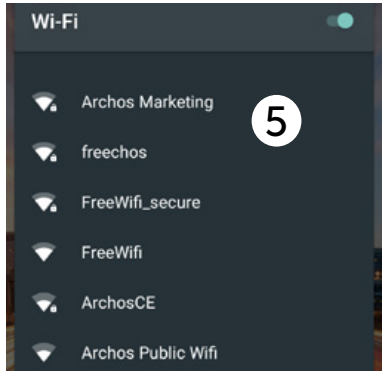

Bush_Spira B2_5_Android_book(AC50CPL).indd 11 26/11/2015 11:28:54

Google & Contacts

Adding a Google account

A Google account lets you take full advantage of any Google apps and services that you may want to use.

1. Go to “Settings” > “Accounts” > “Add account”.
2. Select the account type “Google” to add.
3. Follow the onscreen instructions to enter information about the account.

Once the account is created, you can access Play Store, Gmail, Hangouts, Maps and many other apps.

Synchronizing info

Information must be sync to be saved. Your data is backed up on Google servers.

1. Go to “Settings” > “Accounts” > “Google”.
2. Select your account.

The list of information that can be sync are displayed.
Automatic sync should be activated. To launch the sync, press the Menu button , then Sync now. You can get them back in case of loss of your device or SIM card. When your Google account is added to a new device, all your saved information is transferred.

Bush_Spira B2_5_Android_book(AC50CPL).indd 12 26/11/2015 11:28:54

Saving your contacts

When your contacts are saved, they are always available on the web and can be synced to any Android phone that's set up with your Google account.

1. Install the SIM card with your contacts in your phone.
2. From the Home screen or the All Apps screen, select the Contacts app .
3. Touch the Menu button ⋮ > "Import/Export".
4. In Import/export contacts, select "Import from SIM card".
5. Select your Google account.
6. Check contacts to be imported and validate.
7. Once the contacts are imported in the Google account, go to "Settings" > "Accounts" > "Google".
8. Select you Google account.
9. Select the Menu button ⋮, then "Sync now".

Your contacts are saved to your Google account.

Bush_Spira B2_5_Android_book(AC50CPL).indd 13 26/11/2015 11:28:54

Hints & tips with Android™

Moving a home screen item:

Touch and hold your finger onto it, then slide it to the desired location, and release your finger.

Removing a home screen item:

Touch and hold it, slide your finger towards the top of the screen and drop it over the “Remove” icon.

Uninstalling an item:

From the “All apps” screens, touch and hold it, slide your finger towards the top of the screen and drop it over “Uninstall” bin.

Creating application folders:

Drop one app icon over another on a home screen and the two icons will be combined.

Bush_Spira B2_5_Android_book(AC50CPL).indd 14 26/11/2015 11:28:54

Widgets:

Hold your finger on a homescreen at an empty location. Touch “Widgets”.

Changing your wallpaper:

Hold your finger on a home screen at an empty location. Touch “Wallpapers”.

Locking the touchscreen:

Select the “Settings” app, then scroll down and touch “Security”. Touch “Screen lock”. Touch the type of lock you would like to use. After you set a lock, a lock screen is displayed whenever your screen wakes up, requesting the pattern, pin or other specified key.

Bush_Spira B2_5_Android_book(AC50CPL).indd 15 26/11/2015 11:28:54

Improving security on your Bush Phone

Online

In order to avoid online threats we recommend that you install antivirus and security software on your device and keep these and your browser and other software up to date to take advantage of security fixes.

Physical theft

If you store valuable information on your phone including passwords and logins for personal accounts etc. you may want to enhance the security of your phone in case it is stolen or lost.

Setting a PIN or password

You can set a pin code (4-8 digit numerical code) or you can set a password which is 4 to 17 digits. We recommend you set a password, the longer and more complex it is the harder it is to break. For the best passwords use a mixture of upper and lower case letters, numbers and special characters such as %, # and *.

- In 'Settings', select 'Security', then 'screen lock', then select PIN or Password.

Bush_Spira B2_5_Android_book(AC50CPL).indd 16 26/11/2015 11:28:54

Encrypting your memory

In order to prevent more technically capable persons gaining access to your data, in the event that your phone is lost or stolen, you can encrypt your phone's memory so that even if the password is breached the data will be unreadable.

Please note encryption will have a modest effect on performance but for most tasks this will not be noticeable. For memory intensive tasks such as playing back video files stored in the phone's memory it may cause some buffering.

In order to encrypt your phone you must first set a PIN or password as shown above.

Before you encrypt, you must charge your phone to at least 80% battery capacity, then with your phone still on charge go to;

- 'Settings', select 'Security', then 'Encrypt phone'. The phone will then ask you for your password. Type this, then press 'Encrypt phone'. The encryption can take up to 90 minutes. Do not interrupt the process. Failure to follow this routine exactly may result in your phone becoming unusable.

Bush_Spira B2_5_Android_book(AC50CPL).indd 17 26/11/2015 11:28:54

- Please note that your phone cannot be decrypted by the same process. To decrypt you must return the phone to factory settings which will erase all of your files and downloaded apps (securely).
- To reset to factory defaults go to 'Settings', select 'Backup and Reset' then 'Factory data reset'.

Erasing your personal data

If you sell your phone on or discard it, you should erase the data in memory before you do so, using a file eraser program that actively writes to every record in the memory. This securely erases your data so that it cannot be recovered. Please note that simply returning your phone to factory settings is not a reliable way of erasing your personal data (unless you have first encrypted your data).

- To download a file eraser go to Google Play store, select a file eraser program such as Remo File Eraser – download and install.
- Open the app and follow instructions to securely erase your data.

Further Advice

For further advice on how to stay safe there are government lead

Bush_Spira B2_5_Android_book(AC50CPL).indd 18 26/11/2015 11:28:54

initiatives such as Get Safe Online https://www.getsafeonline.org/ which give good advice about a how to avoid a range of security threats. Don't let security issues spoil your enjoyment of your phone.

Bush Phones Helpline

For detailed advice on this or any other issue concerning your Bush phone you can consult with the technical support helpline – 0207 744 0346

Bush_Spira B2_5_Android_book(AC50CPL).indd 19 26/11/2015 11:28:54

Troubleshooting

My phone is frozen or cannot switch on:
Check the battery contacts, remove and reinstall your battery, then turn your phone on. Check the battery power level, charge for at least 20 minutes.

My phone cannot connect to a network or “No service” is displayed:
Try connecting in another location. Verify the network coverage with your operator.

Unable to make outgoing calls:
Make sure your phone is connected to a network, and the network is not overloaded or unavailable.

Unable to receive incoming calls:
Make sure your phone is switched on and connected to a network (check for overloaded or unavailable network).

SIM card PIN locked:
Contact your network operator to obtain the PUK code (Personal Unblocking Key).

Bush_Spira B2_5_Android_book(AC50CPL).indd 20 26/11/2015 11:28:54

To configure a new 3G network:
On your device, tap Settings.
Select Wireless & networks > More... > Mobile networks.
Select Network settings. In Network operators, select your operator.
In Access Point Names, select the correct access point name and enter the exact connection parameters provided by your 3G provider.

SAR

After the labortory measurement, this mobile phone SAR value is Head Max: Head: 0.252 W/Kg; Body: 0.598 W/Kg

Argos declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the declaration of conformity can be obtained from: Argos Ltd. 489-499 Avebury Boulevard, Milton Keynes, MK9 2NW, UK

CE 0700

Bush_Spira B2_5_Android_book(AC50CPL).indd 21 26/11/2015 11:28:54

www.argos.co.uk/bush

Argos Limited © 2015 All rights reserved.

PN : 114587

Bush_Spira_B2_5_Android_cover(AC50CPL).indd 2 25/11/2015 11:03:10