
JAKOB - 2 Door Robe

Assembly Instructions - Please keep for future reference

549/6152
569/6426

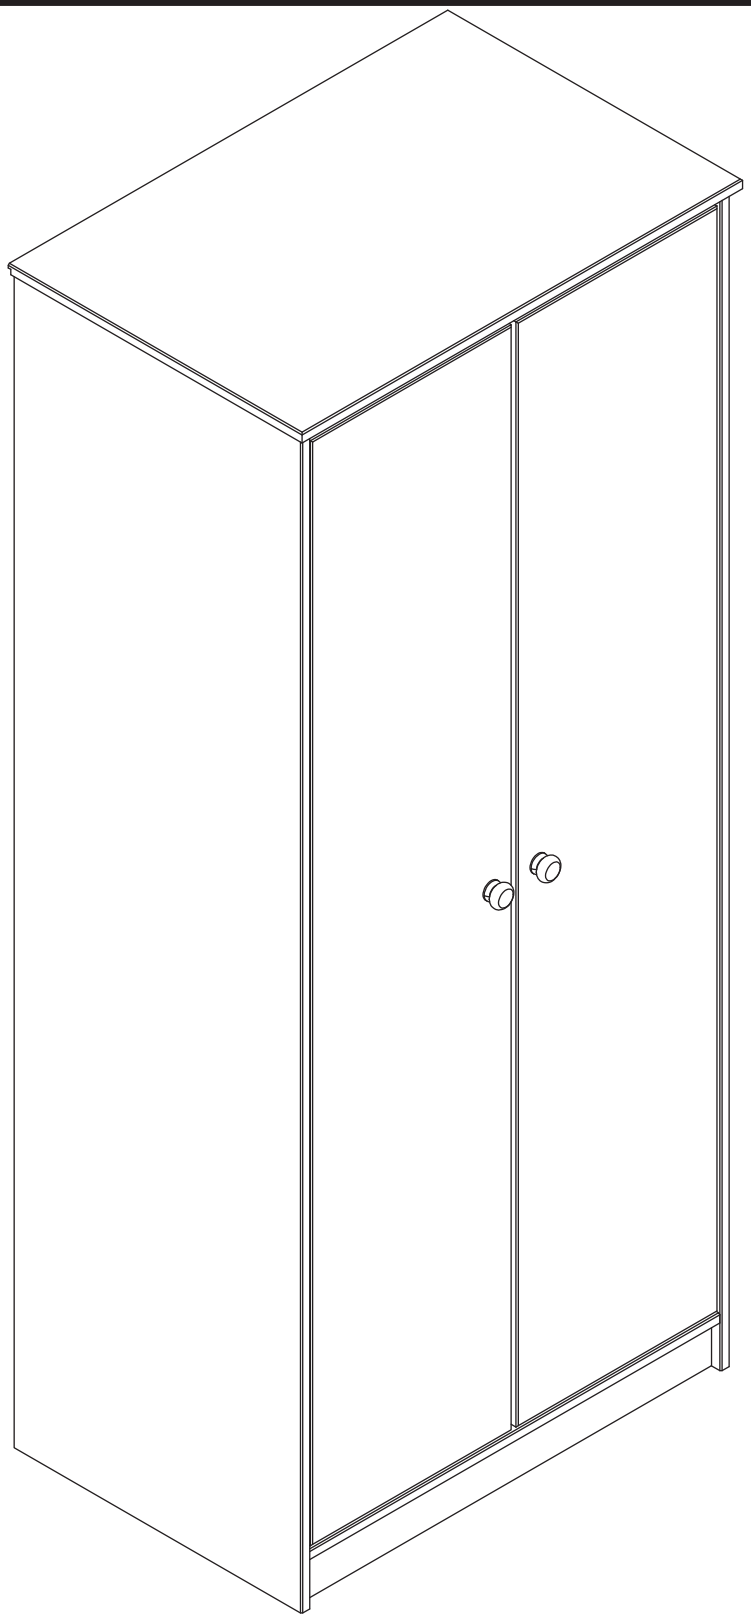

Dimensions

Width - 73.4cm
Depth - 50.0cm
Height - 175.0cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400 800**

Issue 1 - 12/09/12

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

• Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels

Please check you have all the panels listed below




1 Top panel
(73.4 x 50.0cm)

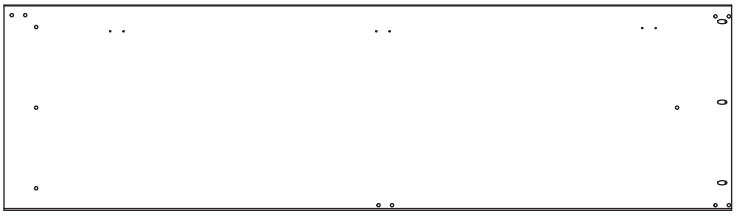

2 Left side panel
(173.4 x 48.9cm)




4 Bottom panel
(67.8 x 48.3cm)

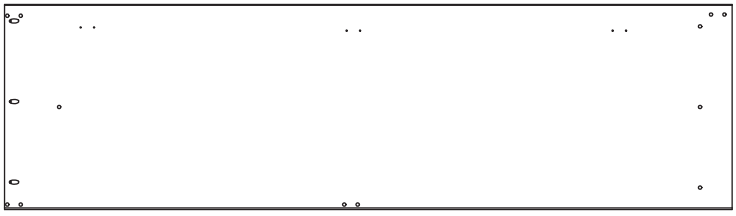

3 Right side panel
(173.4 x 48.9cm)




5 Front plinth
(67.8 x 6.8cm)

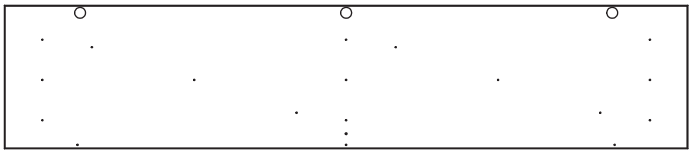

10 Doors x 2
(162.9 x 33.4cm)



6 Centre rail
(67.8 x 9.0cm)




7 Top rail x2
(67.8 x 4.5cm)



11 Back Panel x 2
(167.5 x 34.8cm)

8 Door support x 4
(73.8 x 2.2cm)

9 Door small support x 6
(25.0 x 2.2cm)



12 Hanging rail
(66.8 x 2.5cm)













Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 03456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Ø8x30mm Wooden dowel x 28	**B**  3,5x30mm Screw x 44	**C**  Hinge plate x 06
D  Hinge x 06	**E**  4,0x40mm Screw x 10	**F**  Hanging Rail Support x 02
G  Nail x 26	**H**  Washer x 2	**I**  Wall strap x 1
J  4,0x16mm Screw x 27	**L**  Knob x 02	**M**  Magnetic clip x 02
N  Metal plate x 02	**O**  3,0x16mm Screw x 08	


Tools required




Phillips screwdriver (medium & large)

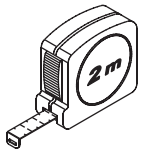

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Fitting wooden dowels

Insert dowels Ⓐ into the indicated parts.

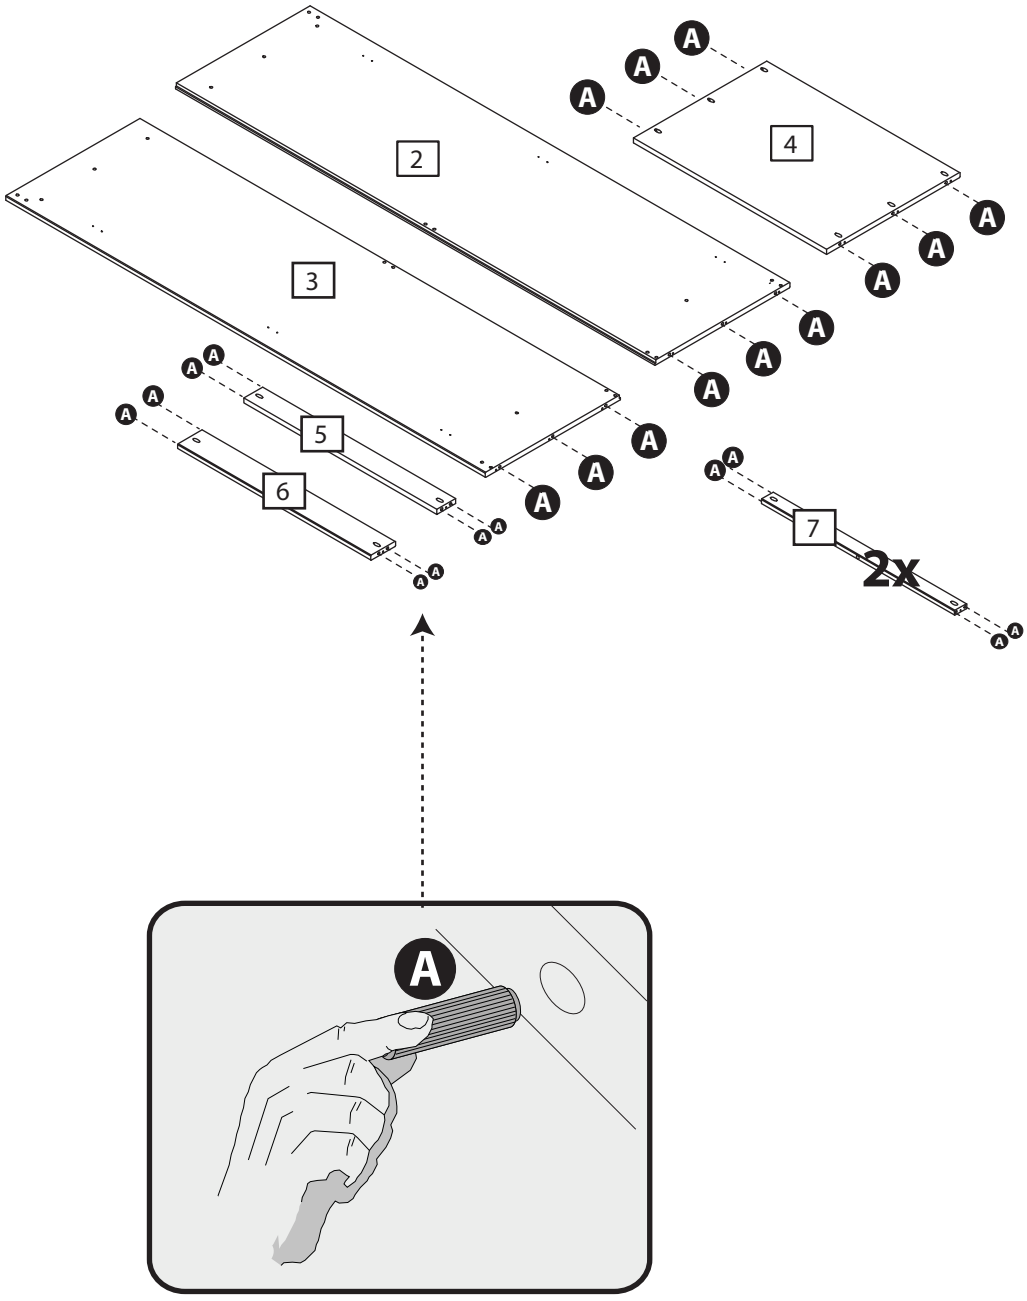


Assembly Instructions


Step 2

Fix hanging rail supports

a: Fix Hanging rail support F in the pre marked holes on Left side panel 2 and Right side panel 3 using screws J as shown.

b: Attach Hinge plate C in the pre marked holes on Left and Right side panel 2 and 3 using screws J as shown.

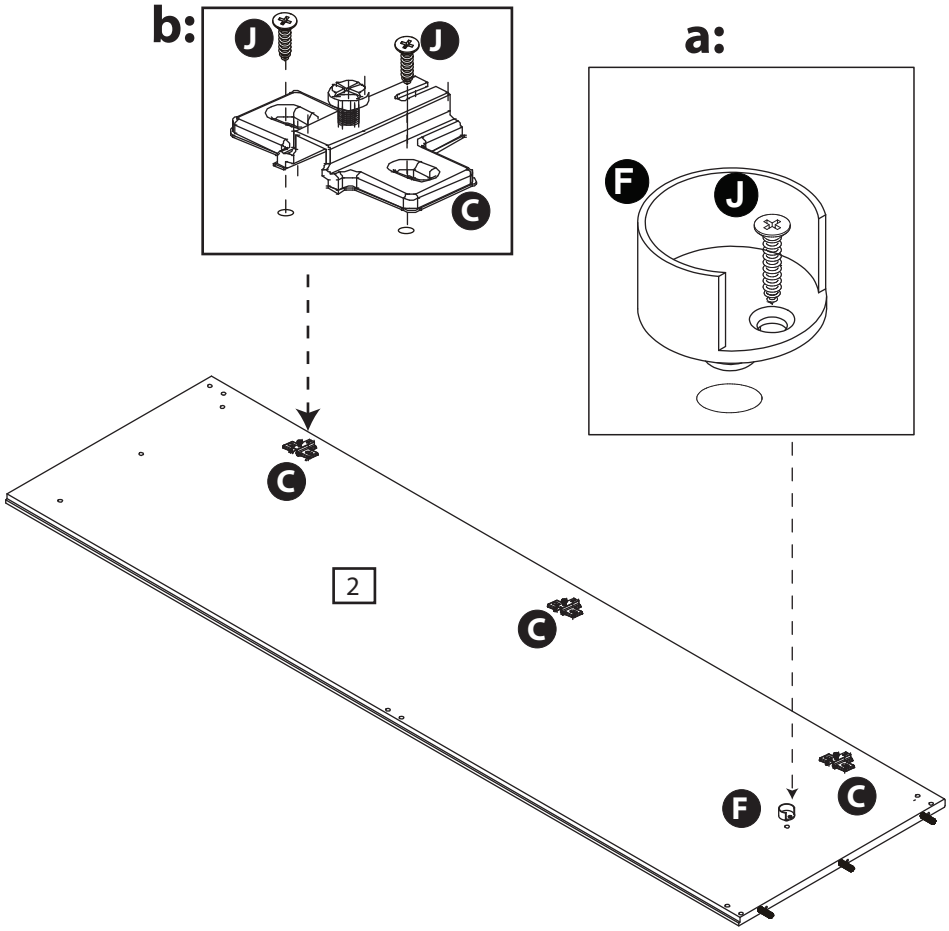

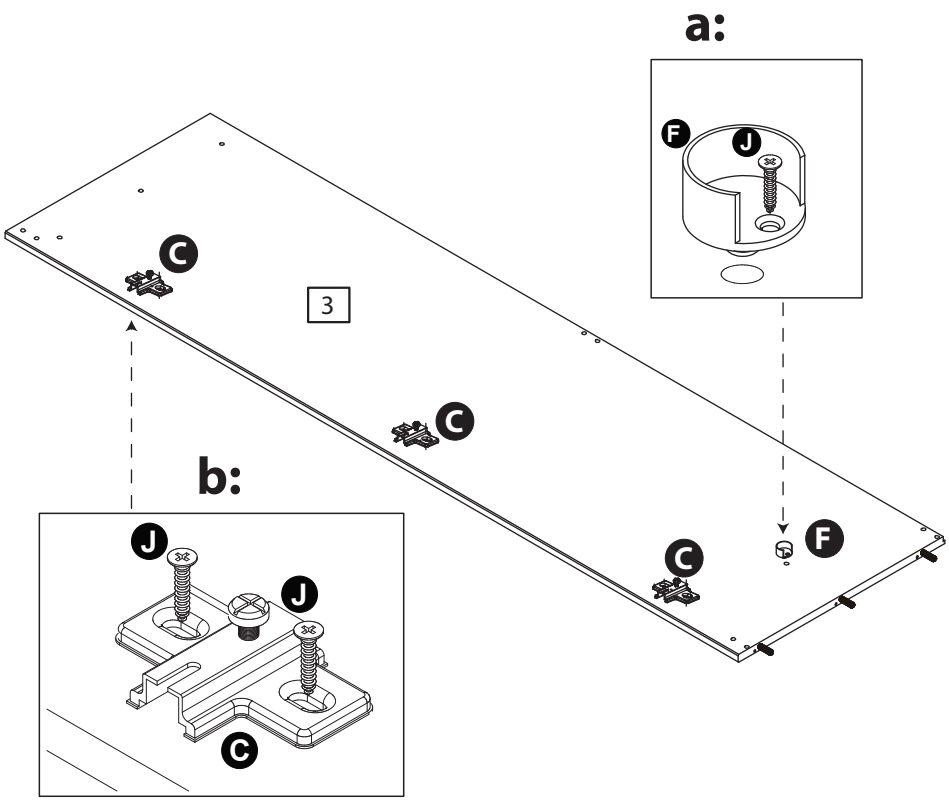

Assembly Instructions


Step 3

Attaching panels

(Two people required for an easier assembly).

Attach parts 4, 5, 6 and 7 to Right side panel 3.
Fix parts 4, 5, 6 and 7 to Right side panel 3 using screws B as shown.


Attention: Continue assembly on a soft and clean surface to avoid damaging the product

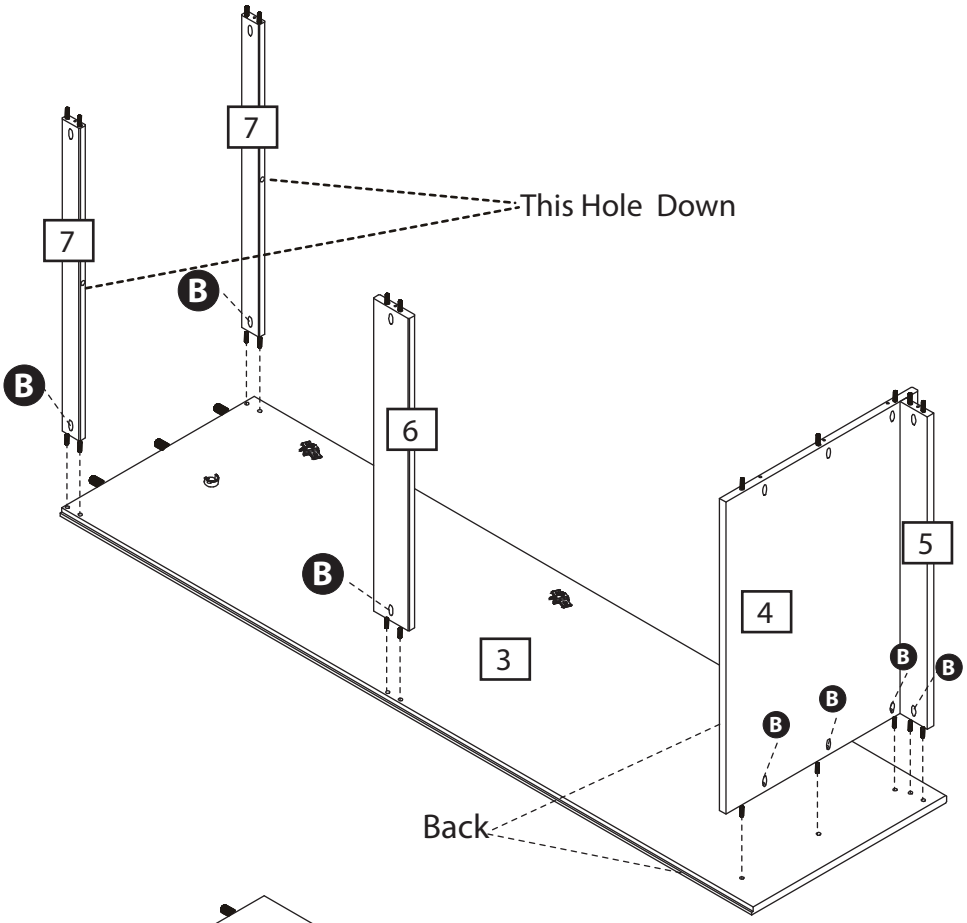

Step 4

Attaching panels

Attach Left side panel 2 to assembled unit.
Fix parts 4 5 6 and 7 to Left side panel 2 using screws B as shown.

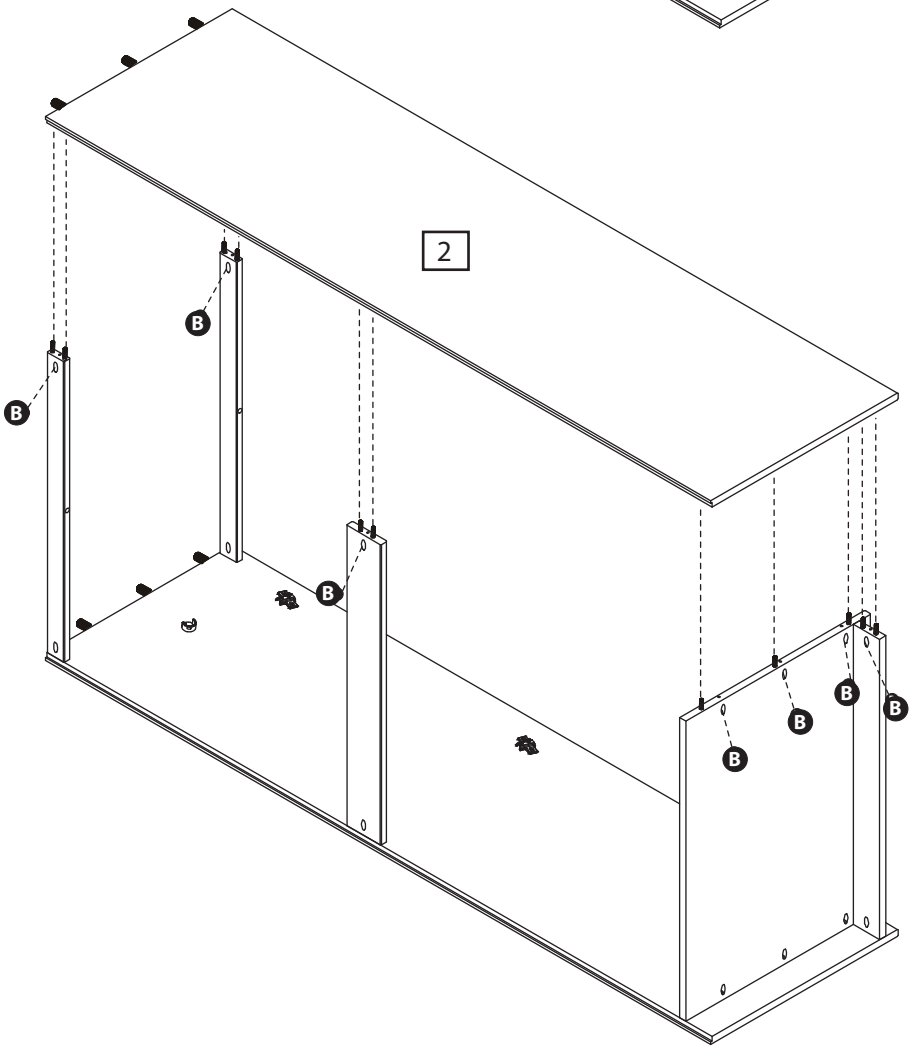


Assembly Instructions

Step 5

Fixing top panel

Attach Top panel 1 to the cabinet. Fix Top panel 1 to Side panel and Top rails using screws E as shown.

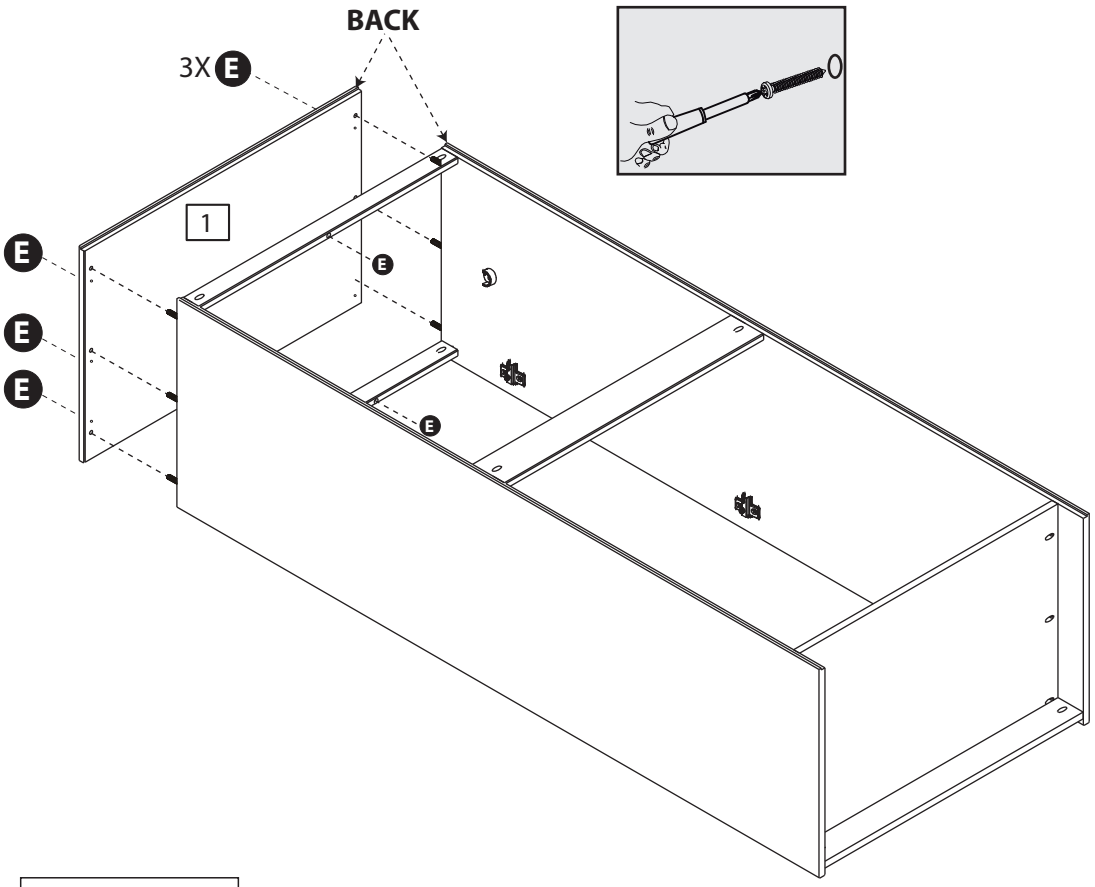


Step 6


Fixing back panels


Attention to the measure when attaching nails to the Center rail.

Attach Back panels 11 using Nail G , as shown.

Important. Cabinet MUST be "square" when back panel is attached.

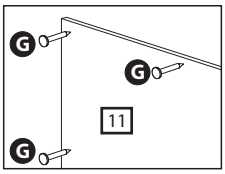

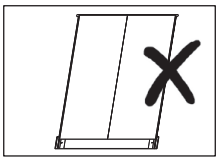

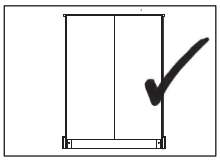


Assembly Instructions

Step 7

Attaching door supports

a: Fix Door small support [9] in the pre marked holes on Door [10] using screws Ⓑ as shown.
Fix Door support [8] in the pre marked
roles on Door [10] using screws Ⓑ as shown.

b: Attach Hinge Ⓓ in the holes on Door [10] using screws Ⓙ , as shown.

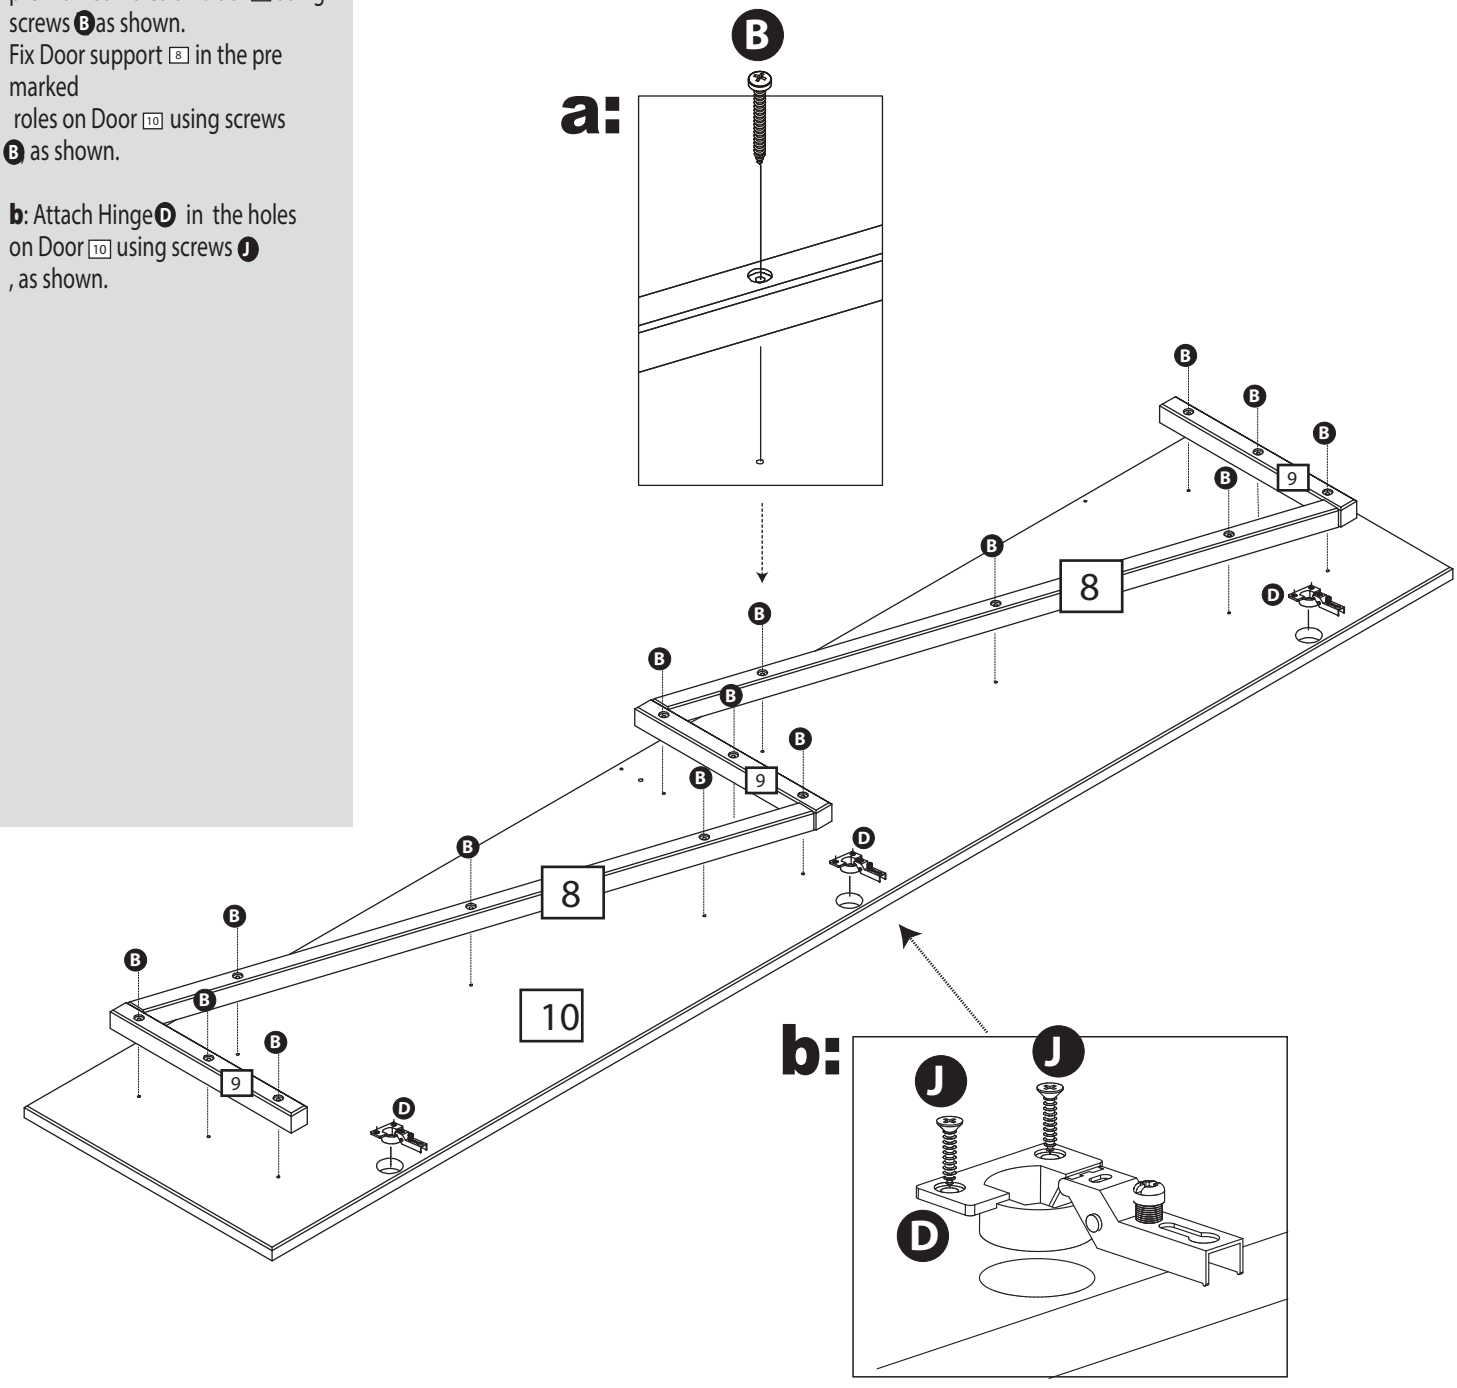


Assembly Instructions

Step 8

Inserting hanging rail


With help, carefully stand the product upright. Insert Hanging rail 12 into supports, as shown.

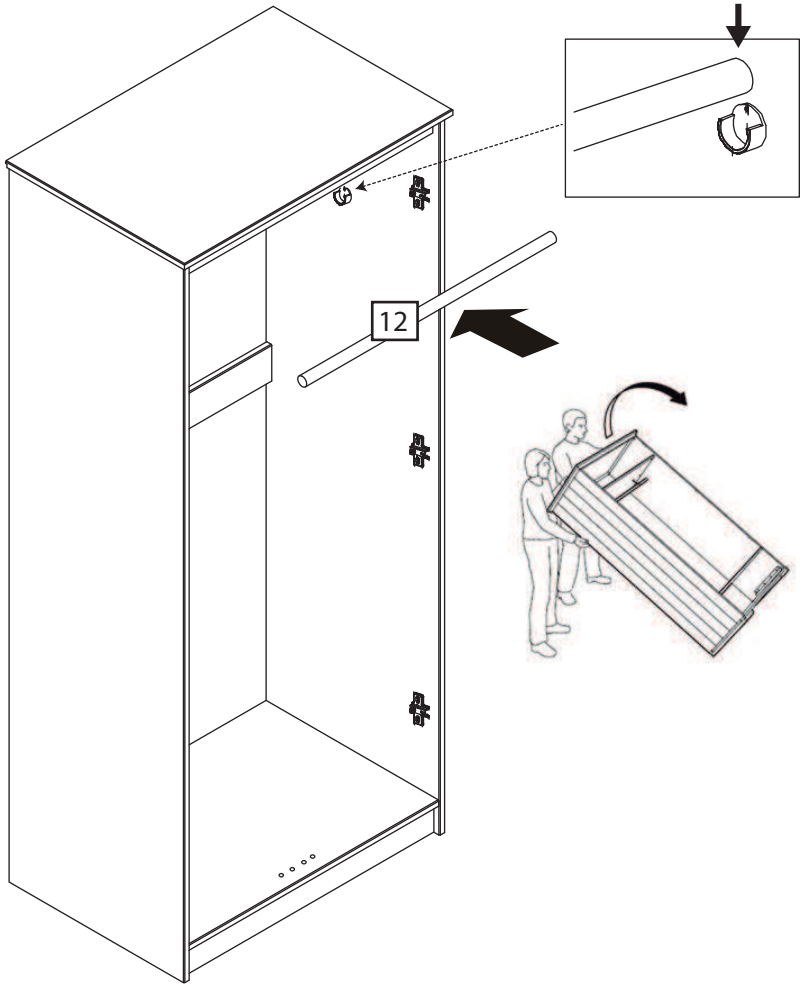

Step 9

Fixing magnetic clip

Fix the Magnetic clips Ⓜ in the pre marked holes on Bottom panel 4 using screws Ⓞ, as shown.

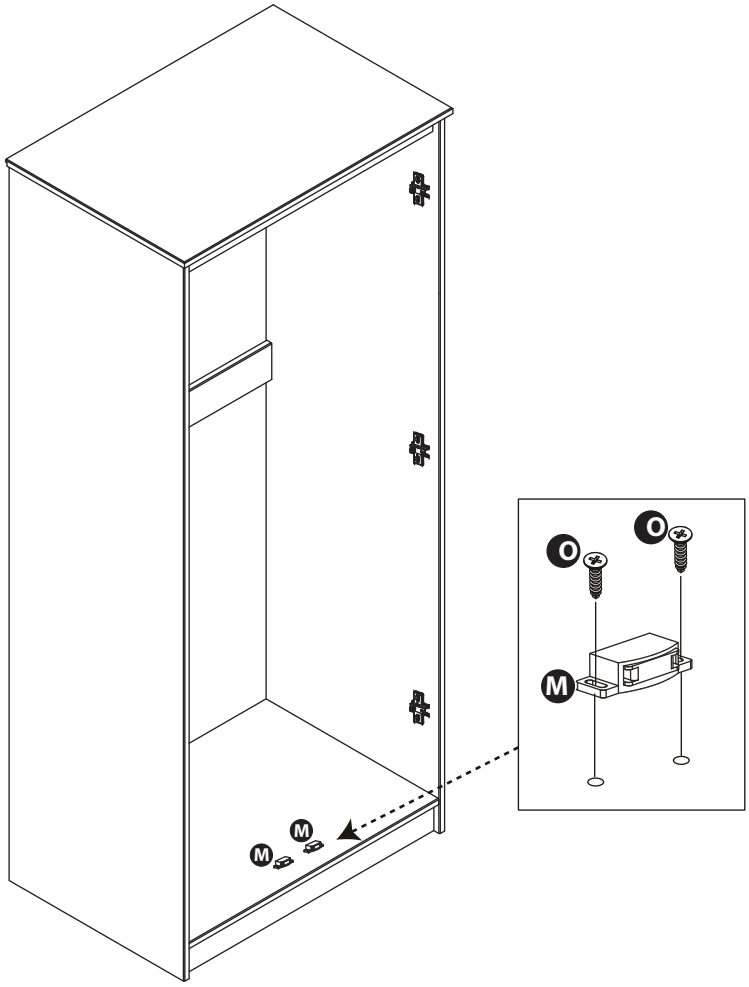

Assembly Instructions

Step 10

Hanging doors

a: With help slot Hinge D onto Hinge plates C




Make sure hinges are correctly positioned according to the diagram prior to fixing.


b: Tighten screw shown to lock hinges in position Ensure hinges are positioned as shown in the diagram.

NOTE: Repeat a and b to the other door.

e: Fix Metal plate N in the pre marked roles on Doors 10 using screws O , as shown.

f: Fix Knobs L to the Doors 10 using screws E, as shown.

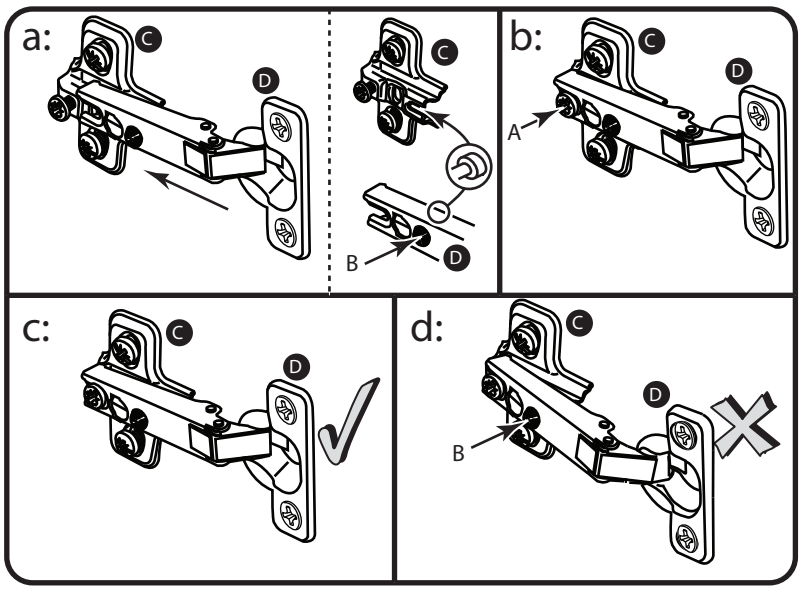

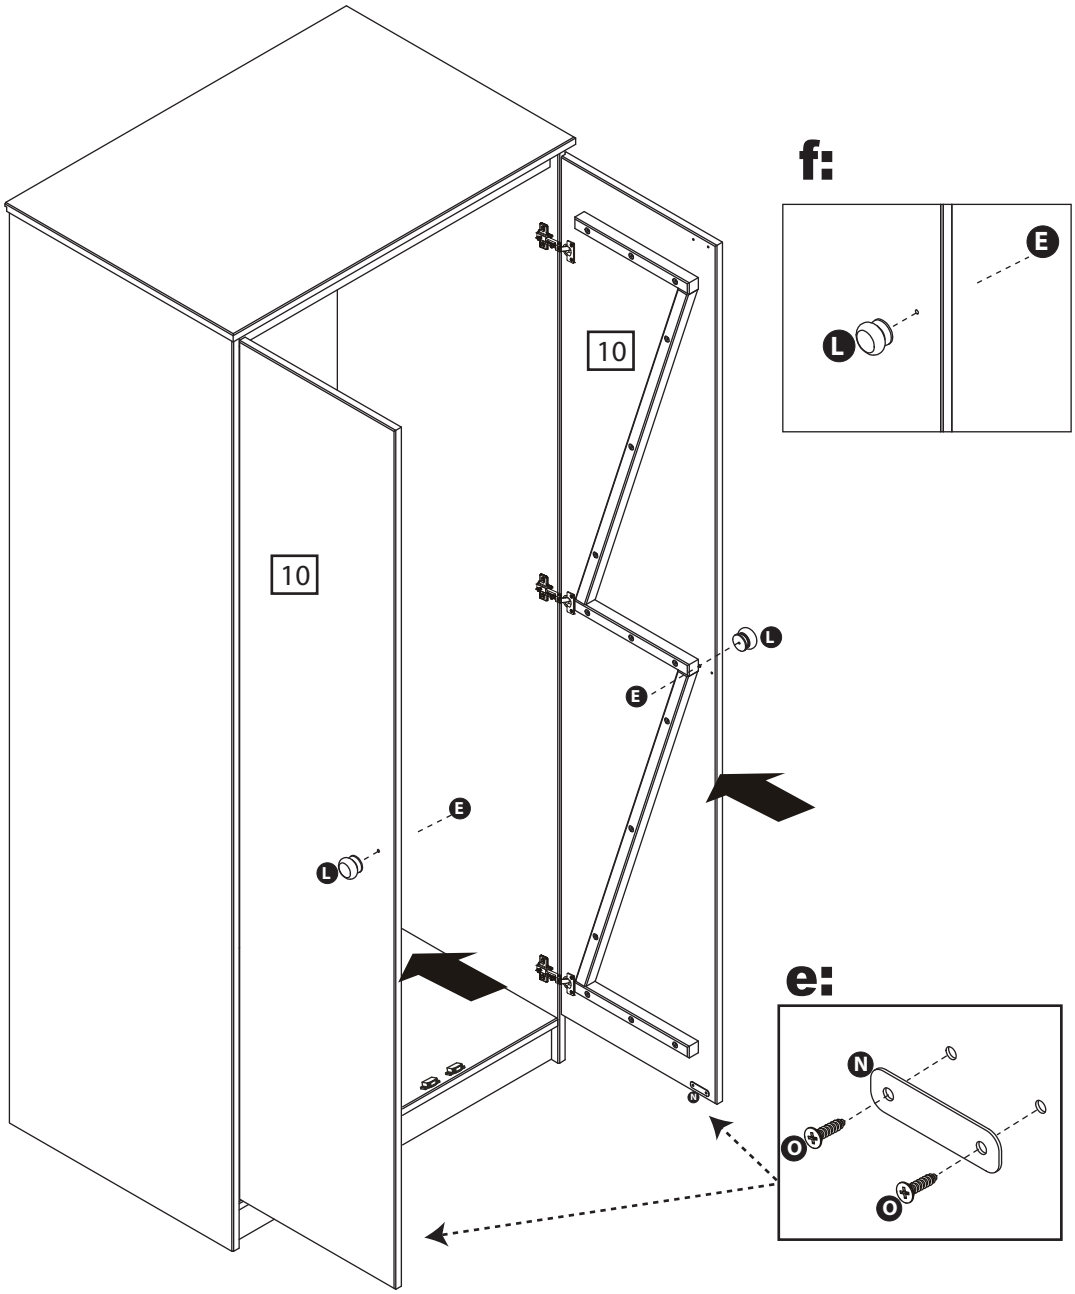

Assembly Instructions


Step 11


Hinge adjustment


a: To move doors left and right: loosen screw shown and move doors to suit. Re-tighten screws.

b: To move doors in and out: loosen screw shown and move doors to suit. Re-tighten screws.

c: To move doors up and down: loosen screw shown and move doors to suit. Re-tighten screws.

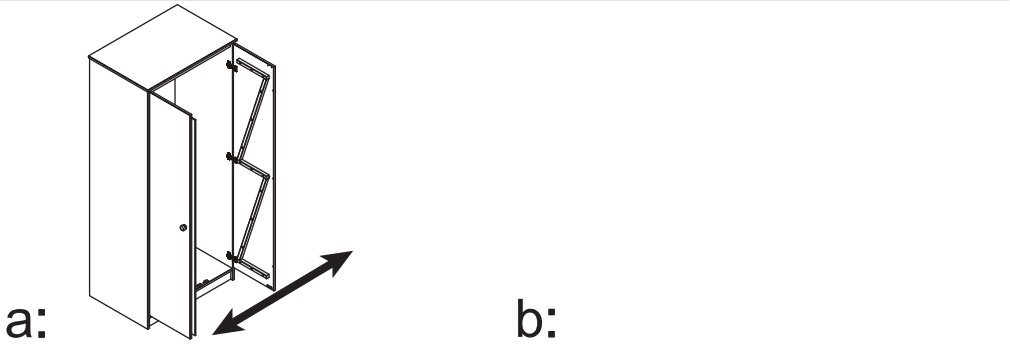

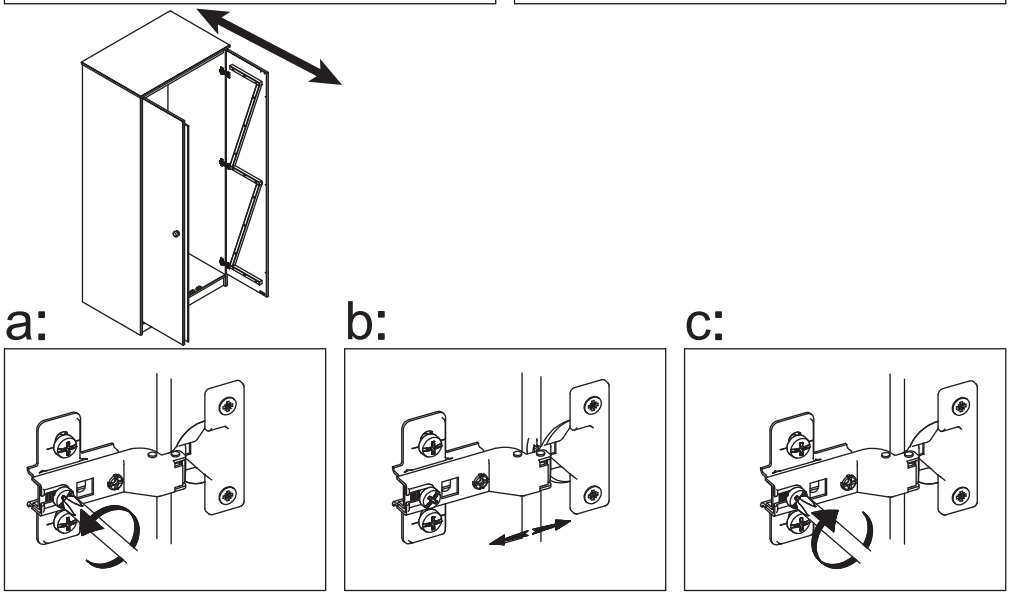

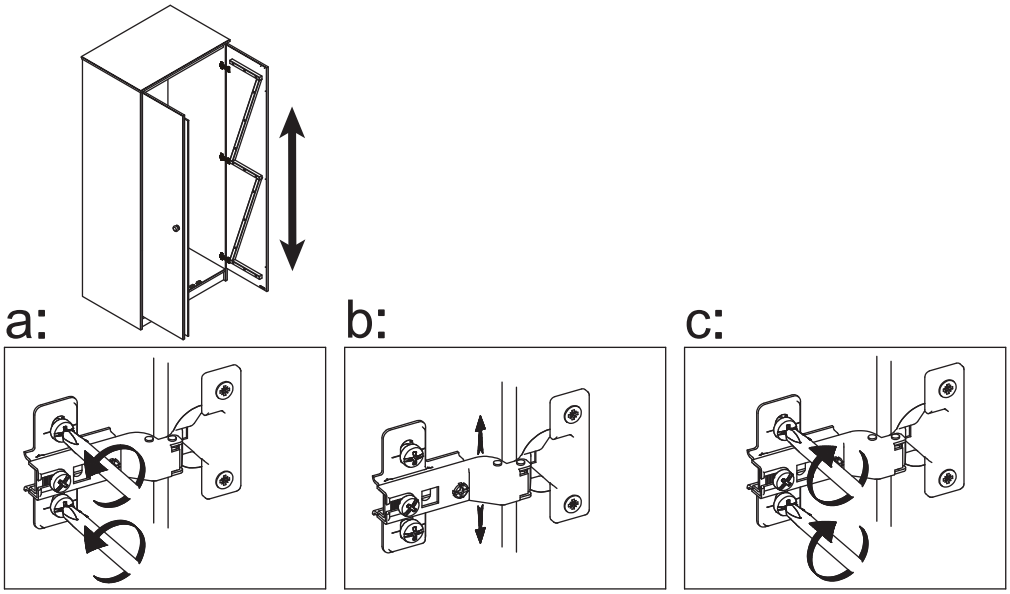


Assembly Instructions

Step 12


Fixing to wall

It is recommended that the wardrobe is fixed to a wall. Fix wall strap ❶ to top wardrobe using washer ❽ and screw ❾ as shown. With help move the wardrobe into position.

Warning: The wardrobe is heavy. Lift with care.

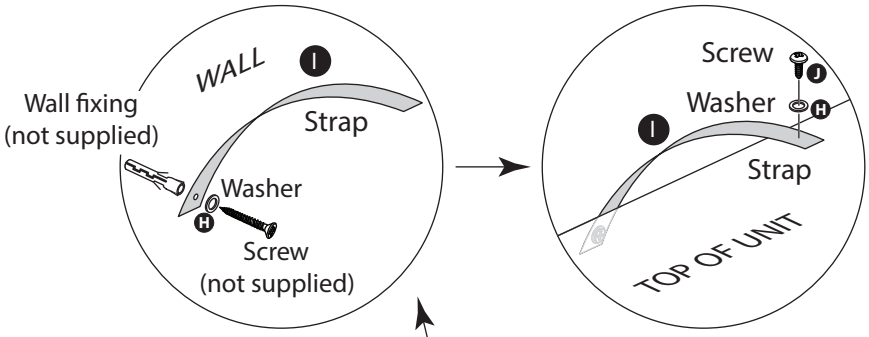

Note: Wall plugs not supplied. The correct type of fxing must be used for your wall, seek professional advice if in doubt.

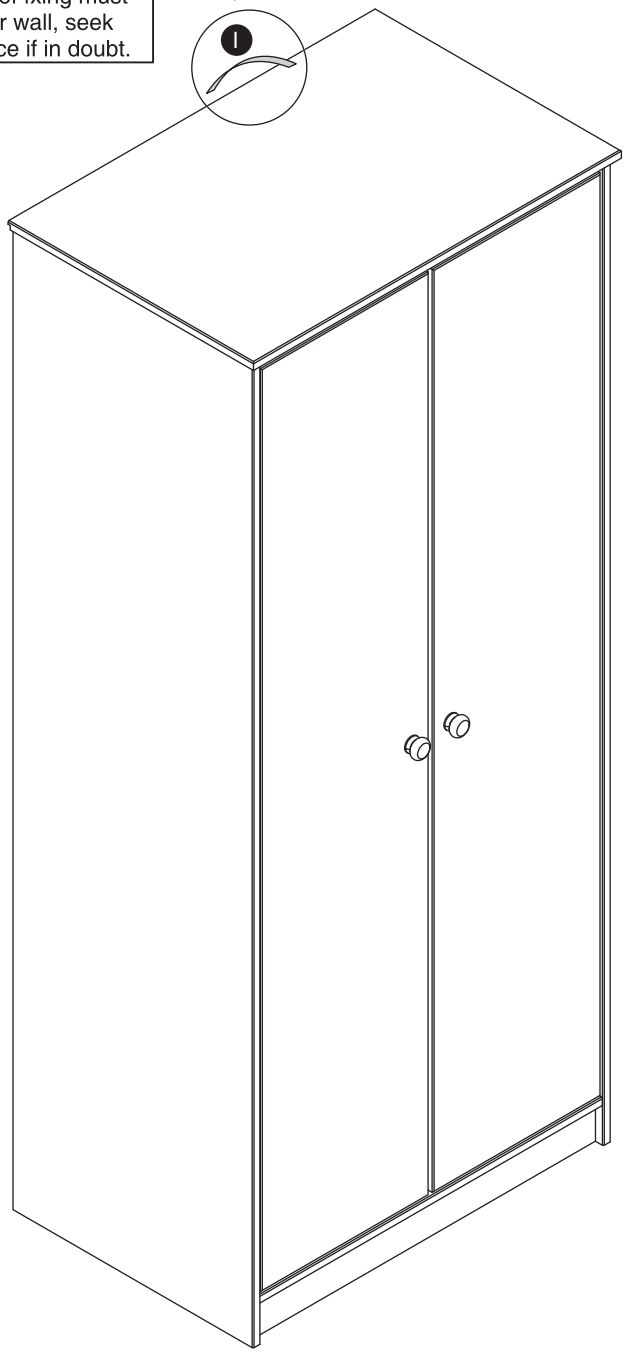


Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400 800**

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

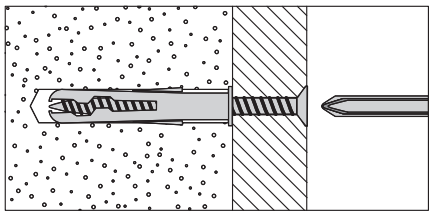


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

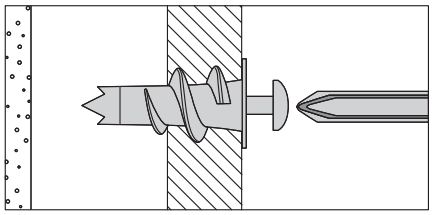


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

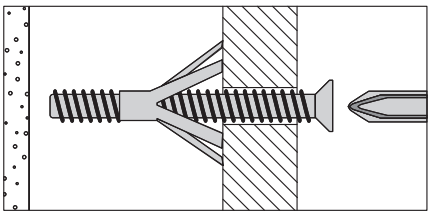


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

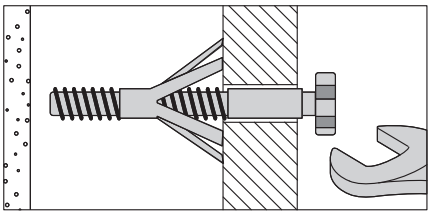


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

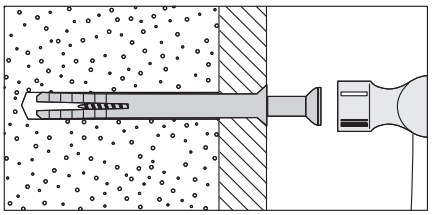

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

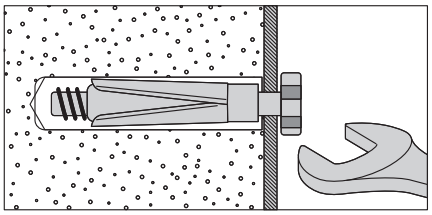

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.