
BUSH

Bluetooth Stereo Speaker

BTS29

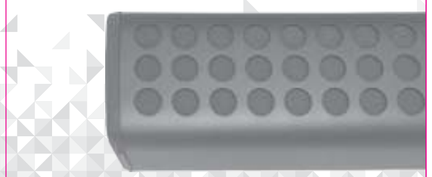

Contents and Features

Page Contents

Warnings 2
Box Contents 3
Introduction 3
Features 3
Controls and Operation 3
Charging the Battery 4
Bluetooth Pairing 4-5
Controls / AUX IN / Power Off 6-7
Troubleshooting 8
Specifications 9
Product support 10-11

Warnings

Warning

1. No naked flame sources, such as lighted candles, should be placed on or near this equipment.
2. Do not place the product in enclosed bookcases or racks without proper ventilation.
3. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
4. The unit should not be exposed to direct sunlight, very high or low temperature, moisture, vibrations or placed in a dusty environment.
5. Do not use abrasives, benzene, thinner or other solvents to clean the surface of the unit. To clean, wipe with clean soft cloth it and a mild detergent solution.
6. Never attempt to insert wires, pins or other such objects into the vents or opening of the unit.
7. Do not disassemble or modify the Bluetooth Speaker - there are no user serviceable parts.
8. If the Bluetooth Speaker is damaged in anyway or malfunctions do not use. Consult a qualified service engineer.
9. Do not dispose of this product with household waste at the end of its life cycle; hand it over to a collection centre for the recycling of electrical and electronic appliances. By recycling, some of the materials can be reused. You are making an important contribution to protect our environment. Please check with your Local Authority or recycling advice.
10. This speaker has a built in lithium polymer battery, it must be used and charged properly. Improper use can cause the battery to catch fire or explode resulting in serious or fatal injury.

Disposal of your old appliance

1. When this crossed-out wheelie bin symbol is attached to a product, it means the product is covered by the WEEE European Directive.
2. All electrical and electronic products should be disposed of separately from household waste at an appropriate recycling point/centre.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. If you dispose of the speaker remember it contains a battery and recycle accordingly.
5. For more detailed information about disposal of your old appliance, please contact your local authority or the shop where you purchased the product.



Box contents

1 x BTS29 Bluetooth Stereo Speaker
1 x AUX IN 3.5mm jack to 3.5mm jack cable (Approx. 60cm)
1 x USB cable
1 x User guide

Introduction


The BTS29 Bluetooth speaker allows you to listen to the music stored on your iPod™, iPhone™, or other Bluetooth enabled device without the need to connect via wires or a dock. It can also be used as a loudspeaker for your mobile phone calls.

Features

- Compatible for use with all Bluetooth enabled devices including iPhone, iPad, Blackberry, HTC, Samsung, Nokia and many other smartphones and tablets
- 10 metre range
- Lithium battery rechargeable via USB for up to 6-8 hours playing time
- Connect wirelessly or by cable via the built-in 3.5mm jack socket. Cable supplied
- 2 x speaker drivers (5 Watts RMS output power) with passive subwoofer

Controls and Operation

Controls

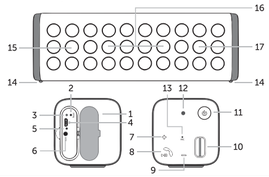

1. Rubber Seal Cover	7. Increase volume, next track	13. MIC Position
2. Reset	8. Play/Pause. Pick up/Hang up call/Last dialed	14. Foot
3. Charge LED	9. Decrease volume, previous track	15. Left Speaker
4. Micro USB Socket	10. Lanyard Holder	16. Bass Radiator
5. AUX LED	11. Power Button	17. Right Speaker
6. AUX Input Jack	12. Bluetooth LED	

Re-chargeable Battery and Charging

This Bluetooth Speaker has an internal, non user-replaceable battery. For best results, the first time you use this Bluetooth Speaker, let it charge for 4-6 hours until fully charged.

1. Connect the Bluetooth Speaker's Micro USB socket (4) to the USB power adaptor via the USB cable supplied.
2. The Charge LED (3) will turn red when the battery is charging.
3. The Charge LED (3) light will turn off when the battery is fully charged.
4. Disconnect the USB cable when the battery is fully charged.

Please Note:
The BTS29 has been designed to be charged by a 2A, 5V USB output if connected to a lower rated output it may not charge properly or take a lot longer to charge.

Bluetooth Pairing

Pairing your speaker with Bluetooth enabled Android mobiles and tablets

1. Place the speaker and mobile/tablet within 1 metre of each other. Turn on the speaker using the power switch (11) on the side of the speaker, the LED will flash white, the speaker is ready to pair.
2. Select the Bluetooth function on your mobile and search for Bluetooth devices, the speaker will appear as "BTS29" in the Bluetooth device list, select and pair.
3. Connection will normally be automatic if a password is required enter (0000). After successful pairing, select "BTS29" in the Bluetooth device list, and press "connect". After successful connection, LED changes to slow blinking from fast.

Please Note:

1. If the pairing is not successful, turn off the speaker and try pairing again.
2. After successful pairing, paired devices will remember each other. Unless pairing information is deleted, pairing should be automatic when both devices are switched on in range of each other.
3. To pair with a new device follow steps 1-3 above after disconnecting the existing pair.

Pairing your speaker with iPhone/iPad

Place the speaker and your iPhone/iPad within 1 metre of each other.
Turn on the speaker, the LED will flash white, the speaker is ready to pair. In the iPhone/iPad General menu go to Bluetooth, tap on Bluetooth function, search the Bluetooth devices, tap "BTS29" to connect.

Pairing your speaker with a PC /laptop Mac running OSX 10 or above

To pair to a PC or Mac follow the same procedure as for a phone or tablet.
After pairing to a Mac you will need to open System Preferences, click on Sound, click Output and select the Bluetooth speaker. Then click Input and select your speaker. Adjust the Input and Output volume to suit. You can also click on the "Show volume in menu bar" if you would like to control the volume from the menu bar. To show the Bluetooth status in the menu bar go to the Bluetooth preferences and click on the appropriate checkbox.
During the pairing process, if you are asked for a password enter (0000).

Re-connecting to a paired device

Each time the speaker is turned on, there are two possible outcomes.
The speaker will connect automatically to the last connected device, just press play for playback. The speaker will be listed on your devices screen as an available output channel, select the speaker as the output channel and play your music.

New pairing while connected

While connected to a device, you can switch the Bluetooth Speaker into searching mode to look for a new device to pair with simultaneously. Press and hold the Play/Pause (8) button until you hear a tones sound and the Bluetooth LED (12) will begin to flash. This will indicate you can now pair with a new device.

Controls / Power ON / AUX IN / Power Off

Power-On
Press and hold to power on speaker

Play/Pause Music

Press the Play/Pause (8) button to pause the speaker and press again to resume playing.

Adjusting the Volume

1. Press and hold the + (7) to increase the volume.
2. Press and hold the – (9) to decrease the volume.
3. When maximum or minimum volume has been reached, a series of tones will sound.

Play Next/Previous Track

1. Press the + (7) button to skip to the next track.
2. Press the – (9) button to play the previous track.

AUX IN connections

You can connect any audio output device to the AUX IN port using the 3.5mm stereo audio cable supplied. You can then play music through the speaker from the connected device.
When Aux cable plug in, bluetooth mode will break.

Auto Power-Off

The speaker unit will automatically "power down"
1. After 8 minutes if no Bluetooth connection is made.

Hands Free Function

When there is an incoming call while your device is paired to the speaker, the music will pause and the ringing tone will be sent through the speaker.

1. Press the Play/Pause (8) button to answer the call.
2. Press the Play/Pause (8) button again to hang up the call. The paused music will start playing automatically.
3. Press and hold Play/Pause (8) button for 3 seconds to ignore the incoming call.

Redial Last Call

1. Press the Play/Pause (8) button twice to enter the redial function. The music will pause and switch to hands free.
2. Press the Play/Pause (8) button again to hang up the redialled call and resume playing the paused music.
3. Ensure that your mobile phone supports the redial function. If not, the redial function can not be activated.

BUSH

Bluetooth Stereo Speaker

BTS37



Contents and Features

Page Contents

Warnings 2
Box Contents 3
Introduction 3
Features 3
Controls and Operation 3
Charging the Battery 4
Bluetooth Pairing 4-5
Controls / AUX IN / Power Off 6-7
Troubleshooting 8
Specifications 9
Product support 10-11

Warnings

Warning

1. No naked flame sources, such as lighted candles, should be placed on or near this equipment.
2. Do not place the product in enclosed bookcases or racks without proper ventilation.
3. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
4. The unit should not be exposed to direct sunlight, very high or low temperature, moisture, vibrations or placed in a dusty environment.
5. Do not use abrasives, benzene, thinner or other solvents to clean the surface of the unit. To clean, wipe with clean soft cloth it and a mild detergent solution.
6. Never attempt to insert wires, pins or other such objects into the vents or opening of the unit.
7. Do not disassemble or modify the Bluetooth Speaker - there are no user serviceable parts.
8. If the Bluetooth Speaker is damaged in anyway or malfunctions do not use. Consult a qualified service engineer.
9. Do not dispose of this product with household waste at the end of its life cycle; hand it over to a collection centre for the recycling of electrical and electronic appliances. By recycling, some of the materials can be reused. You are making an important contribution to protect our environment. Please check with your Local Authority or recycling advice.
10. This speaker has a built in lithium polymer battery, it must be used and charged properly. Improper use can cause the battery to catch fire or explode resulting in serious or fatal injury.

Disposal of your old appliance

1. When this crossed-out wheelie bin symbol is attached to a product, it means the product is covered by the WEEE European Directive.
2. All electrical and electronic products should be disposed of separately from household waste at an appropriate recycling point/centre.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. If you dispose of the speaker remember it contains a battery and recycle accordingly.
5. For more detailed information about disposal of your old appliance, please contact your local authority or the shop where you purchased the product.



Box contents

1 x BTS37 Bluetooth Stereo Speaker
1 x AUX IN 3.5mm jack to 3.5mm jack cable (Approx. 60cm)
1 x USB cable
1 x User guide

Introduction


The BTS37 Bluetooth speaker allows you to listen to the music stored on your iPod™, iPhone™, or other Bluetooth enabled device without the need to connect via wires or a dock. It can also be used as a loudspeaker for your mobile phone calls.

Features

- Compatible for use with all Bluetooth enabled devices including iPhone, iPad, Blackberry, HTC, Samsung, Nokia and many other smartphones and tablets
- 10 metre range
- Lithium battery rechargeable via USB for up to 6-8 hours playing time
- Connect wirelessly or by cable via the built-in 3.5mm jack socket. Cable supplied
- 2 x speaker drivers (2 Watts RMS output power) with passive subwoofer

Controls and Operation

Controls

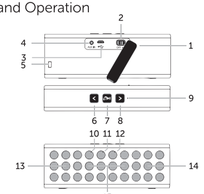

1. Rubber Seal Cover	6. Decrease volume, play previous track	11. AUX IN LED Indicator
2. Power Switch	7. Play/Pause. Pick up/Hang up call Last dialed	12. Charge LED Indicator
3. Micro USB Socket	8. Increase volume, play next track	13. Left Speaker
4. AUX IN	9. MIC Hole	14. Right Speaker
5. Lanyard Hole	10. Bluetooth LED Indicator	15. Bass Radiator

Re-chargeable Battery and Charging

This Bluetooth Speaker has an internal, non user-replaceable battery. For best results, the first time you use this Bluetooth Speaker, let it charge for 4-5 hours until fully charged.

1. Connect the Bluetooth Speaker's Micro USB socket (3) to the USB power adaptor via the USB cable supplied.
2. The Charge LED (12) will turn red when the battery is charging.
3. The Charge LED (12) light will turn off when the battery is fully charged.
4. Disconnect the USB cable when the battery is fully charged.

Bluetooth Pairing

Pairing your speaker with Bluetooth enabled Android mobiles and tablets

1. Place the speaker and mobile/tablet within 1 metres of each other. Turn on the speaker using the power switch (2) on the side of the speaker, the LED will flash blue, the speaker is ready to pair.
2. Select the Bluetooth function on your mobile and search for Bluetooth devices, the speaker will appear as "BTS37" in the Bluetooth device list select and pair.
3. Connection will normally be automatic if a password is required enter (0000). After successful pairing, select "BTS37" in the Bluetooth device list, and press "connect". After successful connection, LED changes to slow blinking from fast.

Please Note:

1. If the pairing is not successful, turn off the speaker and try pairing again.
2. After successful pairing, paired devices will remember each other. Unless pairing information is deleted, pairing should be automatic when both devices are switched on in range of each other.
3. To pair with a new device follow steps 1-3 above after disconnecting the existing pair.

Pairing your speaker with iPhone/iPad

Place the speaker and your iPhone/iPad within 1 metre of each other.
Turn on the speaker, the LED will flash blue, the speaker is ready to pair. In iPhone/iPad General menu go to Bluetooth, tap on Bluetooth function, search the Bluetooth devices, tap "BTS37" to connect.

Pairing your speaker with a PC /laptop Mac running OS X 10 or above

To pair to a PC or Mac follow the same procedure as for a phone or tablet.
After pairing to a Mac you will need to open System Preferences, click on Sound, click Output and select the Bluetooth speaker. Then click Input and select your speaker. Adjust the Input and Output volume to suit. You can also click on the "Show volume in menu bar" if you would like to control the volume from the menu bar. To show the Bluetooth status in the menu bar go to the Bluetooth preferences and click on the appropriate checkbox.
During the pairing process, if you are asked for a password enter (0000).

Re-connecting to a paired device

Each time the speaker is turned on, there are two possible outcomes.
The speaker will connect automatically to the last connected device, just press play for playback. The speaker will be listed on your devices screen as an available output channel, select the speaker as the output channel and play your music.

New pairing while connected

While connected to a device, you can switch the Bluetooth Speaker into searching mode to look for a new device to pair with simultaneously. Press and hold the Play/Pause (7) button until you hear a tones sound and the Bluetooth LED (12) will begin to flash.
This will indicate you can now pair with a new device.

Controls / Power ON / AUX IN / Power Off

Power-On
Press and hold to power on speaker

Play/Pause Music

Press the Play/Pause (7) button to pause the speaker and press again to resume playing.

Adjusting the Volume

1. Press and hold the > (8) to increase the volume.
2. Press and hold the < (6) to decrease the volume.
3. When maximum or minimum volume has been reached, a series of tones will sound.

Play Next/Previous Track

1. Press the > (8) button to skip to the next track.
2. Press the < (6) button to play the previous track.

AUX IN connections

You can connect any audio output device to the AUX IN port using the 3.5mm stereo audio cable supplied. You can then play music through the speaker from the connected device.
When Aux cable plug in, bluetooth mode will break.

Hands Free Function

When there is an incoming call while your device is paired to the speaker, the music will pause and the ringing tone will be sent through the speaker.

1. Press the Play/Pause (7) button to answer the call.
2. Press the Play/Pause (7) button again to hang up the call. The paused music will start playing automatically.
3. Press and hold Play/Pause (7) button for 3 seconds to ignore the incoming call.

Redial Last Call

1. Press the Play/Pause (7) button twice to enter the redial function. The music will pause and switch to hands free.
2. Press the Play/Pause (7) button again to hang up the redialled call and resume playing the paused music.
3. Ensure that your mobile phone supports the redial function. If not, the redial function can not be activated.

Low Power Reminder

As the battery power gets low, the Speaker will make a sound every few minutes to notify you that the battery will need charging. If the battery power gets to low, the Speaker will power down automatically and switch off. If this happens, simply connect the Speaker to the power adaptor. After 10-15 minutes press and hold the power (11) button to turn the Speaker back on, while still connected to the power adaptor.

Resetting the Bluetooth Speaker

In some circumstances the Speaker may need resetting. To reset the speaker simply use a straightened paper clip or something similar to push down on the reset button (2), which is located on the side of the speaker. Press and hold the power (11) button for 2-3 seconds after the reset to turn the Speaker back on.

Troubleshooting

Q1 There is no power.
A1 Make sure your audio device is charged.
A2 Ensure the device is switched on correctly.

Q2 There is no sound being emitted.
A1 Adjust volume on your Bluetooth device as well as on the speaker for optimum volume and sound quality.
A2 Make sure that your Bluetooth device is in effective range.
A3 Ensure that the Bluetooth device is paired.
A4 Make sure you have selected the correct audio source.

Q3 No response from the speaker.
A1 Restart the speaker by using the reset function.

Specifications

Unit Dimensions	H 70.5 x W 207.5 x D 68.5mm	
Unit Weight	706g (Approx.)	
Bluetooth	Specification	V2.1 + EDR
	Supported Profile	A2DP, AVRCP, HSP
	Connection Distance	10m (open area)
Built-in Battery	Lithium 7.4V, 2000mAh (3.7V, 2000mAh x 2pcs)	
	Playing time: 6-8 hours (at 75-80% of volume setting)	
	Controlled by T.M	
Power Source Input	Micro USB port	
	DC 5V, 2A/2000mAh	
Audio	Output Power	5W (RMS) x 2 (at 4 Ohm)
	Frequency Responses	20Hz to 20,000Hz
	Audio Enhancement Engine	
I/O	Audio in link	800mV RMS, 10K Ohm
Operating Temperature	0 to 40°C	

Disclaimer

Updates to Firmware and/or hardware components are made regularly. Therefore some of the instruction, specifications and pictures in this documentation may differ slightly from your particular situation. All items described in this guide for illustration purposes only and may not apply to particular situation. No legal right or entitlements may be obtained from the description made in this manual.

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Bluetooth Speaker is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at **www.argos-support.co.uk**

If you still require further assistance, call one of our experts on 0345 604 0105 . To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Date of purchase

This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

Product support

Help is always at hand

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, **Domestic & General, Leicester House** 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd - Milton Keynes - MK9 2NW

Waste electrical and electronic products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority for recycling advice.

CE 2016 v1

Low Power Reminder
As the battery power gets low, the Speaker will make a sound every few minutes to notify you that the battery will need charging. If the battery power gets to low, the Speaker will power down automatically and switch off. If this happens, simply connect the Speaker to the power adaptor. After 10-15 minutes press and hold the power (2) button to turn the Speaker back on, while still connected to the power adaptor.

Resetting the Bluetooth Speaker
In some circumstances the Speaker may need resetting. To reset the speaker simply switch the power (2) off and then on again.

BUSH Bluetooth Stereo Speaker | Instruction Manual 7

Troubleshooting
Q1 There is no power.
A1 Make sure your audio device is charged.
A2 Ensure the device is switched on correctly.

Q2 There is no sound being emitted.
A1 Adjust volume on your Bluetooth device as well as on the speaker for optimum volume and sound quality.
A2 Make sure that your Bluetooth device is in effective range.
A3 Ensure that the Bluetooth device is paired.
A4 Make sure you have selected the correct audio source.

Q3 No response from the speaker.
A1 Restart the speaker by using the reset function.

BUSH Bluetooth Stereo Speaker | Instruction Manual 8

Specifications

Unit Dimensions	H59 x W167 x D34mm	
Unit Weight	246.5g (Approx.)	
Bluetooth	Specification	V2.1 + EDR
	Supported Profile	A2DP, AVRCP, HSP
	Connection Distance	10m (open area)
Built-in Battery	Lithium 3.7V, 2000mAh	
	Playing time: 6-8 hours (at 75-80% of volume setting)	
	Controlled by T.M	
Power Source Input	Micro USB port	
	PC's USB port power or DC 5V, 1A/500mAh	
Audio	Output Power	2 W (RMS) x 2 (at 4 Ohm)
	Frequency Responses	20Hz to 20,000Hz
I/O	Audio in link	600–800mV RMS, 10K Ohm
Operating Temperature	0 to 40°C	

Disclaimer

Updates to Firmware and/or hardware components are made regularly. Therefore some of the instruction, specifications and pictures in this documentation may differ slightly from your particular situation. All items described in this guide for illustration purposes only and may not apply to particular situation. No legal right or entitlements may be obtained from the description made in this manual.

BUSH Bluetooth Stereo Speaker | Instruction Manual 9

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Bluetooth Speaker is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on 0345 604 0105 . To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Date of purchase

This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105

Product support BUSH

Product support

Help is always at hand

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd - Milton Keynes - MK9 2NW

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105

Product support BUSH

Waste electrical and electronic products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority for recycling advice.

CE 2016 v1