
DINING FURNITURE

Dining Chair

Easy Assembly Instructions

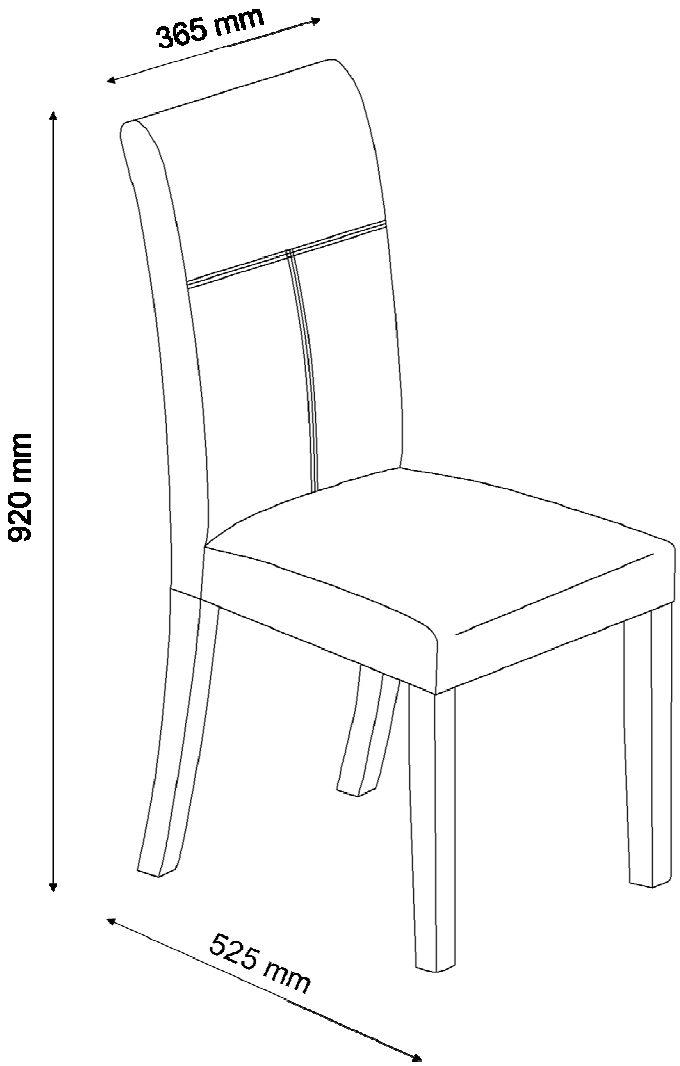

Before you start, here is some helpful advice


1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.
3. Assemble this product on a carpet.
4. All you will need to assemble this unit is a screwdriver and light hammer.
5. Keep glue and fittings out of children's reach.

In the unlikely event that this product has missing or damaged parts, please call 0845 640 0800 to obtain spares.

Argos Ltd MK9 2NW

Component parts and fittings contained in the box


Chair

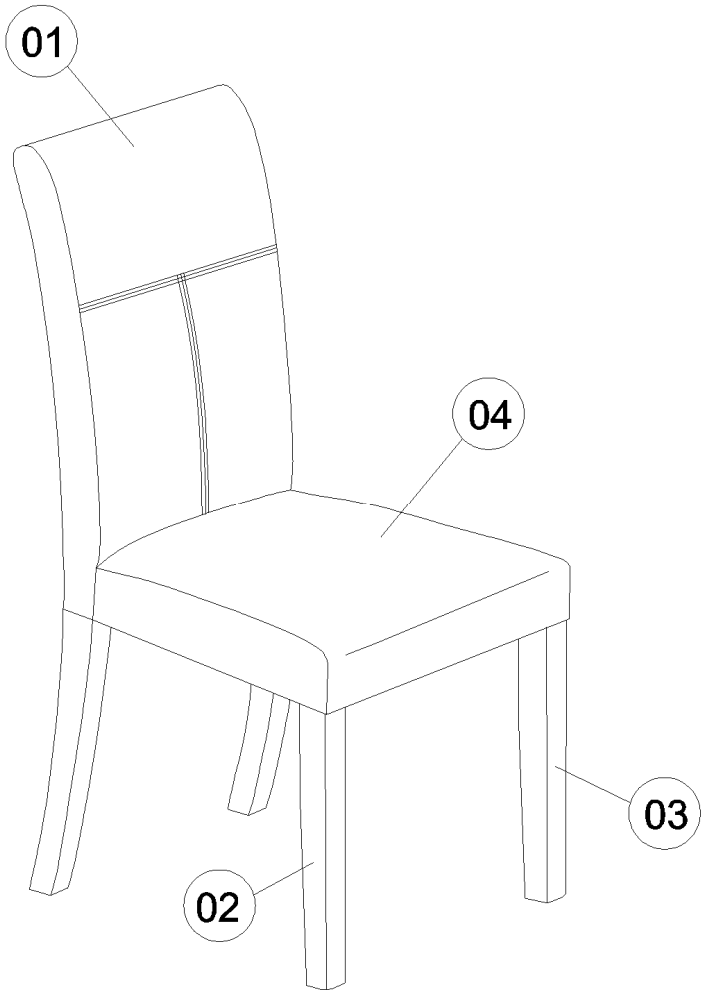


Total: 08 Parts for 2 chairs

Fittings


A Bolt 90 mm 8 pcs

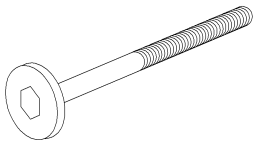


B Bolt 55 mm 10 pcs

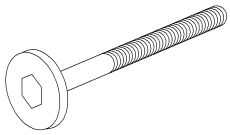


C Washer 18 pcs



D Spring washer 16 pcs

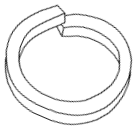

F Hex Key 1 pc

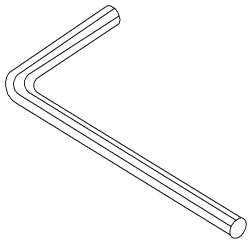

ASSEMBLY - STAGE ONE



Chair Assembly


1. Locate the corners of the box seat opposite to the center hole.

Insert the legs 02 and 03 into the corners of the box seat.

Insert two bolts B, spring washers D and washers C through the each corner block of the box seat 04.

Tighten the bolts.

1

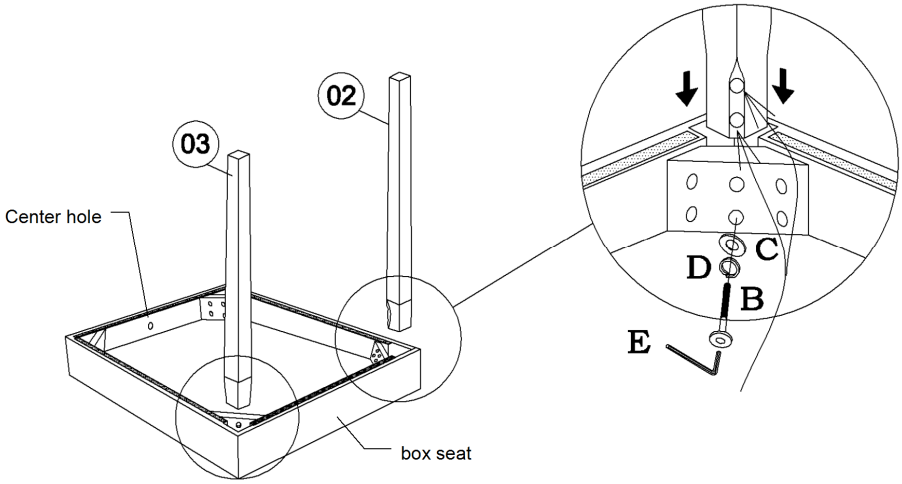


2. Place the box seat on the back frame 01.

Assemble the bolt B and washer C onto the back frame.

Do not tighten the bolt at this point.

2

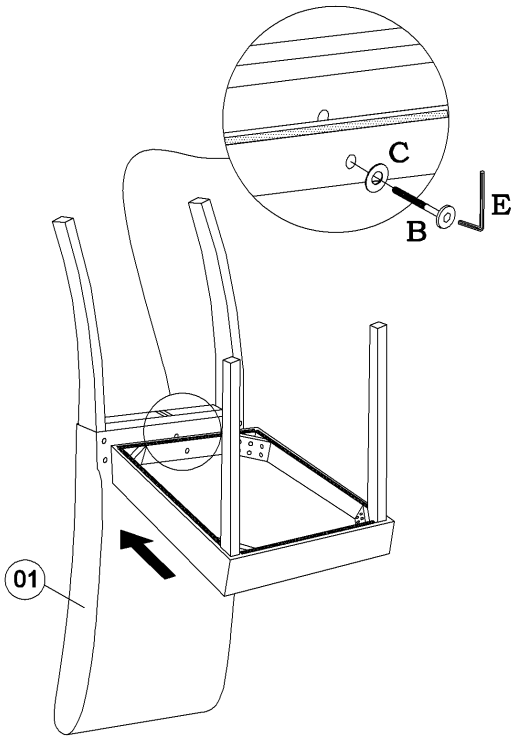

ASSEMBLY - STAGE ONE




Chair Assembly

3. Assemble two bolts A, spring washers D and washers C through each corner block of the box seat to the back frame.


Do not tighten the bolts at this point in time.

3

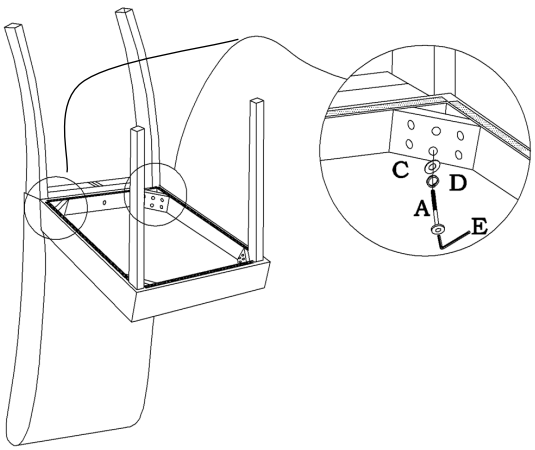

4. Carefully turn the chair over, and put the chair on the floor.

4

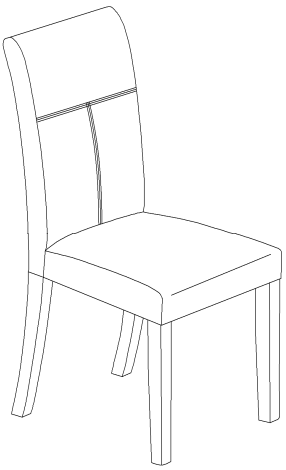


5. Tighten each loose bolt a little at a time while making sure the chair remains level. Repeat until all loose bolts are tight.

Dining Chair

Assembly Instructions - Please keep for future reference

600/1584
603/2364
603/0452
600/3654
160/609
603/0830
603/2333

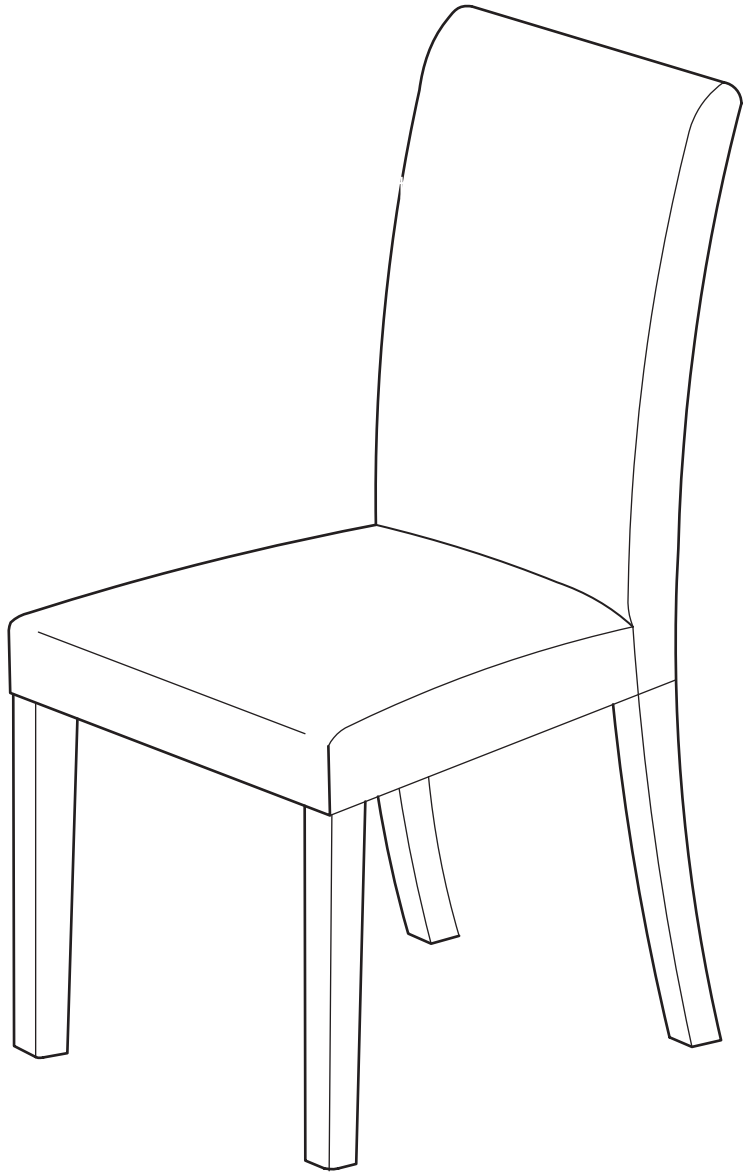

Dimensions

Width - 43.5cm

Deep - 52.5cm

Height - 92cm

Important Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**

Issue 1 - 1/03/10

afety and Care Advice

Important Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages and .

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room as possible.

• Assemble on a soft level surface to avoid damaging the unit or your oor.

• Parts of the assembly will be easier with people.



• We do not recommend the use of power drill drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.


Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels

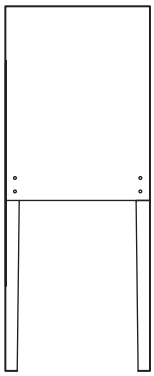


1 Back frame (36.5 x 92cm)



x cm

2 Leg x 2 (3.2 43)

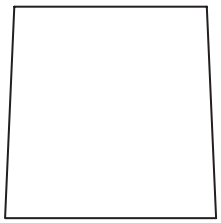


3 Box seat (43.5 x 41.5cm)

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800**

Please check you have all the ttings listed below

ote: The quantities below are the correct amount to complete the assembly. In some cases more ttings may be supplied than are required.


A  M6x85mm Bolt x 8	B  M6x55mm Bolt x 10	C  ∅18x1mm Washer x 18
D  ∅11x1.5mm Spring washer x 16	E  4mm Hex Key x 1	

Tools required



Ruler/tape measure

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions


Step 1

Fitting legs

Locate the corners of the box seat opposite to the center hole.
Insert the legs 2 into the corners of the box seat 3.
Assemble bolts B, spring washers D and washers C through each corner block of the box seat 3 using hex key E.

Tighten the bolts.

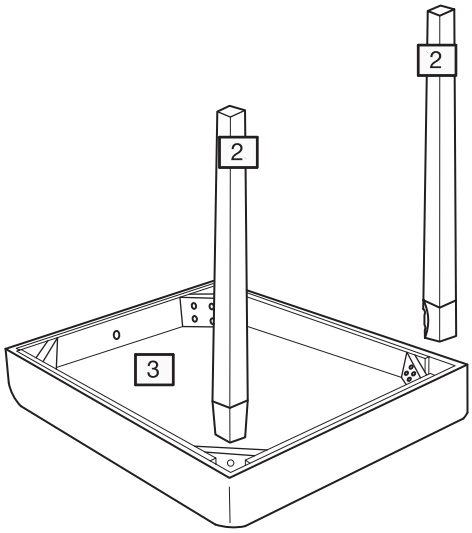

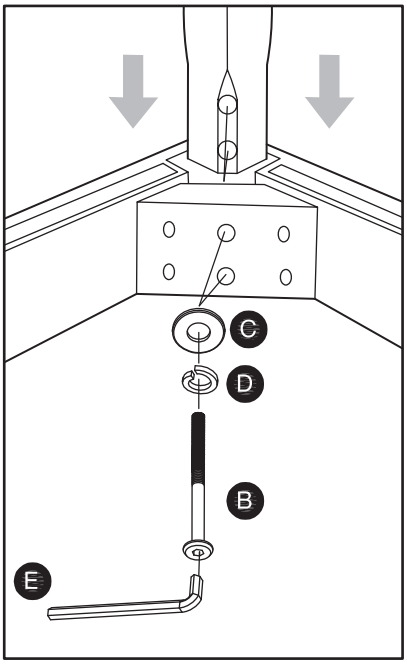



Step 2

Attaching back frame

Place the box seat 3 on the back frame 1.
Assemble the bolt B and washer C onto the back frame 1 using hex key E.

Do not tighten the bolts at this point.

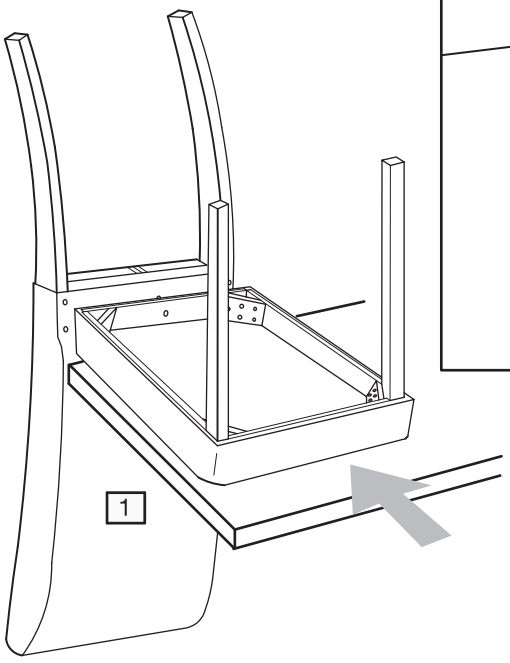

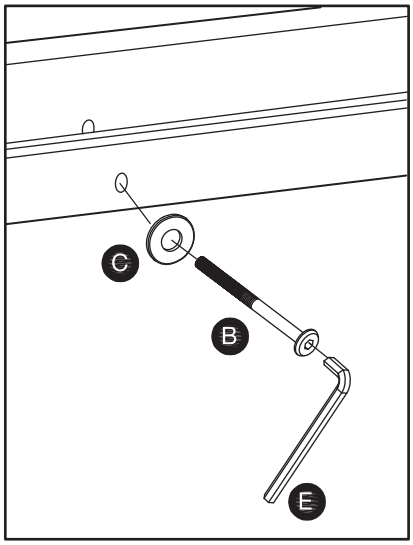


Assembly Instructions

Step 3

Fitting bolts


Assemble bolts A, spring washers D and washers C through each corner block of the box seat 3 to the back frame 1.

Do not tighten the bolts at this point in time.

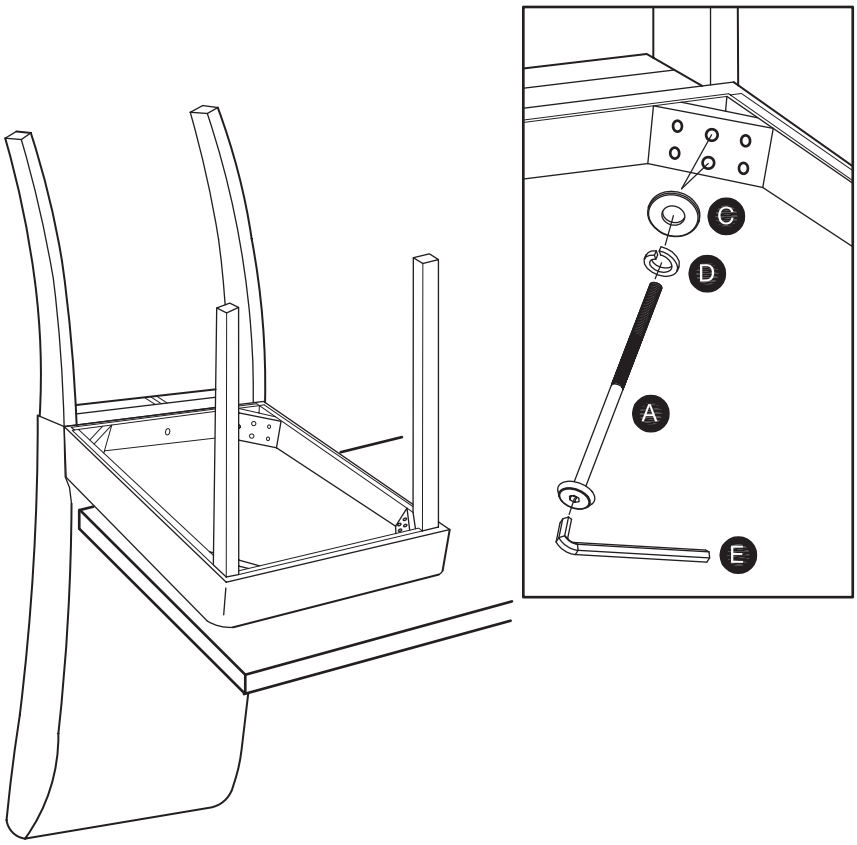

Step 4

Carefully turn the chair over, and put the chair on the oor.

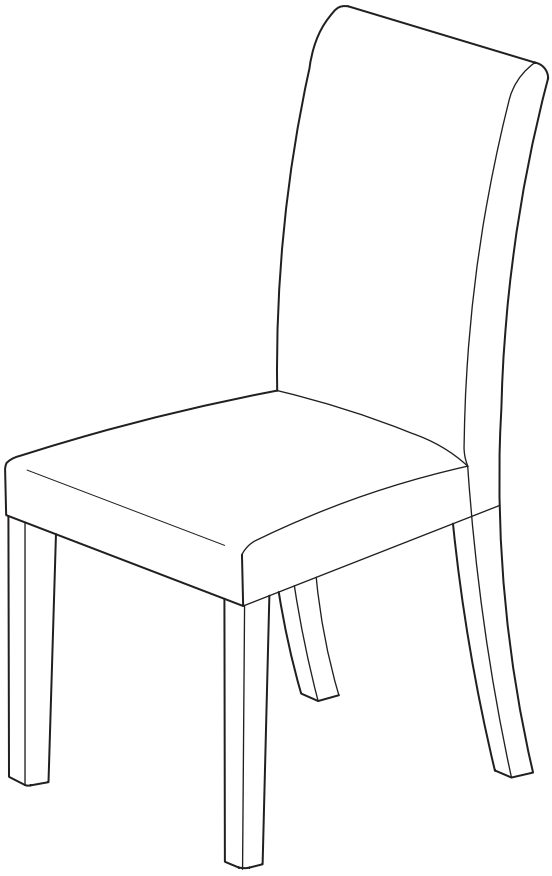

Step 5

Tighten each loose bolt a little at a time while making sure the chair remains level. Repeat until all loose bolts are tight.

Repeat with remaining chairs.