
# Dining Table

**Assembly Instructions -** Please keep for future reference

602/9748

603/0933

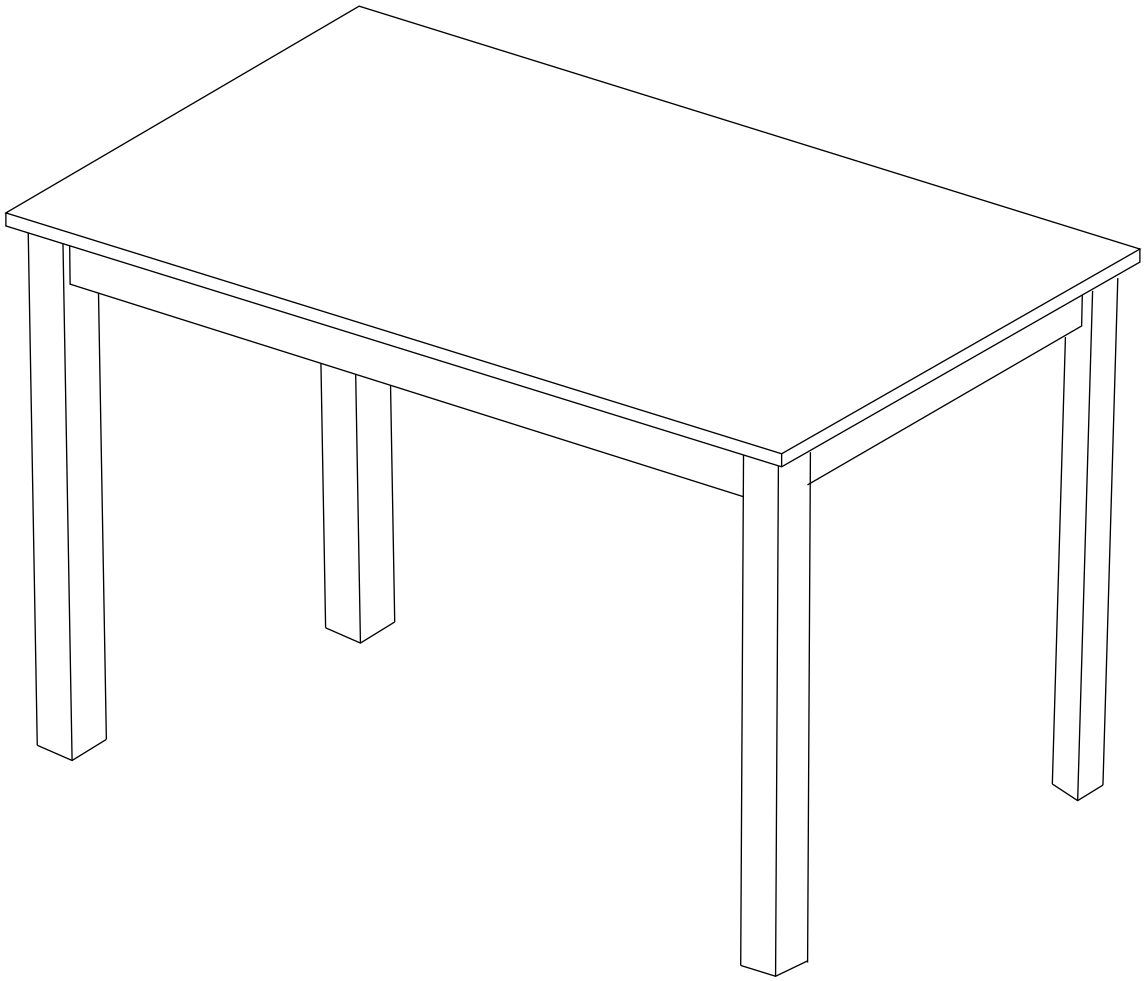

## Dimensions

Width - 75cm

Deep - 120cm

Height - 74cm

**Important** Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline:0845 6400 800

# Safety and Care Advice

## **Important** Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on this product during assembly, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

## Care and maintenance


• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

# Components - Panels

## Please check you have all the panels listed below

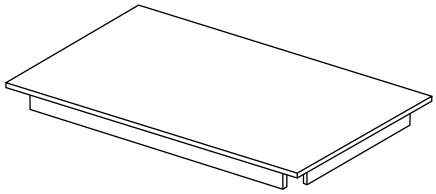

1 Table Top

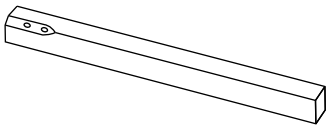



2 Table Leg x 4

# Components - Fittings

If you have damaged or missing components, call the Customer Helpline:0845 6400 800


## Please check you have all the fittings listed below

***Note:*** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

| | | |
|---|---|---|
| A  M8x70mm Bolt x 8 | B  Spring washer x 8 | C  Flat washer x 8 |
| D  M5 Hex Key x 1 | | |

## Tools required

## Ruler - Use this ruler to help correctly identify the screws




# Assembly Instructions


## Step 1

Table Leg

Locate the table leg 2 at 4 corners of table top 1 .

Assemble bolts Ⓐ, spring washers Ⓑ and flat washer Ⓒ through corner block using hex key Ⓓ.

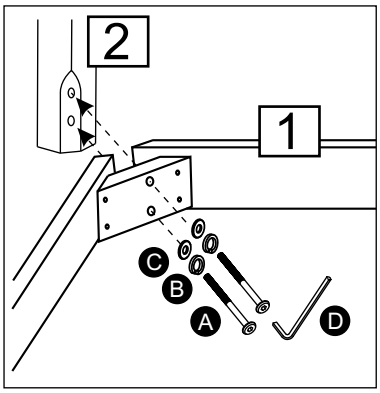


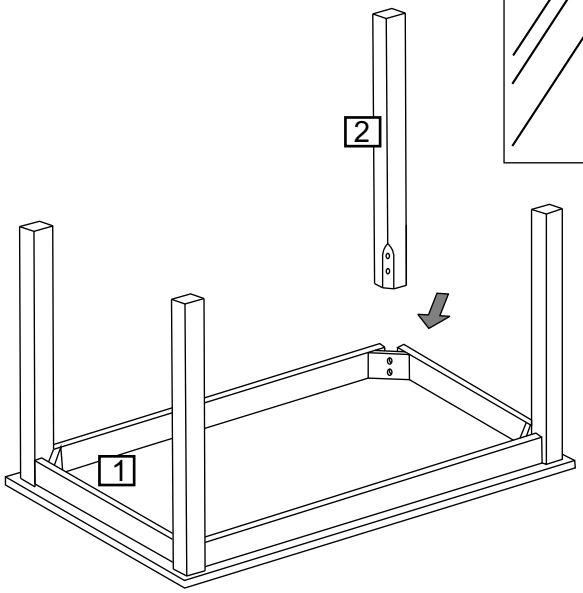
Tighten the bolts, and repeat for all legs.

## Step 2

Carefully turn the table over, and put the table on the floor

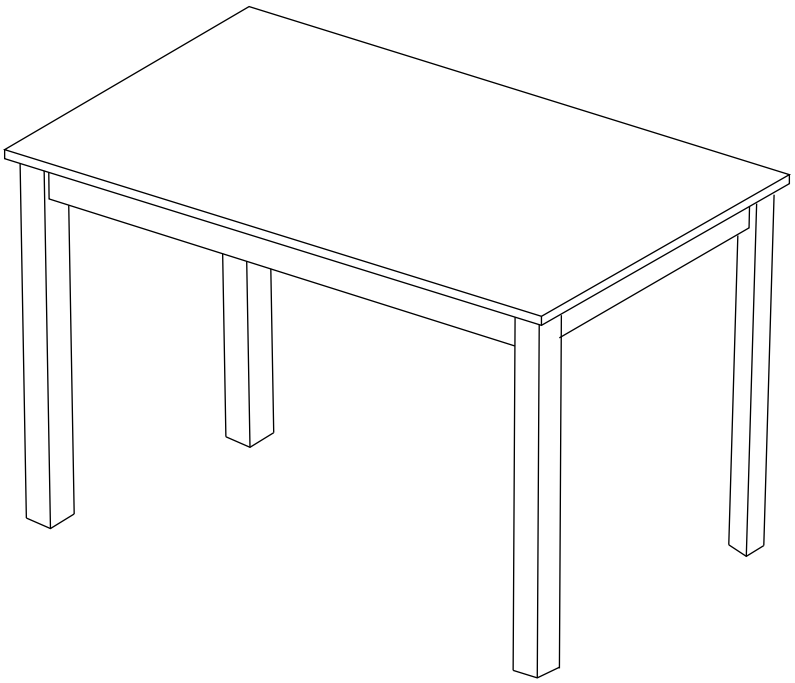


The assembly is complete.

# Dining Table

**Assembly Instructions -** Please keep for future reference

602/9748

603/0933

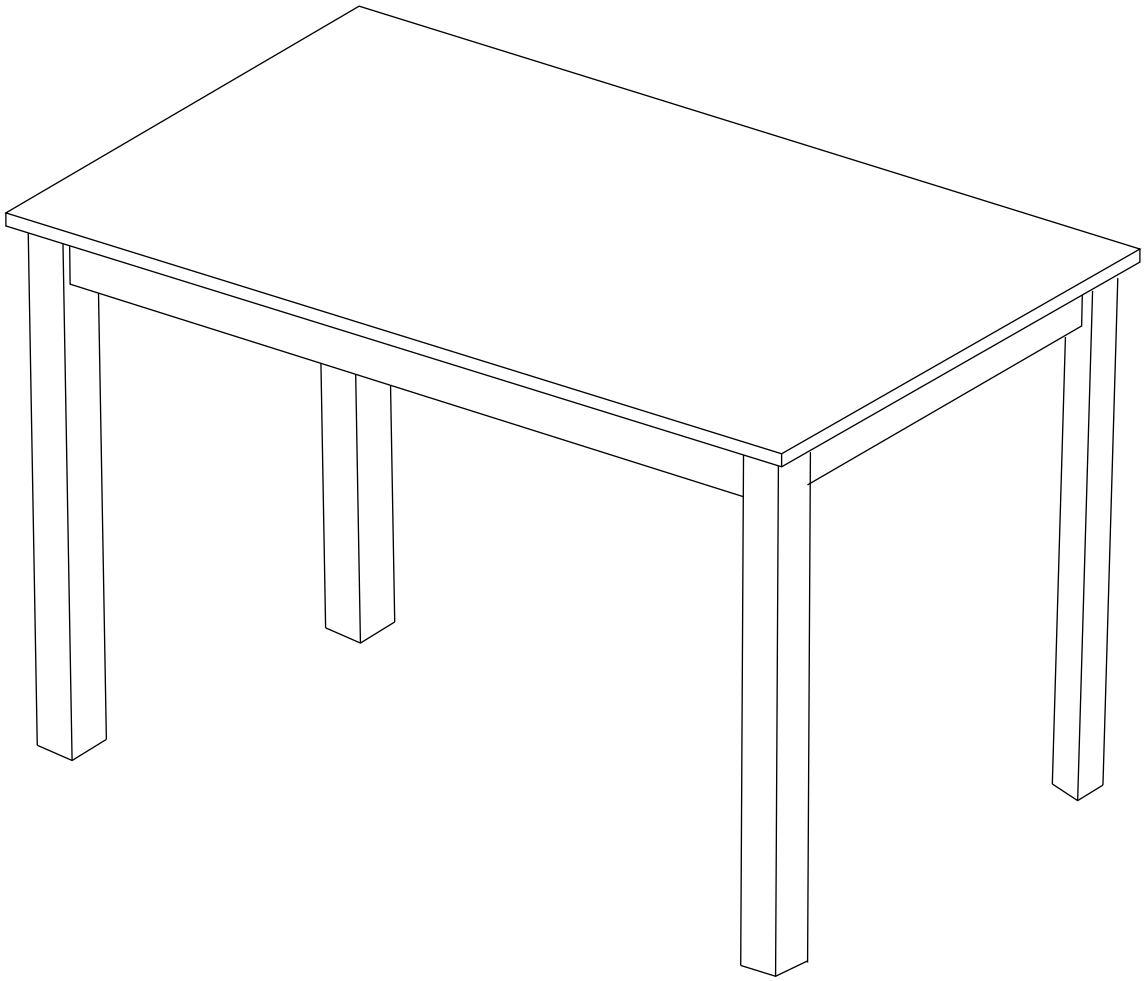

## Dimensions

Width - 75cm

Deep - 120cm

Height - 74cm

**Important** Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline:0845 6400 800

# Safety and Care Advice

## **Important** Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on this product during assembly, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

## Care and maintenance


• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

# Components - Panels

**Please check you have all the panels listed below**

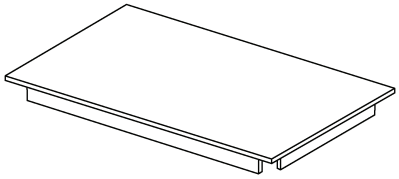

1 Table Top x 1
(120 x 75 )cm

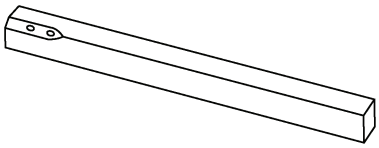



2 Table Leg x 4
( 72 x 4.4 )cm

# Components - Fittings

If you have damaged or missing components, call the **Customer Helpline**: 08456 400800


**Please check you have all the panels listed below**

***Note**:* The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required

| | | |
|---|---|---|
| A  JCBB Screw M8 x 70 x 8 | B  Spring Washer 5/16” x 8 | C  Flat Washer 5/16” x 8 |
| D  5mm Hex Key x 1 | | |

**Tools required**

**Ruler - Use this ruler to help correctly identify the screws**




# Assembly Instructions


## Step 1

Table Leg

Locate the table leg 2 at 4 corners of table top 1 .

Assemble bolts Ⓐ, spring washers Ⓑ and flat washer Ⓒ through corner block using hex key Ⓓ.

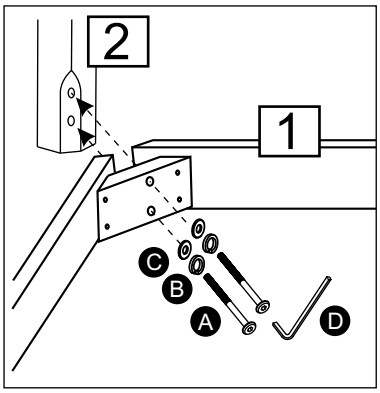


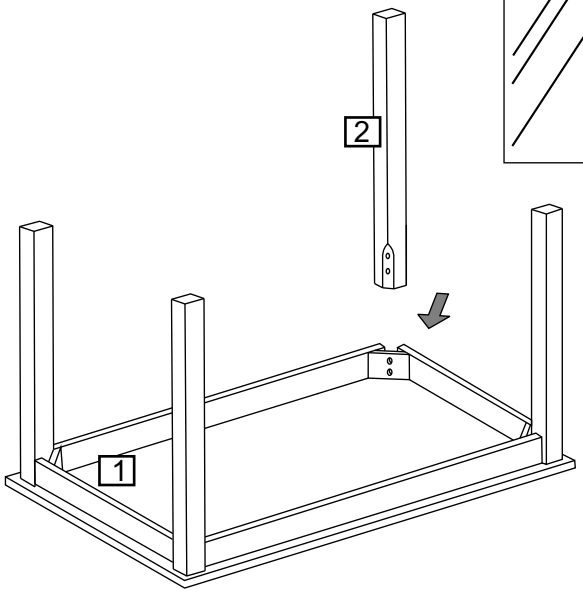
Tighten the bolts, and repeat for all legs.

## Step 2

Carefully turn the table over, and put the table on the floor

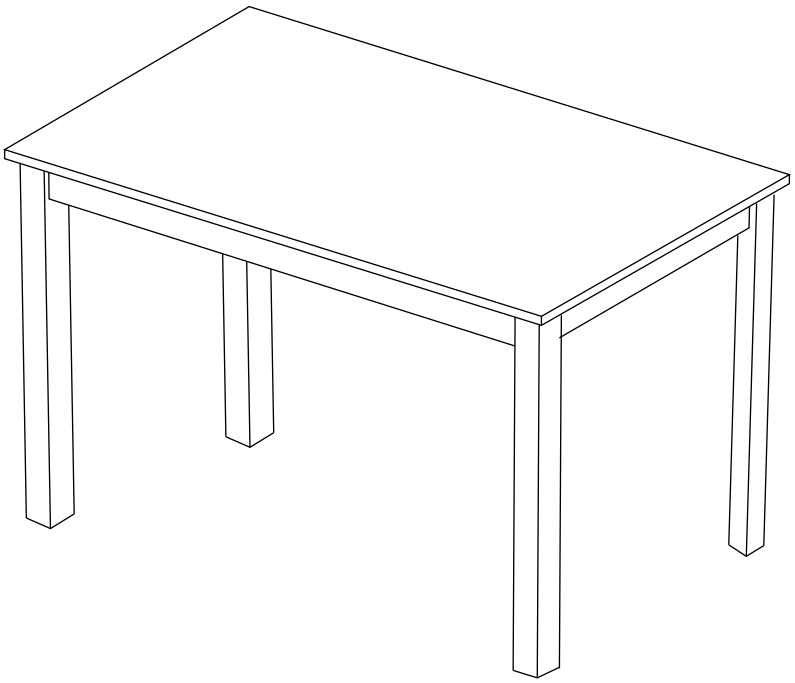


The assembly is complete.

# Dining Chair

## Assembly Instructions - Please keep for future reference

603/4135
603/2333
603/2900
603/0452
602/9834
603/2364

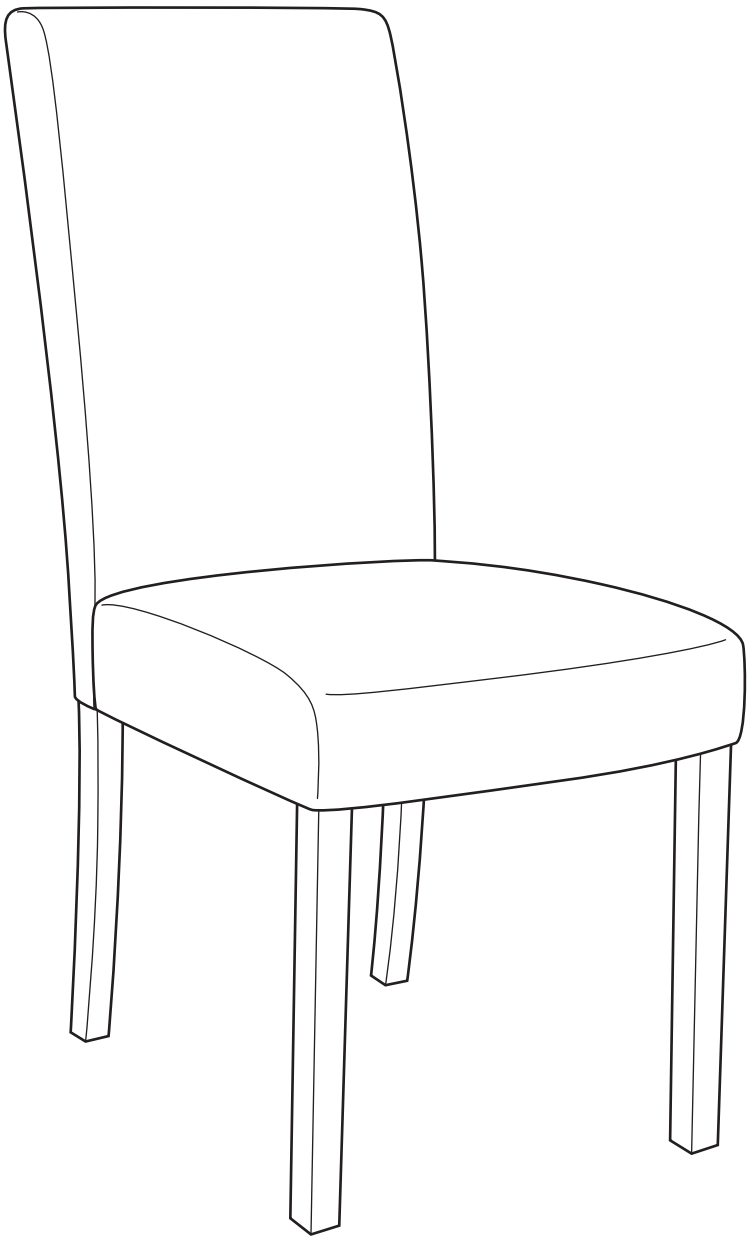

### Dimensions

Width - 44cm
Depth - 54cm
Height - 92cm

## Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 25/09/12

# Safety and Care Advice

## **Important** - Please read these instructions fully before starting assembly

• Assemble this product on a flat surface.

• Assemble all parts loosely before tightening any bolts.

• Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.

• Discard all extra fittings and keep fittings out of reach of children.

• Unit weight: 4.9kgs.

• Maximum safe weight of user: 110kgs.

• Retain Assembly Instructions for future reference.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

## Warnings

• This product should only be used on firm, level ground.

• Make sure the legs remain in contact with the ground.

• Do not stand on the product.

## Care and maintenance

• Please clean the unit surface using either damp (not wet) cloth and a mild domestic soap solution or by using an appropriate polish.


• Do not use any abrasive materials when cleaning.

• From time to time check that there are no loose bolts on this unit.


# Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

## Please check you have all the parts listed below

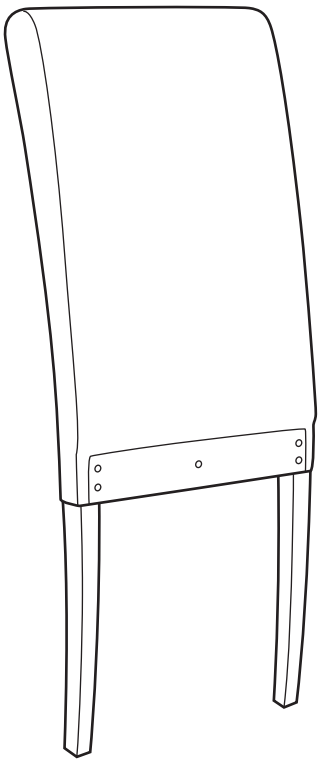

**1** Backrest
(36 x 10 x 92cm)

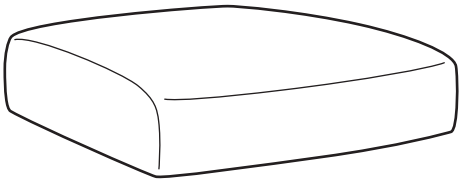

**2** Seat
(43.5 x 41 x 9.5cm)






**3** Leg x 2
(3 x 3 x 43cm)


# Components - Fittings

## Please check you have all the fittings listed below

***Note:*** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

| | | |
|---|---|---|
| **A**  M6 x 85mm Bolt x 4 | **B**  M6 x 55mm Bolt x 5 | **C**  Spring washer x 9 |
| **D**  Washer x 9 | **E**  Allen key x 1 | |

## **Ruler** - Use this ruler to help correctly identify the screws



# Assembly Instructions


## Step 1


**Attaching legs**

Place the seat 2 upside down on a flat protected surface.

Insert the legs 3 into the holes of the seat as shown and fix using bolts B, spring washer C and washers D. Tighten the bolts using allen key E.

***Important:***
Do not fully tighten bolts at this stage.

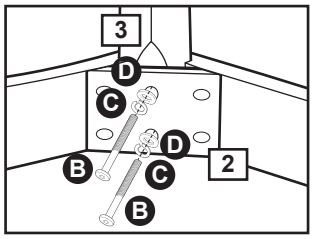

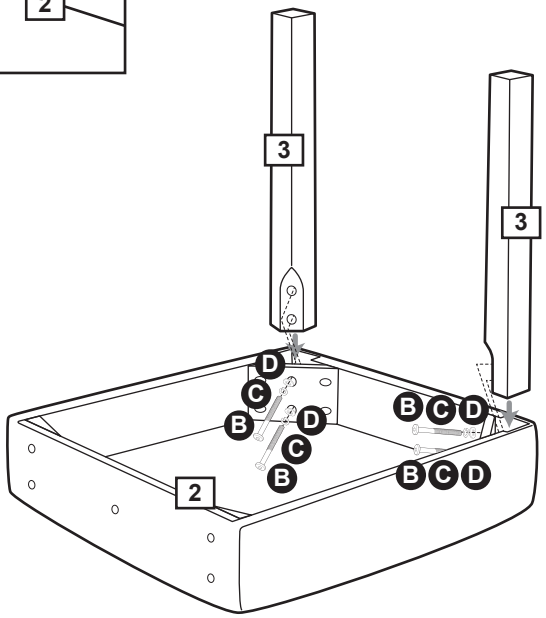

## Step 2


**Attaching backrest**

Place the backrest on a flat protected surface.

Position the seat 2 on the backrest 1 as shown and fix using bolts A & B, spring washers C and washers D. Tighten bolts using allen key E.

***Important:***
Do not fully tighten bolts at this stage.

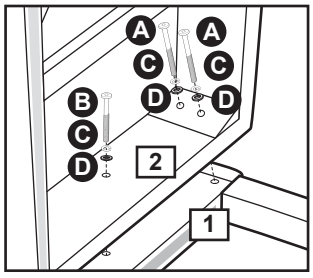
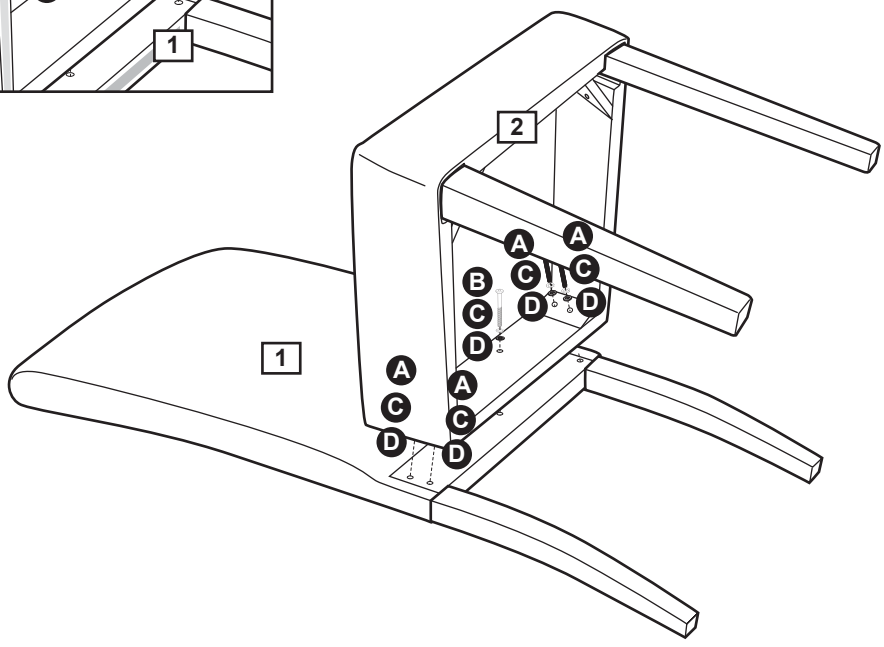
# Assembly Instructions

## Step 3

**Aligning & securing the legs**

Carefully turn the chair upright and place on a flat surface.

**a:** Tighten all bolts using allen key Ⓔ.

***Note:*** This step is essential to prevent the chair from wobbling due to uneven legs.

**b:** Carefully sit on the chair and make adjustments to ensure the legs are flat even on the floor.


**c:** After the sitting test, re-tighten bolts again if any adjustment is needed.

***Note:*** It is highly recommended to re-tighten all bolts after using the chair for 7 days.


***Note:*** Keep allen key to re-tighten bolts when required.

**Assembly is complete.**


**a:**

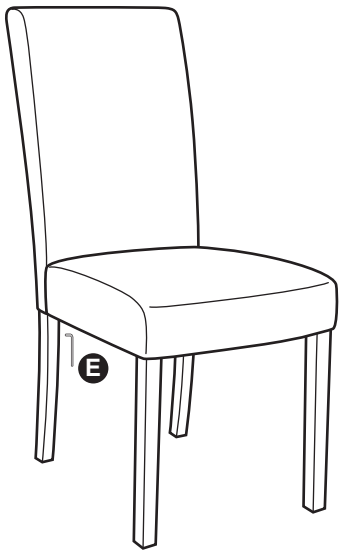


**b:**

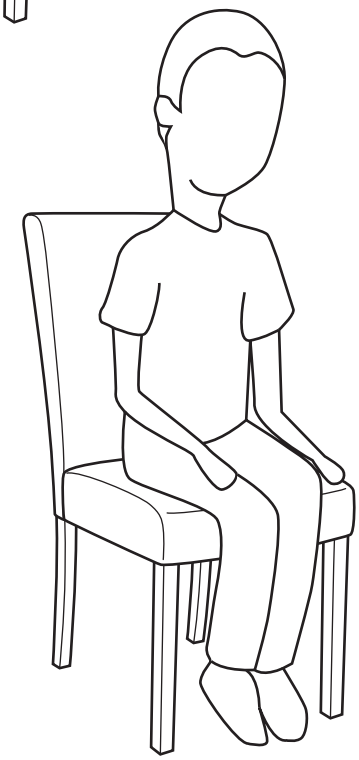

**c:**

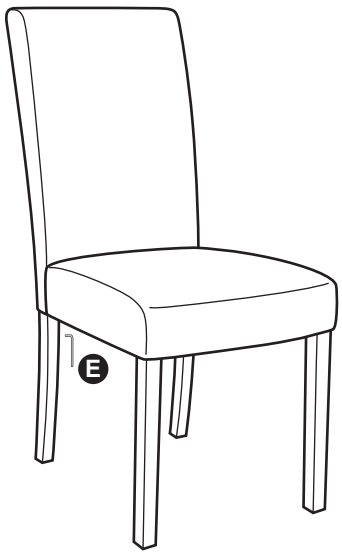



If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

# Dining Chair

## Assembly Instructions - Please keep for future reference

603/4135
603/2333
603/2900
133/6948
602/9834
603/2364

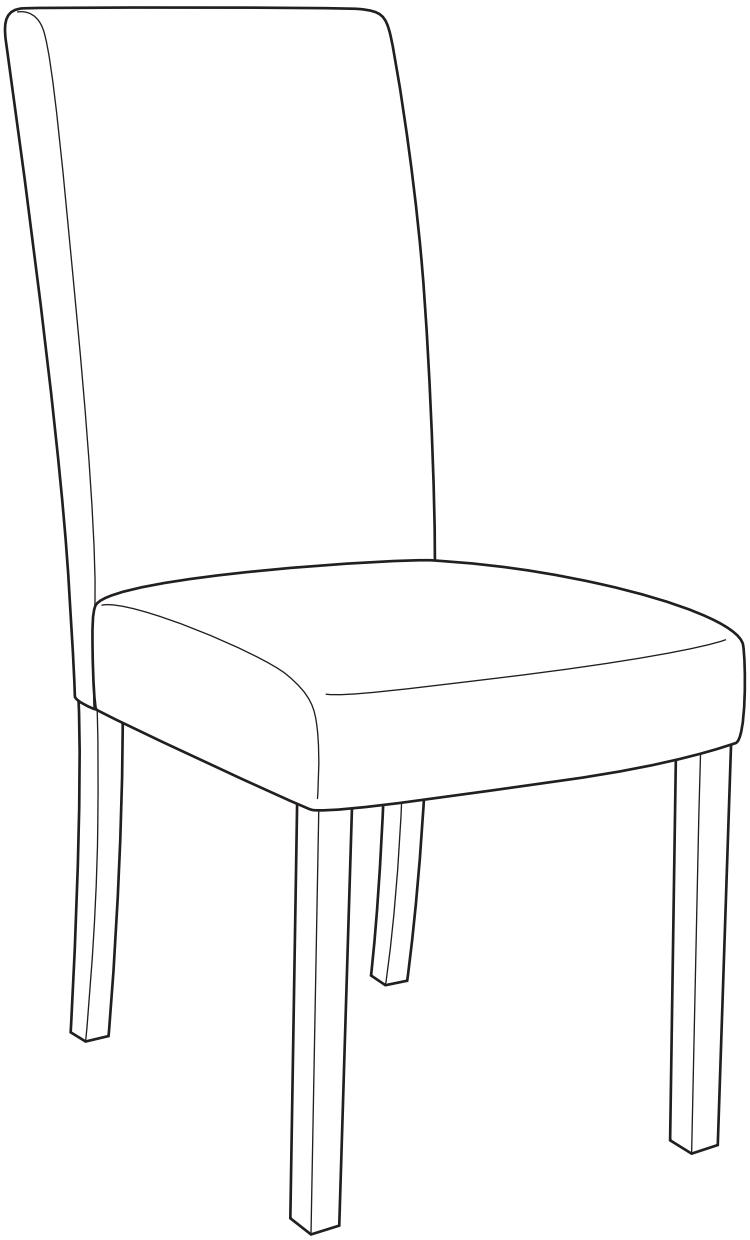

### Dimensions

Width - 44cm
Depth - 54cm
Height - 92cm

## Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 08/09/13

# Safety and Care Advice

## **Important** - Please read these instructions fully before starting assembly

• Assemble this product on a flat surface.

• Assemble all parts loosely before tightening any bolts.

• Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.

• Discard all extra fittings and keep fittings out of reach of children.

• Unit weight: 4.9kgs.

• Maximum safe weight of user: 110kgs.

• Retain Assembly Instructions for future reference.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

## Warnings

• This product should only be used on firm, level ground.

• Make sure the legs remain in contact with the ground.

• Do not stand on the product.

## Care and maintenance

• Please clean the product using either damp (not wet) cloth and a mild domestic soap solution or by using an appropriate polish.


• Do not use any abrasive materials when cleaning.

• From time to time check that there are no loose bolts on this unit.


# Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

## Please check you have all the parts listed below

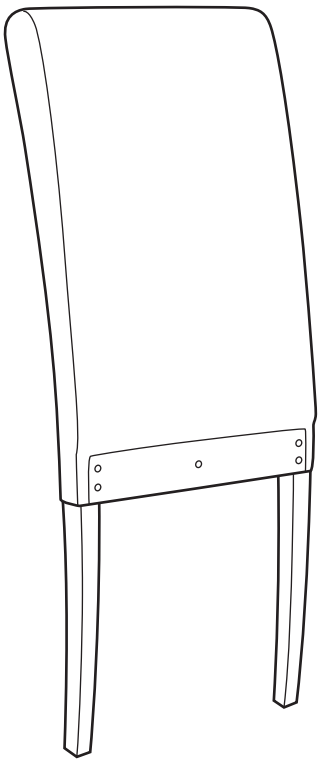

**1** Backrest
(36 x 10 x 92cm)

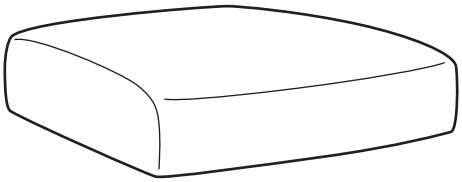

**2** Seat
(43.5 x 41 x 9.5cm)






**3** Leg x 2
(3 x 3 x 43cm)


# Components - Fittings

## Please check you have all the fittings listed below

***Note:*** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

| | | |
|---|---|---|
| **A**  M6 x 50mm Bolt x 9 | **B**  Spring washer x 9 | **C**  Flat washer x 9 |
| **D**  Allen key x 1 | | |

## **Ruler** - Use this ruler to help correctly identify the screws



# Assembly Instructions

## Step 1


**Attaching legs**

Place the seat 2 upside down on a flat protected surface.

Insert the legs 3 into the holes of the seat as shown and fix using bolts A, spring washers B and washers C.

***Important:***
Fasten bolts using allen key D but do not fully tighten at this stage.

***Note:***
Use oval head of allen key D on tight angles.

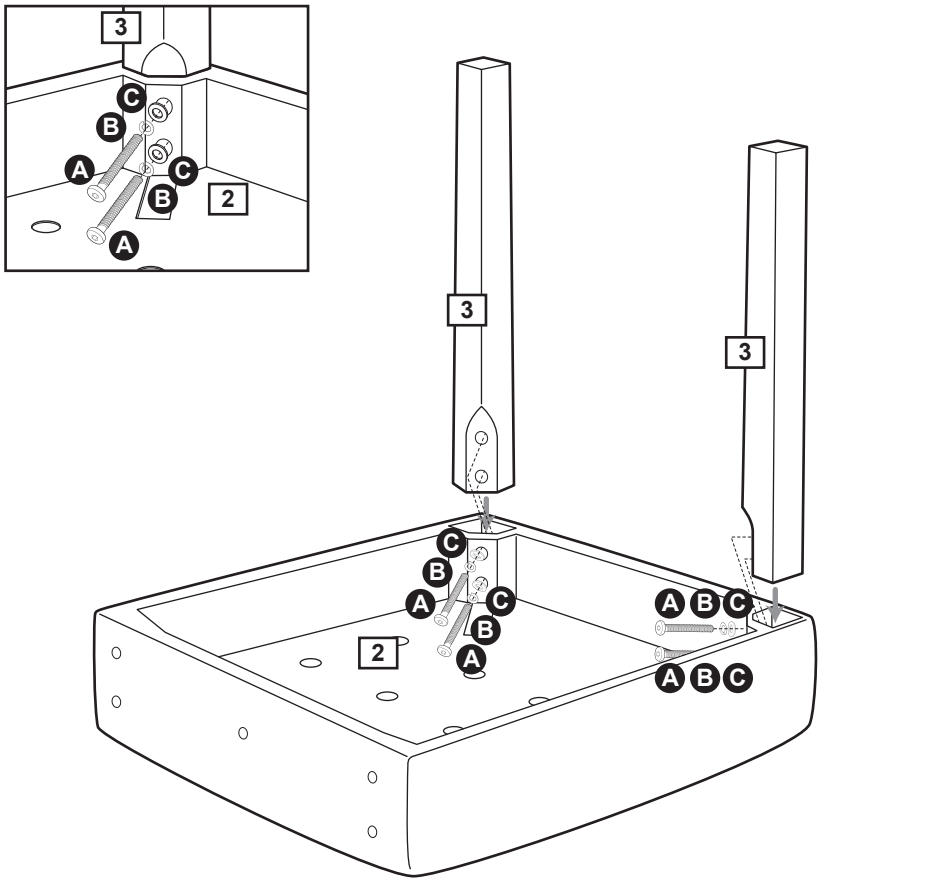


## Step 2


**Attaching backrest**

Place the backrest on a flat protected surface.

Position the seat 2 on the backrest 1 as shown and fix using bolts A, spring washers B and washers C.

***Important:***
Fasten bolts using allen key D but do not fully tighten at this stage.

***Note:***
Use oval head of allen key D on tight angles.

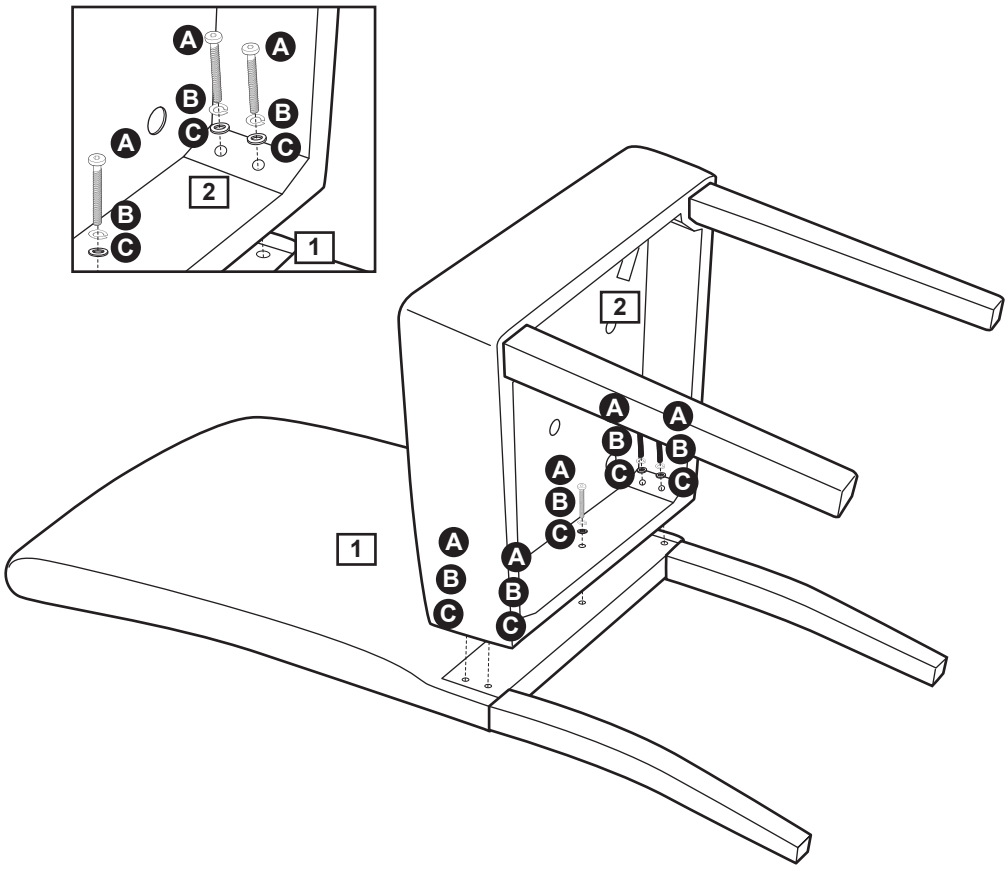

# Assembly Instructions

## Step 3

**Aligning & securing the legs**

Carefully turn the chair upright and place on a flat surface.

**a:** Tighten all bolts using allen key Ⓓ.

***Note:***
Use oval head of allen key Ⓓ on tight angles.

***Note:*** This step is essential to prevent the chair from wobbling due to uneven legs.

**b:** Carefully sit on the chair and make adjustments to ensure the legs are flat even on the floor.


**c:** After the sitting test, re-tighten bolts again if any adjustment is needed.

***Note:*** It is highly recommended to re-tighten all bolts after using the chair for 7 days.


***Note:*** Keep allen key to re-tighten bolts when required.

**Assembly is complete.**


**a:**

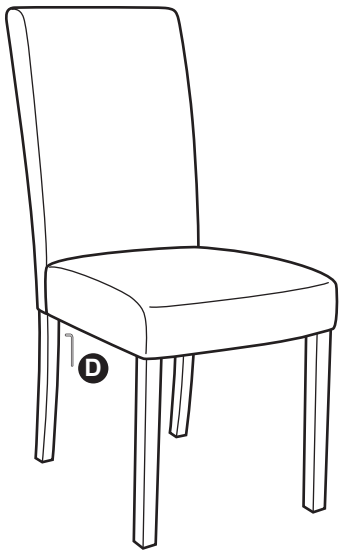


**b:**

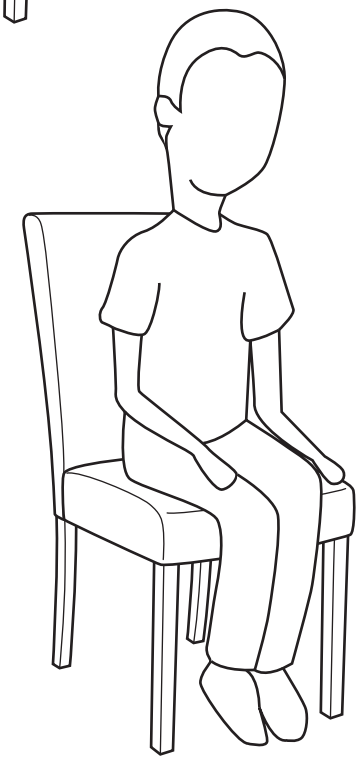

**c:**

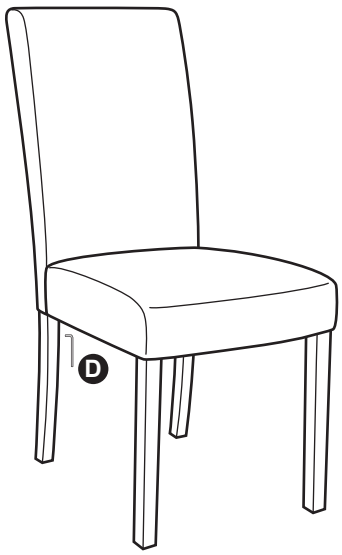



If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

# Dining Chair

## Assembly Instructions - Please keep for future reference

600/1584
603/2364
603/0452
600/3654
160/609
603/0830
603/2333

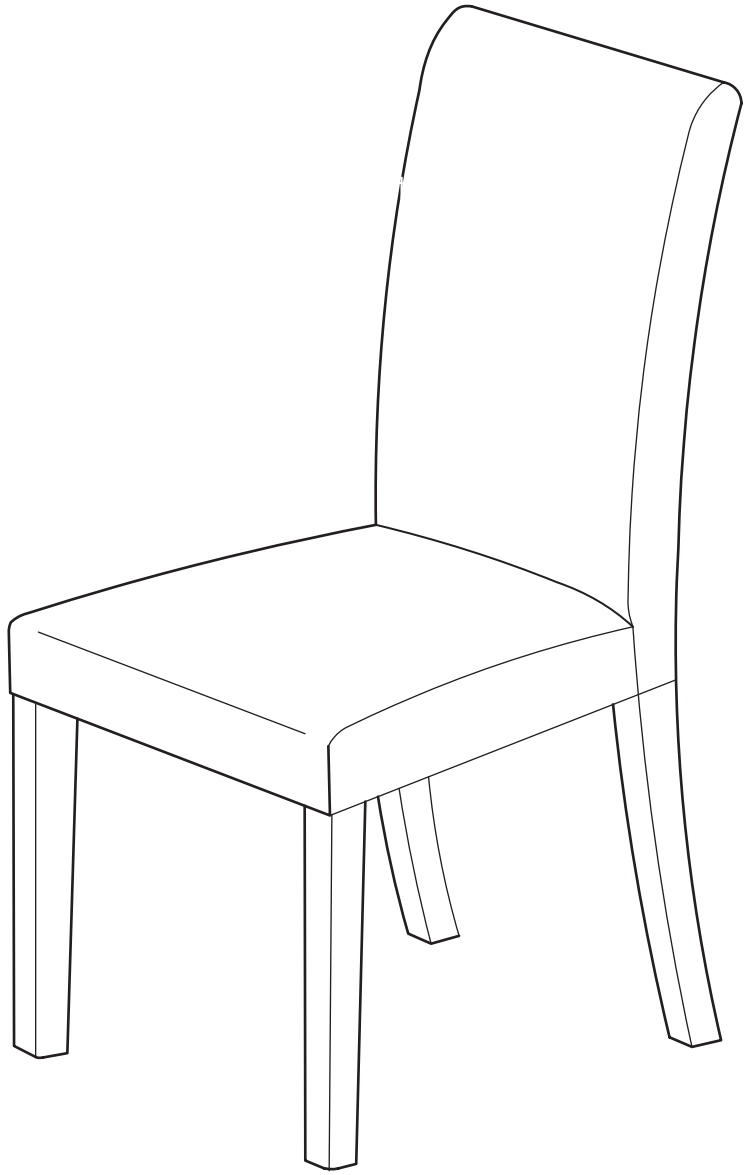

### Dimensions

Width - 43.5cm

Deep - 52.5cm

Height - 92cm

## Important Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**

Issue 1 - 1/03/10

# afety and Care Advice

## **Important** Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages and .

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room as possible.

• Assemble on a soft level surface to avoid damaging the unit or your oor.

• Parts of the assembly will be easier with people.



• We do not recommend the use of power drill drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.


## Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

# Components - Panels

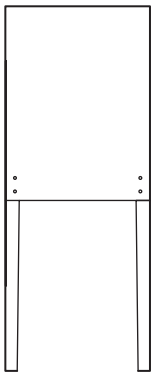


1 Back frame (36.5 x 92cm)



x cm

2 Leg x 2 (3.2 43 )

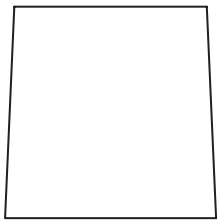


3 Box seat (43.5 x 41.5cm)

# Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800**

## Please check you have all the ttings listed below

**ote:** The quantities below are the correct amount to complete the assembly. In some cases more ttings may be supplied than are required.


| | | |
|---|---|---|
| A  M6x85mm Bolt x 8 | B  M6x55mm Bolt x 10 | C  ∅18x1mm Washer x 18 |
| D  ∅11x1.5mm Spring washer x 16 | E  4mm Hex Key x 1 | |

## Tools required



Ruler/tape measure

## Ruler - Use this ruler to help correctly identify the screws




# Assembly Instructions


## Step 1

Fitting legs

Locate the corners of the box seat opposite to the center hole.
Insert the legs 2 into the corners of the box seat 3.
Assemble bolts B, spring washers D and washers C through each corner block of the box seat 3 using hex key E.

Tighten the bolts.

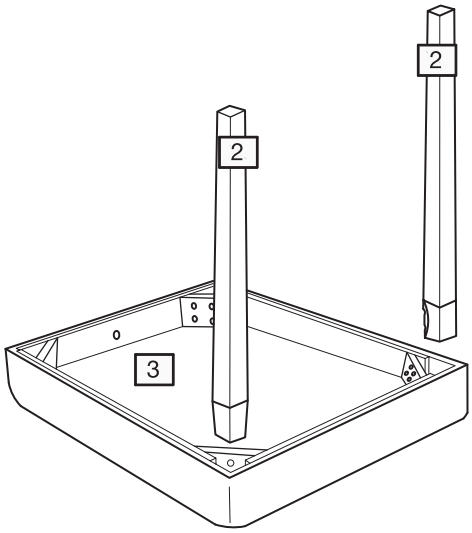

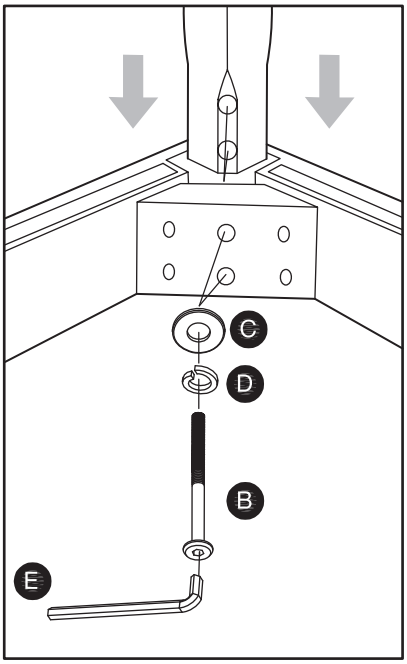



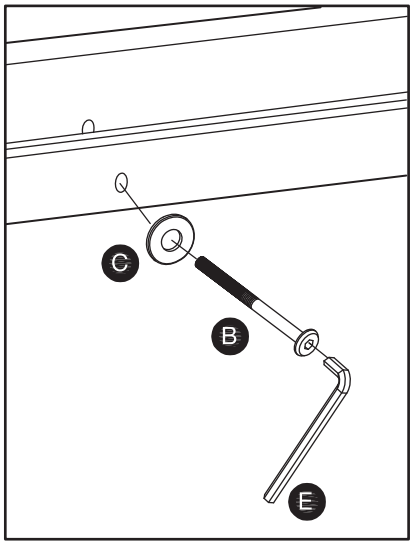

## Step 2

Attaching back frame

Place the box seat 3 on the back frame 1.
Assemble the bolt B and washer C onto the back frame 1 using hex key E.

Do not tighten the bolts at this point.

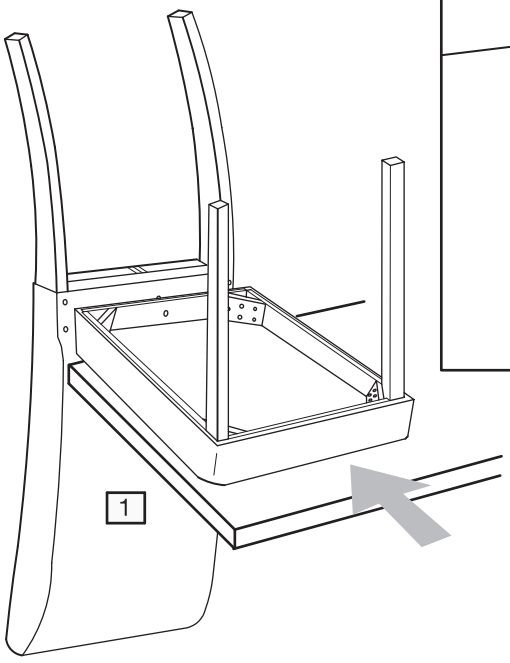


# Assembly Instructions

## Step 3

Fitting bolts


Assemble bolts A, spring washers D and washers C through each corner block of the box seat 3 to the back frame 1.

Do not tighten the bolts at this point in time.

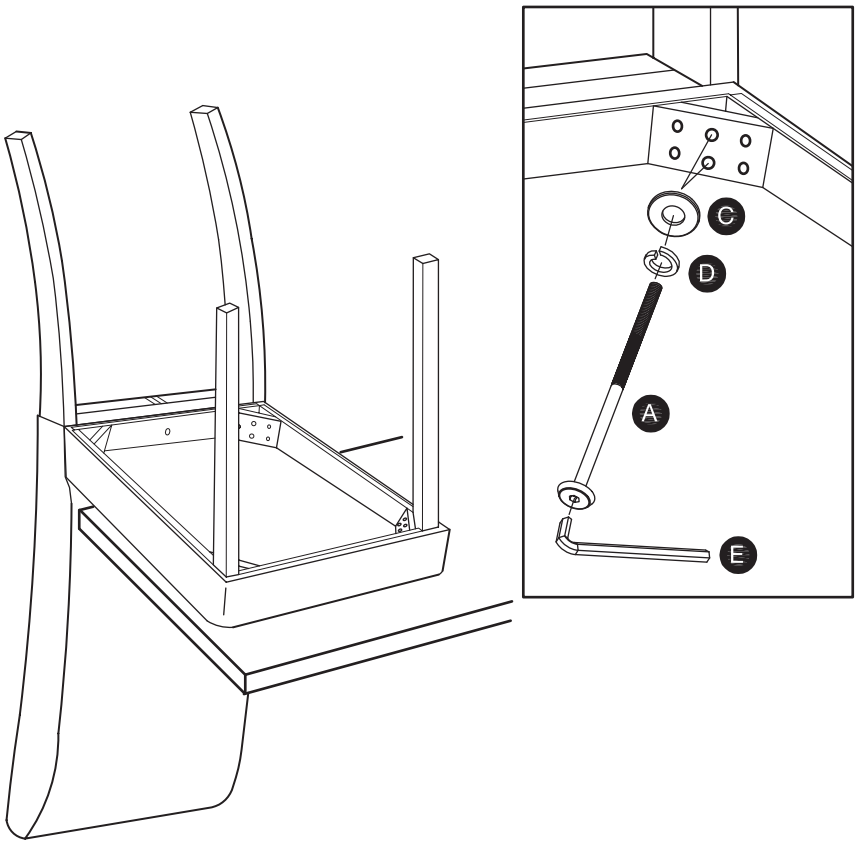


## Step 4

Carefully turn the chair over, and put the chair on the oor.

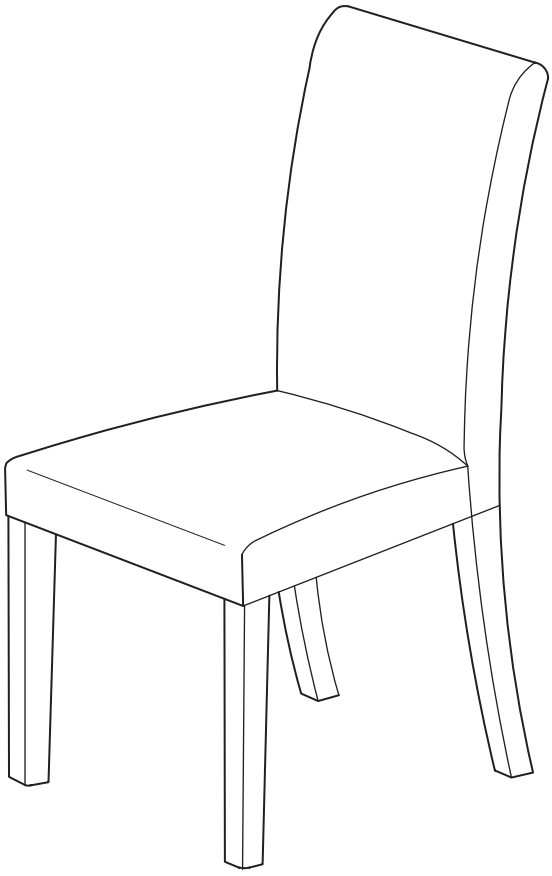

## Step 5

Tighten each loose bolt a little at a time while making sure the chair remains level. Repeat until all loose bolts are tight.

Repeat with remaining chairs.