
Dining Chair

Assembly Instructions - Please keep for future reference

603/3796
603/5213
603/5189
603/3806
603/5196
603/5237
603/5172
603/5206
603/5220

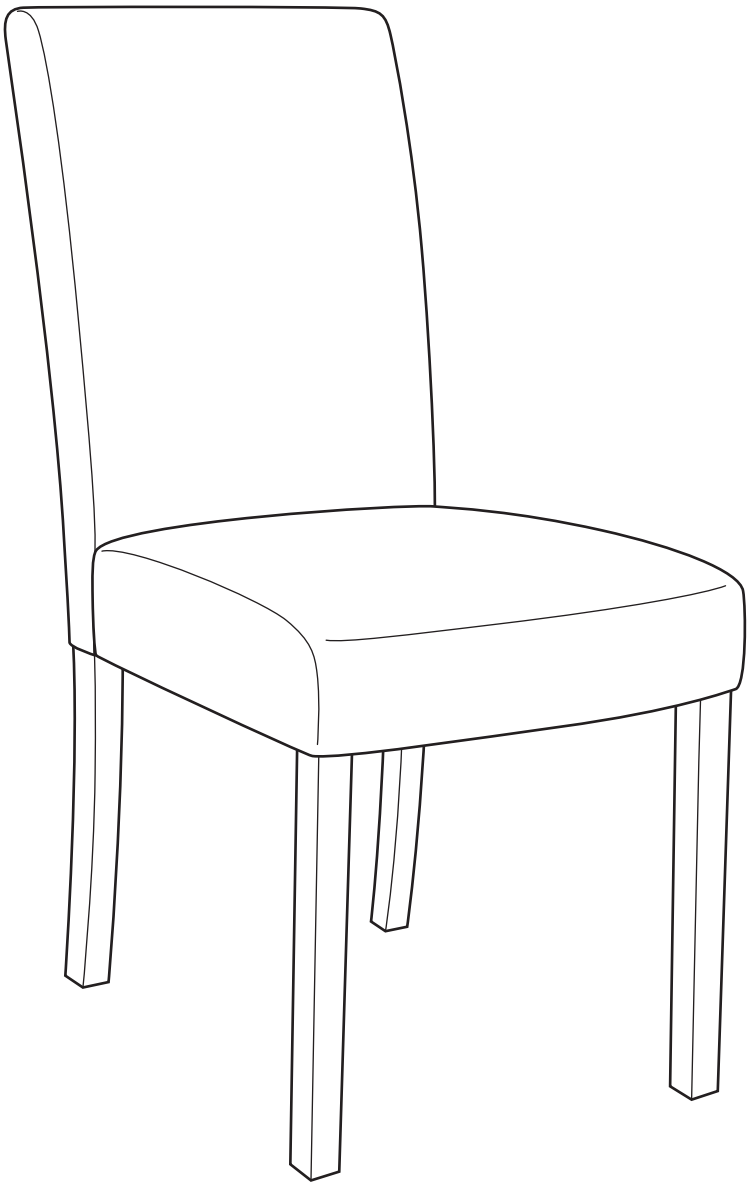

Dimensions

Width - 44cm
Depth - 54cm
Height - 86cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 2 - 08/12/12

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Assemble this product on a flat surface.

• Assemble all parts loosely before tightening any bolts.

• Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.

• Discard all extra fittings and keep fittings out of reach of children.

• Unit weight: 4.9kgs.

• Maximum safe weight of user: 110kgs.

• Retain Assembly Instructions for future reference.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Warnings

• This product should only be used on firm, level ground.

• Make sure the legs remain in contact with the ground.

• Do not stand on the product.

Care and maintenance

• Please clean the unit surface using either damp (not wet) cloth and a mild domestic soap solution or by using an appropriate polish.


• Do not use any abrasive materials when cleaning.

• From time to time check that there are no loose bolts on this unit.


Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

Please check you have all the parts listed below

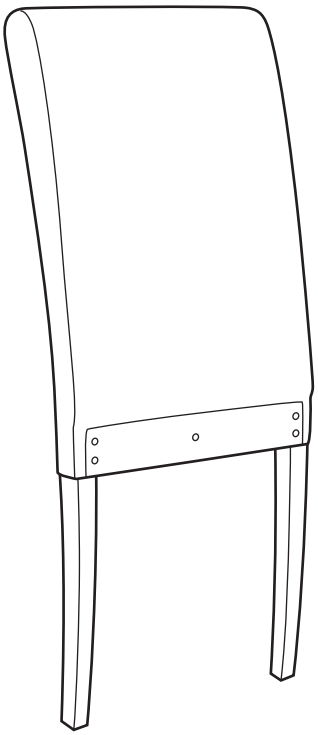

1 Backrest
(36 x 10 x 86cm)

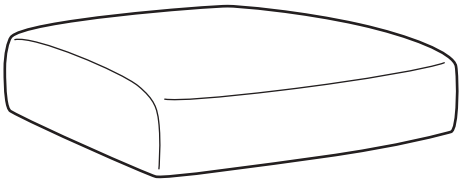

2 Seat
(43.5 x 41 x 9.5cm)






3 Leg x 2
(3 x 3 x 43cm)


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  M6 x 85mm Bolt x 4	**B**  M6 x 55mm Bolt x 5	**C**  Spring washer x 9
D  Washer x 9	**E**  Allen key x 1	

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


Step 1


Attaching legs

Place the seat 2 upside down on a flat protected surface.

Insert the legs 3 into the holes of the seat as shown and fix using bolts B, spring washer C and washers D.

Important:
Fasten bolts using allen key E but do not fully tighten at this stage.

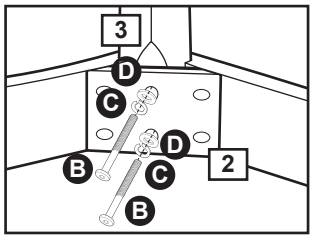

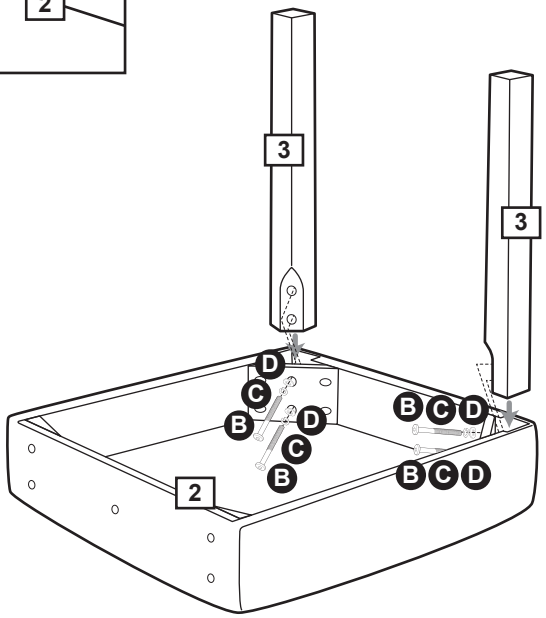


Step 2


Attaching backrest

Place the backrest on a flat protected surface.

Position the seat 2 on the backrest 1 as shown and fix using bolts A & B, spring washers C and washers D.

Important:
Fasten bolts using allen key E but do not fully tighten at this stage.

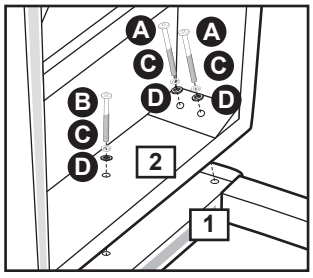

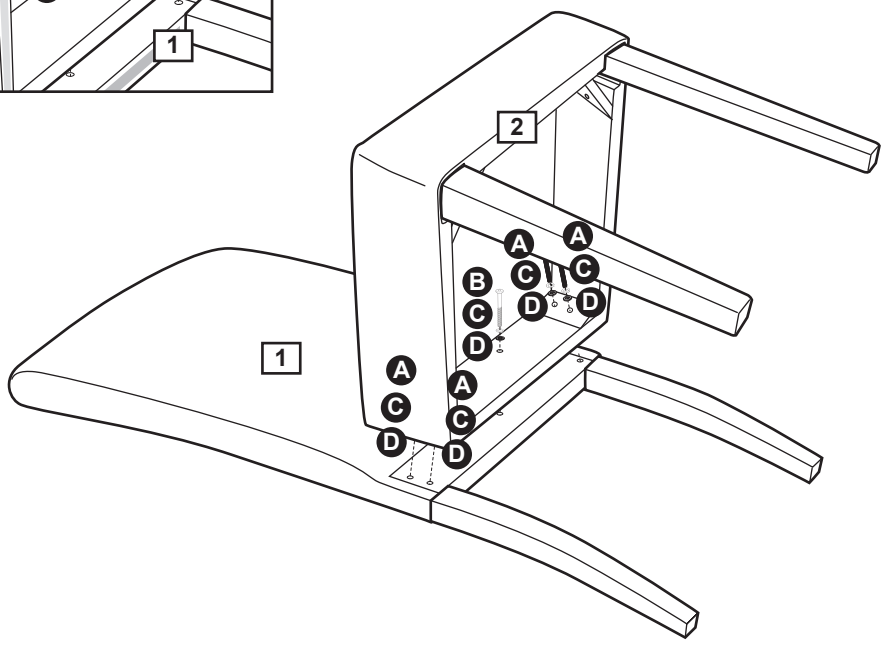

Assembly Instructions

Step 3

Aligning & securing the legs

Carefully turn the chair upright and place on a flat surface.

a: Tighten all bolts using allen key Ⓔ.

Note: This step is essential to prevent the chair from wobbling due to uneven legs.

b: Carefully sit on the chair and make adjustments to ensure the legs are flat even on the floor.


c: After the sitting test, re-tighten bolts again if any adjustment is needed.

Note: It is highly recommended to re-tighten all bolts after using the chair for 7 days.


Note: Keep allen key to re-tighten bolts when required.

Assembly is complete.


a:

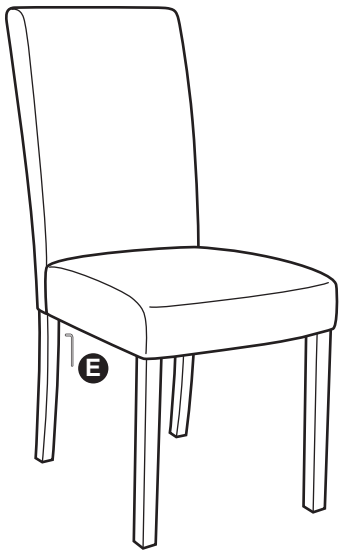

b:

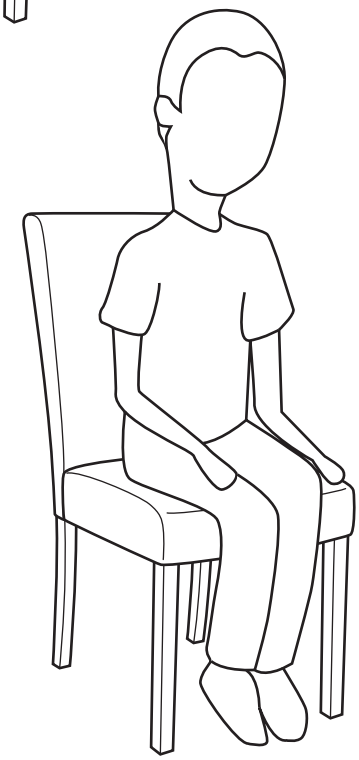

c:

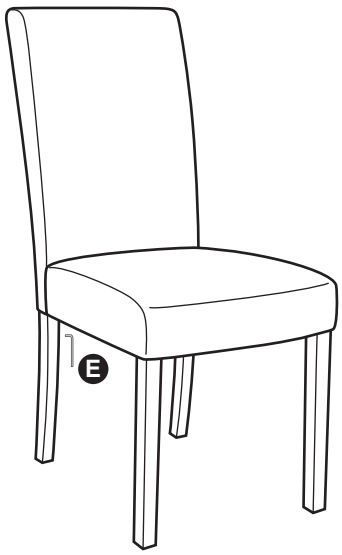


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Dining Chair

Assembly Instructions - Please keep for future reference

603/5213
603/5189
603/5196
603/5237
603/5172
603/5206
603/5220
603/3796
603/3806

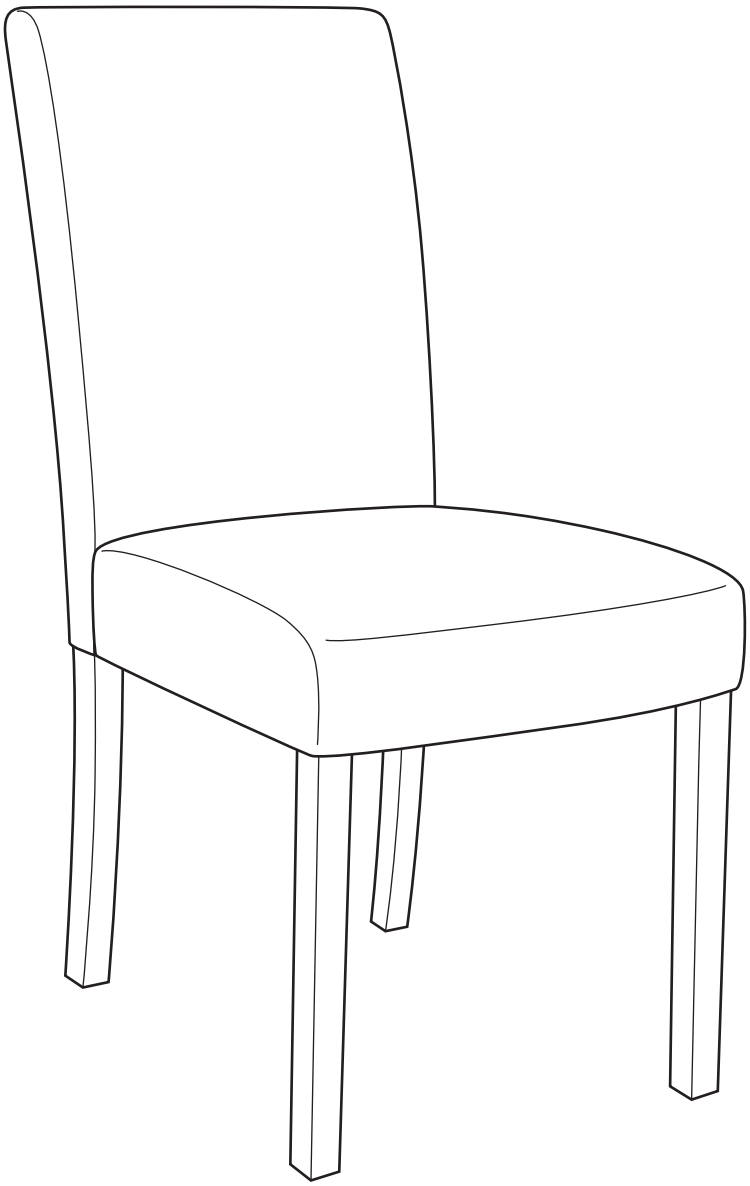

Dimensions

Width - 43.5cm
Depth - 54cm
Height - 86.5cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 21/08/13

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Assemble this product on a flat surface.

• Assemble all parts loosely before tightening any bolts.

• Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.

• Discard all extra fittings and keep fittings out of reach of children.

• Unit weight: 4.58kgs.

• Maximum safe weight of user: 110kgs.

• Retain Assembly Instructions for future reference.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Warnings

• This product should only be used on firm, level ground.

• Make sure the legs remain in contact with the ground.

• Do not stand on the product.

Care and maintenance

• Please clean the product using either damp (not wet) cloth and a mild domestic soap solution or by using an appropriate polish.


• Do not use any abrasive materials when cleaning.

• From time to time check that there are no loose bolts on this unit.


Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

Please check you have all the parts listed below

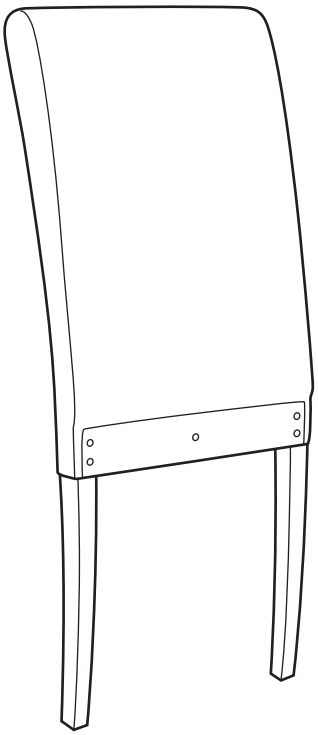

1 Backrest
(36 x 9 x 86.5cm)

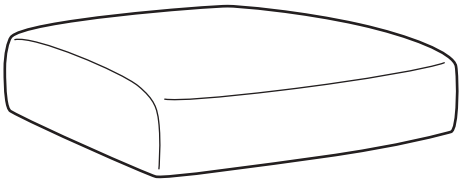

2 Seat
(43.5 x 41.5 x 10cm)






3 Leg x 2
(3 x 3 x 43cm)


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 	**B** 	**C** 
M6 x 50mm Bolt x 9	Spring washer x 9	Flat washer x 9
D 		
Allen key x 1		

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


Attaching legs

Place the seat 2 upside down on a flat protected surface.

Insert the legs 3 into the holes of the seat as shown and fix using bolts A, spring washers B and washers C.

Important:
Fasten bolts using allen key D but do not fully tighten at this stage.

Note:
Use oval head of allen key D on tight angles.

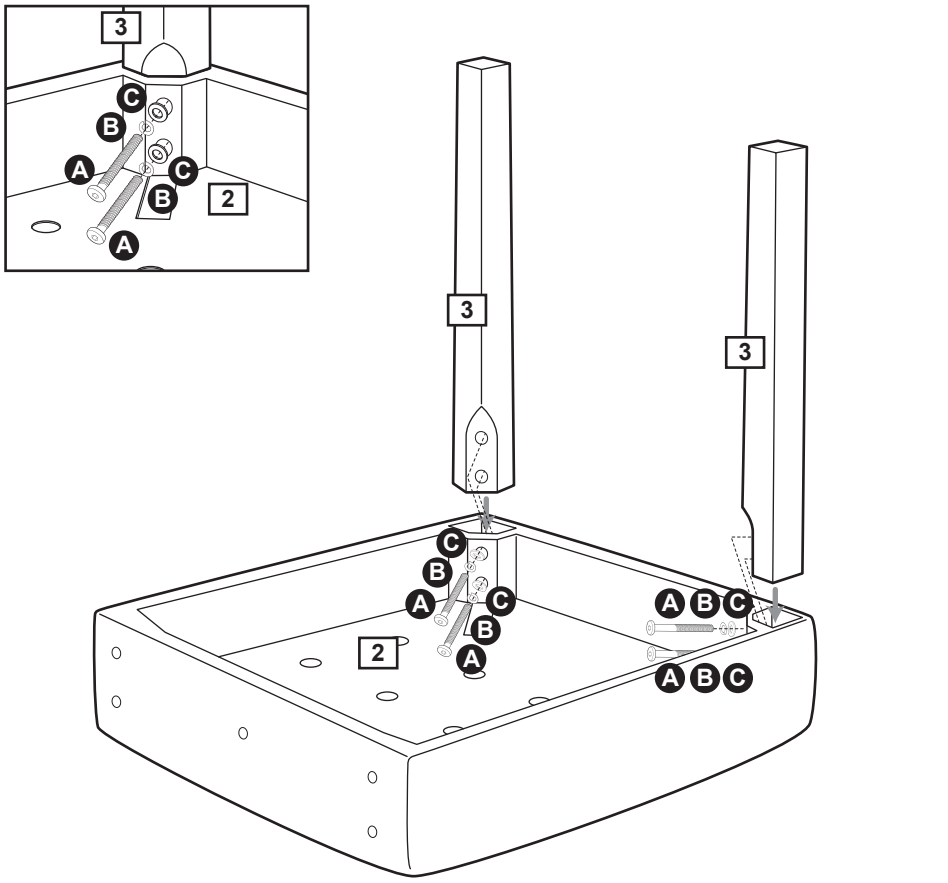

Step 2


Attaching backrest

Place the backrest on a flat protected surface.

Position the seat 2 on the backrest 1 as shown and fix using bolts A, spring washers B and washers C.

Important:
Fasten bolts using allen key D but do not fully tighten at this stage.

Note:
Use oval head of allen key D on tight angles.

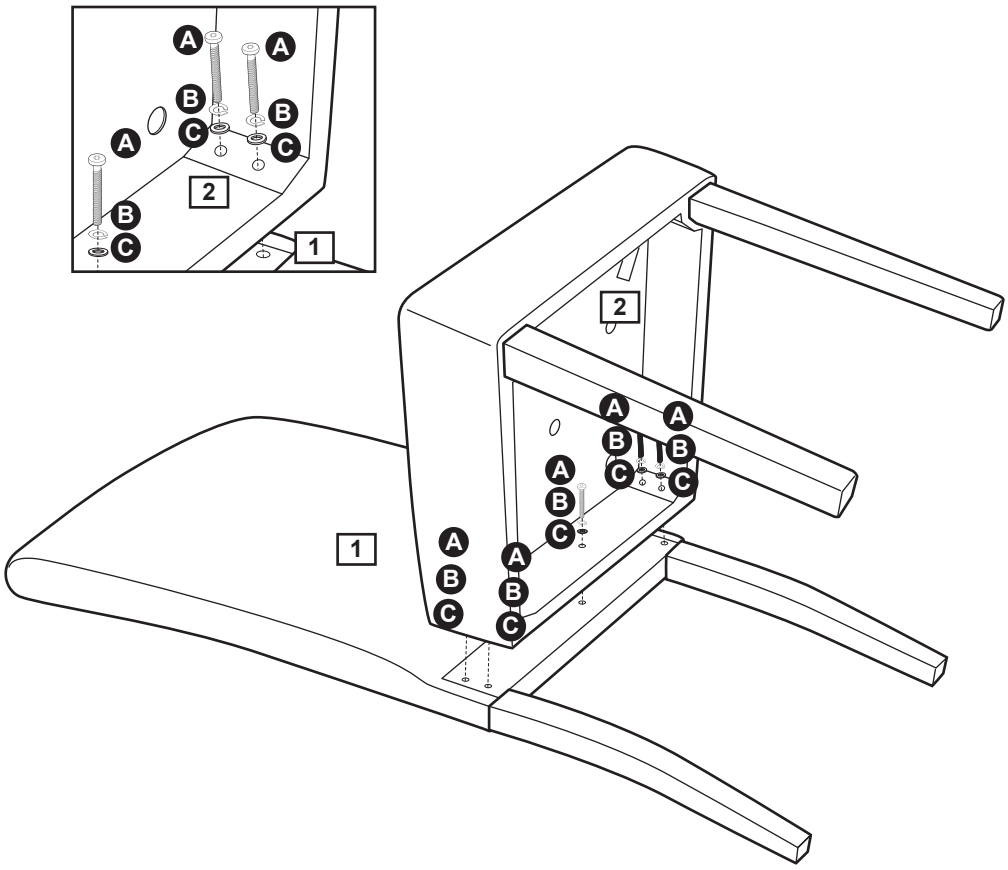

Assembly Instructions

Step 3

Aligning & securing the legs

Carefully turn the chair upright and place on a flat surface.

a: Tighten all bolts using allen key Ⓓ.

Note:
Use oval head of allen key Ⓓ on tight angles.

Note: This step is essential to prevent the chair from wobbling due to uneven legs.

b: Carefully sit on the chair and make adjustments to ensure the legs are flat even on the floor.


c: After the sitting test, re-tighten bolts again if any adjustment is needed.

Note: It is highly recommended to re-tighten all bolts after using the chair for 7 days.


Note: Keep allen key to re-tighten bolts when required.

Assembly is complete.


a:

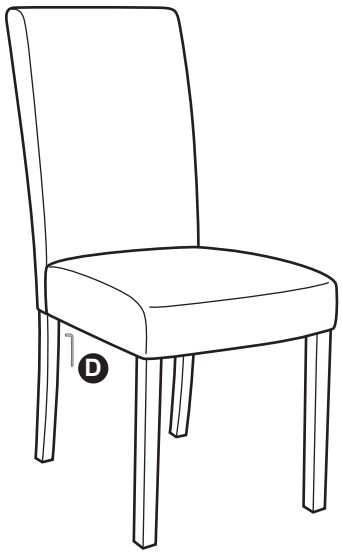

b:

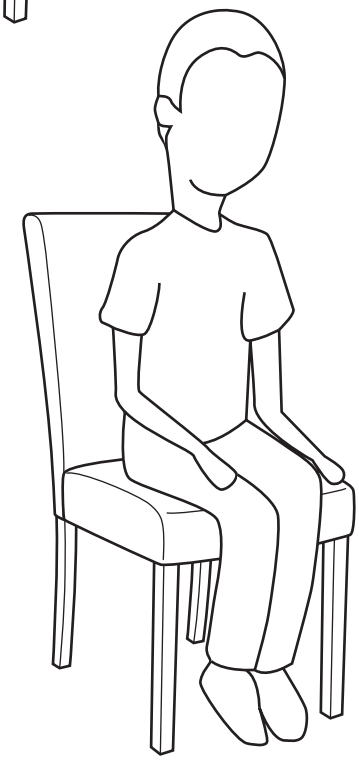

c:

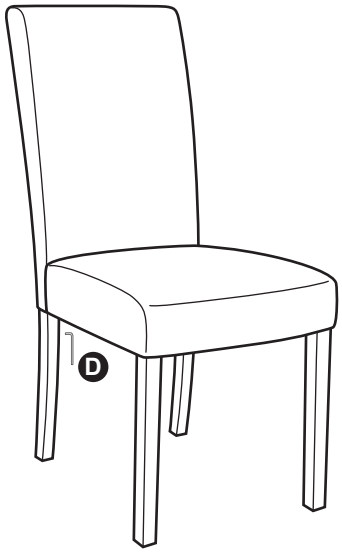


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Aston Chair

Assembly Instructions - Please keep for future reference

603/5213
603/5189
603/5196
603/5237
603/5172
603/5206
603/5220
603/3796
603/3806

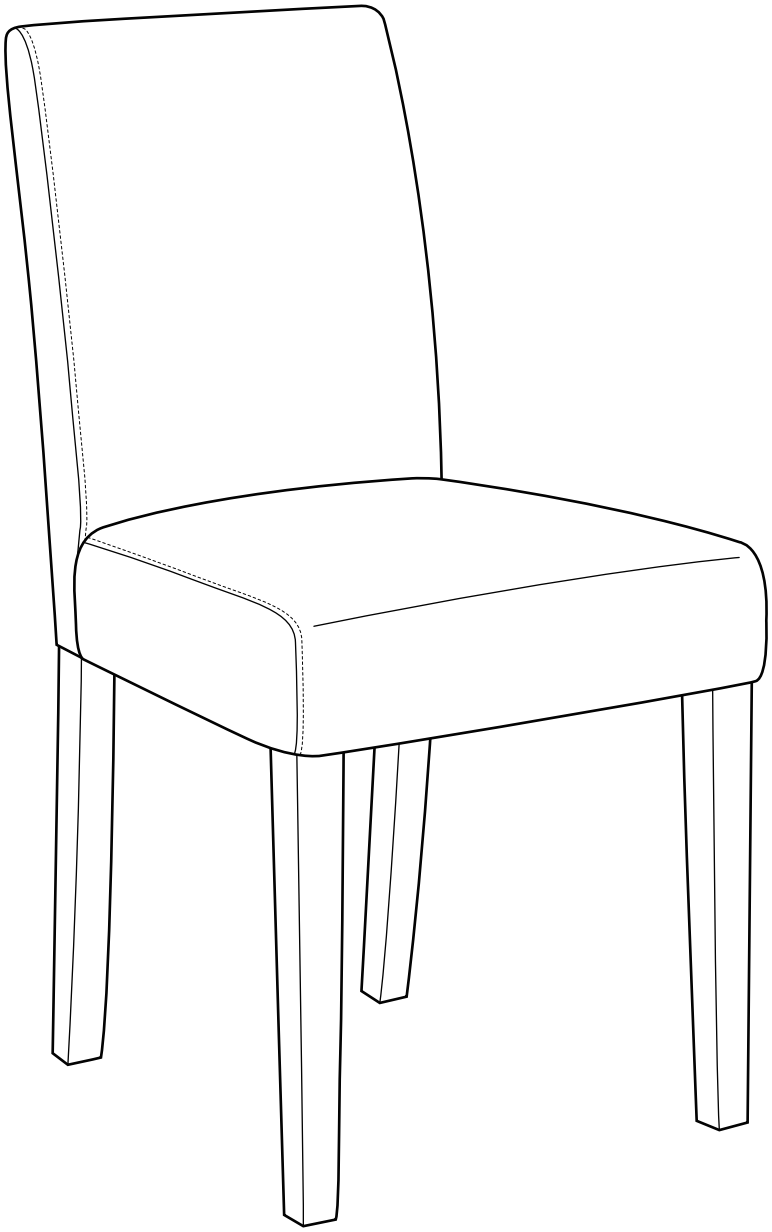

Dimensions

Width - 43cm
Depth - 52cm
Height - 85.5cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 17/04/12

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• We suggest you spend a short time reading through this leaflet and follow the simple step by step assembly instructions.

• Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.

• Assemble this product on a flat surface.

• Assemble all parts loosely before tightening any bolts.

• Discard all extra fittings and keep fittings out of reach of children.

• Unit weight: 5kgs.

• Retain Assembly Instructions for future reference.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Warnings

• This product should only be used on firm, level ground.

• Make sure the legs remain in contact with the ground.

• Do not stand on the product.

Care and maintenance

• Please clean the table surface using either damp (not wet) cloth and a mild domestic soap solution or by using an appropriate polish.


• Do not use any abrasive materials when cleaning.

• From time to time check that there are no loose bolts on this unit.


Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

Please check you have all the parts listed below

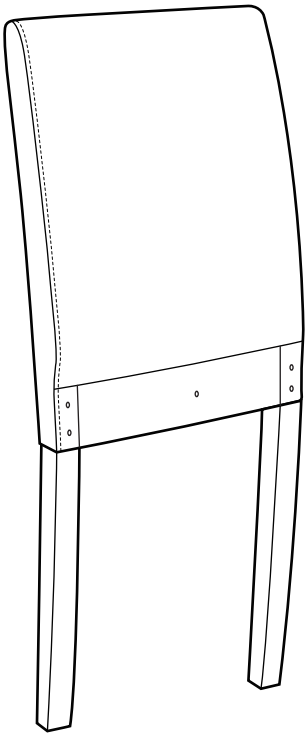

1 Backrest
(34.5 x 85.5 x 10cm)

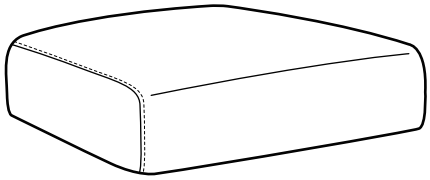

2 Seat
(43 x 41.5 x 11.5cm)







3 Front leg x 2
(43 x 4 x 3.2cm)


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 	**B** 	**C** 
M8 x 80mm Bolt x 4	M8 x 60mm Bolt x 4	M8 x 50mm Bolt x 1
D 	**E** 	
Washer x 9	Allen key x 1	

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


Attaching legs

Place the seat 2 upside down on a flat protected surface.

Peel off bottom cloth cover of seat to be able to secure the legs. Pull the cloth from the back side of the seat.

Insert the legs 3 into the holes of the seat as shown and fix using bolts B and washers D.

Important: Do not fully tighten bolts at this stage.

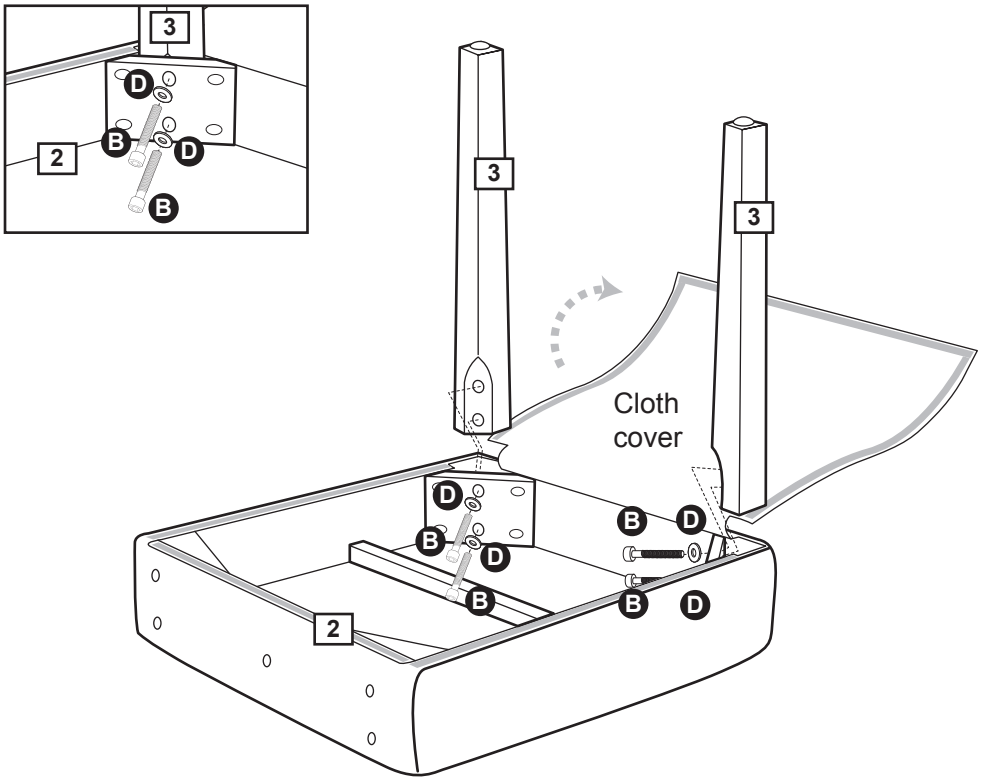


Step 2

Attaching backrest

Place the backrest on a flat protected surface.

Position the seat 2 on the backrest 1 as shown and fix using bolts A & C and washers D. Tighten the bolts using allen key E.

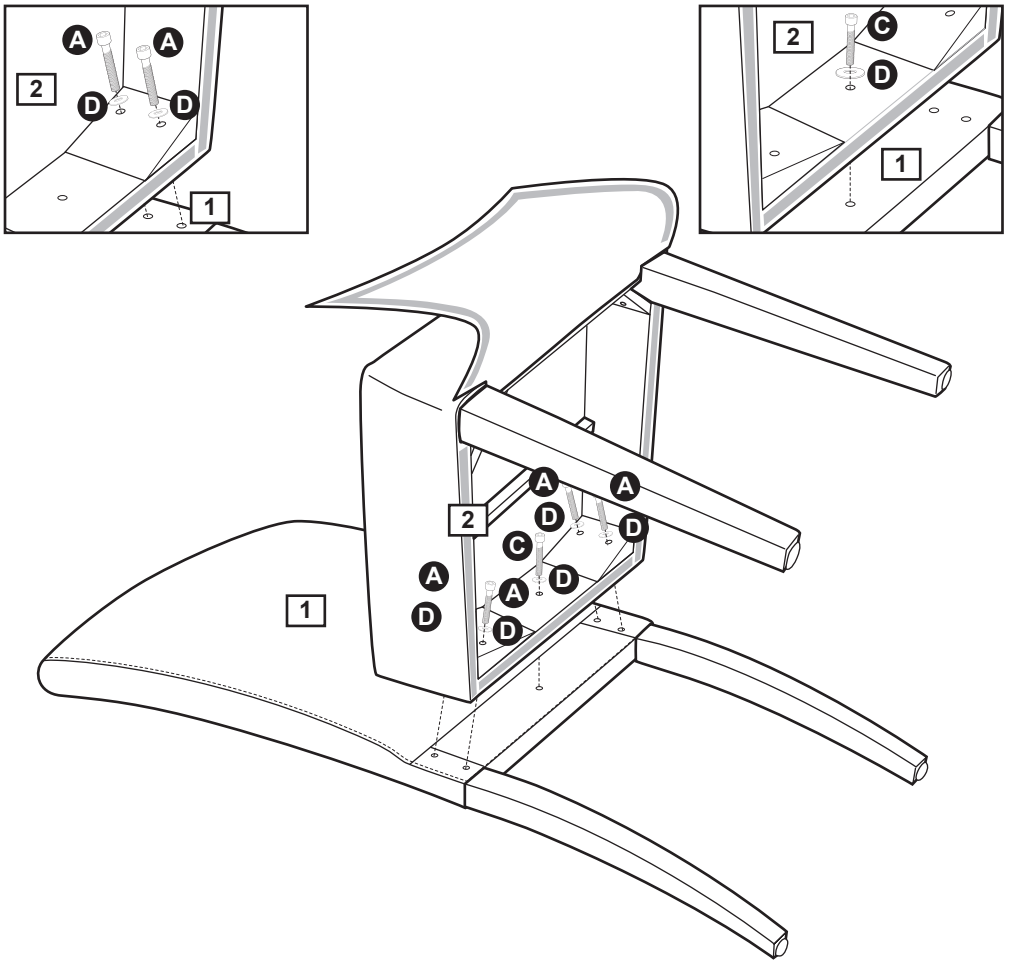


Assembly Instructions

Step 3

Aligning the legs

Carefully turn over the chair and place on a flat surface.

Tighten all the bolts on the legs using allen key while making adjustments to ensure the legs are even on the floor.

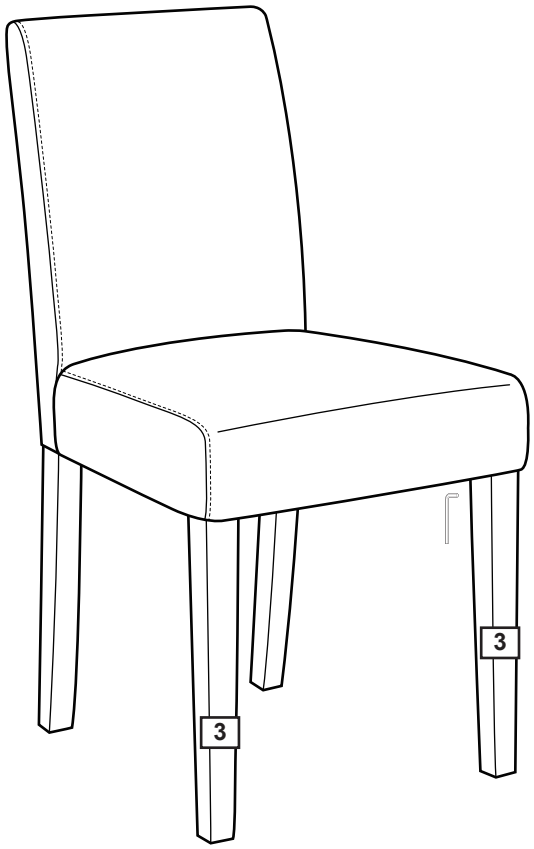


Step 4

Re-attaching the bottom cloth cover

Re-attach the bottom cloth cover as shown and fasten with the magic tape.

Carefully turn over the chair.

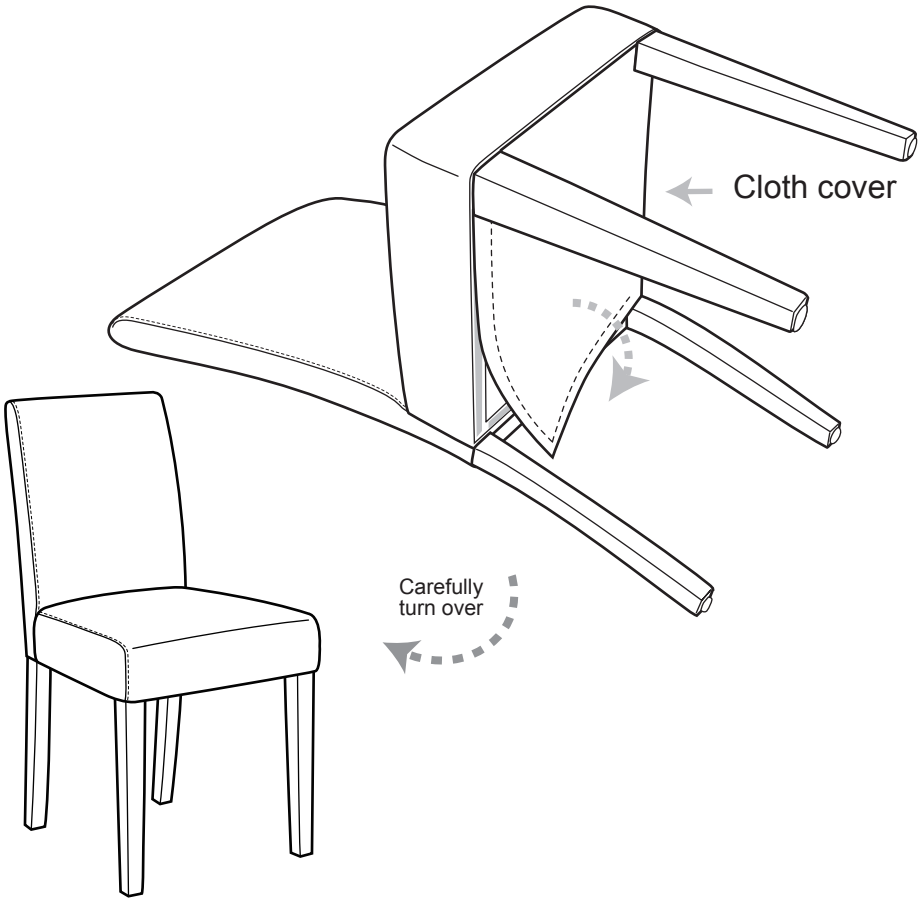

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**