
Dining Chair

Assembly Instructions - Please keep for future reference

603/7792
603/7826
603/1035
603/1059
603/1042
603/7802

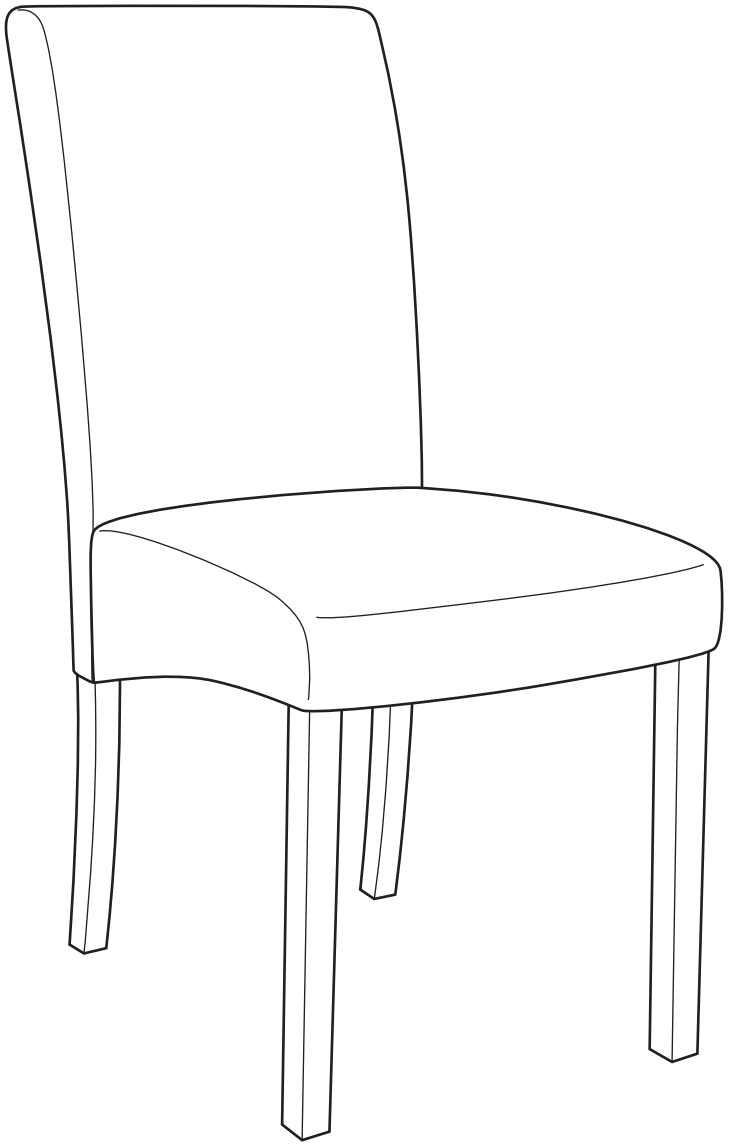

Dimensions

Width - 43.5cm
Depth - 56cm
Height - 95cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 21/08/13

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Assemble this product on a flat surface.

• Assemble all parts loosely before tightening any bolts.

• Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.

• Discard all extra fittings and keep fittings out of reach of children.

• Unit weight: 5.2kgs.

• Maximum safe weight of user: 110kgs.

• Retain Assembly Instructions for future reference.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Warnings

• This product should only be used on firm, level ground.

• Make sure the legs remain in contact with the ground.

• Do not stand on the product.

Care and maintenance

• Please clean the product using either damp (not wet) cloth and a mild domestic soap solution or by using an appropriate polish.


• Do not use any abrasive materials when cleaning.

• From time to time check that there are no loose bolts on this unit.


Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

Please check you have all the parts listed below

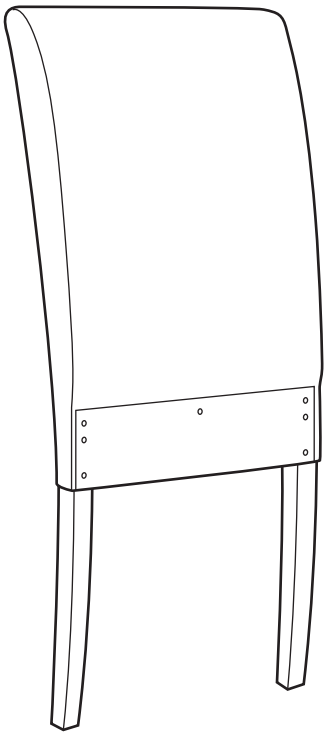

1 Backrest
(36 x 10 x 95cm)

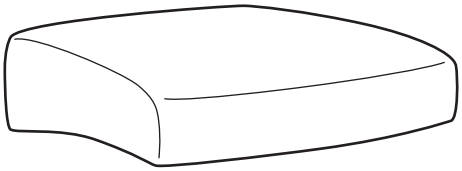

2 Seat
(43.5 x 41.5 x 17cm)






3 Leg x 2
(3 x 3 x 43cm)


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  M6 x 50mm Bolt x 11	**B**  Spring washer x 11	**C**  Flat washer x 11
D  Allen key x 1		

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


Attaching legs

Place the seat 2 upside down on a flat protected surface.

Insert the legs 3 into the holes of the seat as shown and fix using bolts A, spring washers B and washers C.

Important:
Fasten bolts using allen key D but do not fully tighten at this stage.

Note:
Use oval head of allen key D on tight angles.

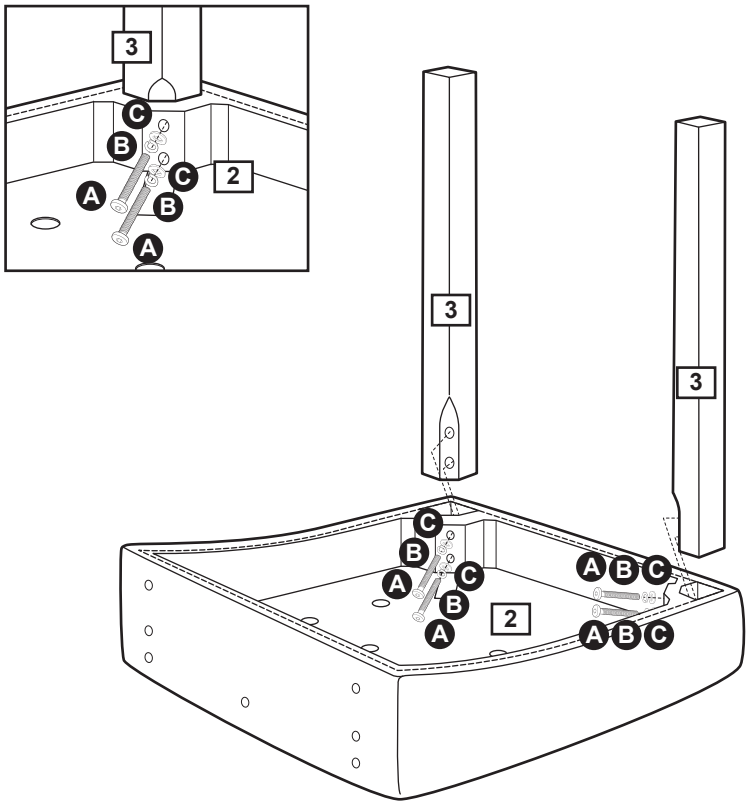

Step 2


Attaching backrest

Place the backrest on a flat protected surface.

Position the seat 2 on the backrest 1 as shown and fix using bolts A, spring washers B and washers C.

Important:
Fasten bolts using allen key D but do not fully tighten at this stage.

Note:
Use oval head of allen key D on tight angles.

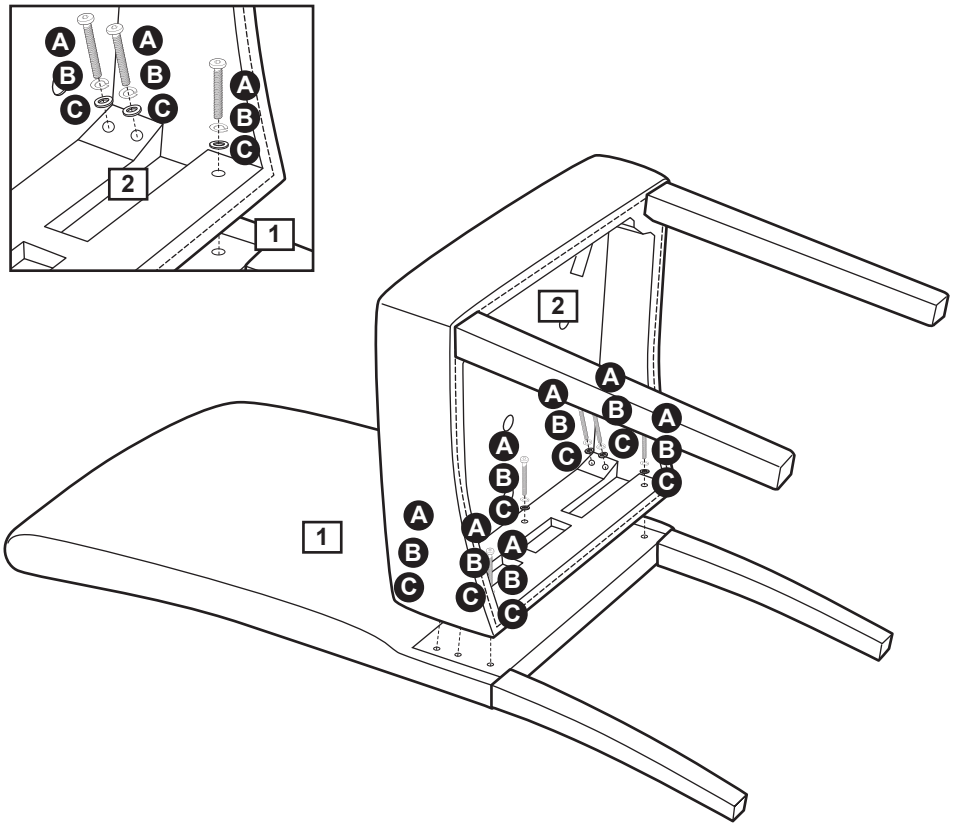

Assembly Instructions

Step 3

Aligning & securing the legs

Carefully turn the chair upright and place on a flat surface.

a: Tighten all bolts using allen key Ⓓ.

Note: Use oval head of allen key Ⓓ on tight angles.

Note: This step is essential to prevent the chair from wobbling due to uneven legs.

b: Carefully sit on the chair and make adjustments to ensure the legs are flat even on the floor.


c: After the sitting test, re-tighten bolts again if any adjustment is needed.

Note: It is highly recommended to re-tighten all bolts after using the chair for 7 days.


Note: Keep allen key to re-tighten bolts when required.

Assembly is complete.


a:

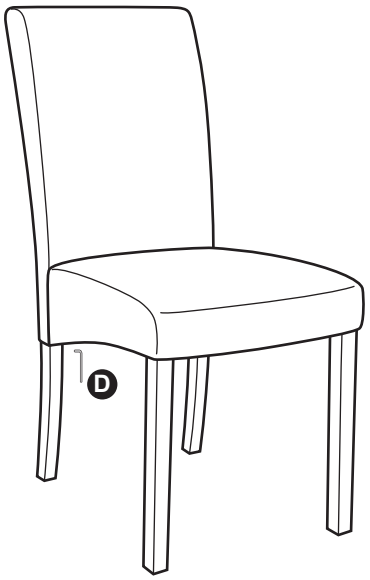

b:

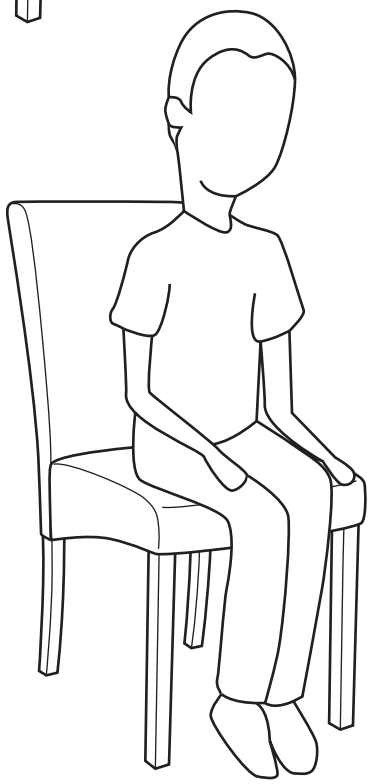

c:

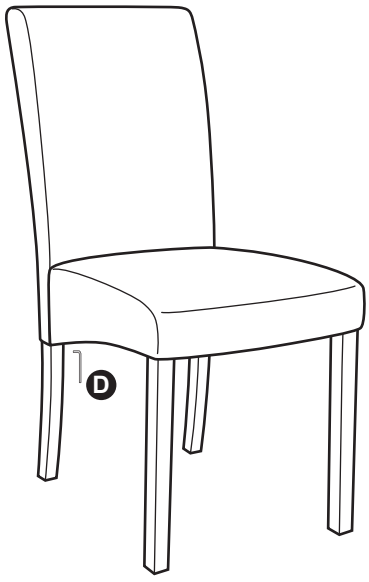

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**