Aruba - Display Unit

Assembly Instructions - Please keep for future reference


758/6163

758/6170

139/4179



PLEASE NOTE:
The lower sideboard shown in the below photo is not included in this carton.

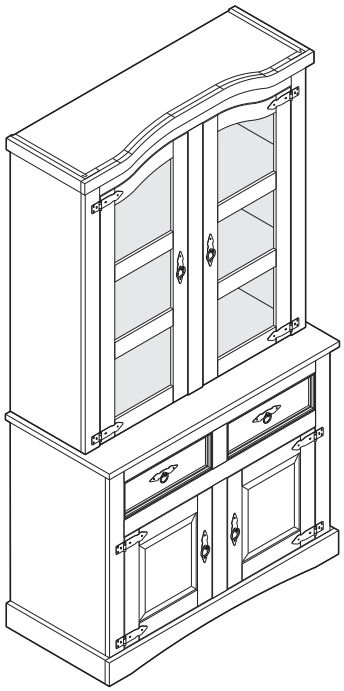

Dimensions

Width - 104cm
Depth - 36cm
Height - 114cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Argos Customer Helpline: 08456 400 800 or Homebase Customer Helpline: 0845 077 8888**

Issue 1 - 16/04/13

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

• The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

• On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

• This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

• Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below

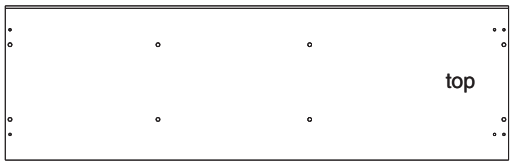


1 Right side panel (107.8 x 33cm)

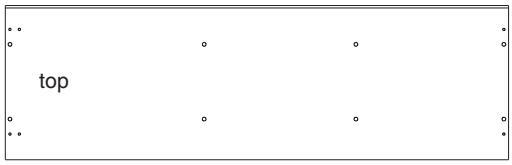

2 Left side panel (107.8 x 33cm)

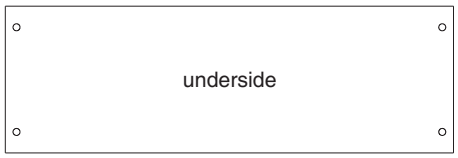

3 Top panel (96 x 31.4cm)

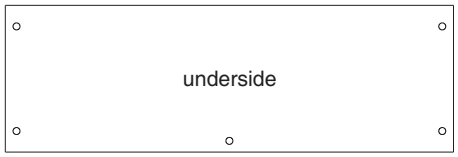

4 Base panel (96 x 31.4cm)




5 Shelf x 2 (96 x 31.4cm)




6 Side top moulding x 2 (33.8 x 4.5cm)




7 Block x 6 (10 x 2cm)

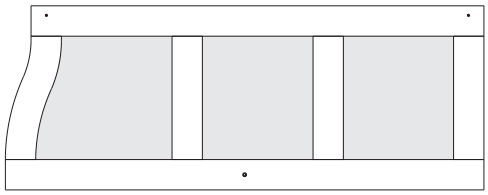


8 Right door (102.5 x 39.4cm)

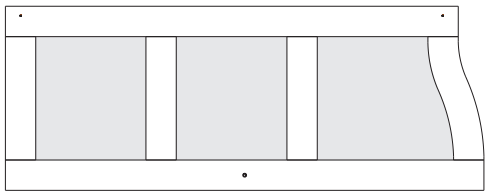

9 Left door (102.5 x 39.4cm)




10 Right front frame (107.8 x 6.5cm)




11 Left front frame (107.8 x 6.5cm)



12 Middle front frame (103.3 x 6.5cm)




13 Curved top moulding (103.6 x 4.5cm)



14 Curved top rail (96.6 x 10cm)



15 Back panel top (97.8 x 42.4cm)














16 Back panel bottom x 2 (97.8 x 32.5cm)

Components - Fittings


If you have damaged or missing components, call the **Argos Customer Helpline: 08456 400 800 or Homebase Customer Helpline: 0845 077 8888**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

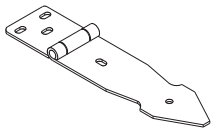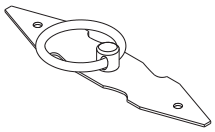A  Wooden dowel x 24	**B**  14mm Screw x 37	**C**  30mm Screw x 7
D  35mm Screw x 24	**E**  19mm Bolt x 2	**F**  Metal dowel x 12
G Locking nut x 12 	**H** Door hinge x 4 	**I** Door handle x 2 
J Clip x 2 	**K** Plug x 2 	**L**  Nail x 46
M Bracket x 2 	**N** Washer x 2 	**O**  Wall strap x 1


Tools required




Phillips screwdriver (medium & large)

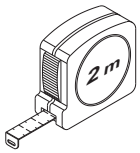

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


Fixing right front frame to the right side panel (Two people required for an easier assembly)**.**

a: Insert right side panel 1 into right front frame 10 through joints.

Note:
Before fixing the blocks 7 into place it is important to ensure that the slot and groove of parts 1 and 10 are fully pushed together and lined up correctly at the top and bottom.

b: Place blocks 7 in the positions shown. First fix to the side panel using screws D.

c: Fix front frame through blocks 7 using screws D.

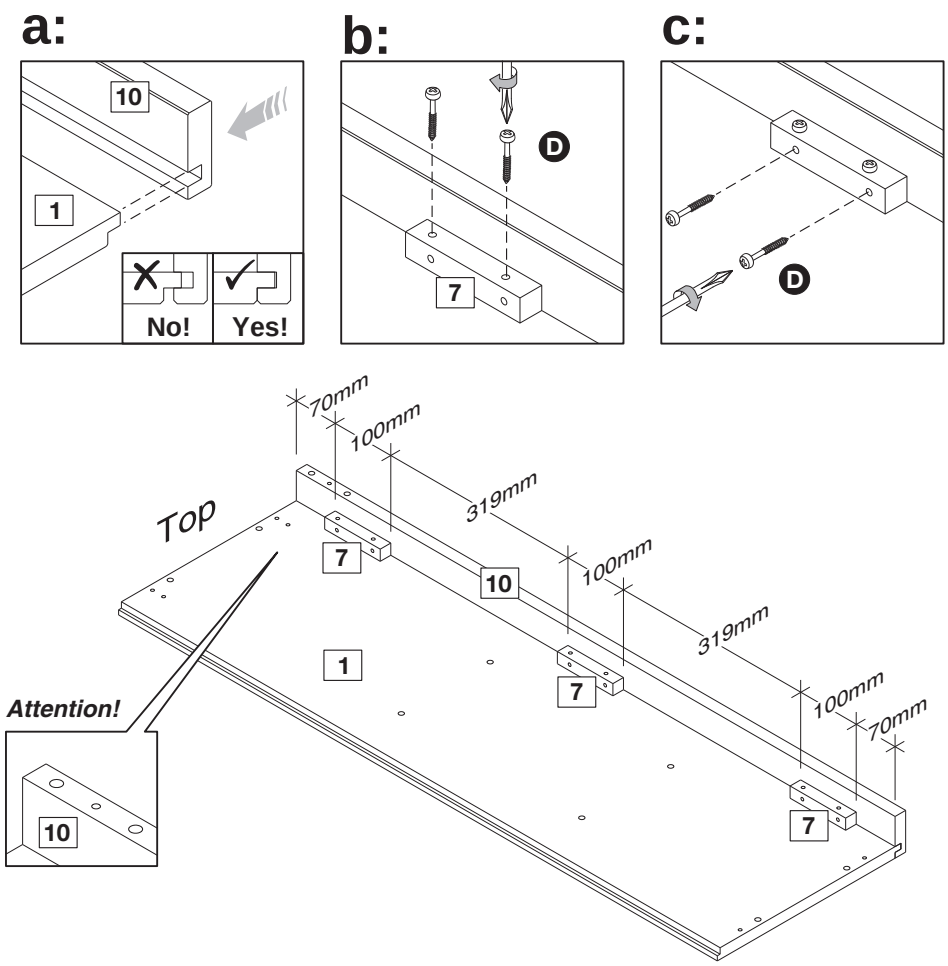

Step 2


Fixing left front frame to the left side panel (Two people required for an easier assembly)**.**

a: Insert left side panel 2 into left front frame 11 through joints.

Note:
Before fixing the blocks 7 into place it is important to ensure that the slot and groove of parts 2 and 11 are fully pushed together and lined up correctly at the top and bottom.


b: Place blocks 7 in the positions shown. First fix to the side panel using screws D.

c: Fix front frame through blocks 7 using screws D.

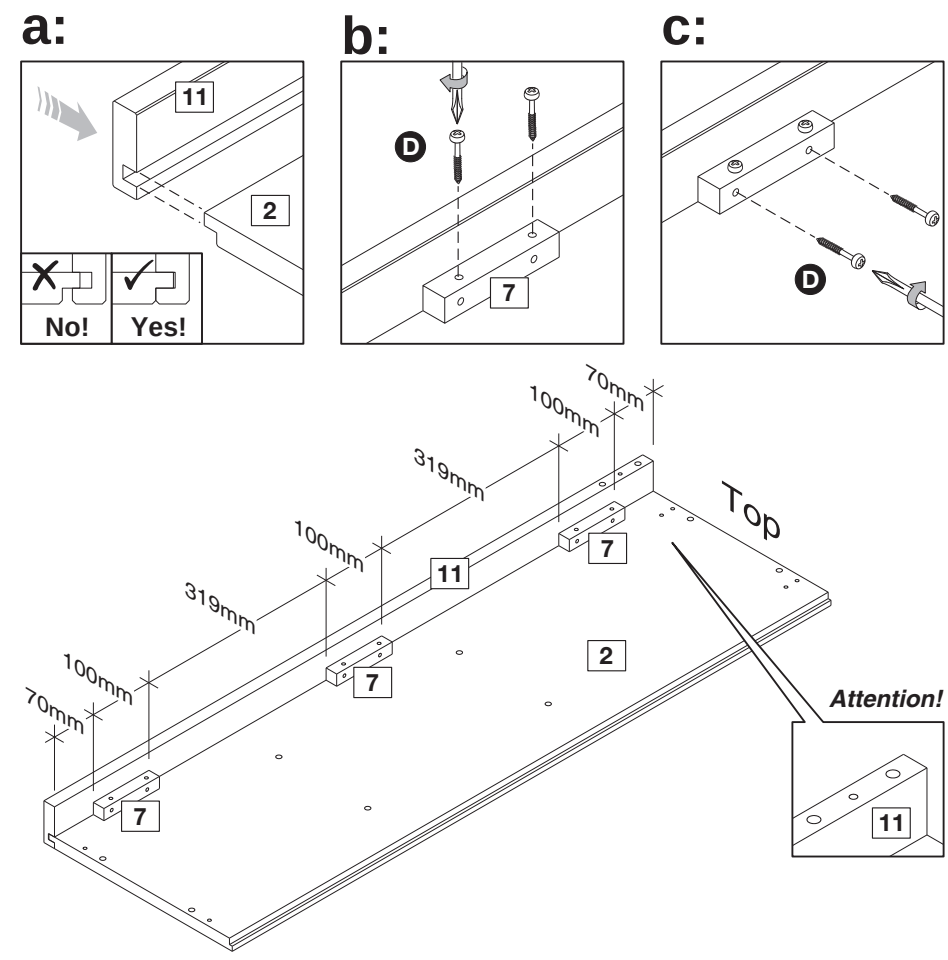

Step 3

Insert dowels (A) into the indicated parts.

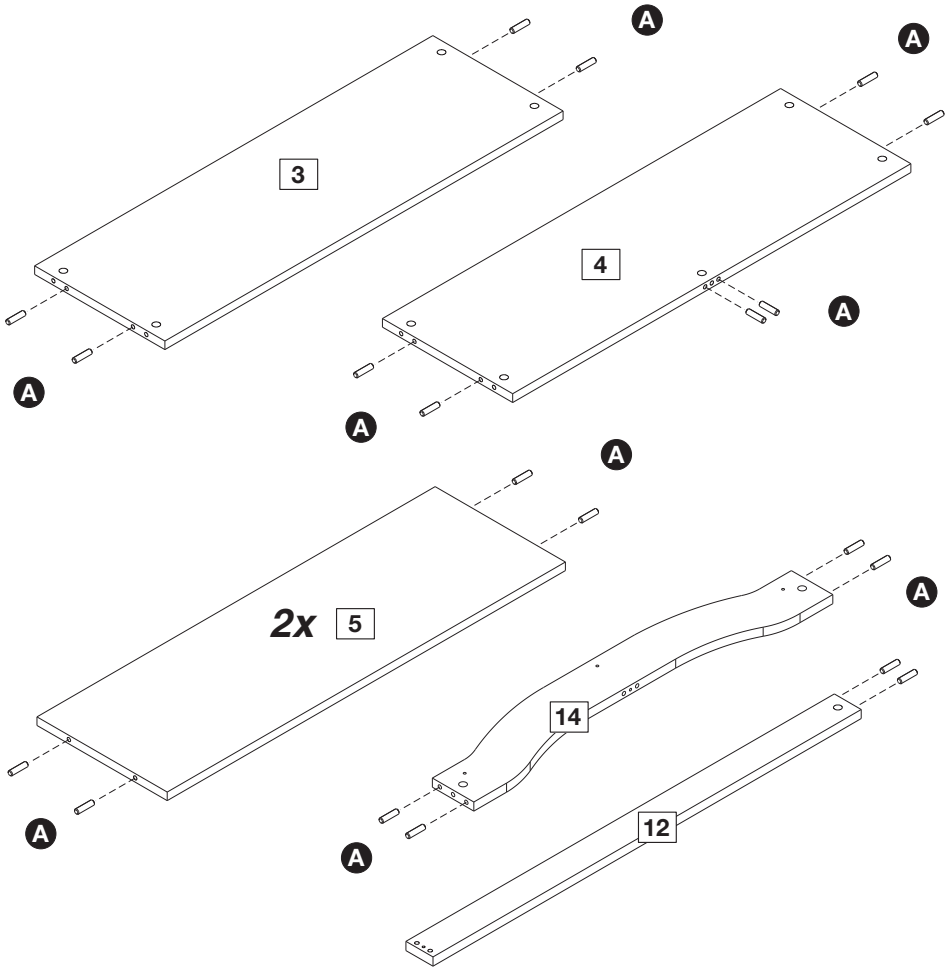

Step 4

Fitting Metal dowels.


Screw metal dowels (F) into right side panel 1 and left side panel 2, as shown.

Screw metal dowel (F) into middle front frame 12.

Screw metal dowel (F) into curved top rail 14.

Note: Insert metal dowels as far as shown.

Do not over tighten.

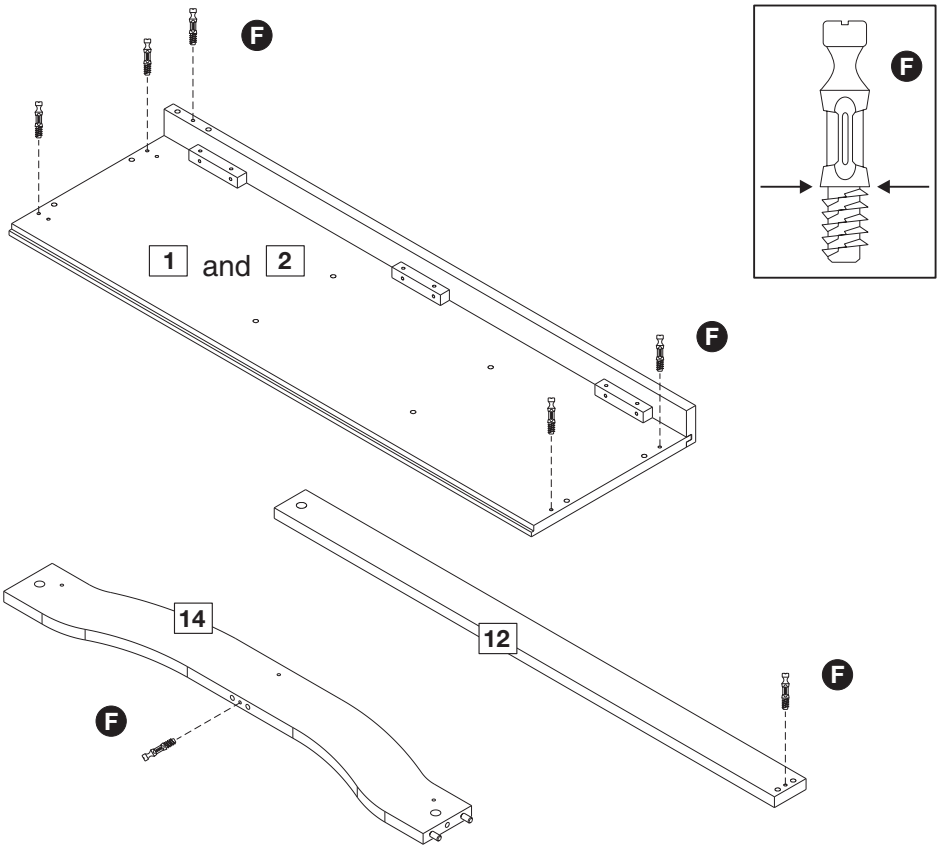

Step 5


Fixing middle front frame.


With help, fit middle front frame 12 to curved top rail 14 .

Insert 1 locking nut G into middle front frame where shown.

Use a screwdriver to turn locking nut G clockwise to lock.

Do not over tighten.

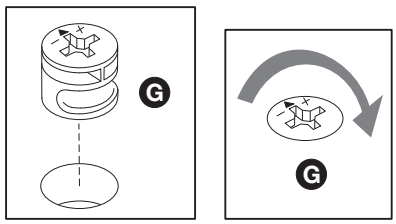

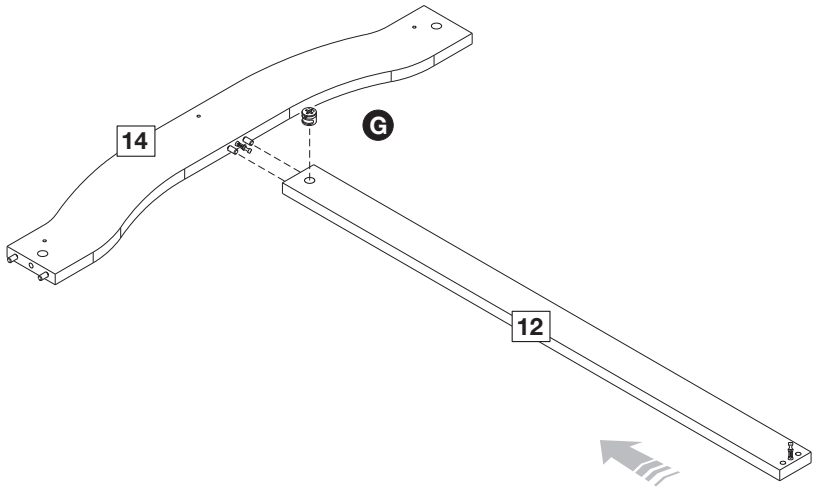

Step 6


Fixing curved top rail.


With help, fit curved top rail 14 to left side panel 2 .

Insert 1 locking nut G into curved top rail where shown.

Use a screwdriver to turn locking nut G clockwise to lock.

Do not over tighten.

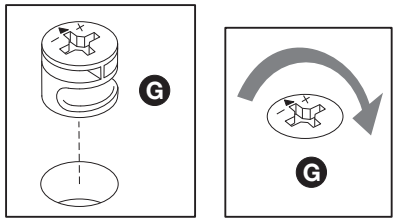

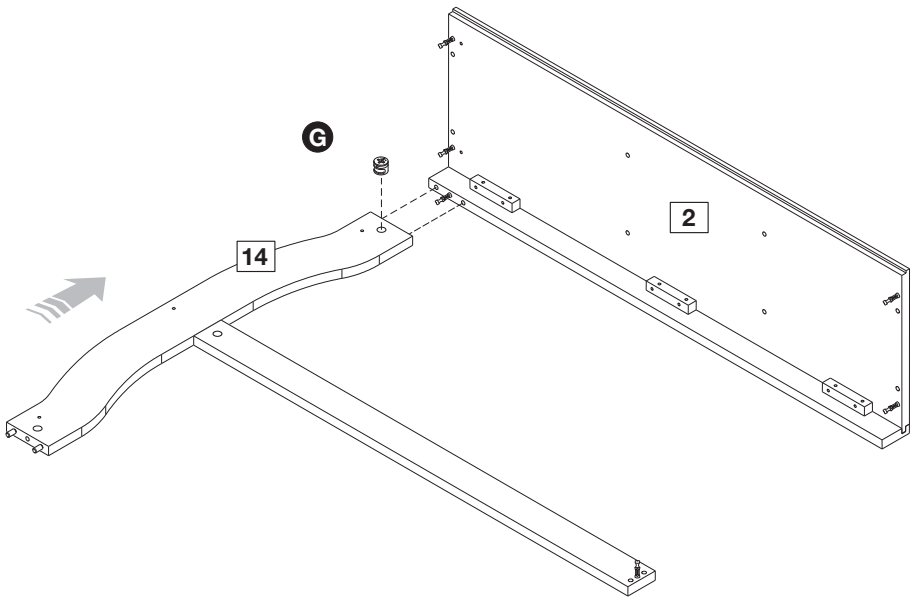

Step 7

Fixing top panel and base panel.

With help, fit top panel 3 to left side panel 2 .


With help, fit base panel 4 to left side panel 2 and middle front frame 12 .


Attention: Ensure hole in panel 4 is positioned downwards as shown.


Insert 5 locking nuts G into top panel and base panel where shown.

Use a screwdriver to turn locking nuts G clockwise to lock.


Do not over tighten.

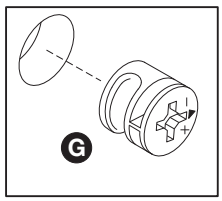

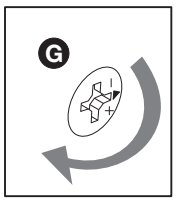

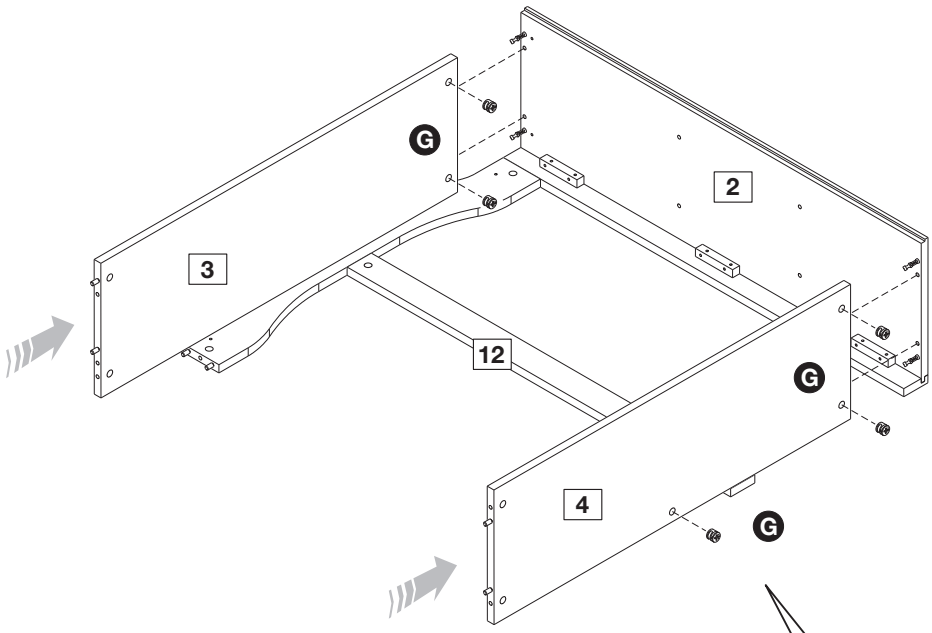


Attention:

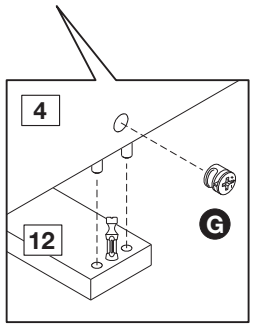

Step 8

Inserting shelves.

Fit shelves 5 to the left side panel 2 .

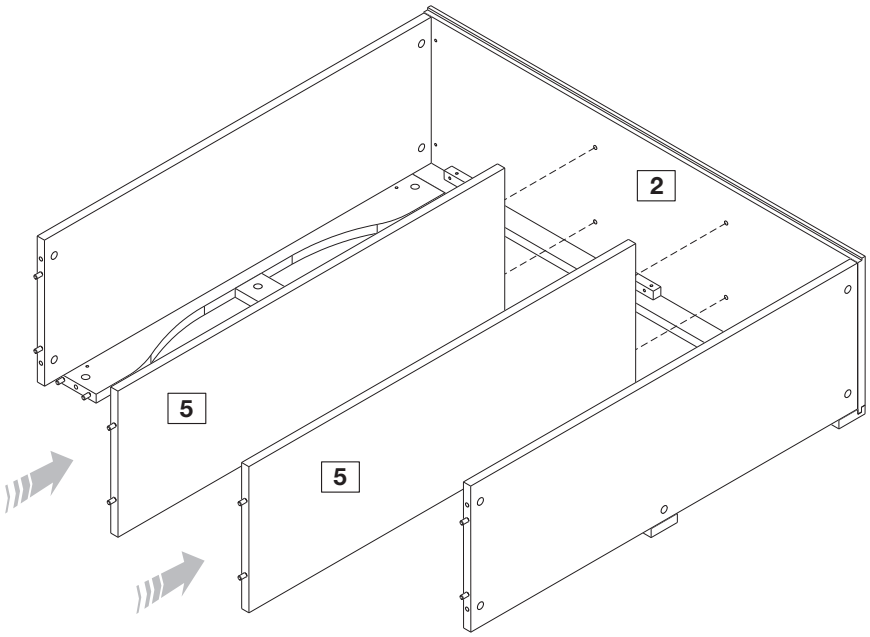

Step 9

Fixing right side panel.


Place side 1 properly ensuring dowels are all fit into their holes at the same time.

Insert 5 locking nuts G into top panel, base panel and curved top rail where shown.

Use a screwdriver to turn locking nuts G clockwise to lock.

Do not over tighten.

I*mportant:* After attaching the side panel, with help, carefully stand the product upright.

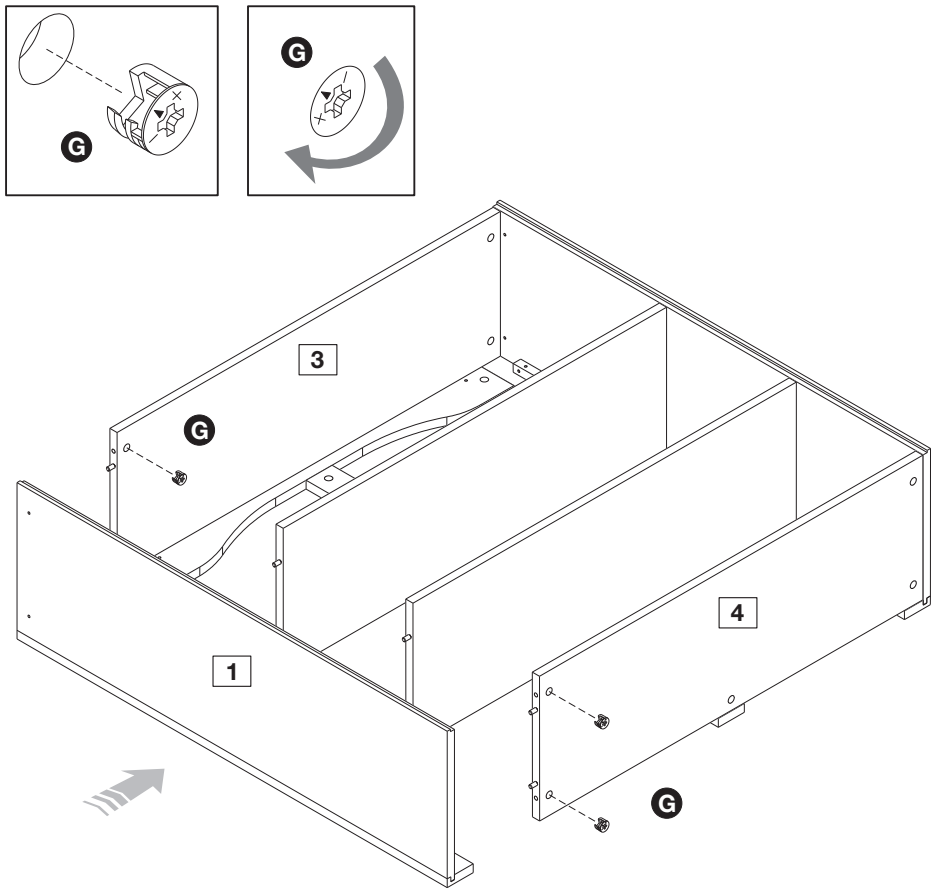


Step 10

a: Fix side top moulding 6 to the side panels using screws C.

Note: Make sure side top mouldings are aligned to the top and front edges of the side panels.

b: Fix curved top moulding 13 to the curved top rail 14 using screws C.

Note: Make sure curved top moulding 13 is aligned to the bottom edge of the side panels and in line to the side top mouldings.

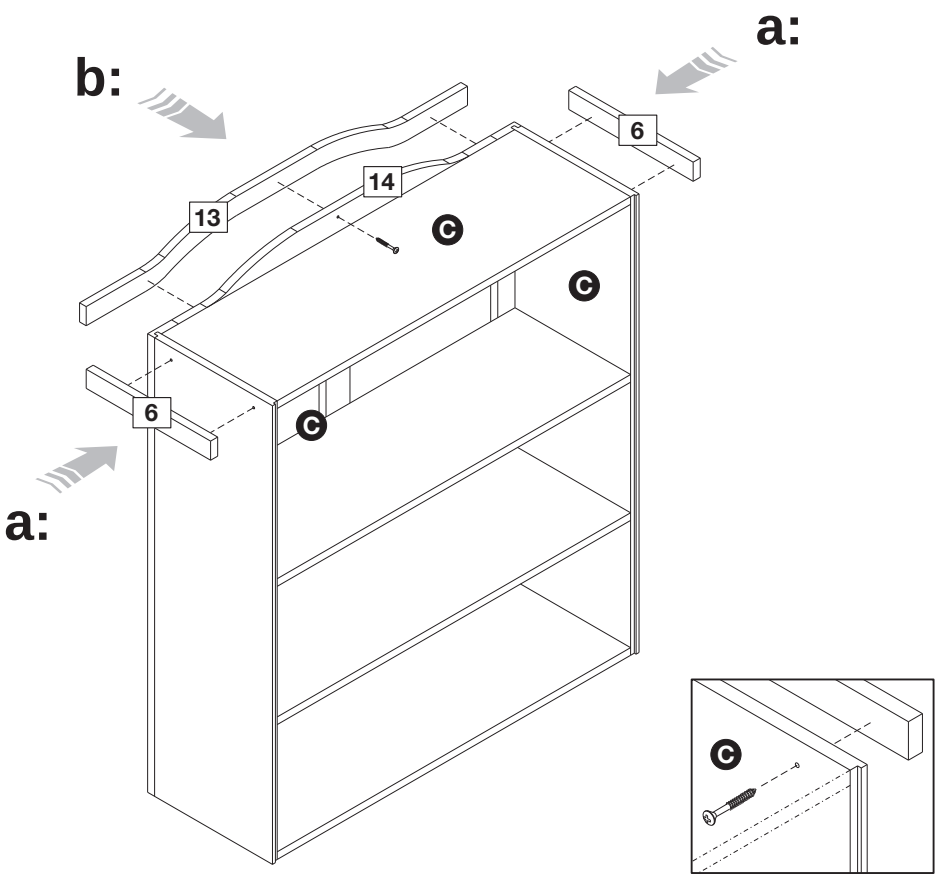


Step 11

Fitting hinges to doors.

a: Attach hinges Ⓗ to the pre drilled holes in the right door 8 using screws Ⓑ.

b: Attach handle Ⓘ to the door using bolt Ⓔ, then fix handle plate to the door using screws Ⓑ. Make sure handle plate is aligned before fixing.

Repeat step 11 in left door 9 .

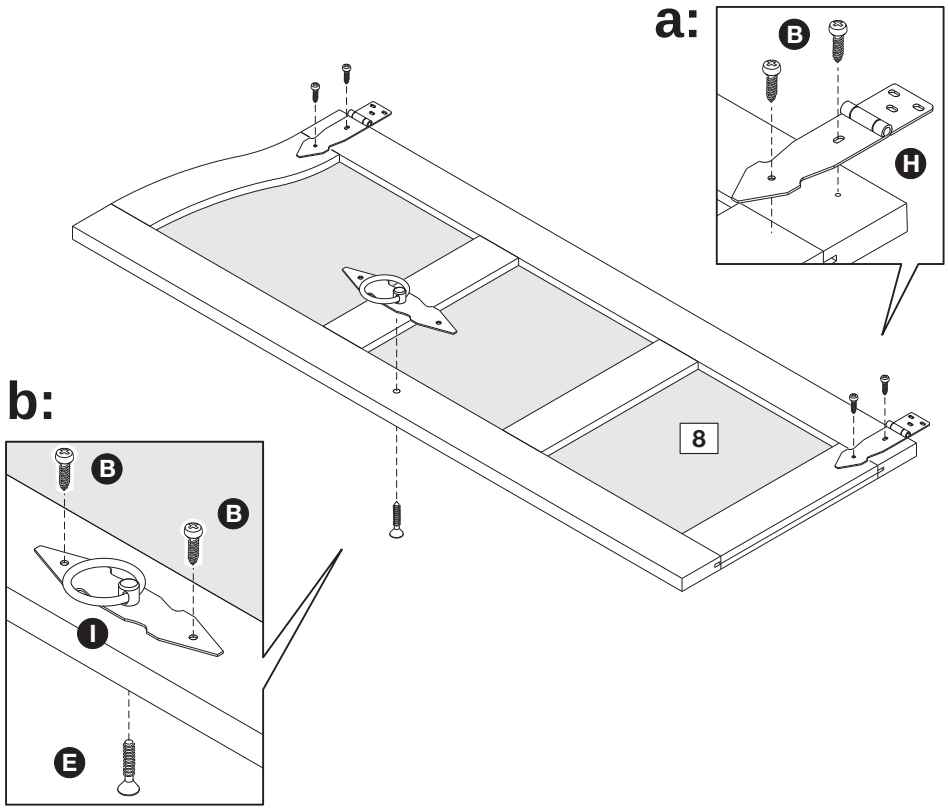


Step 12

Fixing doors.

With help centralise the doors in the opening of the cabinet then fix the hinges using screws Ⓑ as shown.

Note: Hinges allow some adjustment after doors are fixed. Loosen screws and move doors to suit. Re-tighten screws.

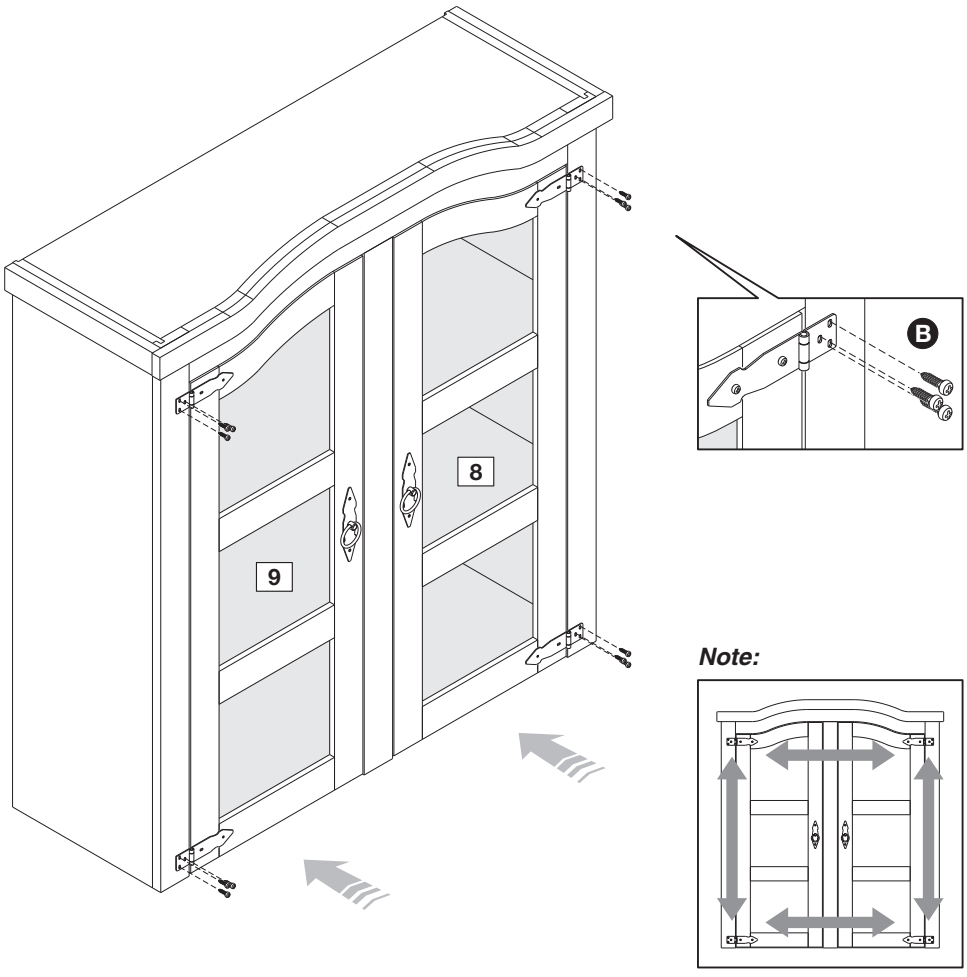

Step 13


Fitting door locks.


a: Screw clips J in place using screws B. Ensure that the 2 small wheels are flush with the edge of the shelf.

b: Insert plugs K into clips J, ensuring they are leveled.

c: Push the door against the plug K. This will make 2 small marks on the door.

d: The doors can then be opened and plugs K can be screwed into place using the 2 marks made as a guide. This will ensure that the 2 parts of the door clips are lined up correctly.

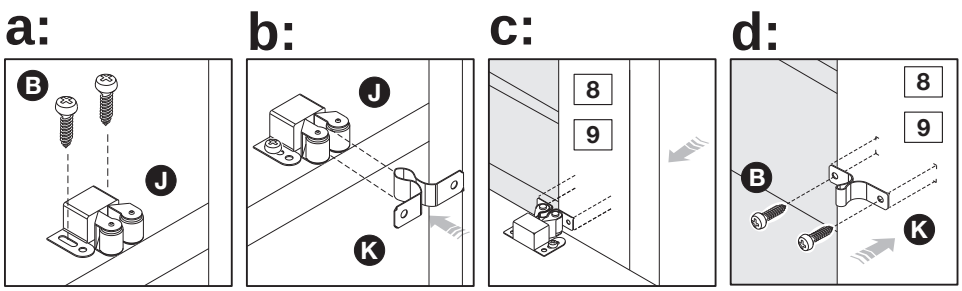

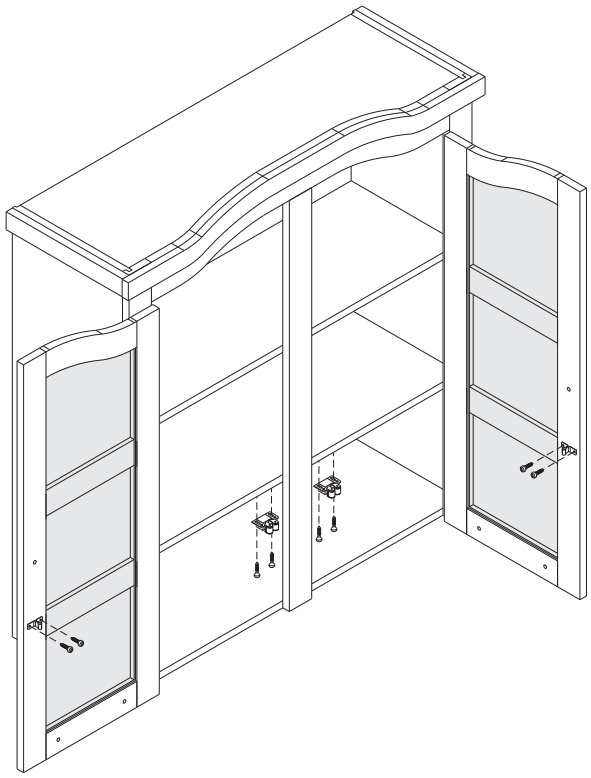



Step 14

Fixing back panels.

Important: Cabinet **MUST** be 'square' when back panels are attached.

Attach the back panels 15 and 16 using nails L.

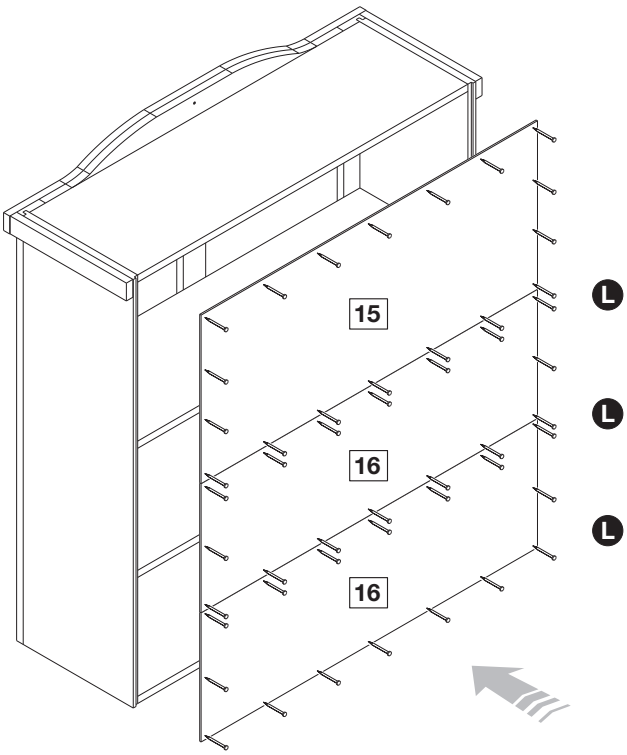

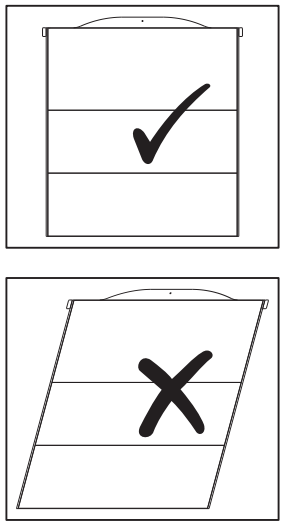


Step **15**

Fixing display unit to the sideboard.

Position display unit on top of sideboard.

Attach display unit to the sideboard using brackets Ⓜ and screws Ⓑ where shown.


Important: The bracket supplied is only to be used in conjunction with Sideboard. We strongly recommend that you secure the Top Display Unit to the Sideboard as part of the final stage.

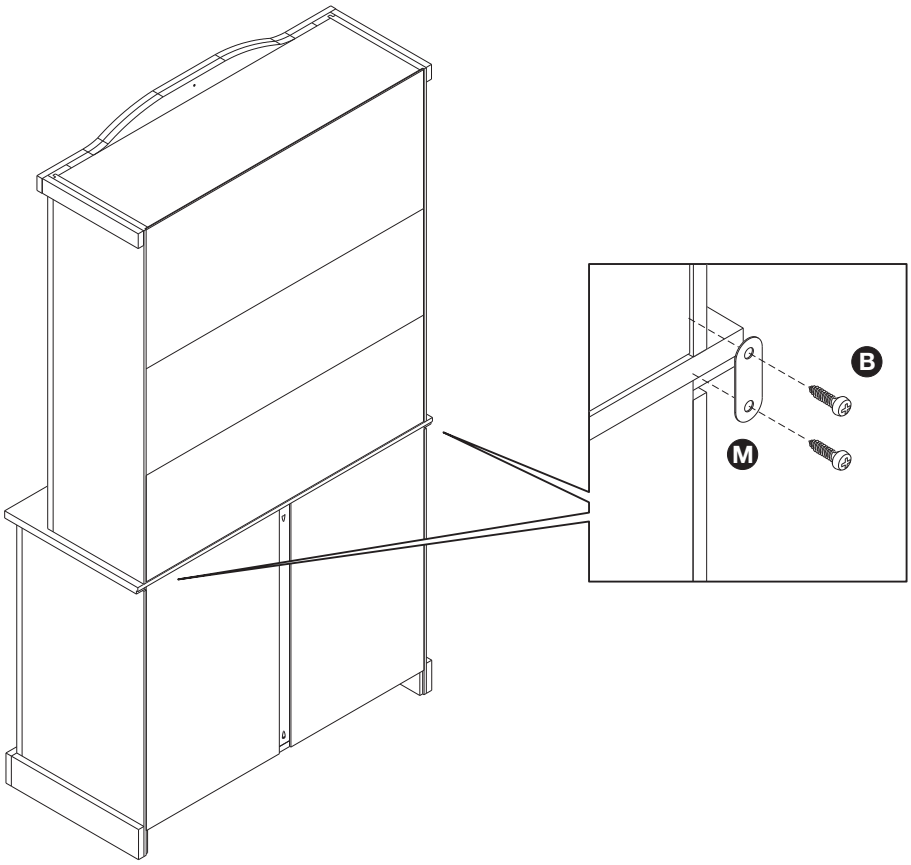


Step **16**

Fixing to wall.

Furniture must be fixed to a wall. Fix wall strap Ⓞ to top of furniture using washer Ⓝ and screw Ⓑ. With help, move furniture into position.

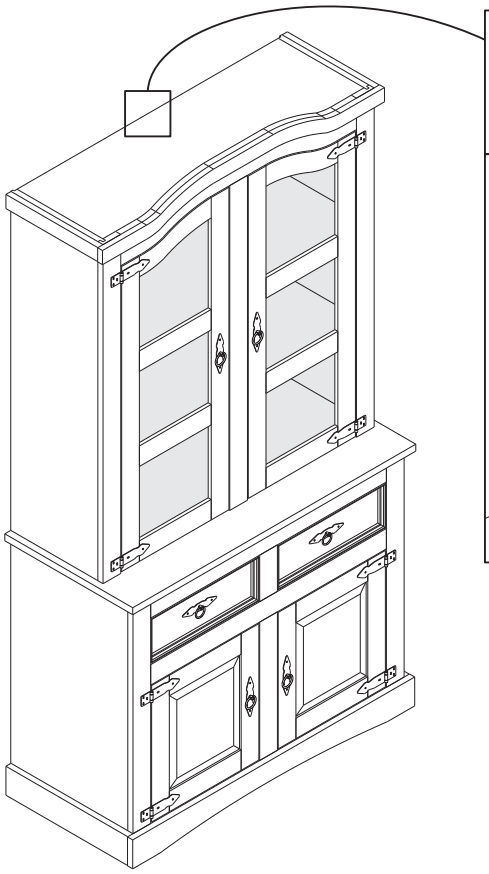

Note: Wall plugs not supplied. The correct type of fixing must be used for your wall, seek professional advice if in doubt.

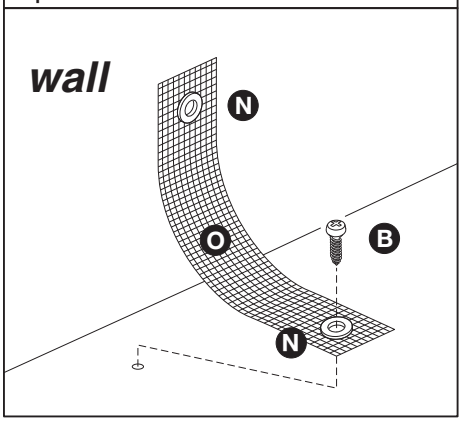


Assembly is complete.

If you need help or have damaged or missing parts, call the **Argos Customer Helpline: 08456 400 800 or Homebase Customer Helpline: 0845 077 8888**

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

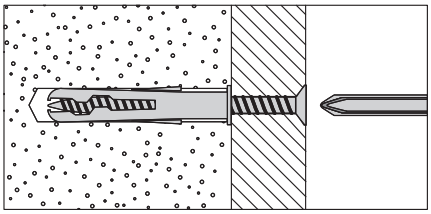


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

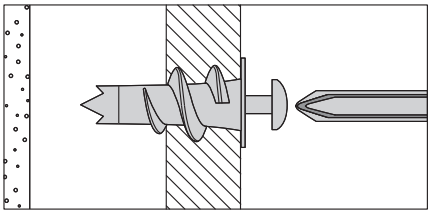


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

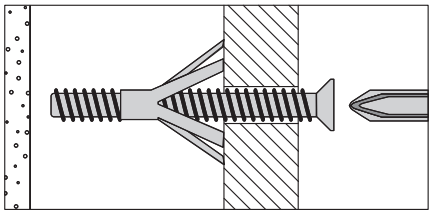


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

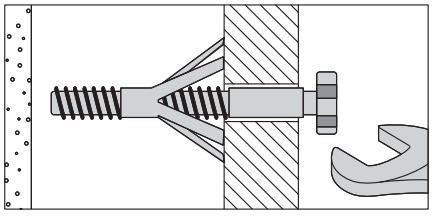


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

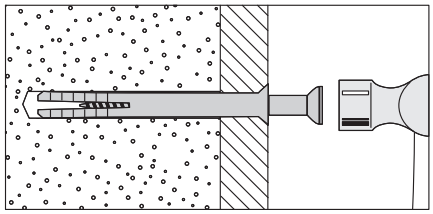

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

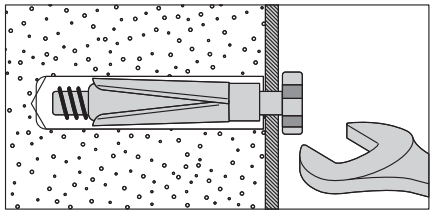

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.