
Scandinavia - Slim Bedside Table

Assembly Instructions - Please keep for future reference

615/6374

615/6910

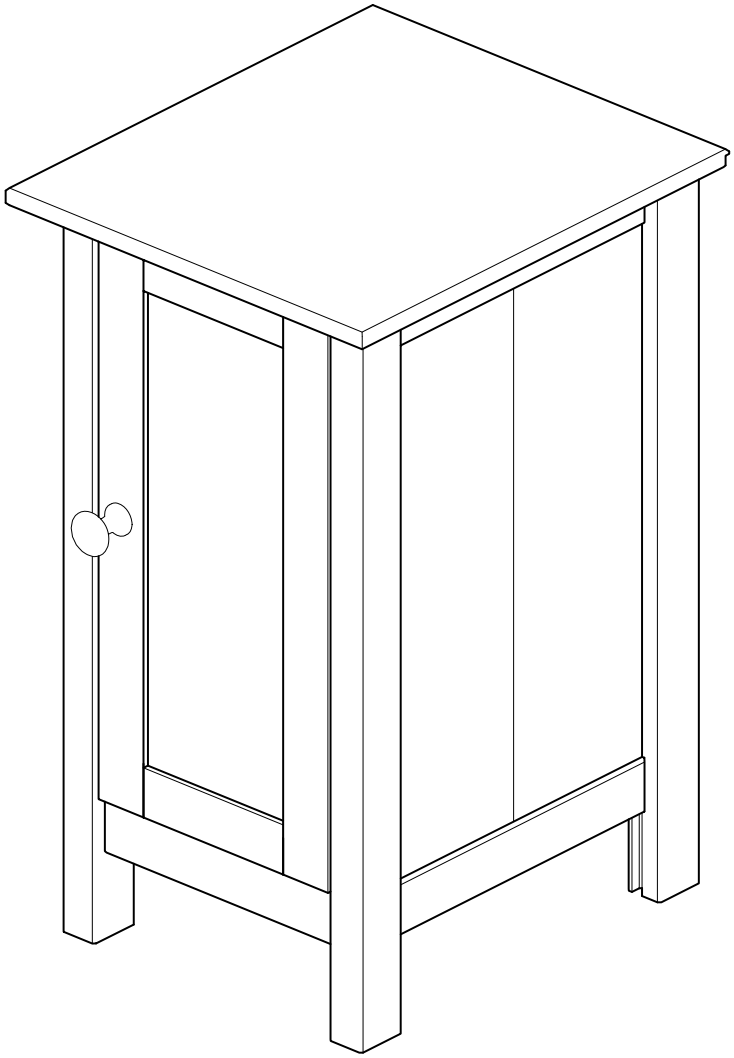

Dimensions

Width - 35cm
Depth - 40cm
Height - 61cm

Important - Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 2 - 01/04/12

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

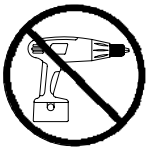

- We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance


- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the panels listed below

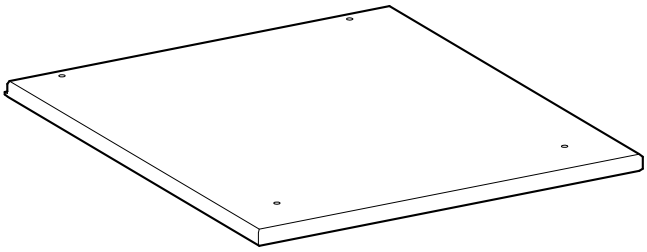


1 Top (35 x 40cm)

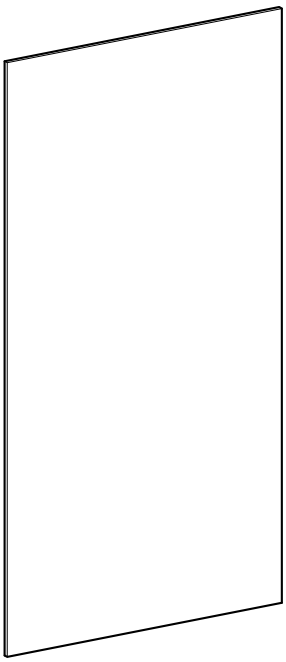


6 Back (49.3 x 25cm)

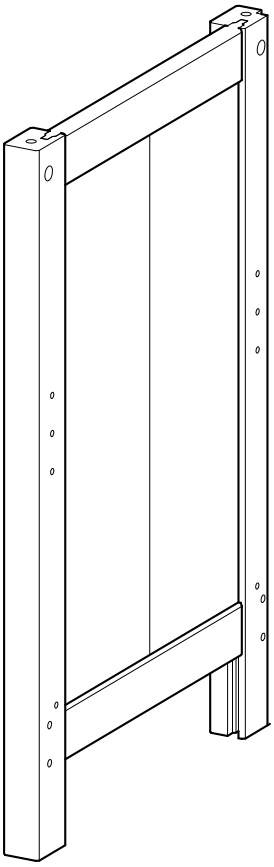


2 Left side
(59.6 x 37cm)

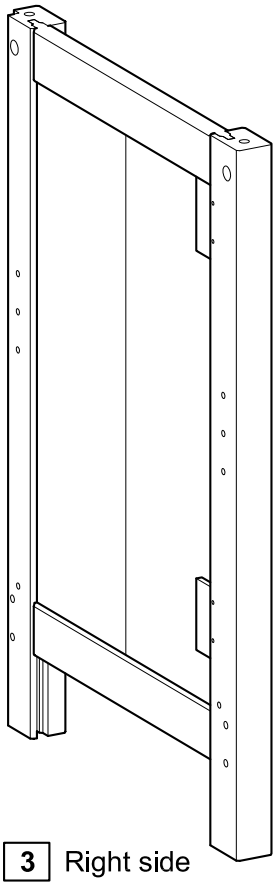


3 Right side
(59.6 x 37cm)

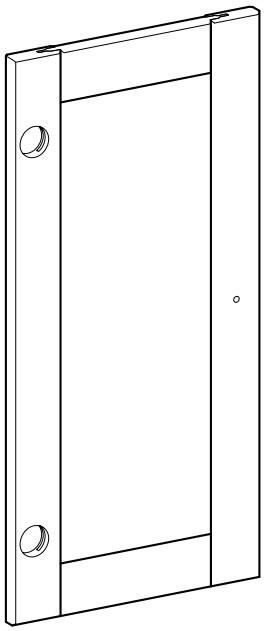


7 Door (47.5 x 22.5cm)

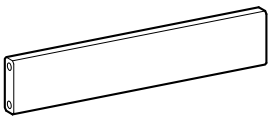

4 Plinth x 2
(23 x 4.5cm)

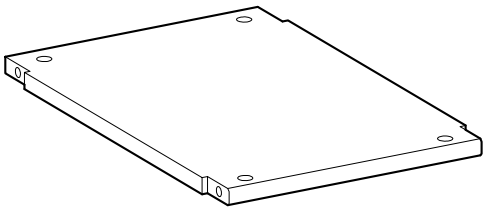

5 Bottom (24 x 35.3cm)

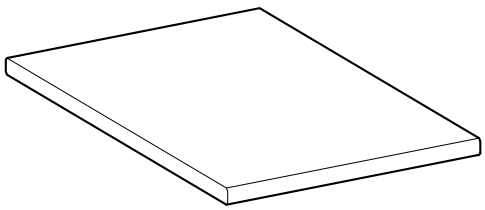


8 Shelf (23 x 35cm)

Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A

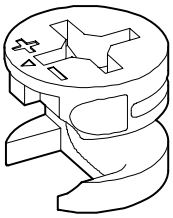

Cam x 8

B




Locking pin x 8

C




30mm Dowel x 8

D



14mm Screw x 4

E




25mm Screw x 4

F




35mm Screw x 1

G




16mm Nail x 20

H

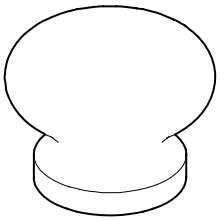


Knob x 1

I

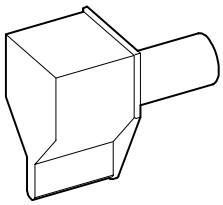


Shelf support x 4

J

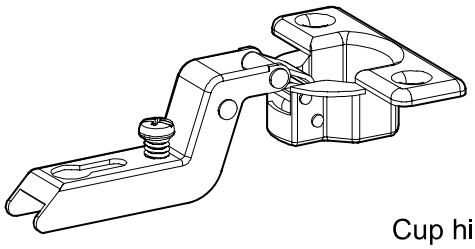


Cup hinge x 2

K

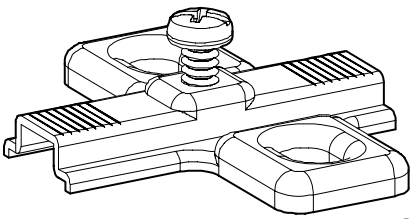


Cross plate x 2

Tools required




Philips screwdriver
(medium & large)




Flatblade screwdriver
(medium)


Suitable drill bit
(for use with wall plug)

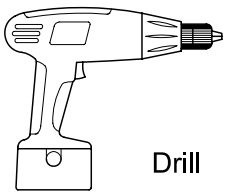


Drill



Small
hammer




Ruler/tape
measure




Eye protection
(when using a
hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Components - Key Diagram

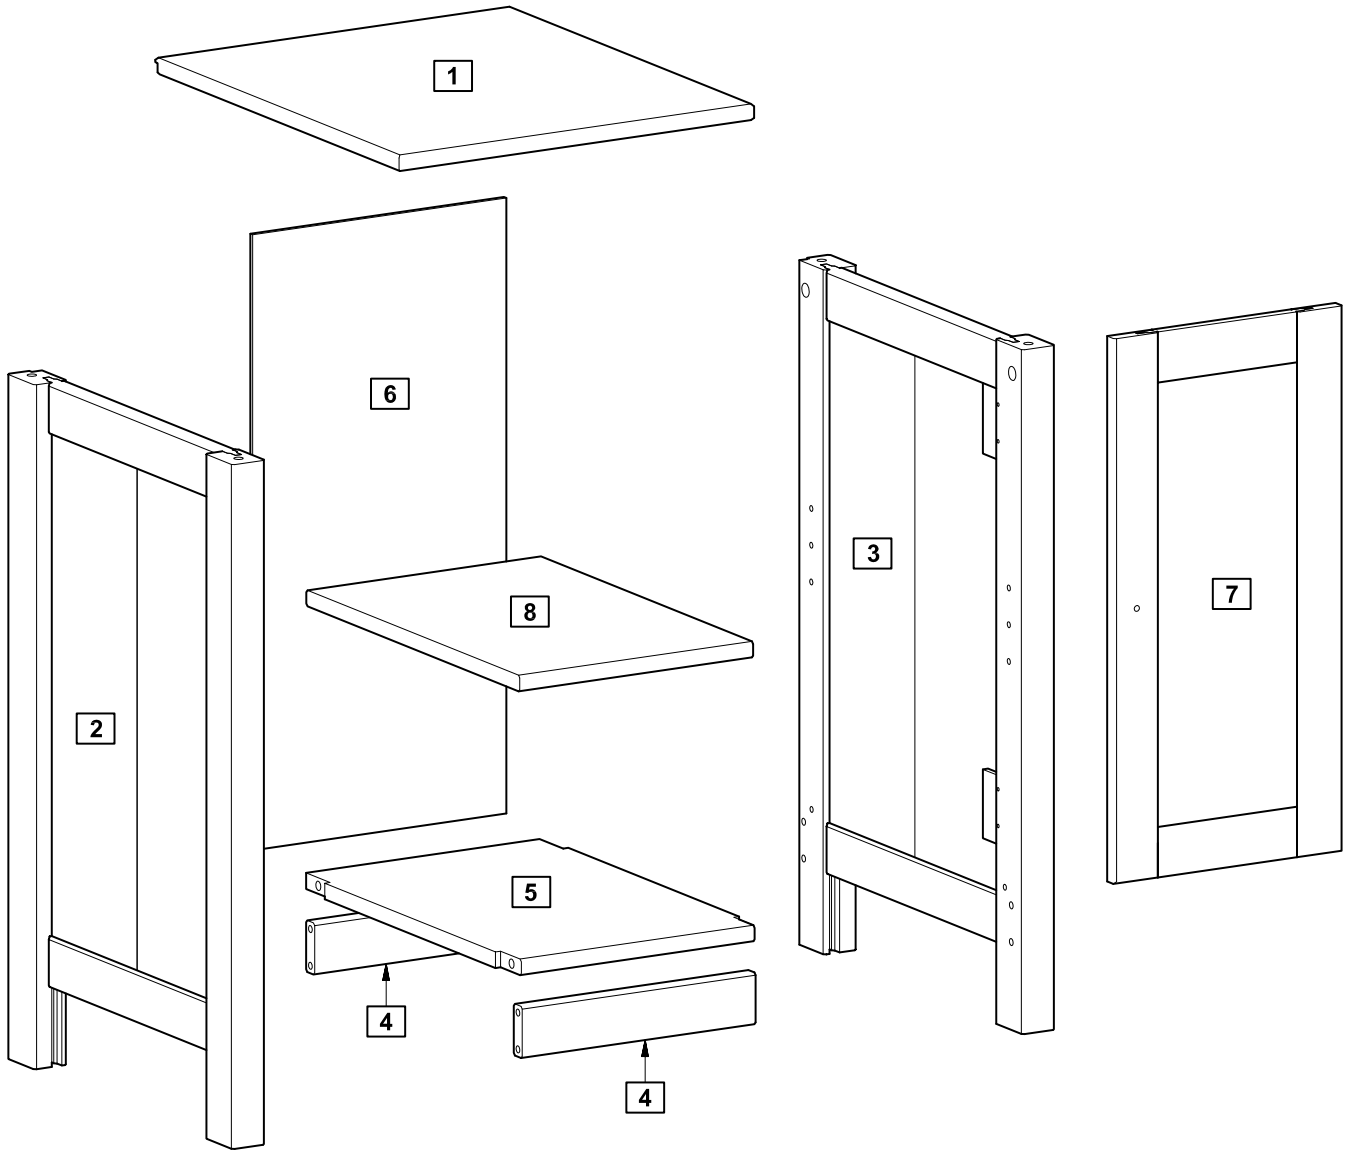


Function of Cam and Locking Pin

Step 1:
Fix the locking pin to the wooden panel.

Step 2:
Push the wooden panel with the attached locking pin onto the other wooden panel.

Step 3:
Place the cam into the hole, arrow pointing towards the locking pin.

Step 4:
Tighten: Turn the cam to the right.

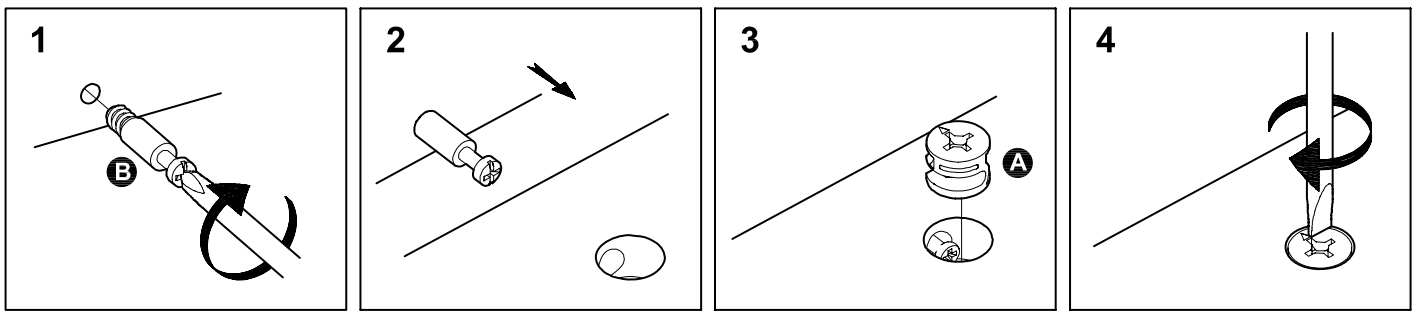


Assembly Instructions

Step 1

Inserting the dowels to the plinths.

Insert the dowels C into the holes indicated on the plinths 4.

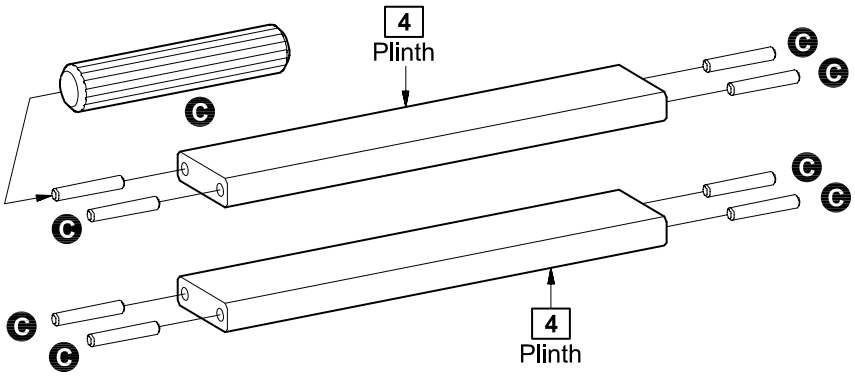


Step 2

Mounting the locking pins to the sides.

Screw the locking pins B into the holes indicated on the sides 2 and 3.

Note: Insert locking pins B as far as shown. **Do not over tighten.**

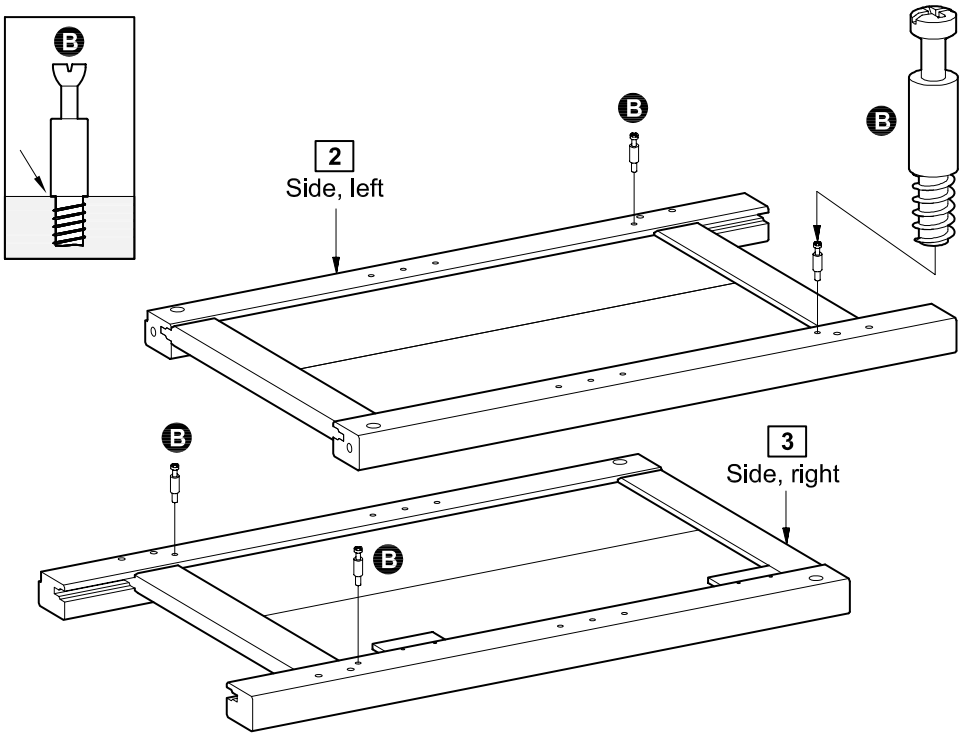


Step 3

Mounting the cross plates to the right side.

Fix the cross plates K to the right side 3 using the screws E into the holes indicated.

It is important that the cross plates are placed exactly as shown.

The short end of the cross plates must point towards the front edge of the sides.

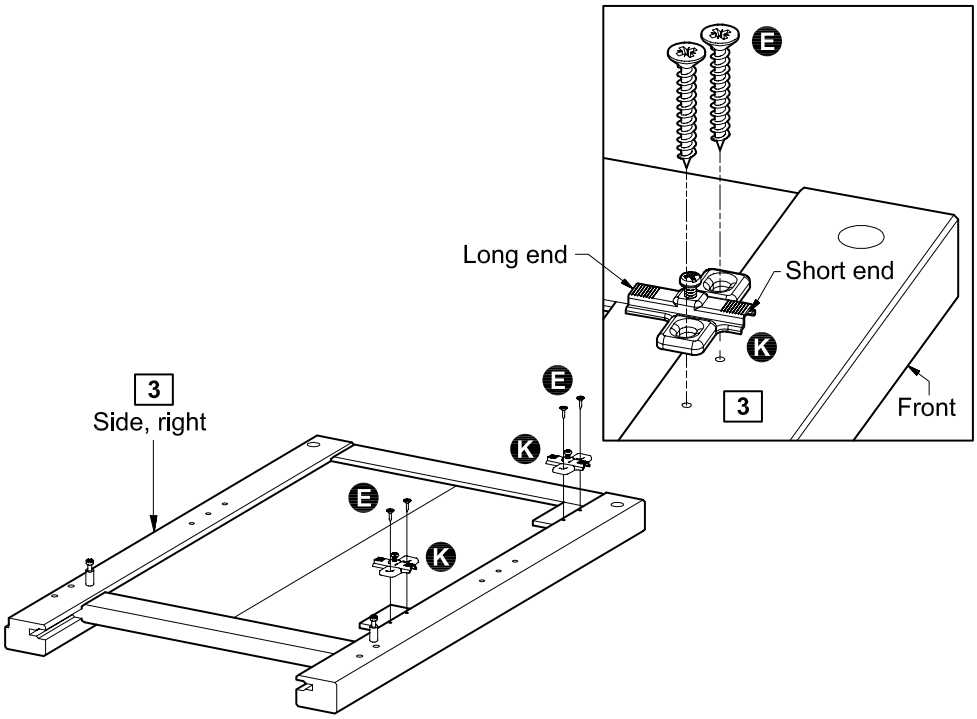

Step 4


Adding the plinths and the bottom to the right hand side.

Fit the plinths [4] and the bottom [5] onto the side [3].

See page 4 "Function of cam and locking pin".

Place the cams Ⓐ into the holes indicated, arrows pointing towards the side / locking pins.

To tighten cams: Turn to the right using a screwdriver.

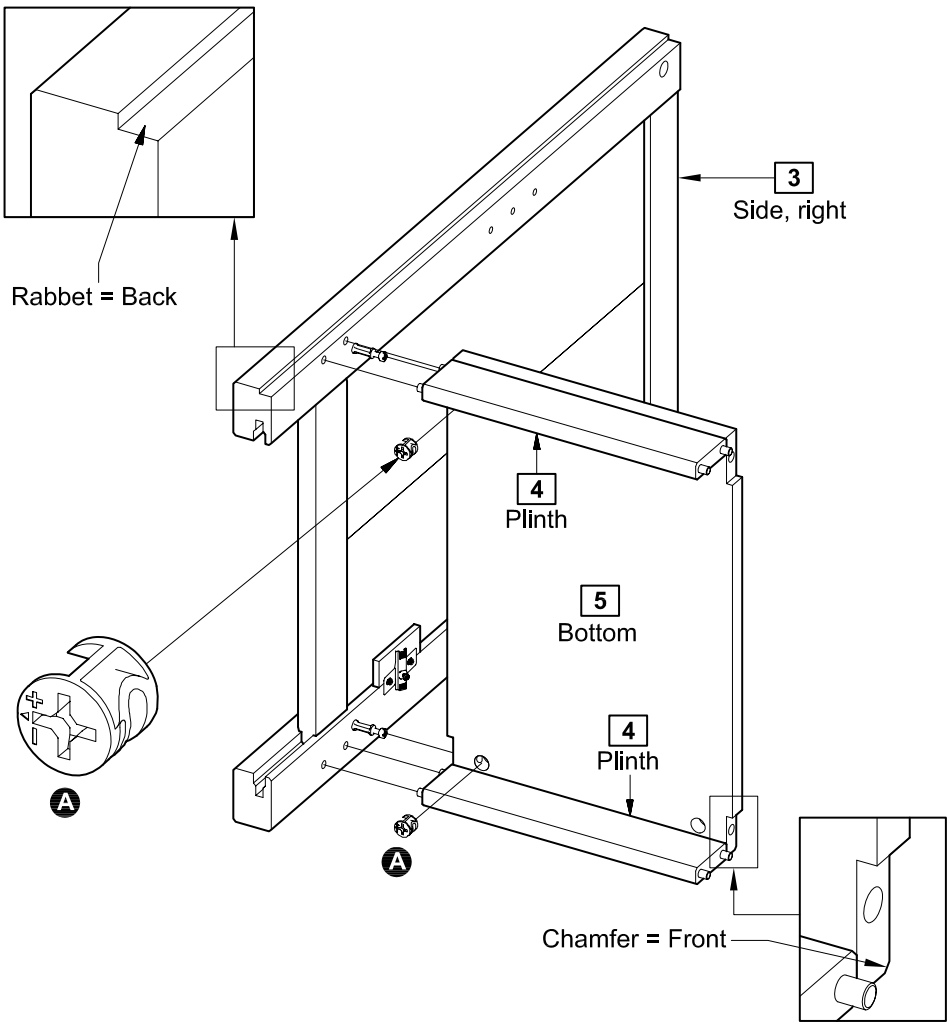

Step 5


Assembling the left hand side to the plinths and the bottom.

Fit the side [2] onto the plinths [4] and the bottom [5].

See page 4 "Function of cam and locking pin".

Place the cams Ⓐ into the holes indicated, arrows pointing towards the side / locking pins.

To tighten cams: Turn to the right using a screwdriver.

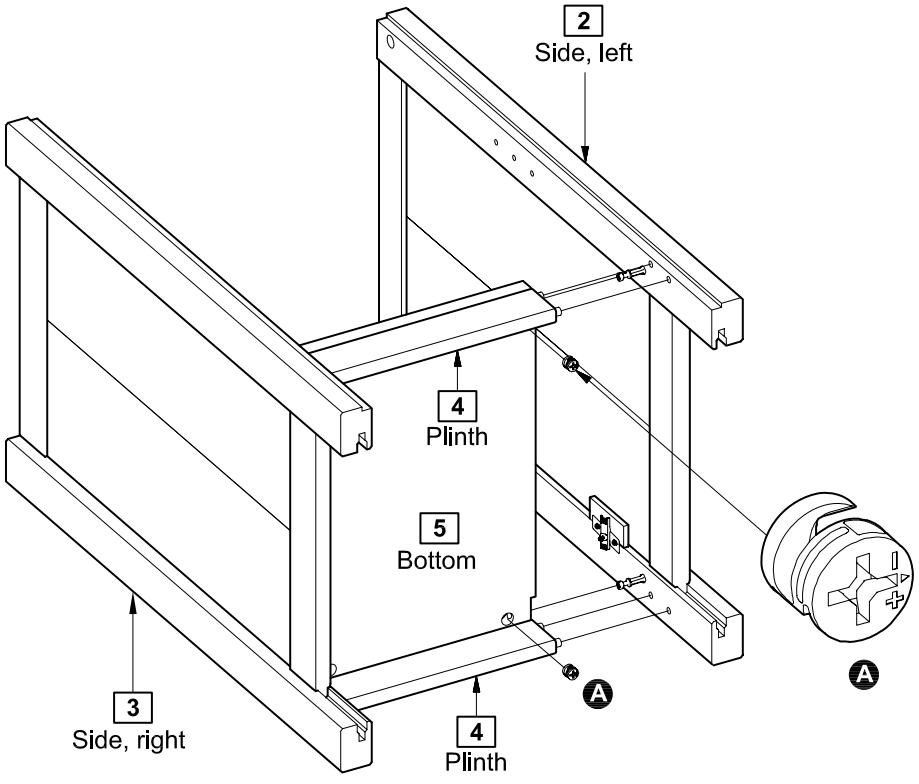


Step 6

Mounting the locking pins to the top.

Screw the locking pins Ⓑ into the holes indicated on the top 1.

Note: Insert locking pins Ⓑ as far as shown. **Do not over tighten.**

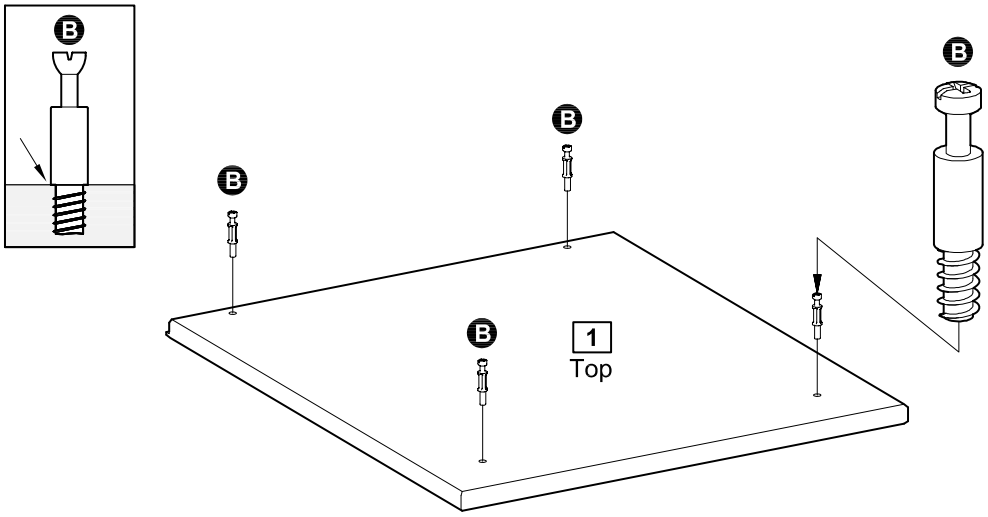

Step 7


Assembling the top to the sides.

Lower the top 1 onto the sides 2 and 3.

See page 4 "Function of cam and locking pin".

Place the cams Ⓐ into the holes indicated, arrows pointing towards the top / locking pins.

To tighten cams: Turn to the right using a screwdriver.

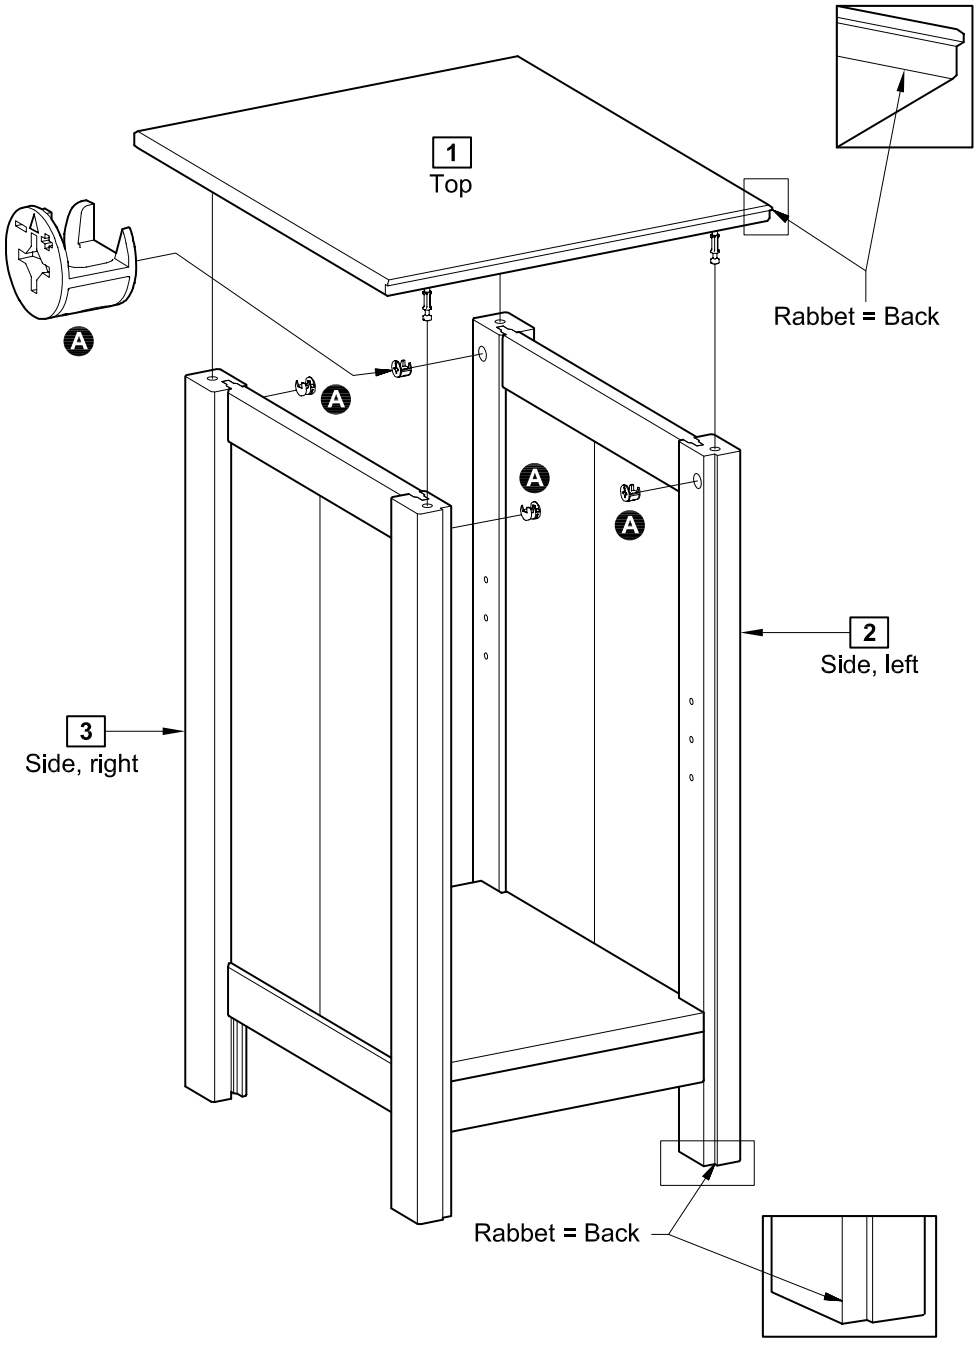

Step 8

Nailing the back to the top, the sides and the plinth.

Place the back [6] into the rabbet of the top [1] and the side [3].


Ensure that there is no gap between the right hand side [3] and the back [6], nor between the top and the back.

Fasten the back with nails G along the top.

The angle between the top and the side must be 90 degrees.

To accomplish this, ensure that there is no gap between the right hand side [3] and the back [6].

Fasten the back with nails G along the sides and the plinth [4].

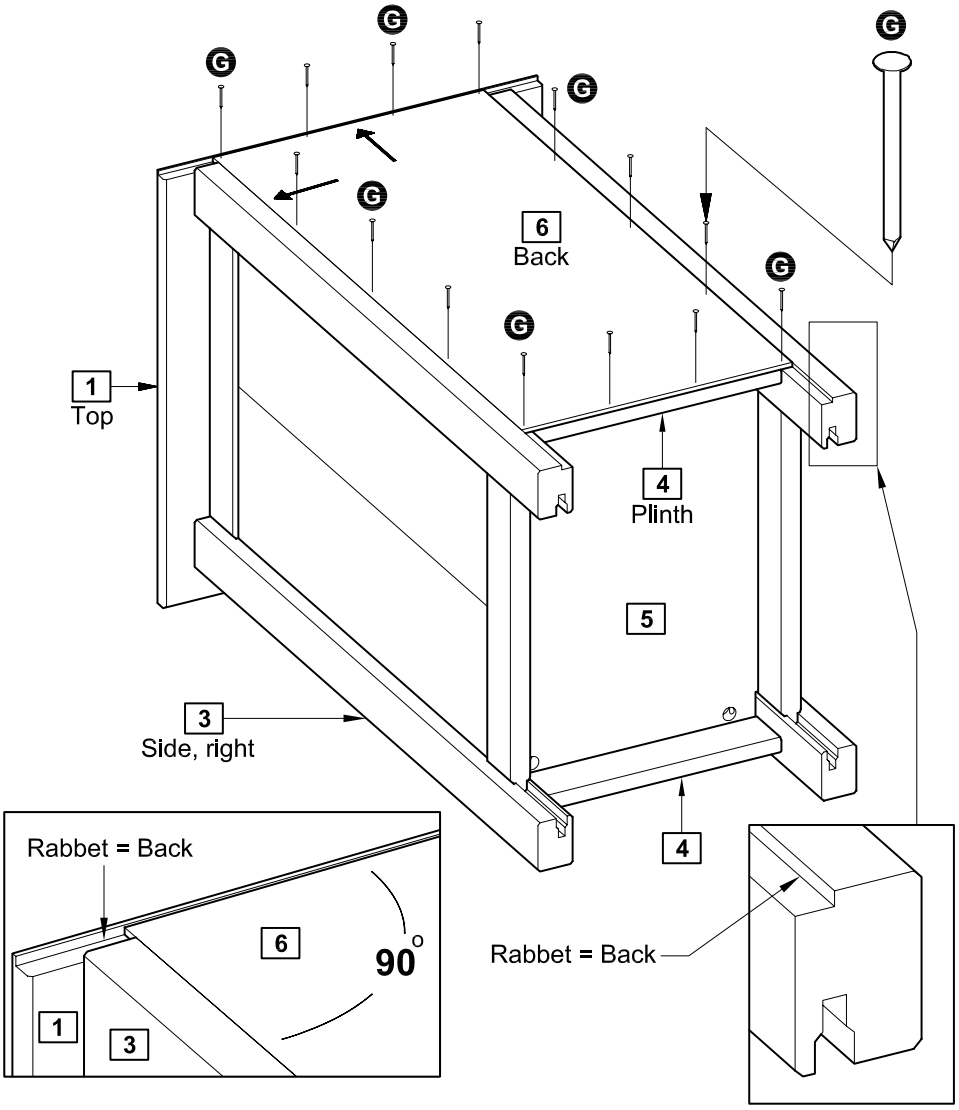


Step 9

Adding the shelf to the carcass.

Press the shelf supports I into the holes indicated on the sides [2] and [3].

Lower the shelf [8] onto the shelf supports I.

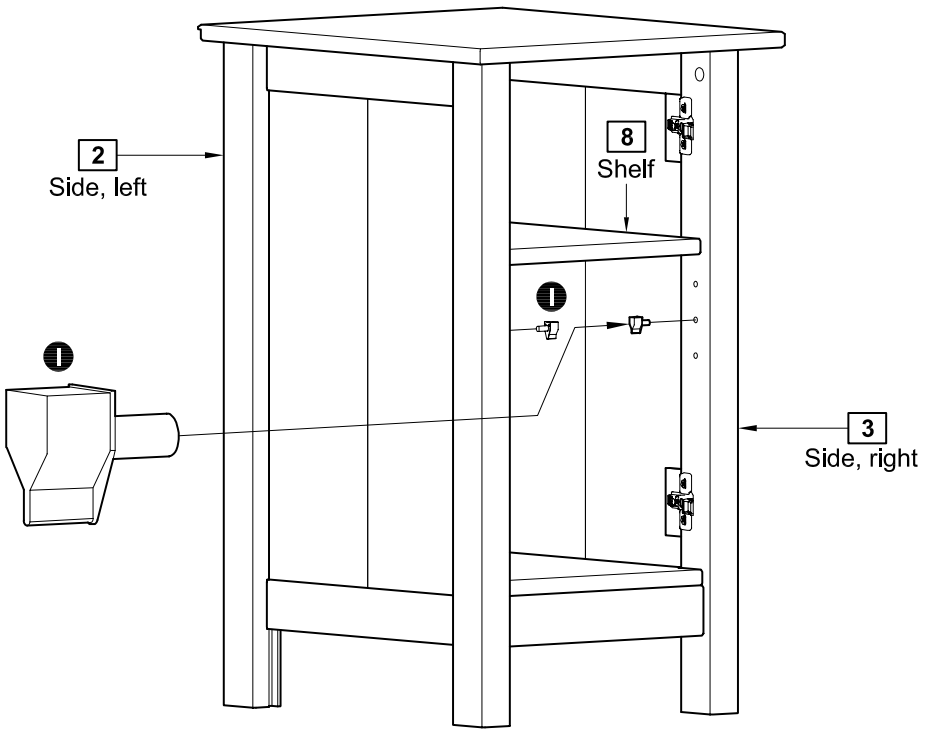


Step 10

Mounting the cup hinges to the door.

Fix the cup hinges (J) into the holes indicated on the door [7] .


Attach the hinges using screws (D).

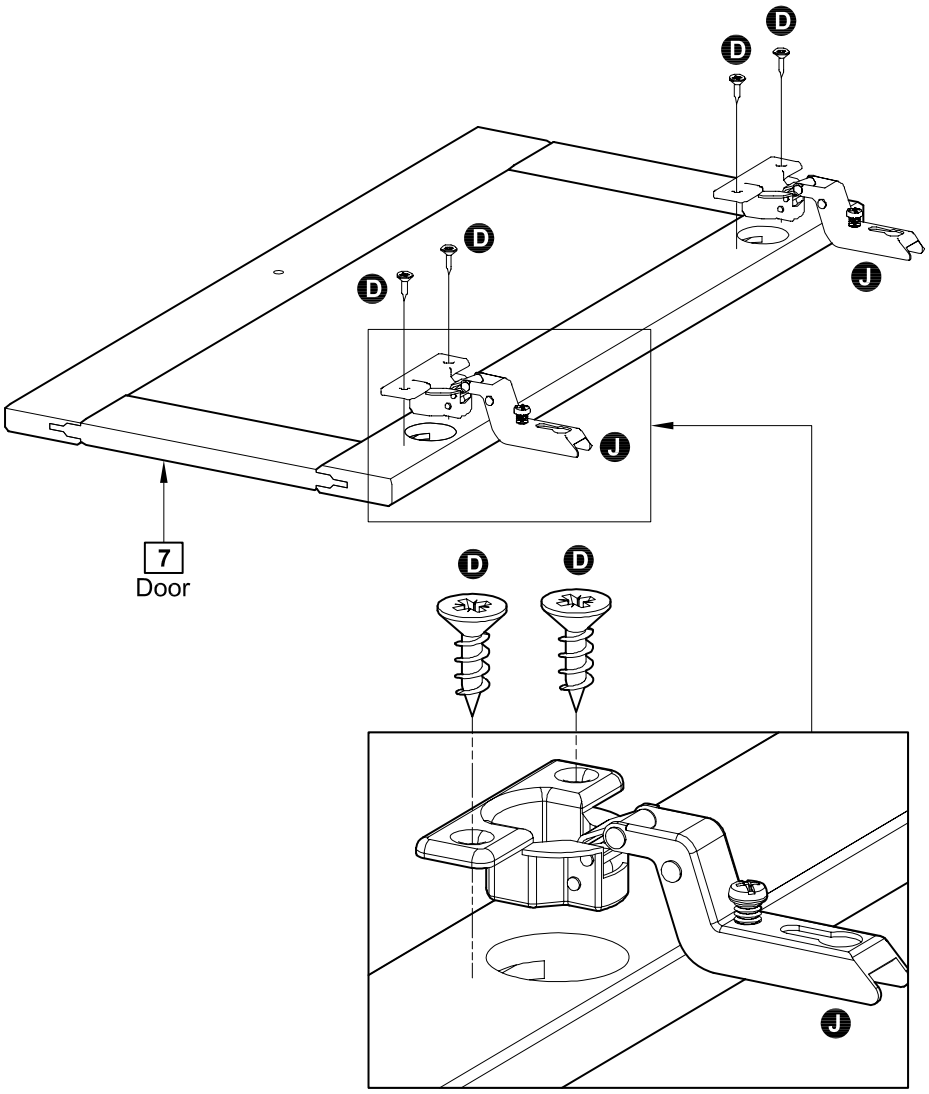

Step 11

Mounting the knob to the door.

Fasten the knob (H) to the door [7], using screw (F).

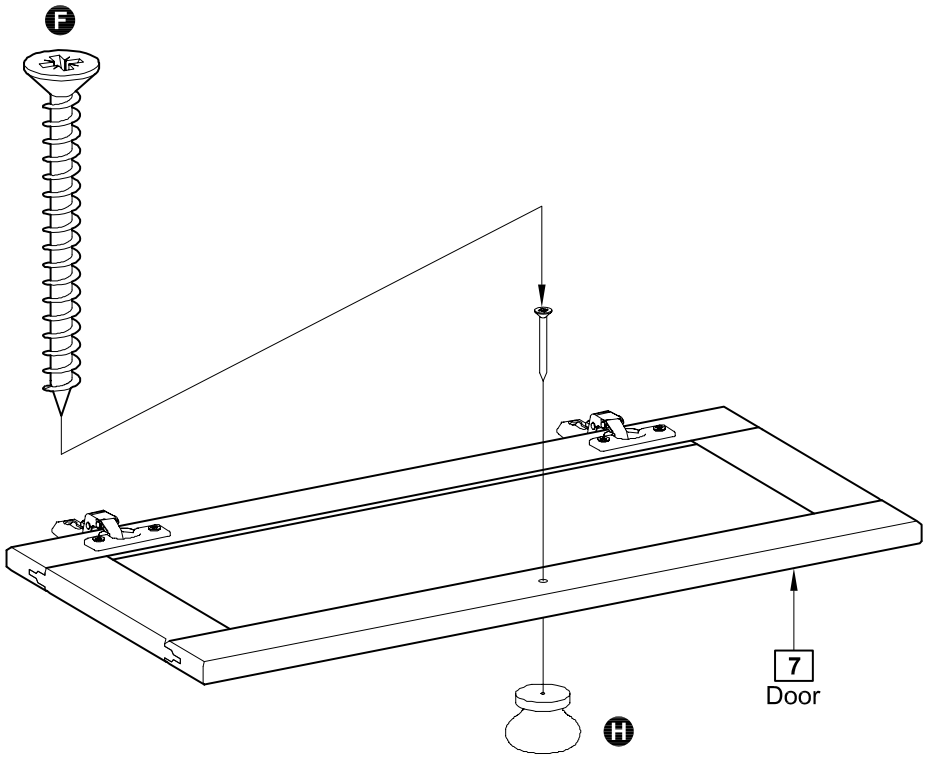

Step 12

Mounting the doors to the carcass.


When placing the doors, the magnetic catch plates must be at the top of the doors.


a: Place the adjustment hole of the cup hinge at the level of the fixing screw. Push the cup hinge towards the cross place - placing the fixing screw in the wider part of the adjustment hole.


Important: Ensure you catch all three of the fixing screws.


b: Push the door / cup hinge inwards - placing the fixing screw in the narrow end of the adjustment hole.

c: Tighten the fixing screws of all three of the cross plates.

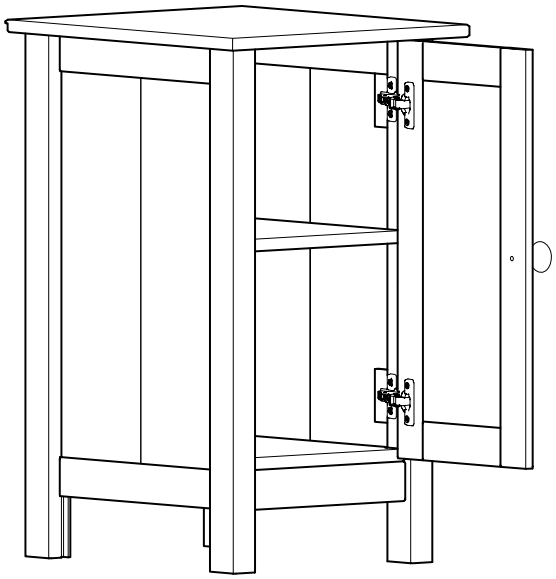

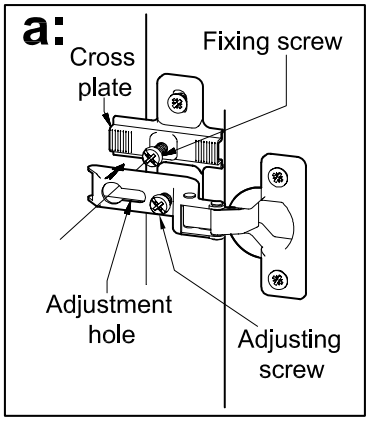

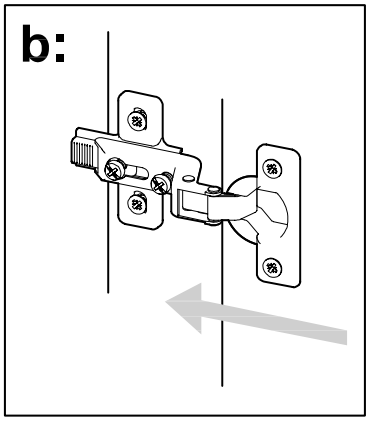

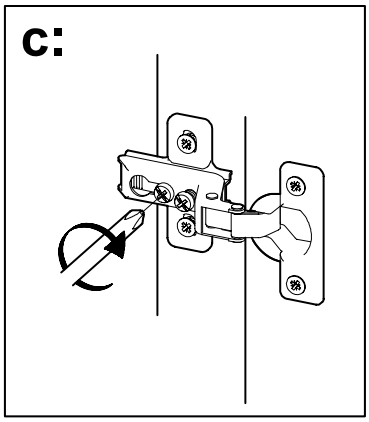


Step 13

Adjusting the doors.


Make sure the wardrobe is placed on a level surface before you begin to adjust the hinges.

Assembly is complete.

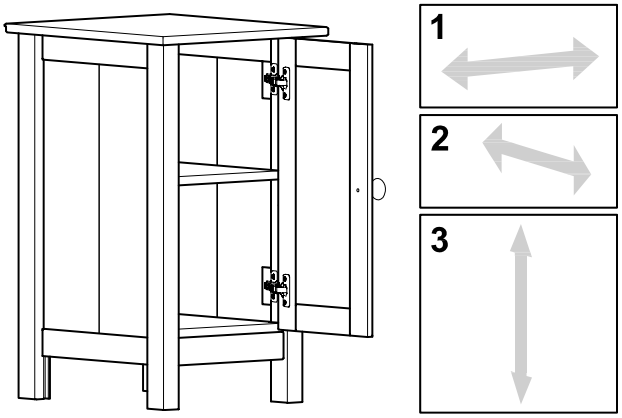


Right or left:


Loosen the fixing screw.

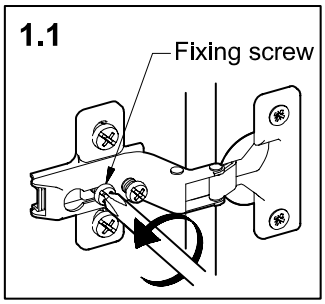


To adjust the door towards the lefthand side - turn the adjusting screw to the right.

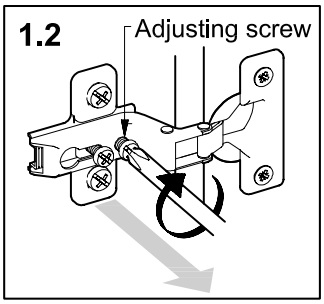

To adjust the door towards the right hand side - turn the adjusting screw to the left.

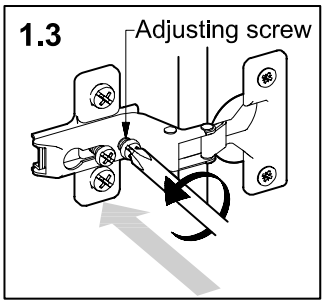


Continue adjustment - see 2 - or tighten the fixing screw of the cross plates

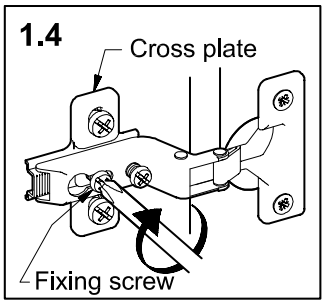


Forwards or backwards:


Loosen the fixing screw.

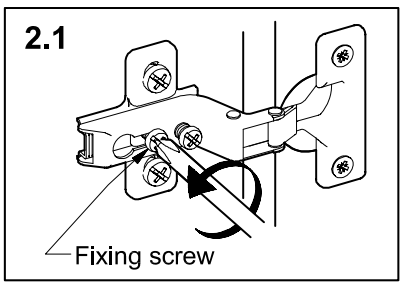

Push the cup hinges / the door back or forth to adjust. The door should level with the front edge of the sides.

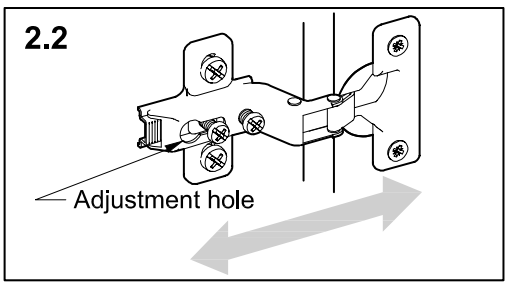


Tighten the fixing screws of all the cross plates.

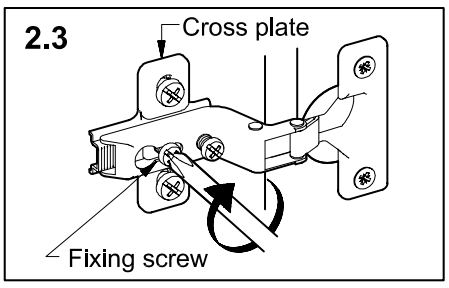


Up or down:


Loosen the two screws Ⓔ of each cross plate, but only as much as it will allow the cross plate to move up and down.

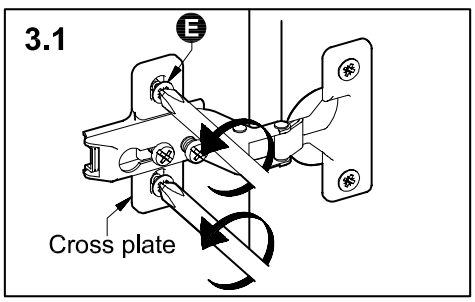

Adjust the cross plate / door.

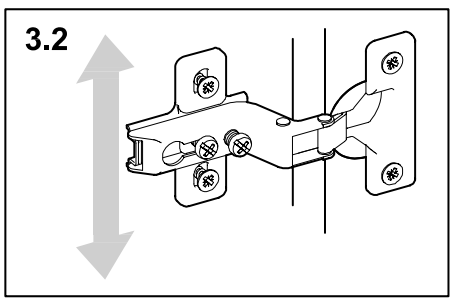

Tighten the screws Ⓔ of all the cross plates.

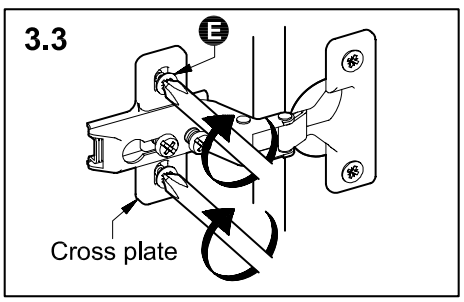

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Dear Customer

Please note that the product you have purchased is a natural living timber.

Just like nature itself, wood varies in shape and colour. Knots, vein patterns, resin pockets and colour differences contribute to giving the piece of furniture its beauty and form - a natural part of solid wood.

Although the tree has been cut down and dried, it is still alive and therefore will react to high and low temperatures, light, humidity, drought and time.

In cold and dry periods, the wood contracts which may lead to small cracks in the piece of furniture. The reverse happens in warm and humid periods where the wood expands and this may result in slight unevenness.

The colour of the wood also changes with time, particularly if the furniture is placed in a light place. This is a natural process and part of owning a piece of furniture made of solid wood.

Any flexing that has occurred during transport will re-correct itself once this product is correctly assembled.

Tighten all joints of the furniture after six months.

Please keep these instructions in a safe place for future use.