
AVR Desk & Chair Set

Assembly Instructions - Please keep for future reference | 617/1043

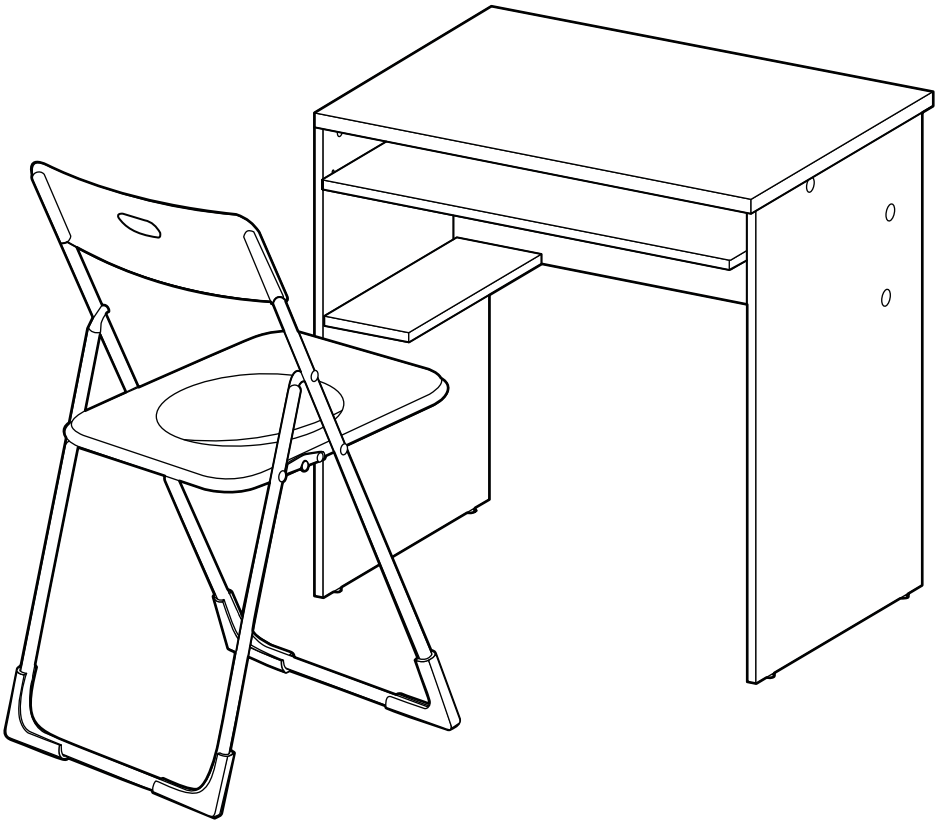

Desk Dimensions
Width - 74cm
Depth - 52.5cm
Height - 74.5cm

Chair Dimensions
Width - 47.5cm
Depth - 46cm
Height - 80cm

Important - Please read these instruction fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 12/01/09

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Warning

• For chair: The maximum safe weight of user: 100kgs.


Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

Please check you have all the panels listed below

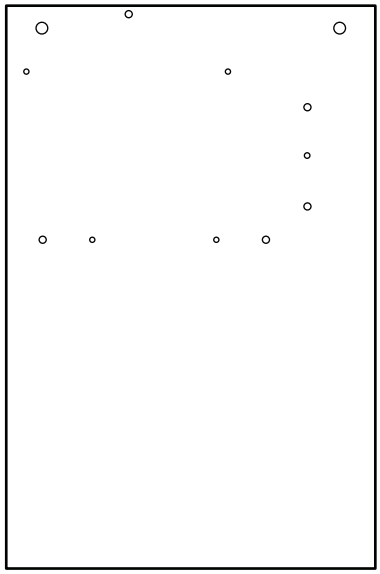


1 Left side (47.6 x 72.6cm)

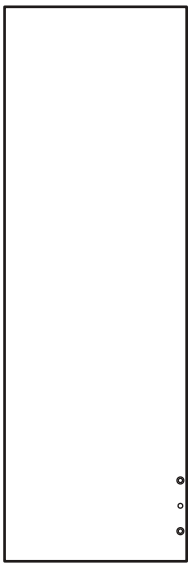


2 back panel (23 x 70cm)




3 CD supporting panel
(14 x 38cm)

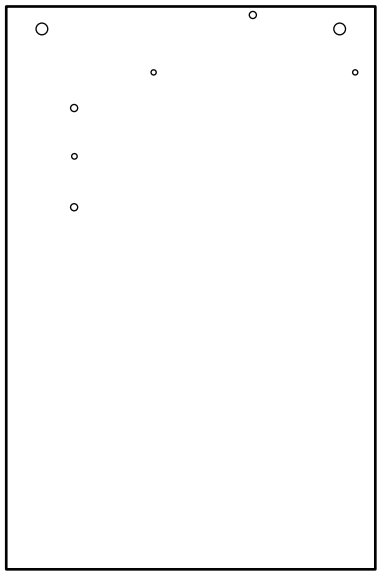

4 Right side (47.6 x 72.6cm)



5 Top supporting bar (2 x 70cm)

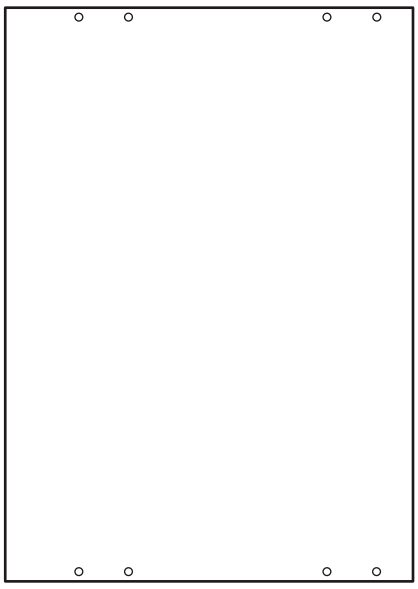

6 Top panel (74 x 52.6cm)








7 Keyboard shelf (67.6 x 29.6cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  300mm Left Hand Side Runner x 1	**B**  300mm Right Hand Side Runner x 1	**C**  12mm Self-Tapping Screw x 8
D  Cam x 4	**E**  30mm wooden dowel x 9	**F**  38mm Self-Tapping Screw x 8
G  17mm Sticker Cover x 14	**H**  300mm Right Hand Side Runner x 1	**I**  300mm Left Hand Side Runner x 1
J  38mm Allen Screw x 2	**K**  37mm Cam Pillar x 4	

Tools required




Screwdriver
(Not included)



Allen Key
(included)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Attaching runners

Attach the left runner Ⓐ onto panel 1 by using 2pcs of screws Ⓒ with screwdriver.

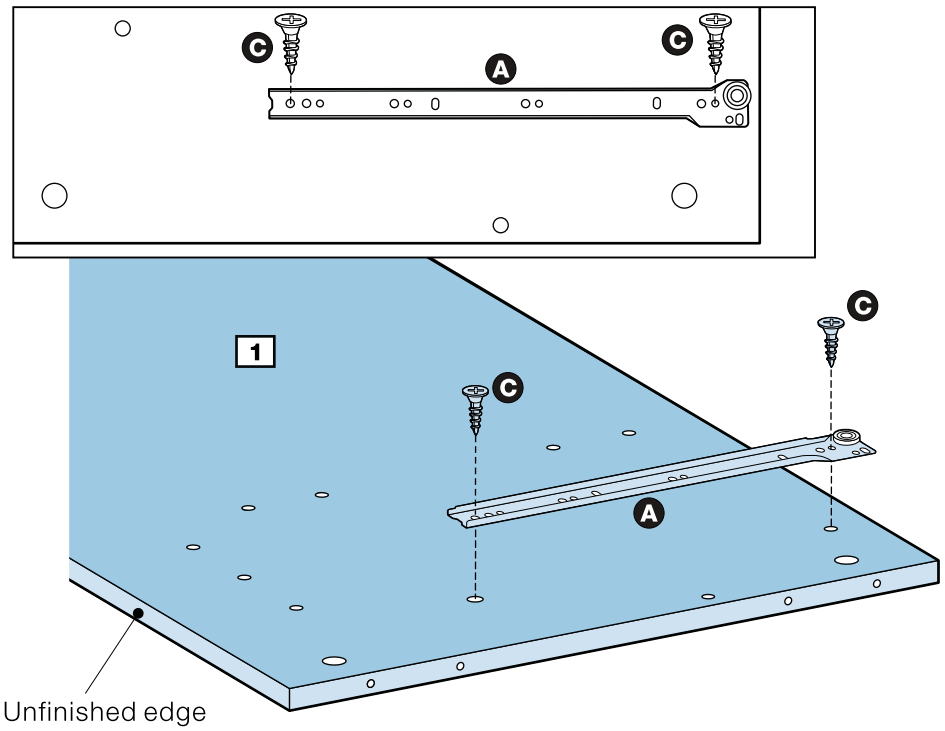


Step 2

Attaching cams

Insert 2 pcs of cams Ⓓ onto the left side panel 1 .


Please adjust the arrow ▲ on cam ⓓ to correct position as shown.

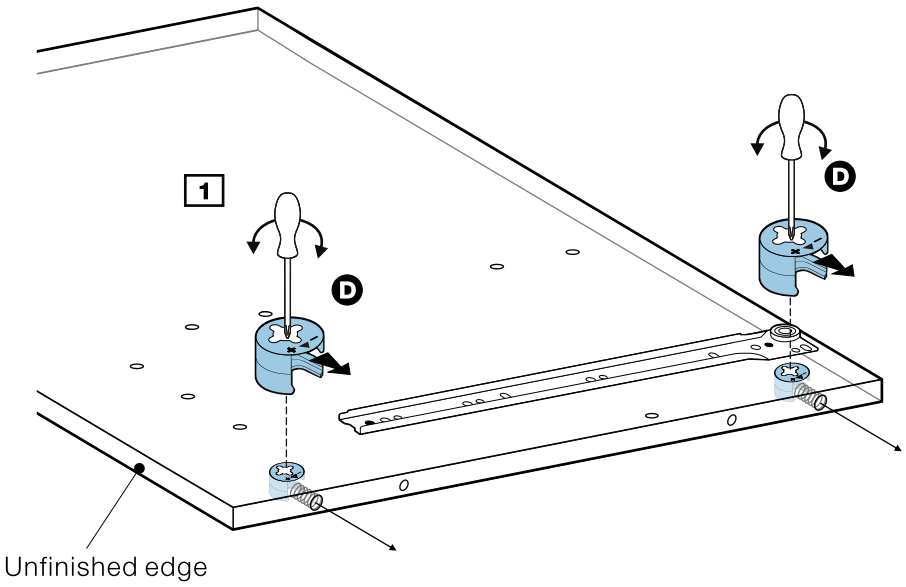

Step 3

Fitting dowels


Insert 3pcs of wooden dowels Ⓔ into panel 1.

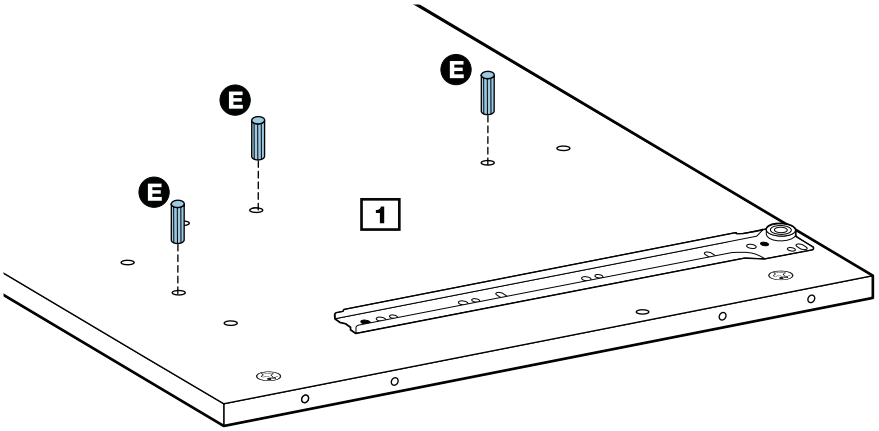

Step 4

Fitting dowel


Insert 1 pc of wooden dowel (E) onto back panel [2].

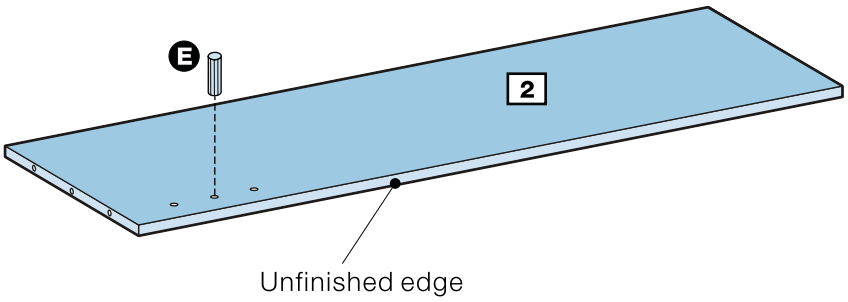

Step 5

Attaching panels

Attach CD supporting panel [3] onto back panel [2] by using 2 pcs of screws (F) with screwdriver.

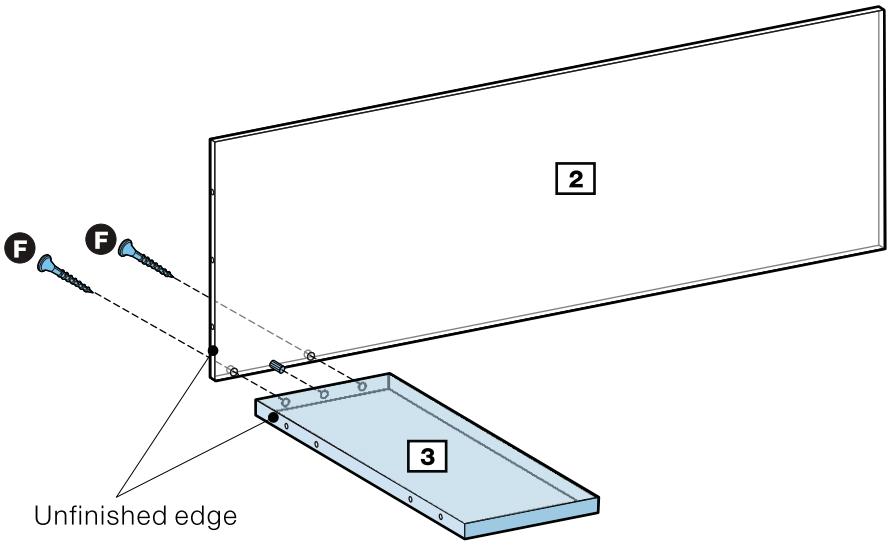


Assembly Instructions

Step 6

Attaching panels

Two people are required here.


Attach left side panel 1 onto the panels 2 & 3 by using 4 pcs of screw F with screwdriver.

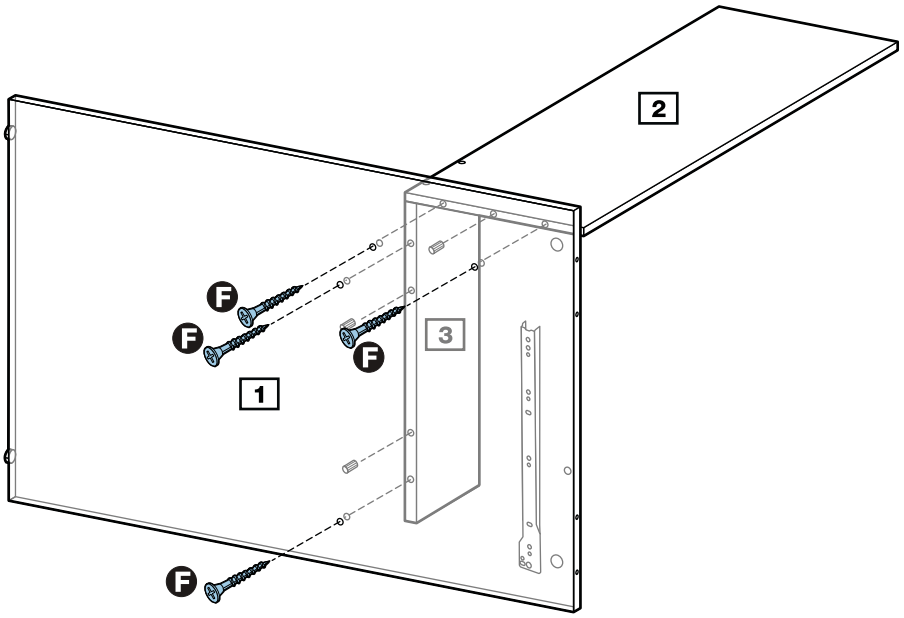


Step 7

Attaching runners

Attach the right runner B onto right side panel 4 by using 2pcs of screws C with screwdriver.

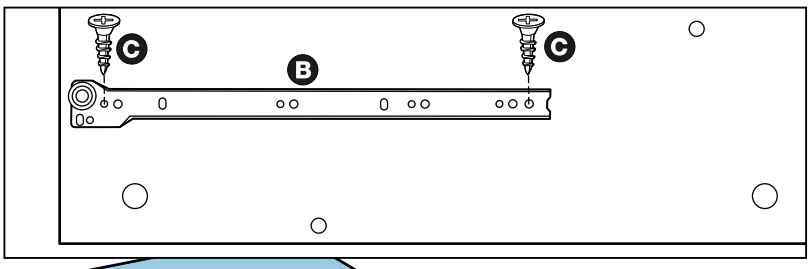

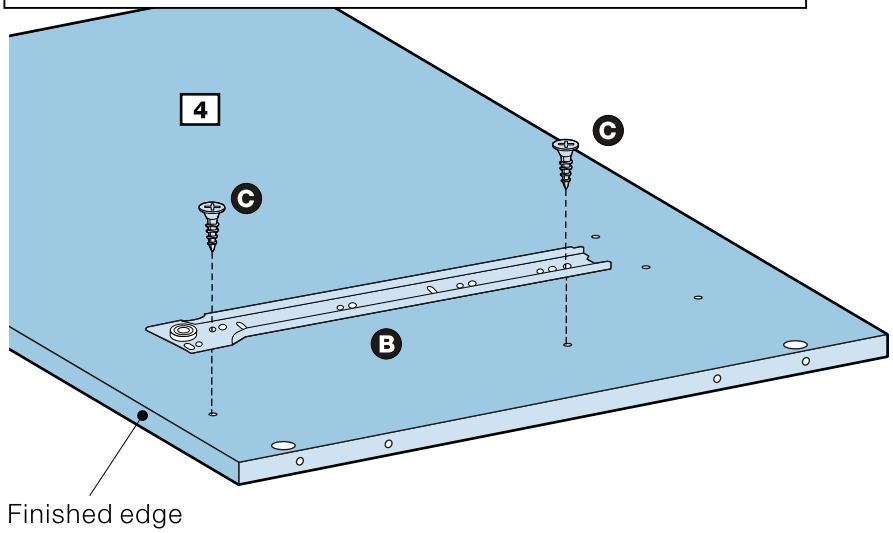


Step 8

Attaching cams

Insert 2 pcs of cams Ⓓ onto the right side panel [4].


Please adjust the arrow ▲ on cam ⊛ to correct position as shown.

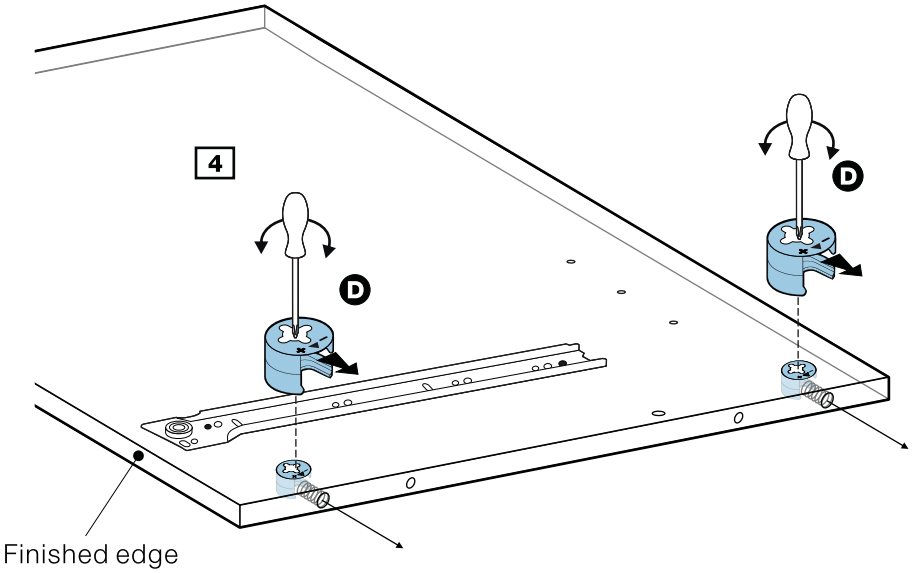

Step 9

Fitting dowel

Insert 1pc of wooden dowel Ⓔ into the right side panel [4].

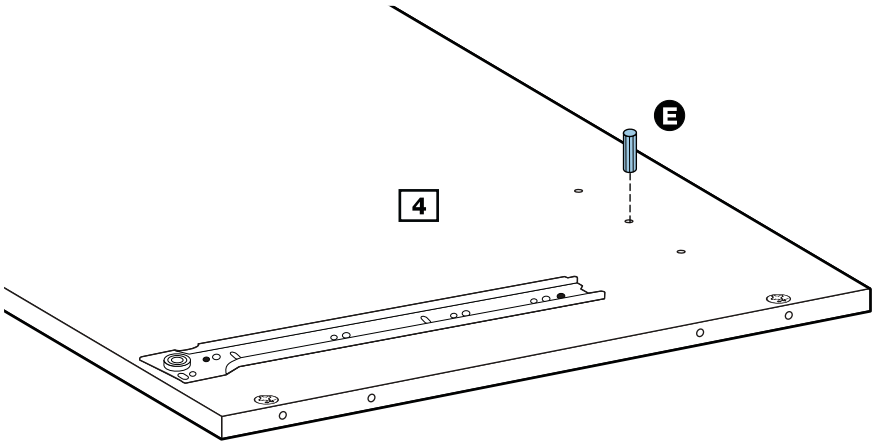


Step 10

Attaching panels

Two people are required here.

Assembled the right side panel [4] onto the panel [2] & [1] by using 2 pcs of screw Ⓕ with screwdriver.

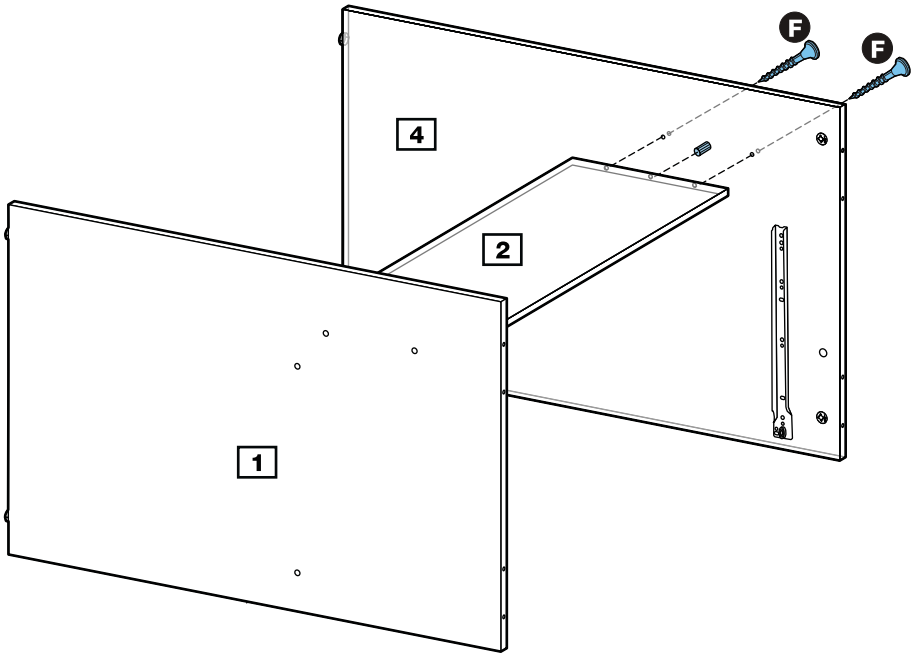


Step 11

Attaching Supporting bar

Two people are required here.

Attach the top supporting bar 5 between panel 1 and 4 by using 2 pcs of screw J with Allen key.

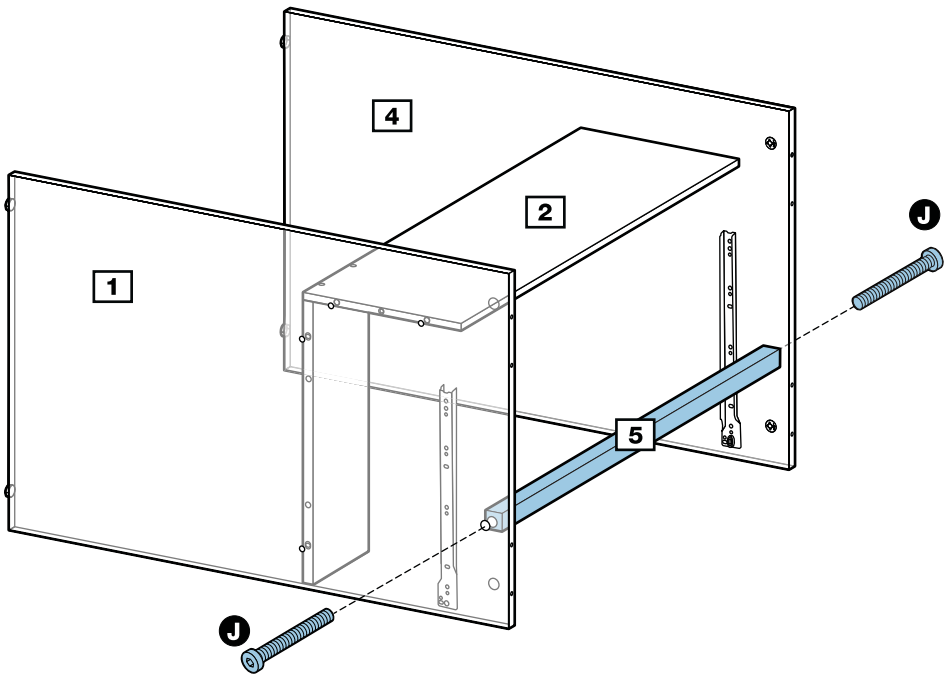


Step 12

Attaching dowels & cam pillars

Insert 4 pcs of wooden dowels E into top panel 6.

Fix 4 pcs of cam pillars K into top panel 6 with screwdriver .

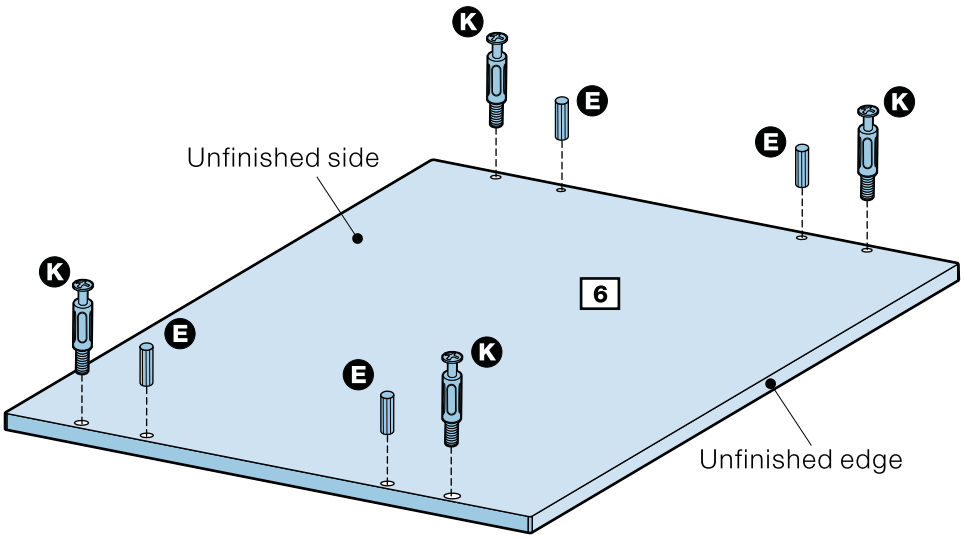


Step 13


Attaching panel


Two people are required here.

Joint the top panel 6 to the unit by locking the cams Ⓓ as shown.

Warning:
The unit is heavy.
Lift with care.

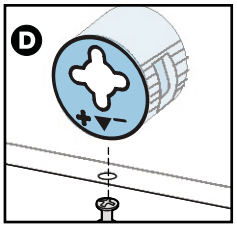

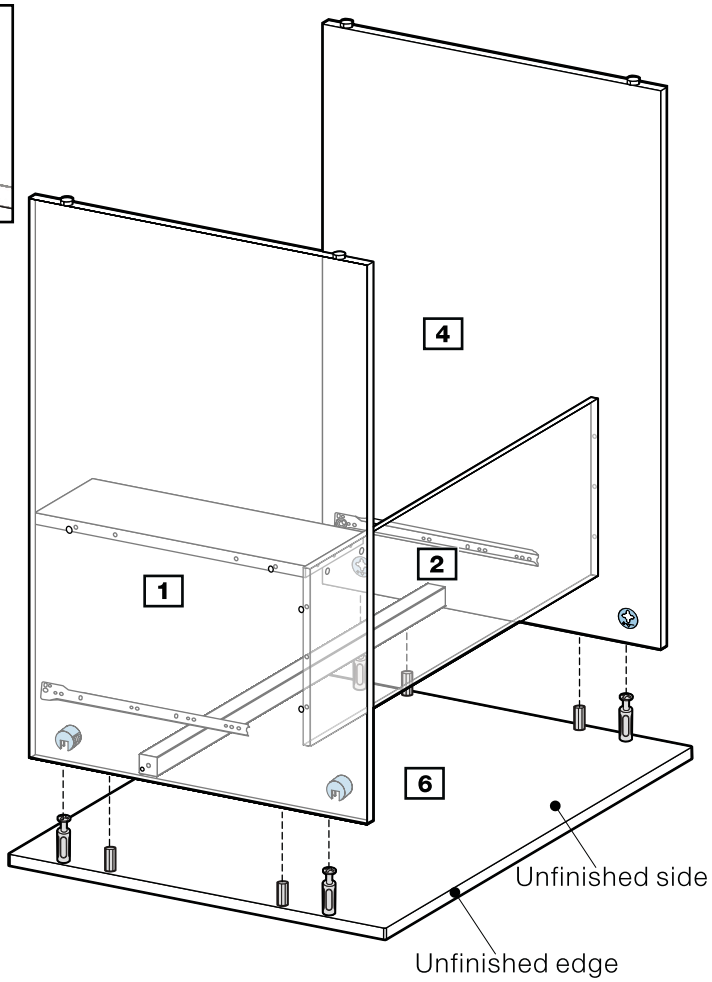


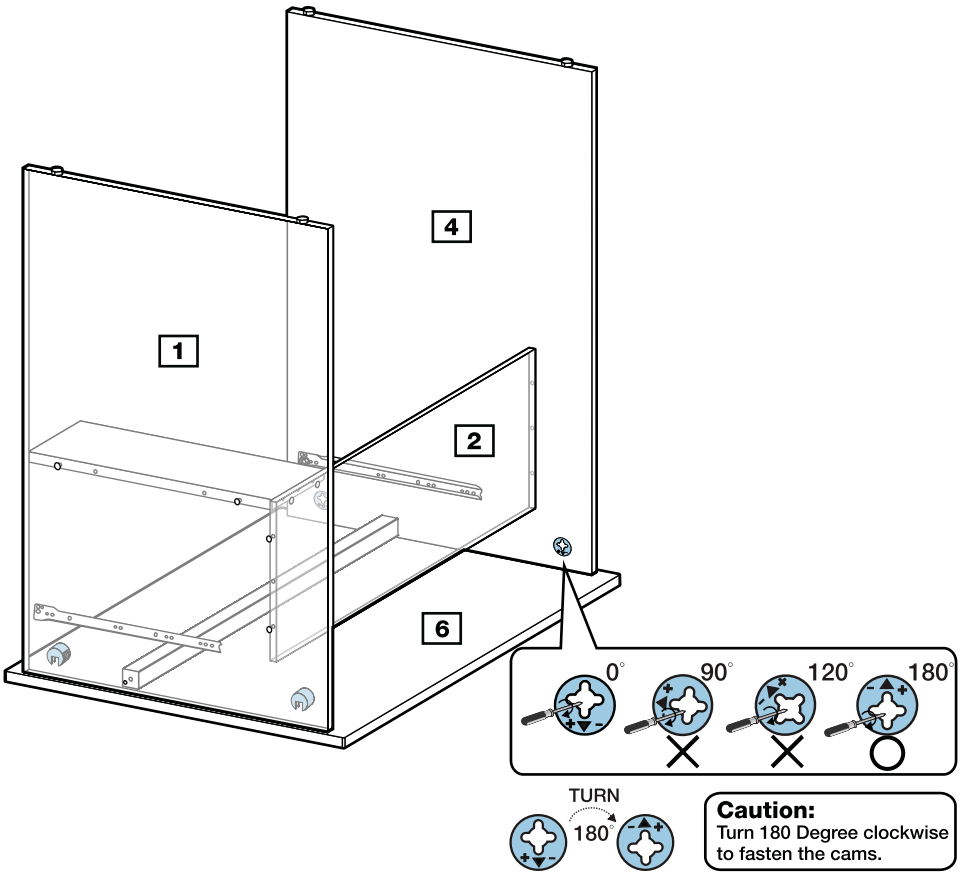

Step 14

Attaching sticker


Attach sticker covers Ⓖ onto the unit.

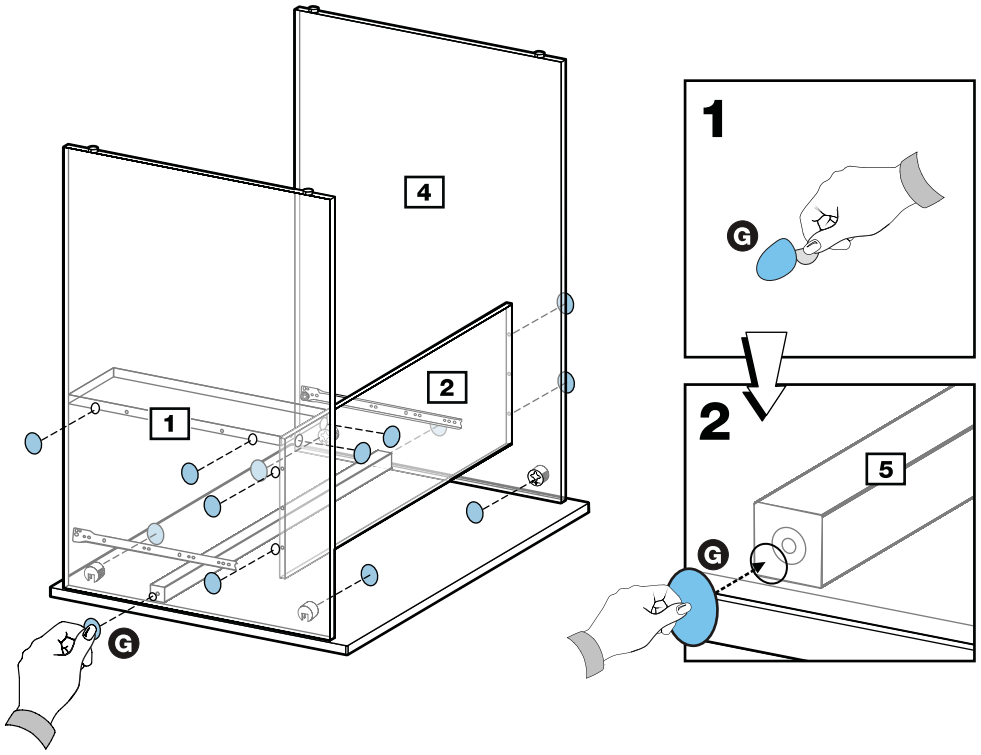

Step 15

Attaching keyboard

Attach 2 pcs of runner Ⓗ & Ⓘ onto panel 7 by using 4 pcs of screws Ⓒ with screwdriver.

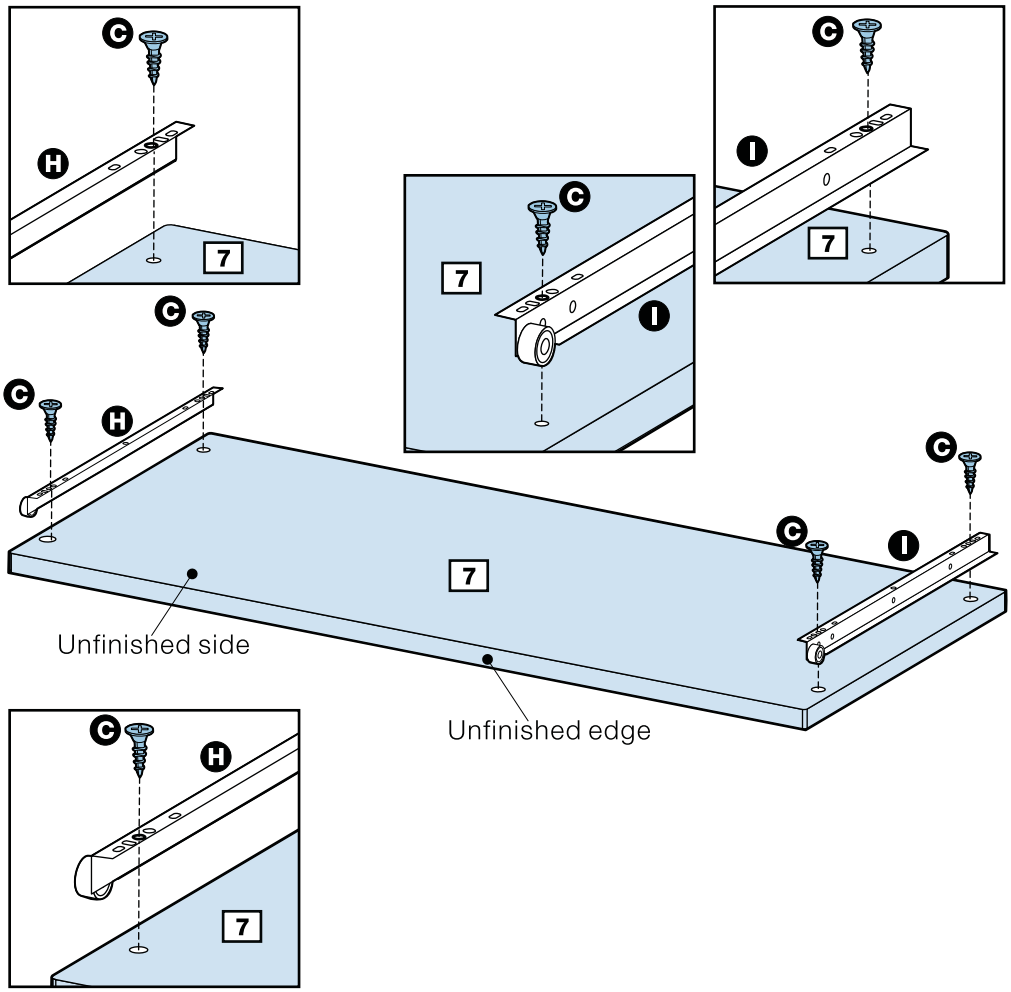


Assembly Instructions

Step 16


Attaching keyboard

Slot the keyboard shelf [7] into the unit.

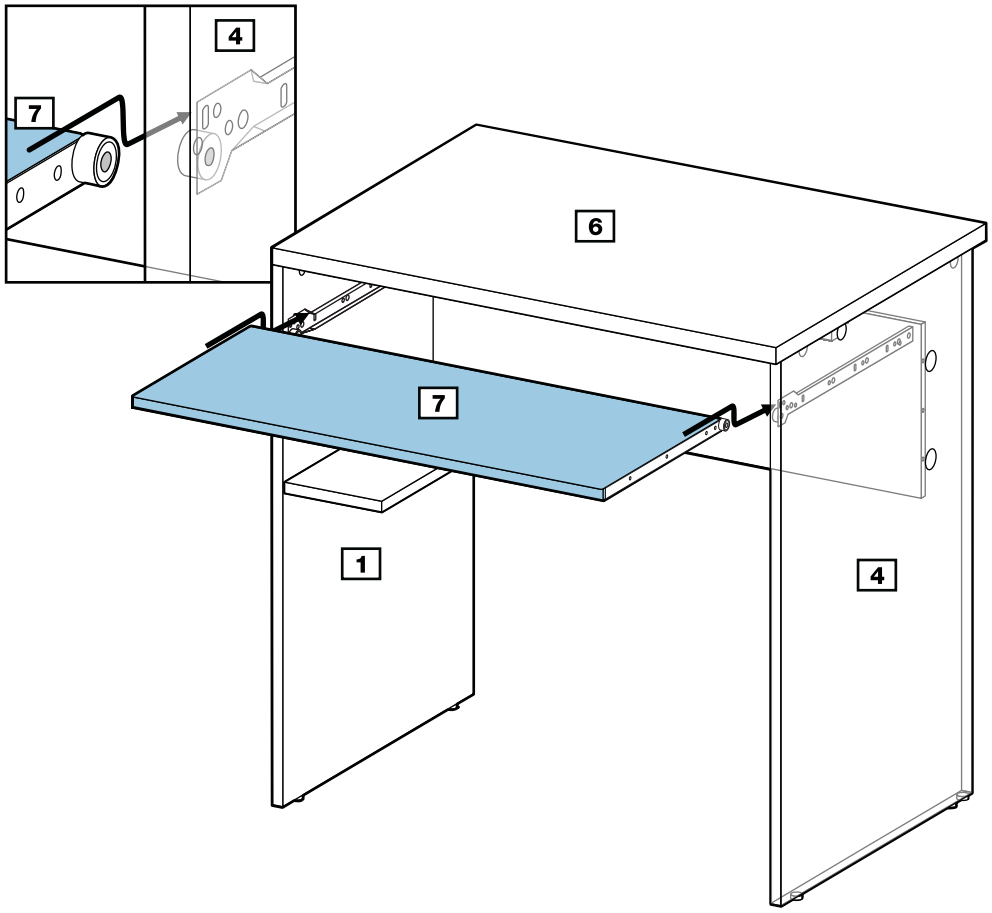

Step 17

Assembly is complete.

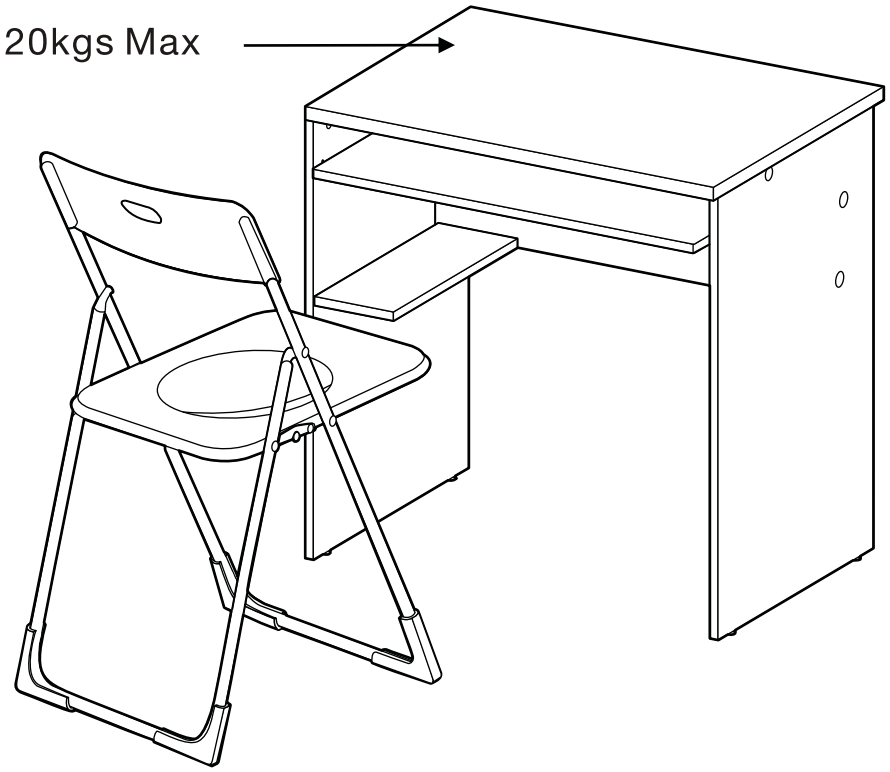

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**