
Scandinavia - 3 Door Robe w. 3 drws.

Assembly Instructions - Please keep for future reference

642/3784

643/8377

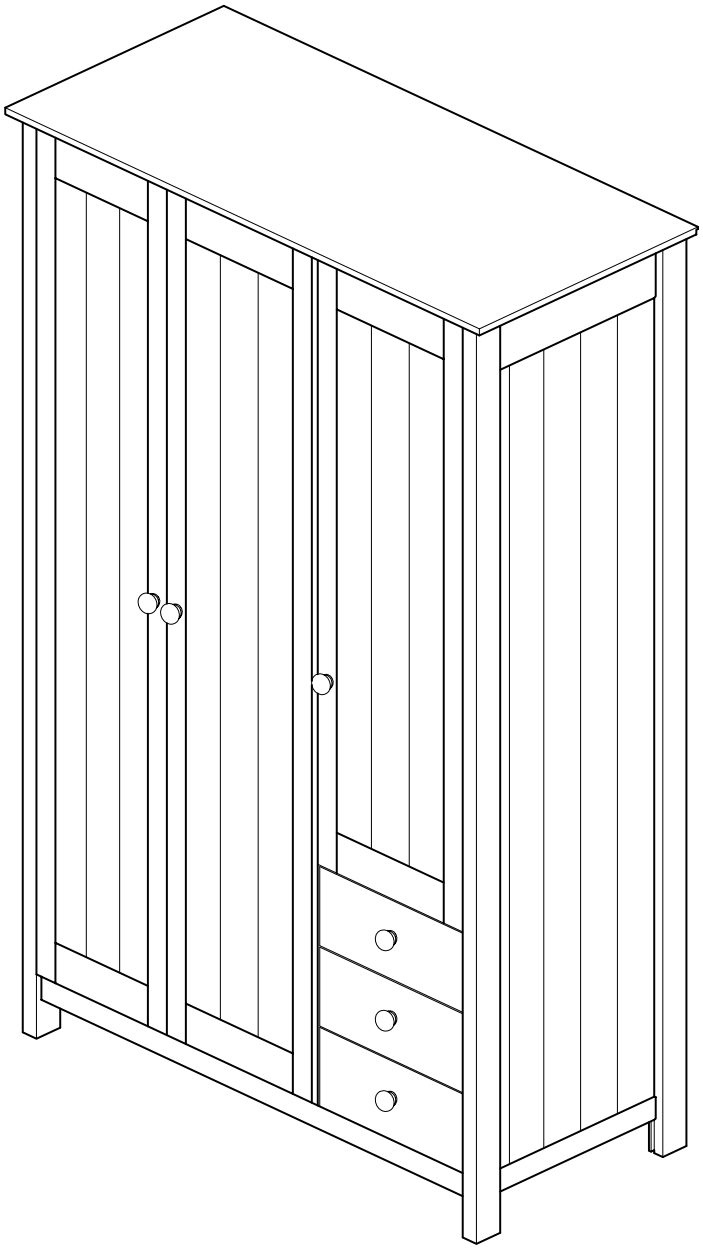

Dimensions

Width - 107cm
Depth - 53cm
Height - 179.9cm

Important - Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 2 - 01/04/12

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

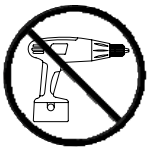

- We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance


- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the panels listed below

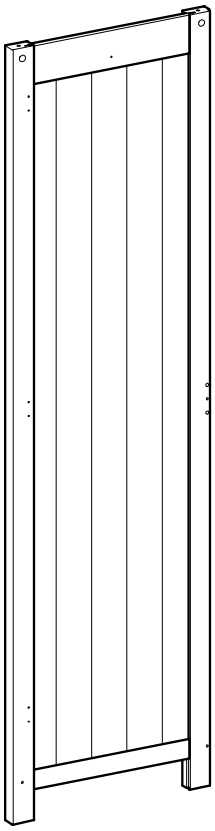


1 Left side
(178.5 x 49.8cm)

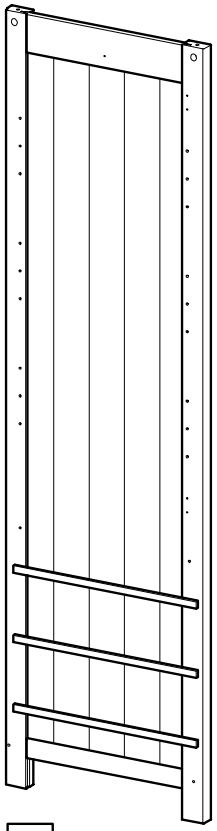


2 Right side
(178.5 x 49.8cm)

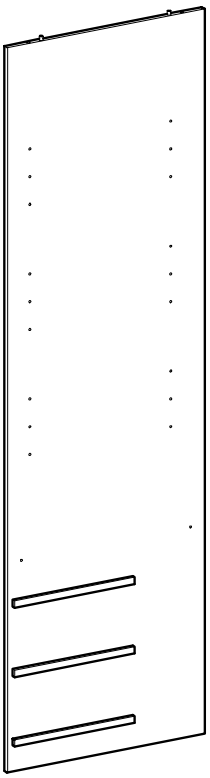


3 Divider
(167 x 49.4cm)

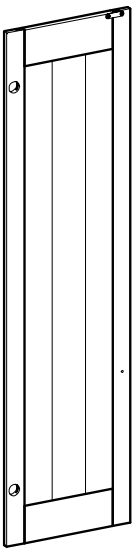


4 Small door
(118.4 x 30.9cm)

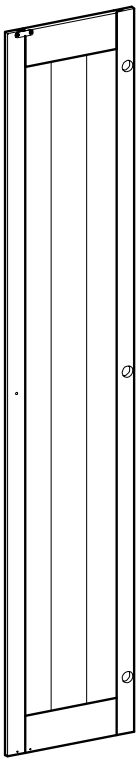

5 Left door
(166.6 x 31.6cm)

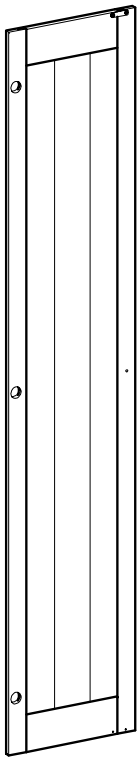


6 Right door
(166.6 x 31.6cm)

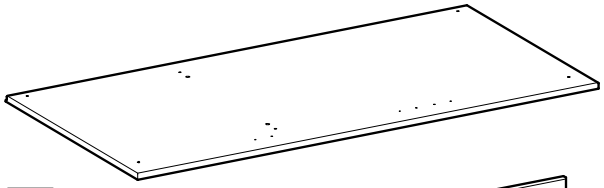


7 Top (107 x 53cm)




8 Rail (64 x 9cm)

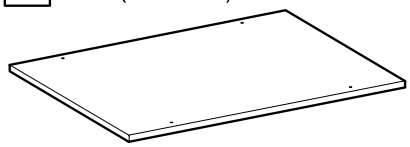


9 Large bottom (64 x 48cm)

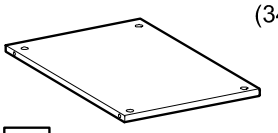


10 Small bottom (31.3 x 48cm)




11 Shelf x 3
(31.3 x 47.5cm)




12 Back plinth (96.7 x 4.5cm)

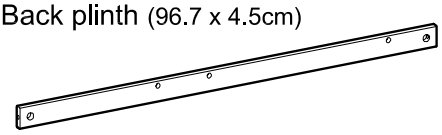


13 Front plinth (96.7 x 4.5cm)

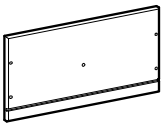

14 Drawer front x 3
(30.9 x 15.7cm)

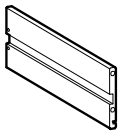


15 Left drawer side x 3
(34.2 x 10.7cm)

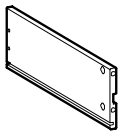


16 Right drawer side x 3
(34.2 x 10.7cm)



17 Drawer back x 3
(28.1 x 9cm)



18 Drawer bottom x 3
(29.1 x 33.9cm)














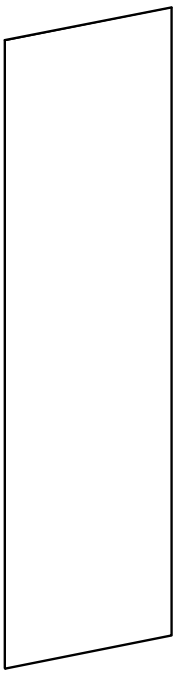


19 Back x 2
(171 x 49.1cm)


Components - Fittings


Please check you have all the fittings listed below

Note: The quantities below are correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

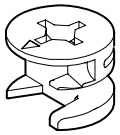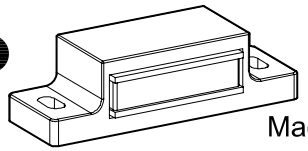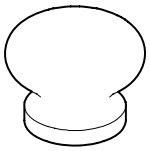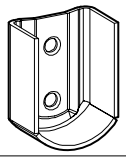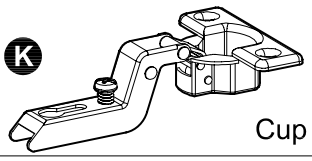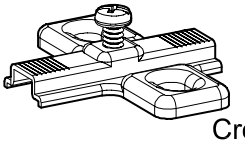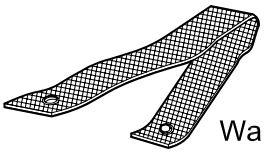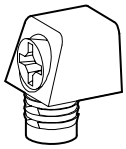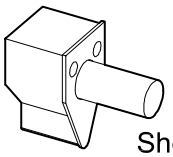
A  Large cam x 16	**B**  Small cam x 12	**C**  Locking pin x 28
D  14mm Screw x 36	**E**  25mm Screw x 10	**F**  35mm Screw x 18
G  16mm Nail x 30	**H**  Magnet x 3	**I**  Knob x 6
J  Hanging rail cup x 2	**K**  Cup hinge x 8	**L**  Cross plate x 8
M  636mm Hanging rail x 1	**N**  30mm Dowel x 4	**O**  20mm Screw x 2
P  Wall strap x 2	**Q**  Wall plug x 2	**R**  Washer x 4
S  Miniblock x 6	**T**  Shelf support x 12	**U**  1653mm Joining strip x 1


Tools required



Philips screwdriver (medium & large)



Flatblade screwdriver (medium)

Suitable drill bit (for use with wall plug)

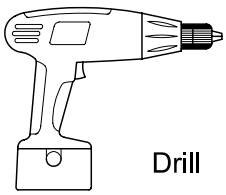

Drill


Small hammer



Ruler/tape measure

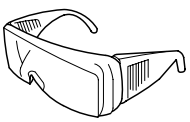
Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Components - Key Diagram

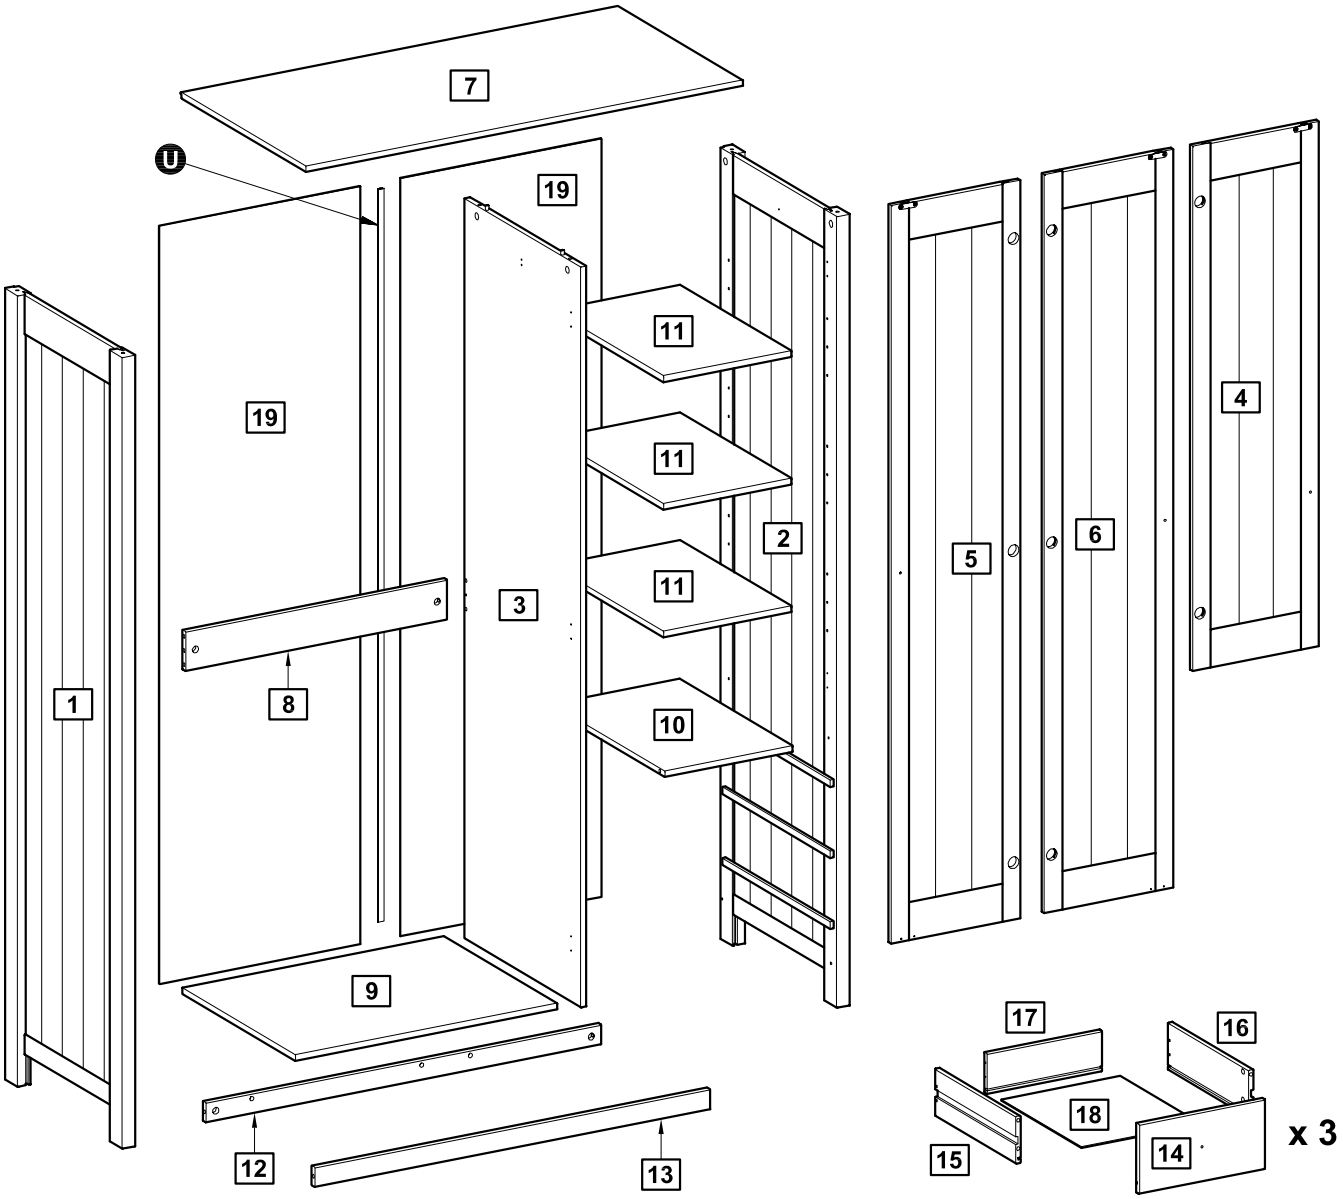


Function of Cam and Locking Pin

Step 1:
Fix the locking pin to the wooden panel.

Step 2:
Push the wooden panel with the attached locking pin onto the other wooden panel.

Step 3:
Place the cam into the hole, arrow pointing towards the locking pin.

Step 4:
Tighten: Turn the cam to the right.

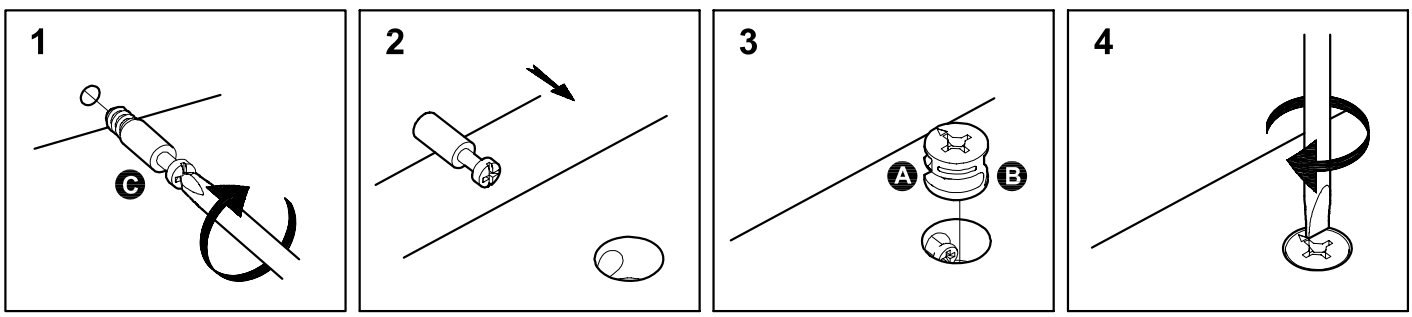

Assembly Instructions


Step 1

Mounting the cross plates to the sides.

Fix the cross plates (L) to the sides [1] & [2] using the screws (E) into the holes indicated.

It is important that the cross plates are placed exactly as shown.


The short end of the cross plates must point towards the front edge of the sides.

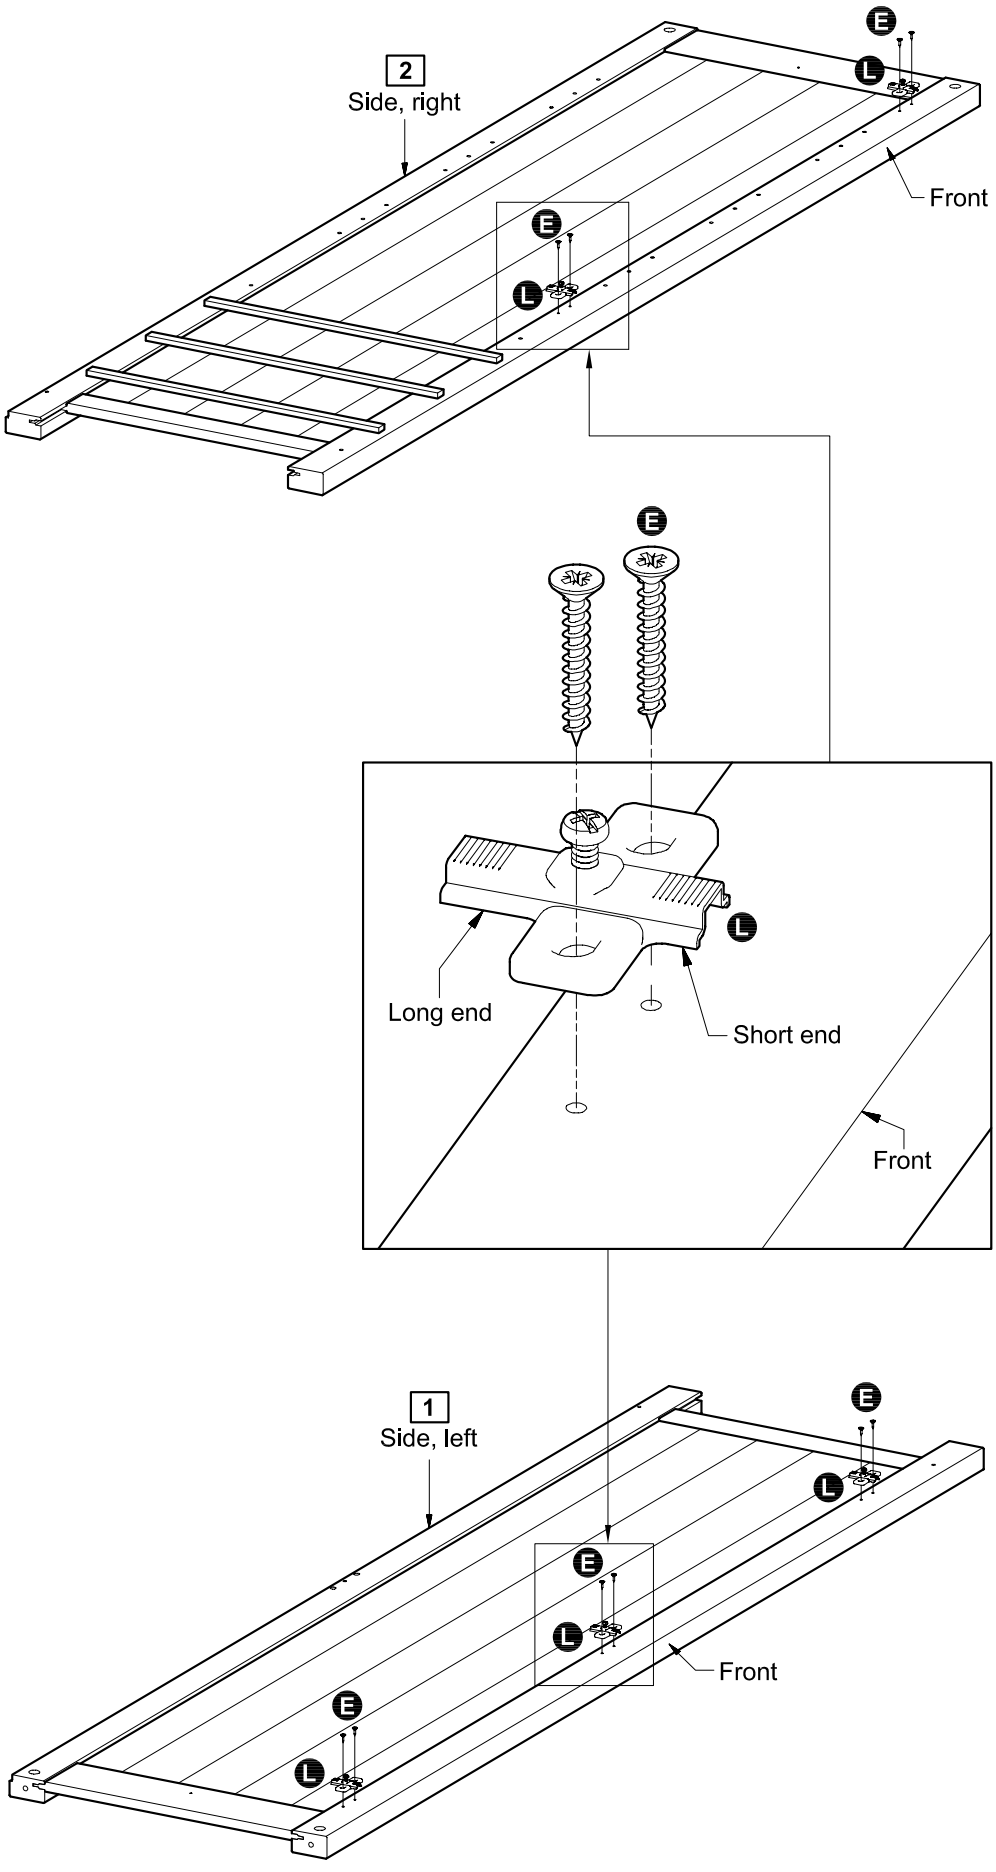


Step 2

Mounting the hanging rail cups to the sides.

Fix the hanging rail cups Ⓙ onto the sides [1] and [2] using screws Ⓓ into the pre-drilled holes.

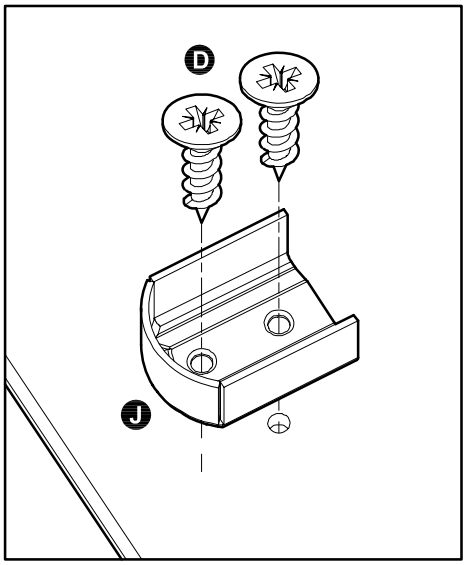

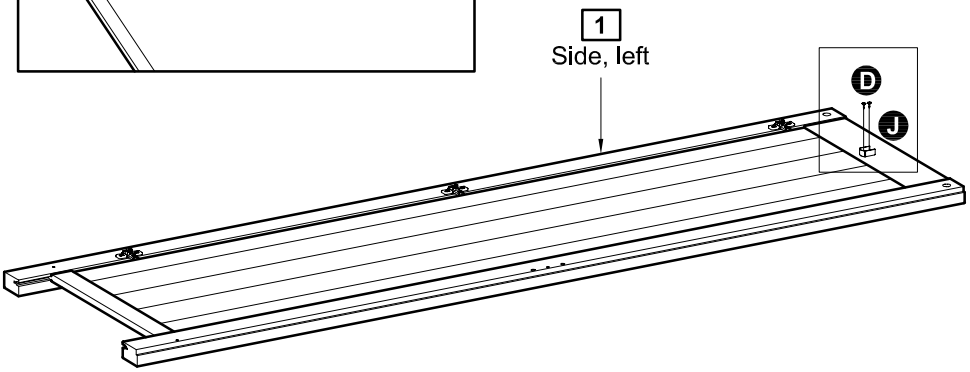



Step 3

Mounting the locking pins to the sides.

Screw the locking pins Ⓒ into the holes indicated on the sides [1] and [2].

Note: Insert locking pins Ⓒ as far as shown. **Do not over tighten.**

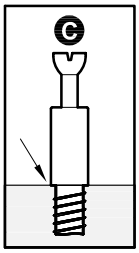

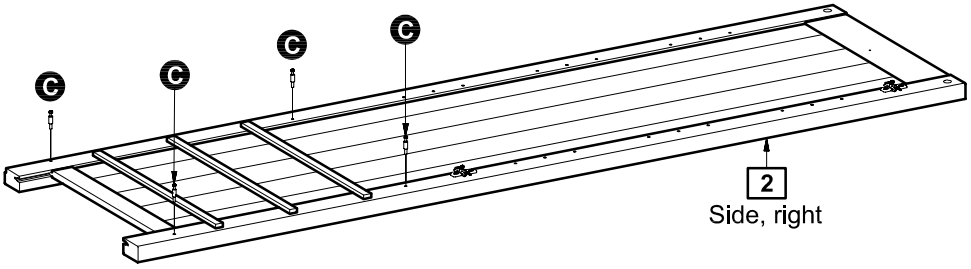


Step 4

Mounting the cross plates to the divider.

Fix the cross plates Ⓛ to the divider 3 using screws Ⓓ into the holes indicated.

It is important that the cross plates are placed exactly as shown.


The short end of the cross plates must point towards the front edge of the sides.

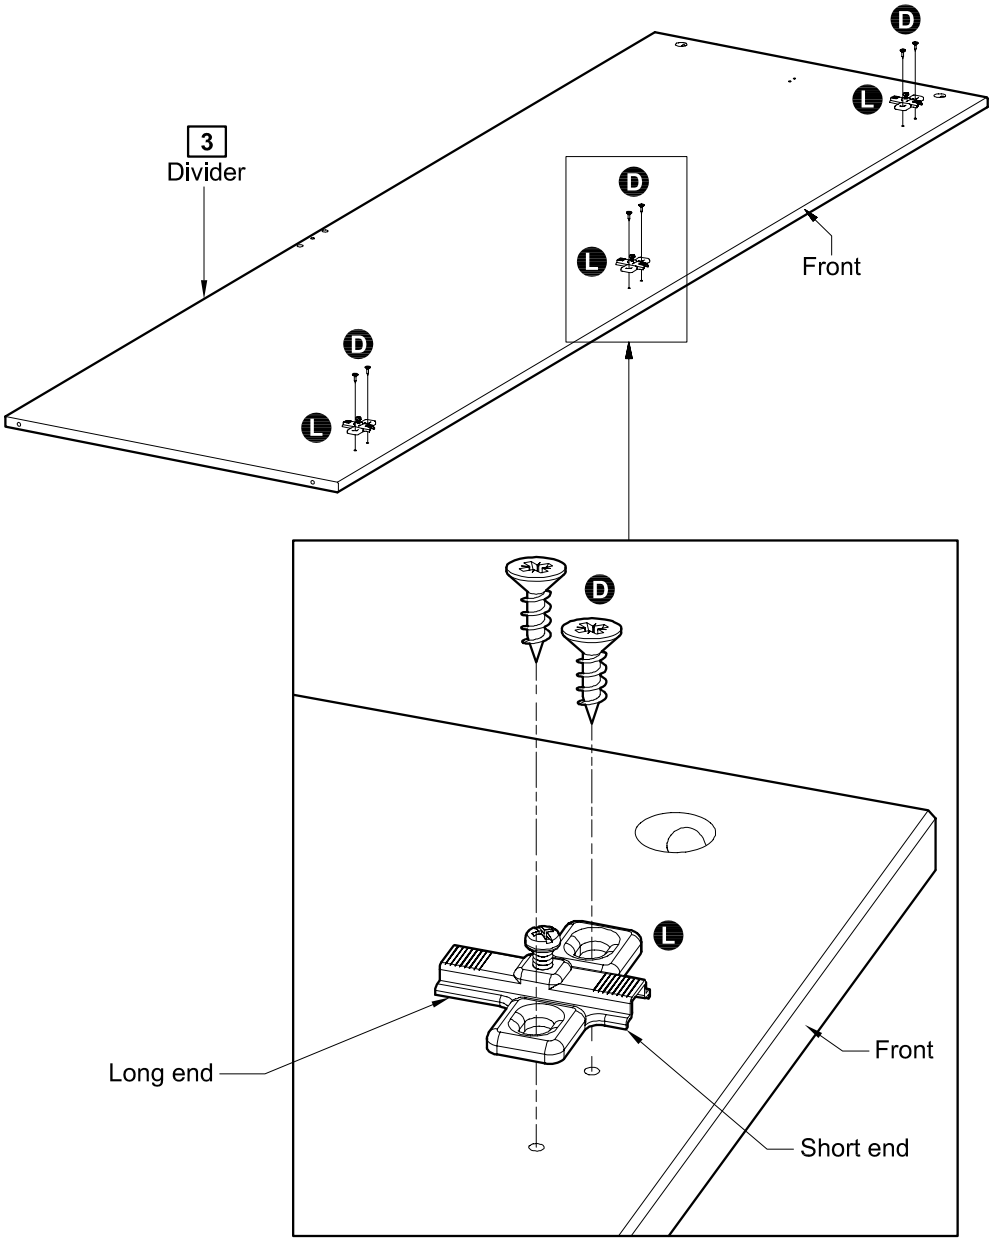

Step 5

Mounting the hanging rail cup to the divider.

Fix the hanging rail cup Ⓙ onto the left hand side of divider 3 using screws Ⓓ into the pre-drilled holes.

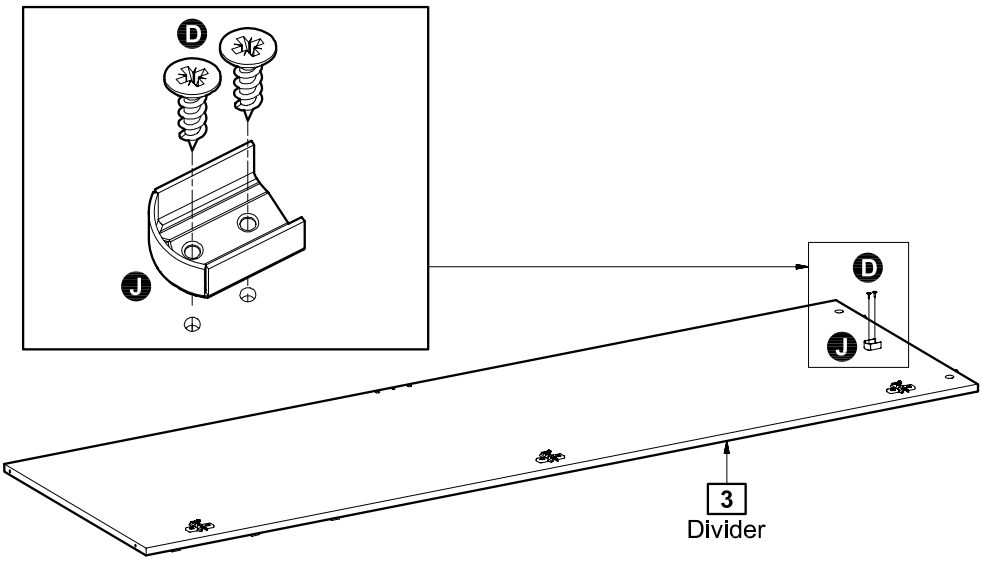


Step 6

Mounting the locking pin to the left hand side of the divider.

Screw the locking pin C into the hole indicated on the left hand side of the divider 3.

Note: Insert locking pin C as far as shown. **Do not over tighten.**

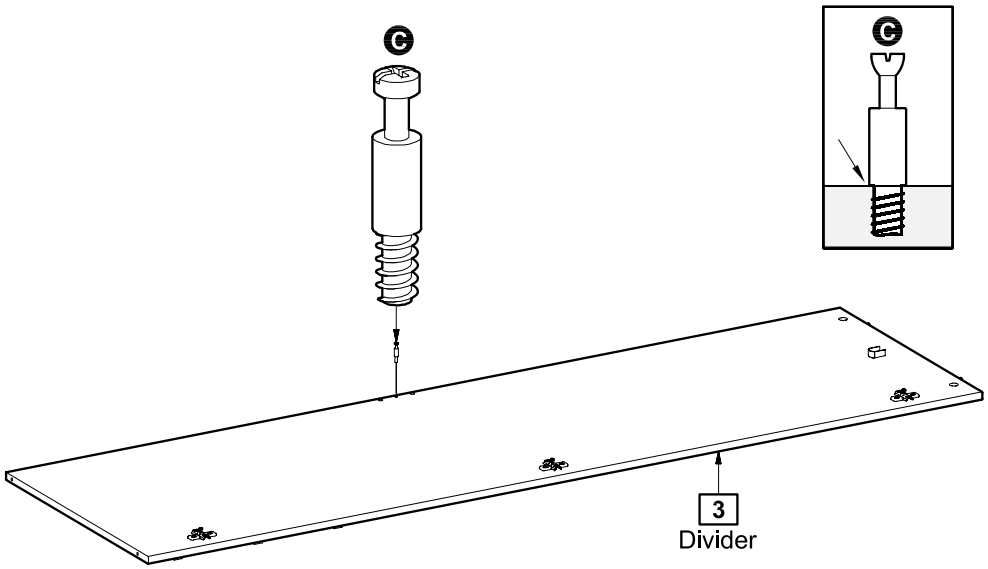


Step 7

Mounting the locking pins to the right hand side of the divider.

Screw the locking pins C into the holes indicated on the right hand side of the divider 3.


Note: Insert locking pins C as far as shown. **Do not over tighten.**

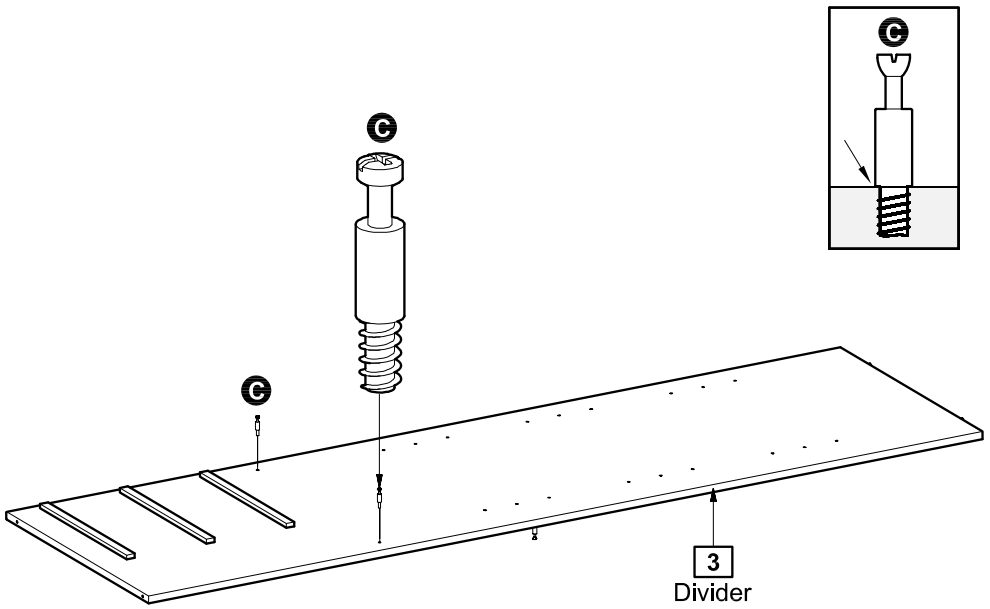

Step 8

Adding the dowels to the rail.


Insert the dowels N into the holes indicated on the rail 8.

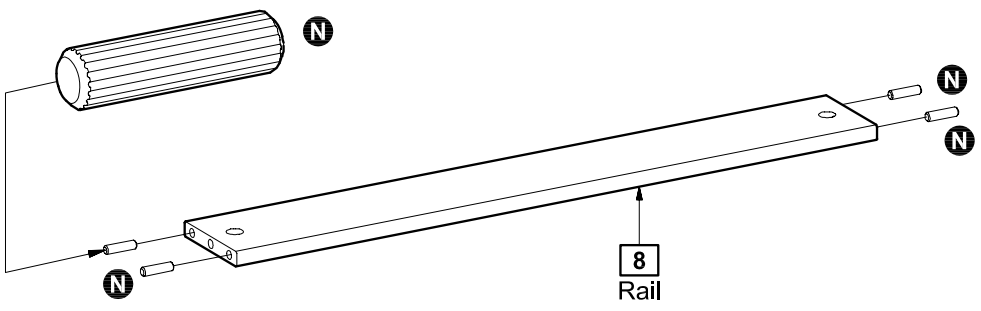

Step 9

Adding the miniblocks to the plinths.

Insert the miniblocks Ⓢ into the holes indicated on the plinths 12 and 13.

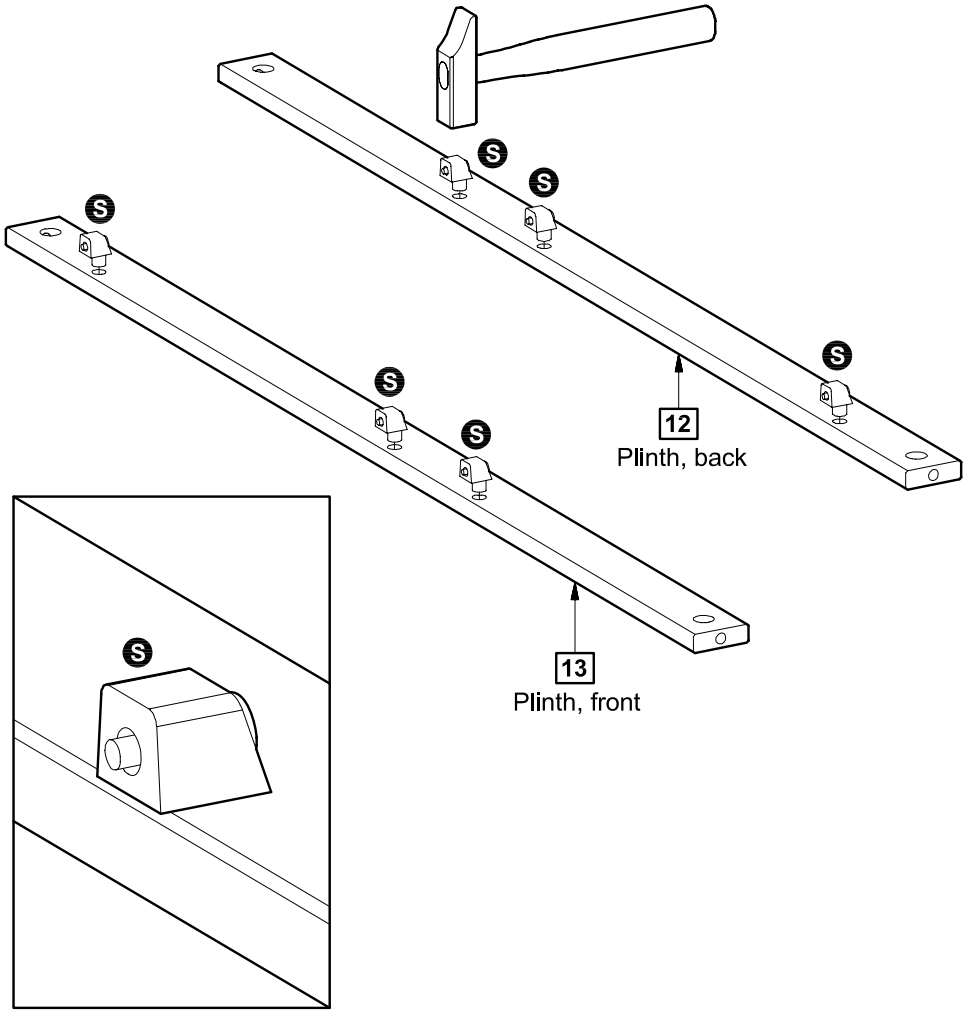


Step 10

Mounting the plinths to the bottom.

Fix the plinths 12 and 13 to the bottom 9 using screws in the miniblocks Ⓢ .

The front plinth 13 must be placed near the chamfered edge of the bottom.

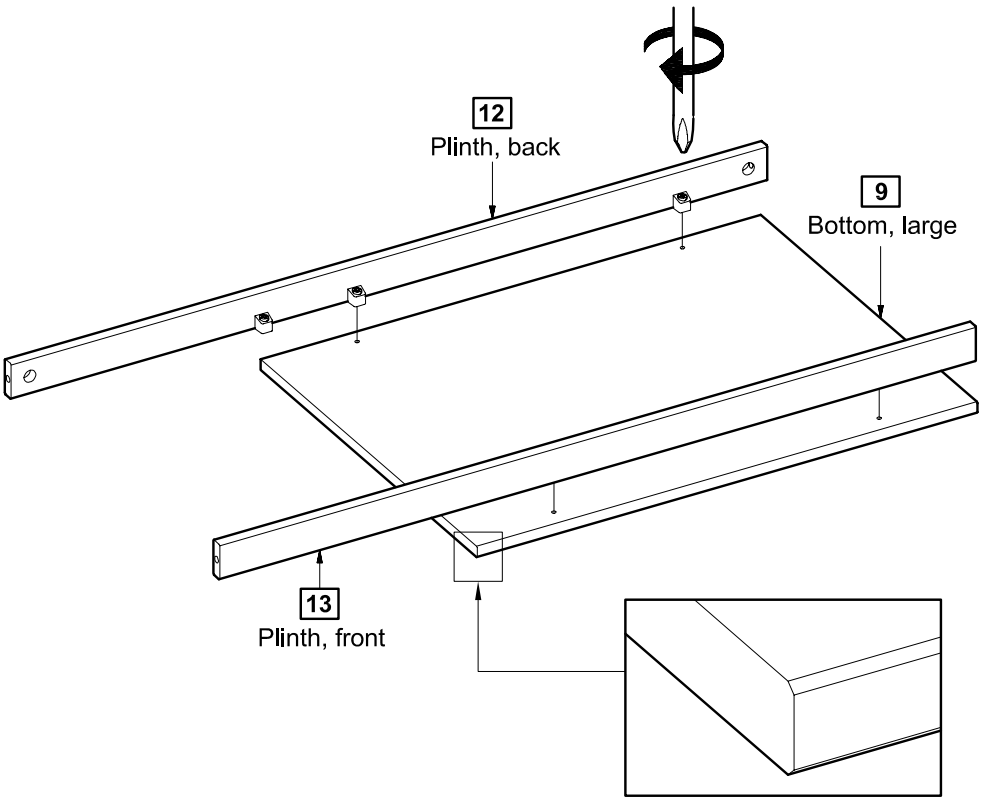

Step 11


Adding the plinths and the rail to the left hand side.

Fit the rail [8] and the plinths [12] and [13] onto the left hand side [1].

See page 4 "Function of cam and locking pin".

Place the large cams Ⓐ into the holes indicated, arrows pointing towards the side / locking pins.

To tighten cams: Turn to the right using a screwdriver.

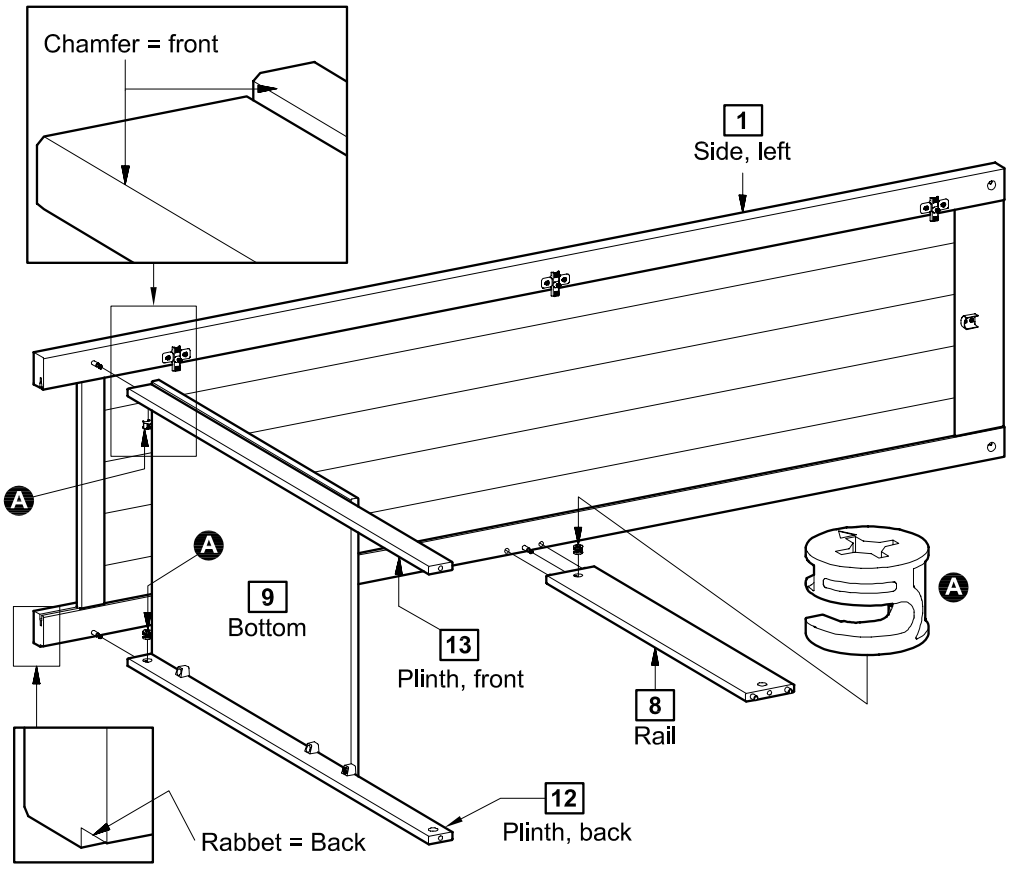

Step 12

Adding the divider to the plinths and the rail.


Fit the divider [3] onto the bottom [9] and the rail [8].

See page 4 "Function of cam and locking pin".

Place the large cam Ⓐ into the hole indicated, arrow pointing toward the divider / locking pin.

To tighten cams: Turn to the right using a screwdriver.

Finally fix the divider [3] onto the plinths [12] and [13] using the miniblocks Ⓢ.

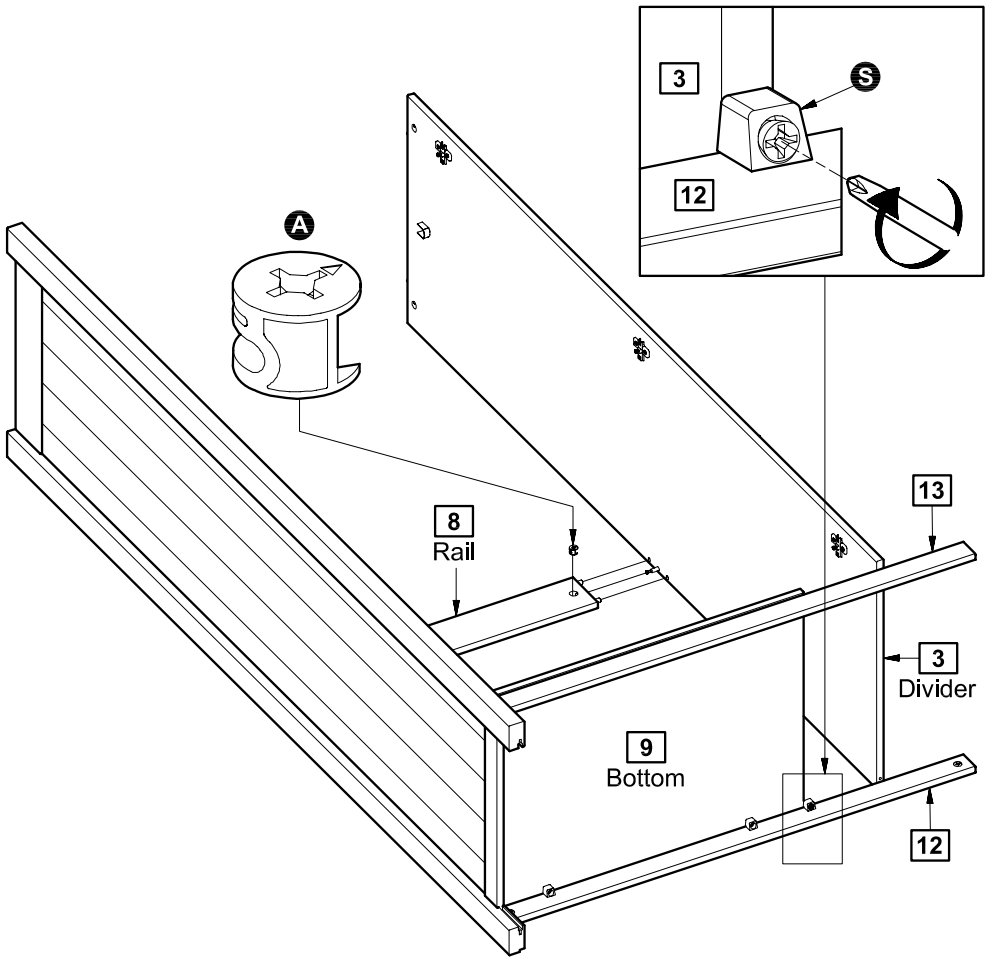

Step 13


Adding the small bottom to the divider.

Fit the small bottom [10] onto the divider [3].

See page 4 "Function of cam and locking pin".

Place the large cams Ⓐ into the holes indicated, arrows pointing towards the divider / locking pins.

To tighten cams: Turn to the right using a screwdriver.

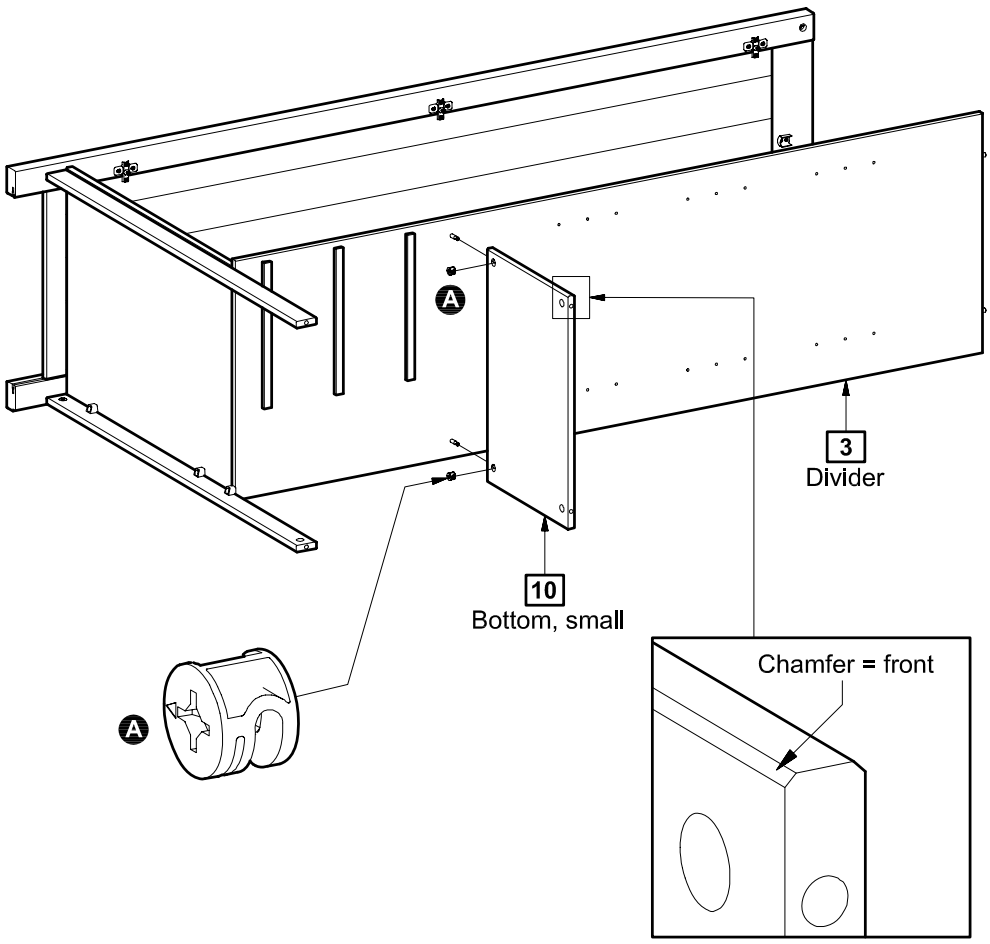

Step 14


Adding the right hand side to the small bottom and the plinths.

Fit the right hand side [2] onto the plinths [12] and [13] and the small bottom [10].

See page 4 "Function of cam and locking pin".

Place the large cams Ⓐ into the holes indicated, arrows pointing towards the side / locking pins.

To tighten cams: Turn to the right using a screwdriver.

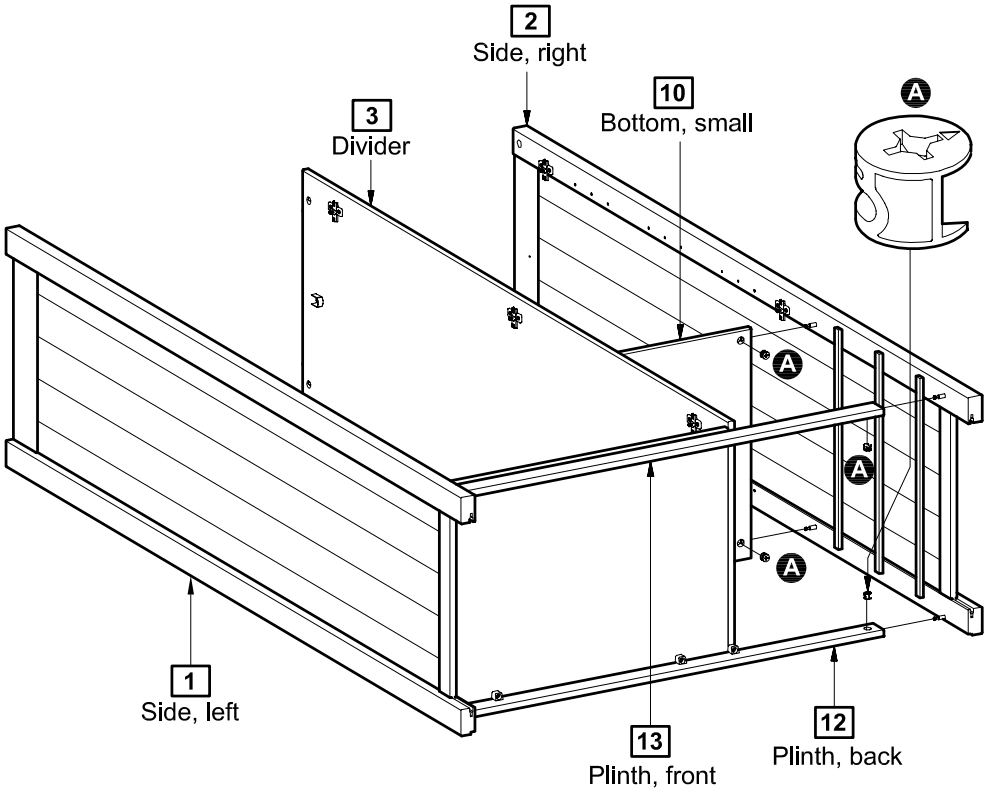


Step 15

Mounting the locking pins to the top.

Screw the locking pins C into the holes indicated on the top 7.

Note: Insert locking pins C as far as shown. **Do not over tighten.**

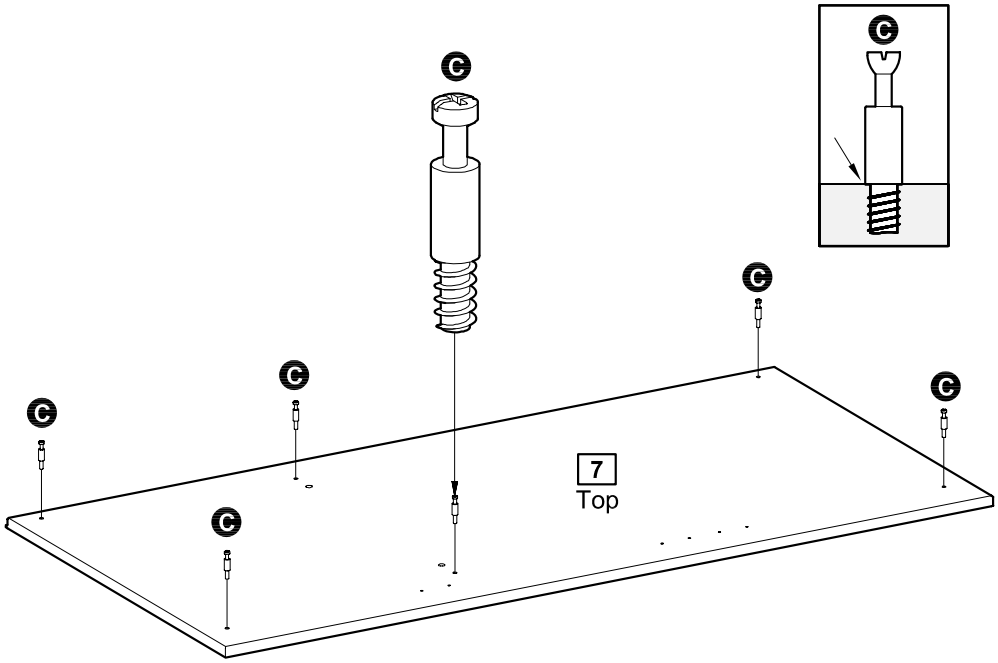



Step 16

Mounting the magnets to the top.

Fix the magnets H to the top 7 using screws D into the pre-drilled holes.

It is important that the magnetic part points towards the front edge of the top.

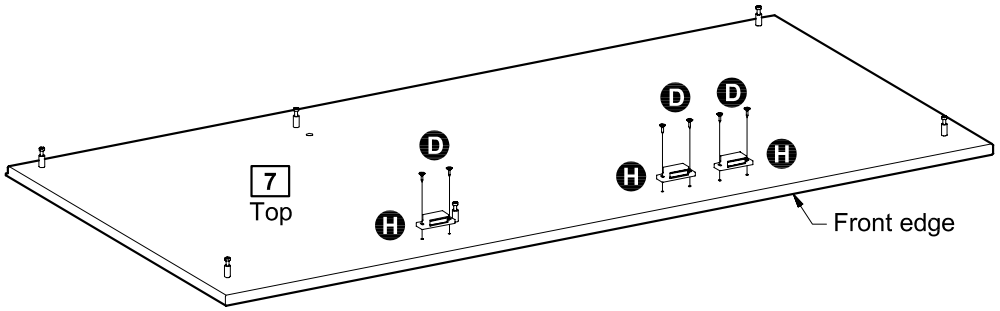

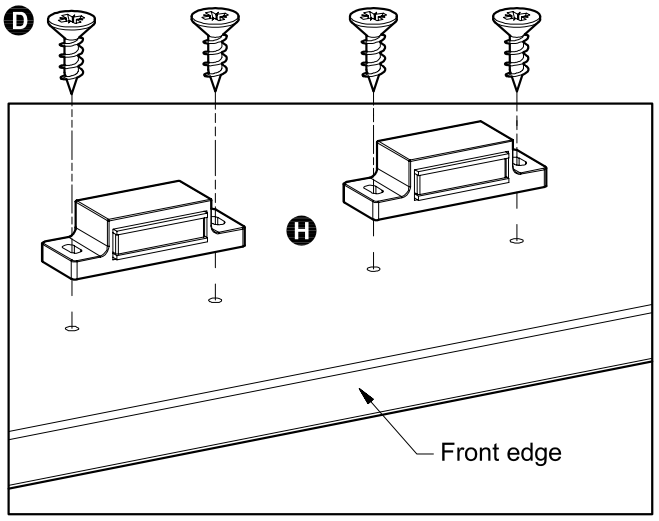

Step 17


Assembling the top to the sides.

Attach the top [7] onto the sides [1] and [2] and the divider [3].

See page 4 "Function of cam and locking pin".

Place the large cams Ⓐ into the holes indicated, arrows pointing towards the top / locking pins.

To tighten cams: Turn to the right using a screwdriver.

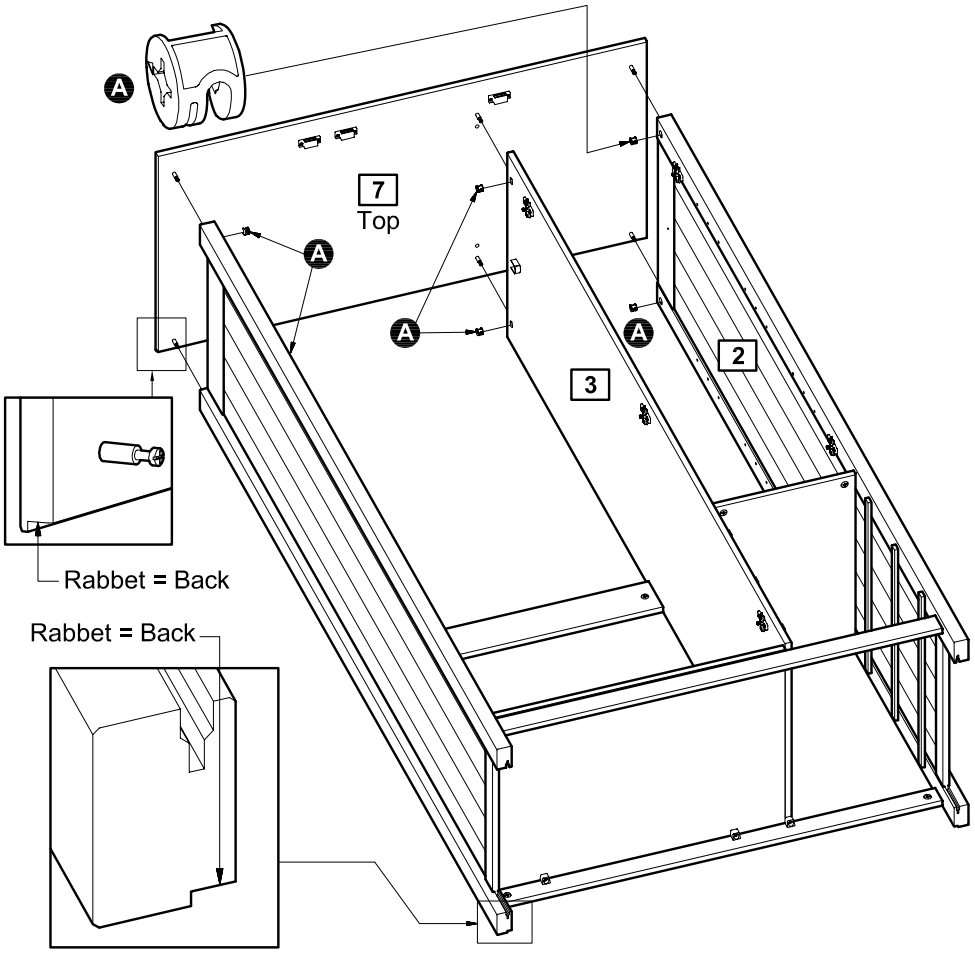

Step 18

Adding the back to the carcass.

Place the back [17] into the rabbet of the top [7] and the side [2].


Ensure that there is no gap between the side back, nor between the top and the back.

Fasten the back with nails Ⓖ along the top.

The angle between the top and the side must be 90 degrees.

To accomplish this, ensure that there is no gap between the side & the back.

Fasten the back with nails Ⓖ along the sides.

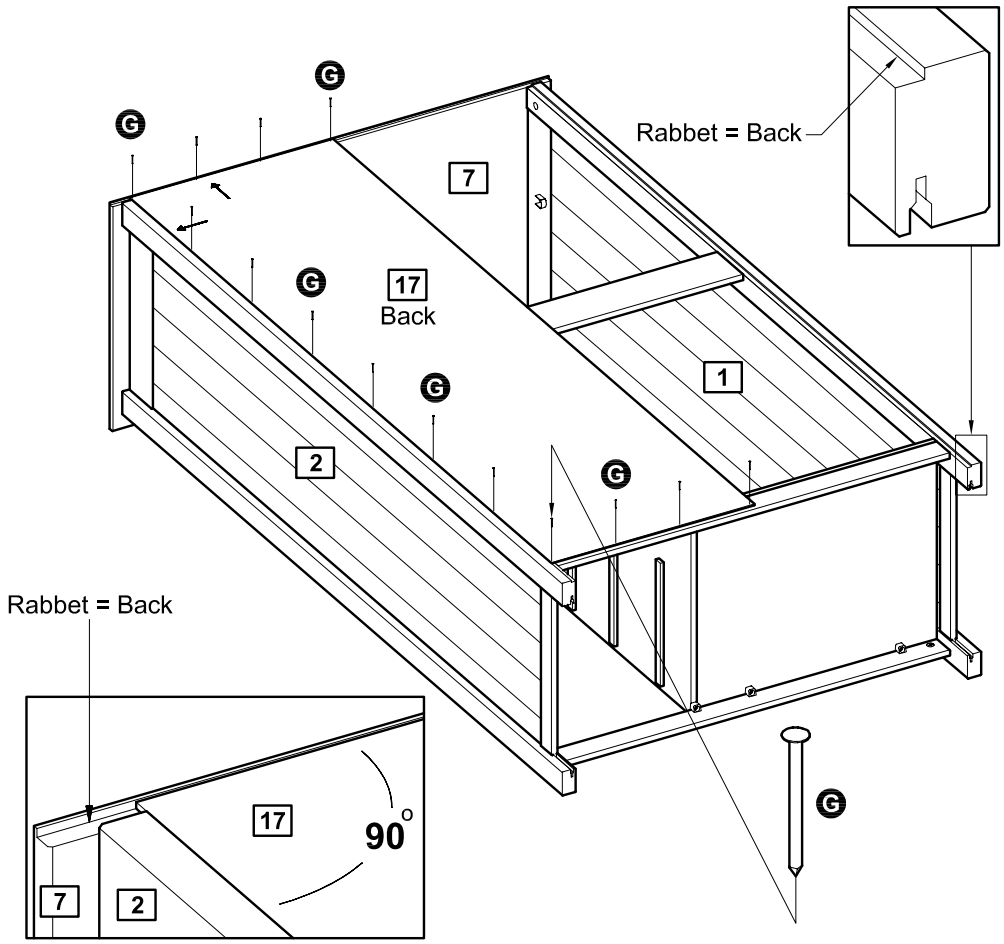

Step 19

Adding the back & the joining strip to the carcass.


Place the joining strip (U) onto the back.

Place the back [17] into the rabbet of the top [7] and the side [1].

Ensure that there is no gap between the side & back, nor between the top and the back.

Fasten the back with nails (G) along the side and bottom.

Fix the back onto the support rail [8] using screws (D).

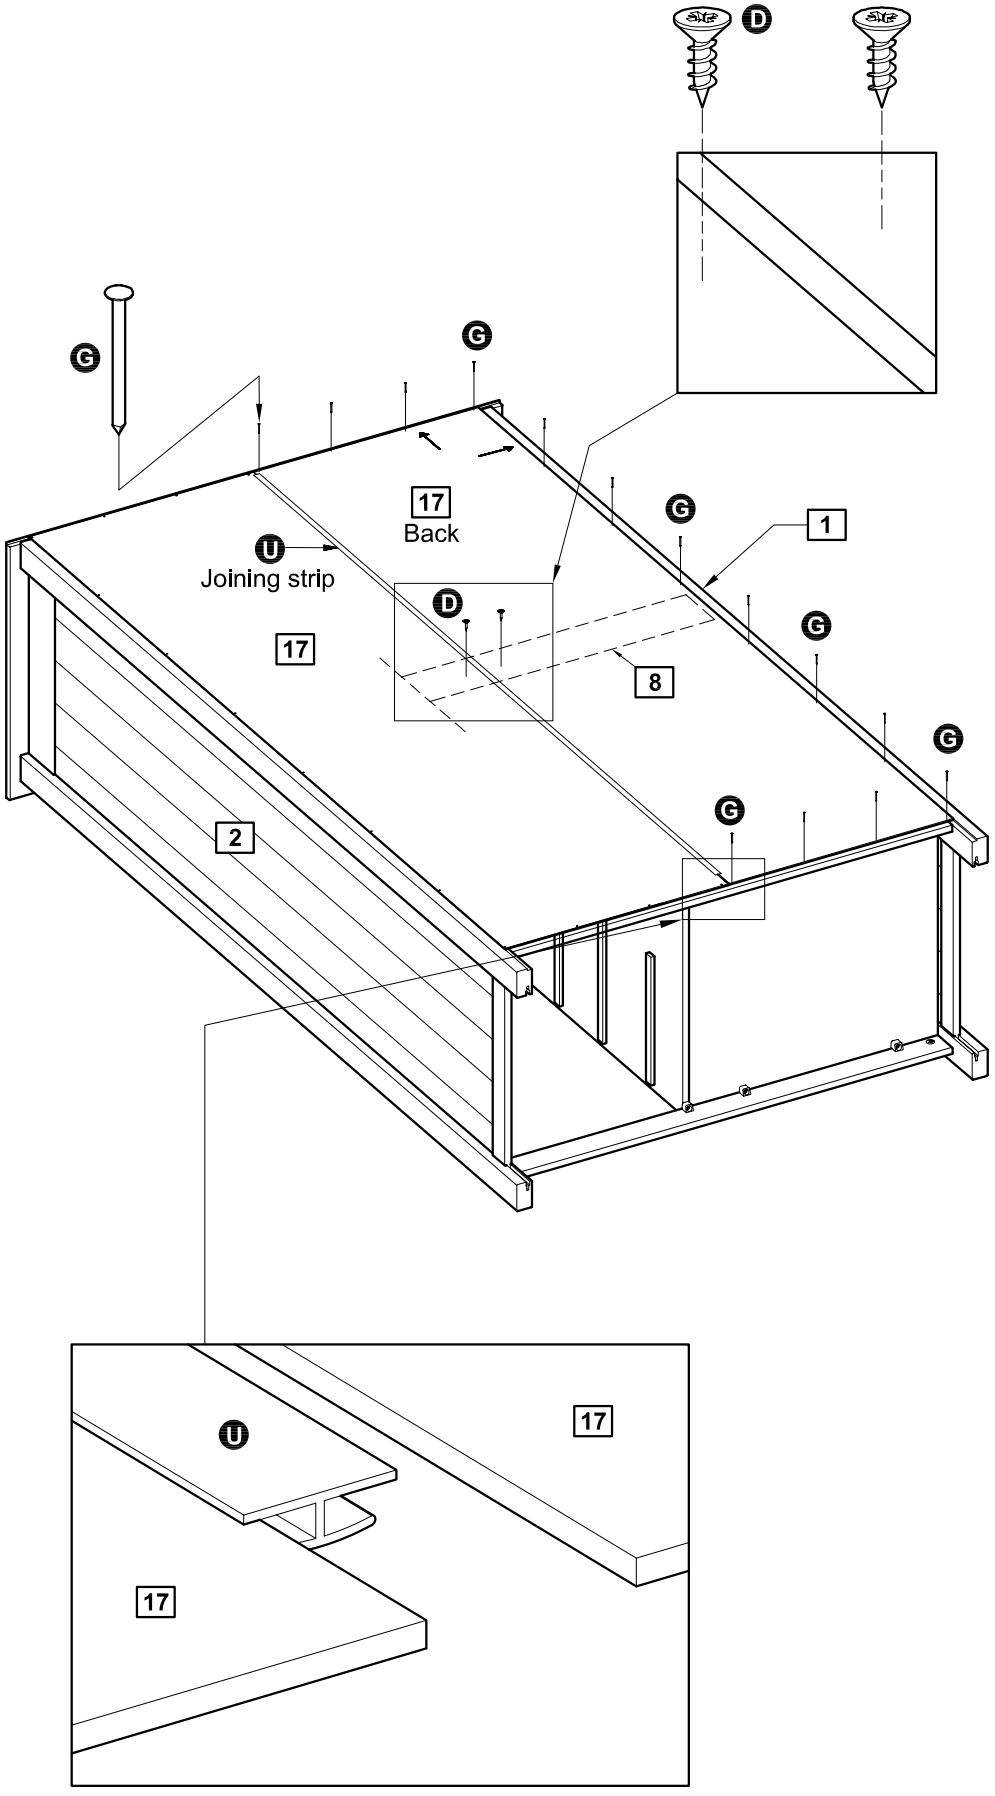


Step 20

Drawer assembly.


a: Fix the drawer sides [15] and [16] to the drawer back [17] using screws Ⓕ .

a:

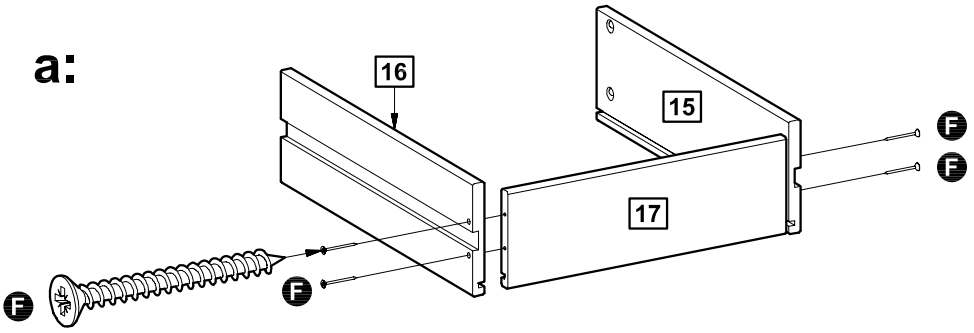

b: Slide the drawer bottom [18] into the grooves of the drawer frame.


b:

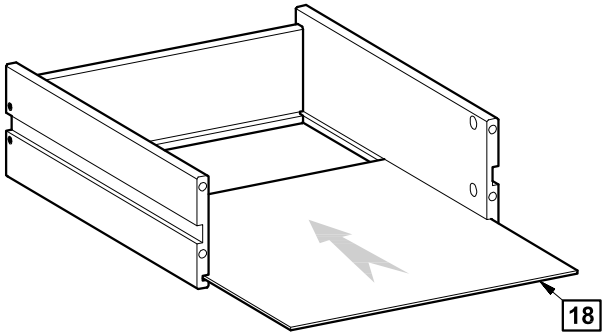

c: Screw the locking pins Ⓒ into the holes indicated on the drawer front [14] .


Note: Insert locking pins Ⓒ as far as shown. **Do not over tighten.**

c:

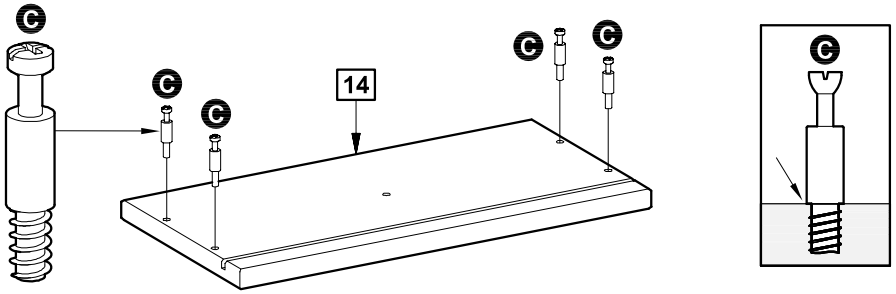


d: Press the drawer front [14] onto the drawer sides [15] and [16] . Place the small cams Ⓑ into the holes indicated, arrows pointing towards the drawer front / locking pins.
To tighten cams: Turn to the right using a screwdriver.
"Function of cam and locking pin" see page 4.

d:

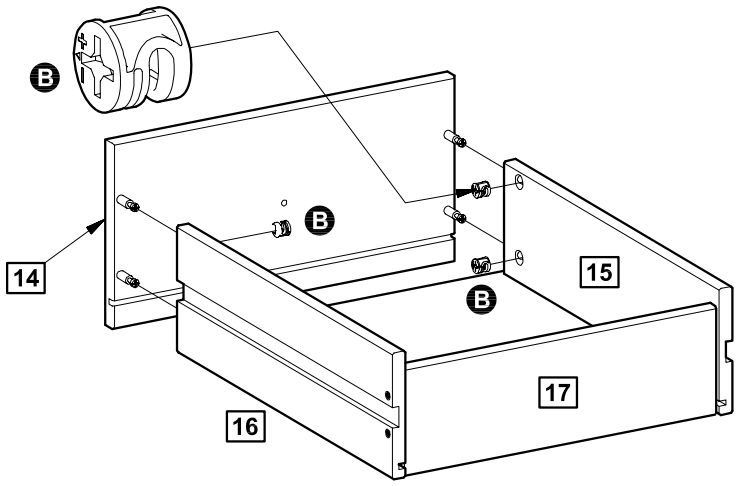

e: Fix the knob Ⓘ to the drawer front [14] using screw Ⓕ.

e:

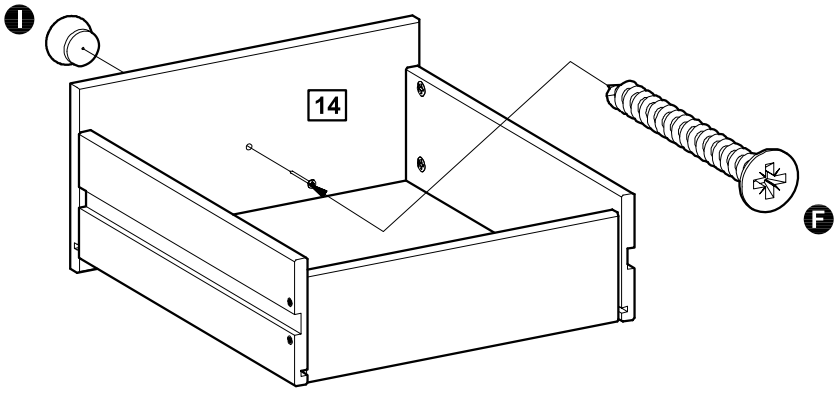

Repeat with remaining drawer.

Step 21


Adding the shelves, the hanging rail and the drawers to the carcass.

Lower the hanging rail Ⓜ into the hanging rail cups Ⓙ.

Place the shelf supports Ⓣ into the holes indicated.

Lower the shelves 11 onto the shelf supports.

Slide the drawer onto the drawer runners.

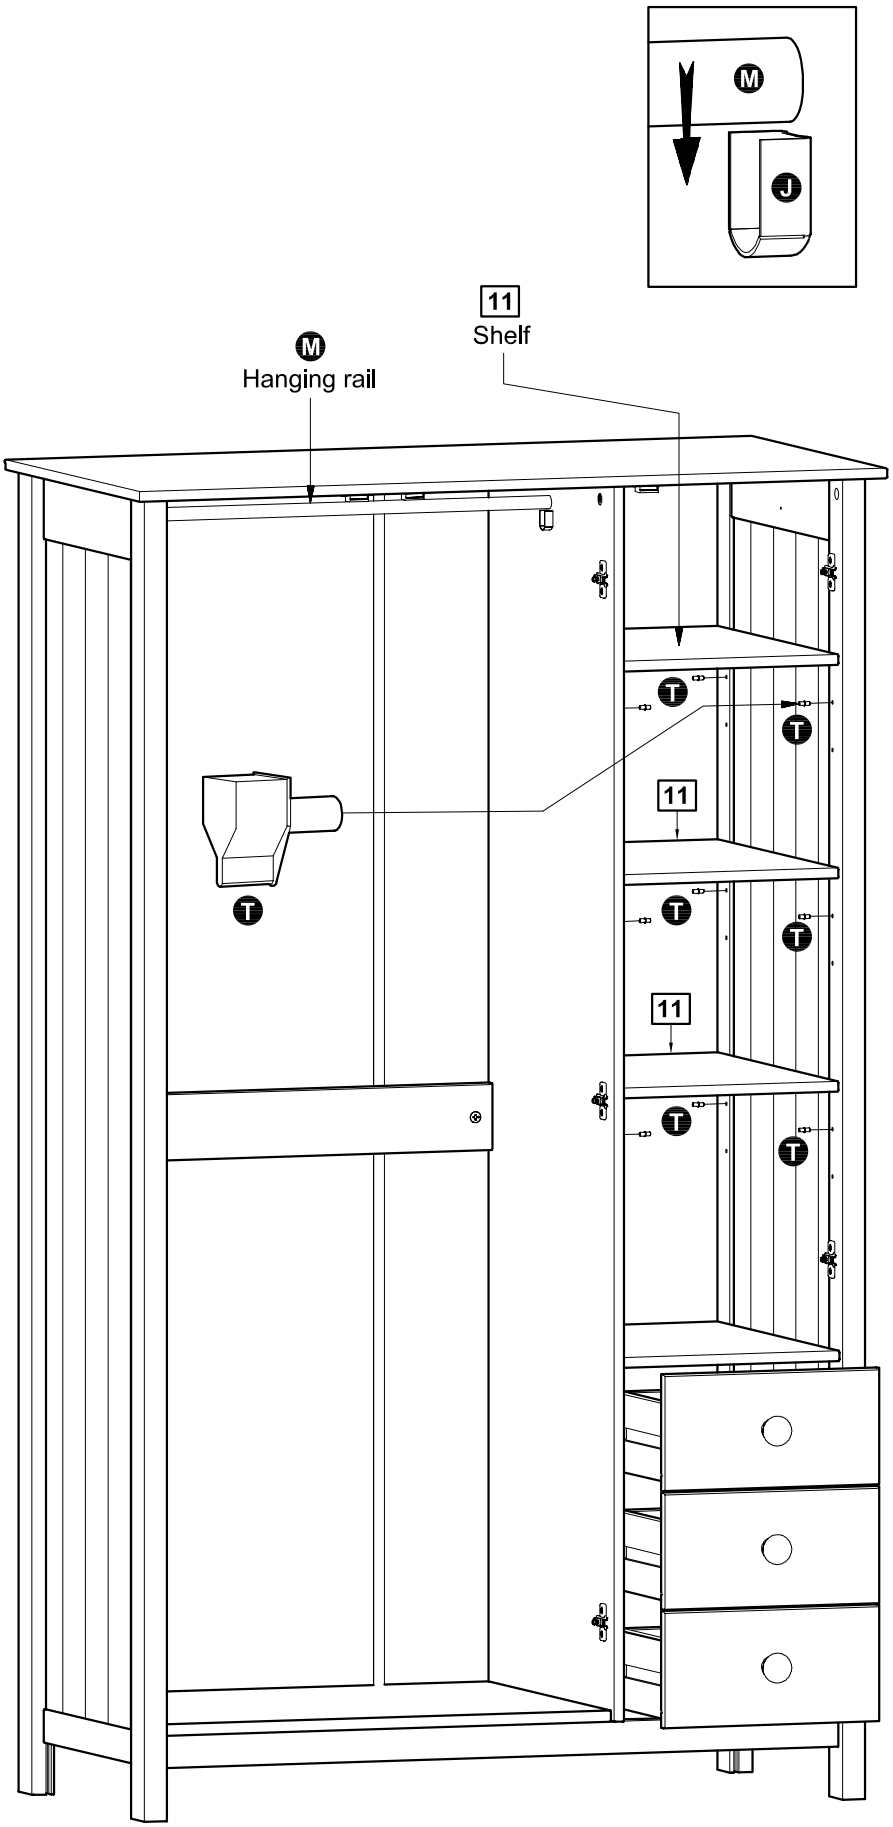



Step 22

Mounting the cup hinges to the doors.

Fix the cup hinges (K) into the holes indicated on the doors [4] and [5] and [6].

Attach the hinges using screws (D).

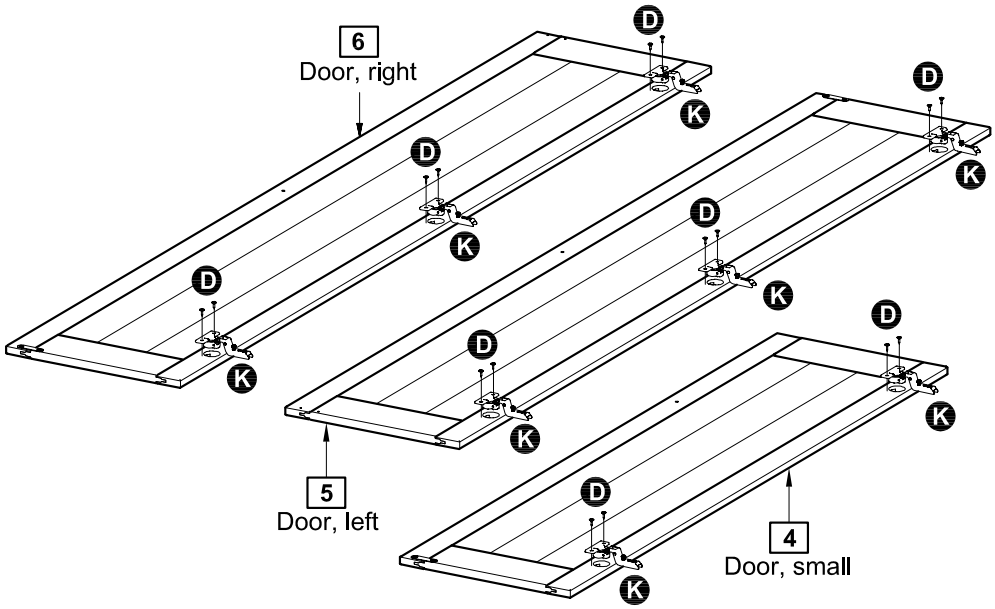


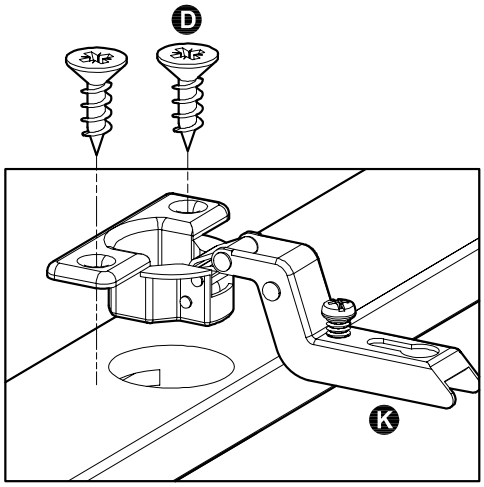

Step 23

Mounting the knobs to the doors.

Fasten the knobs (I) to the doors [4] and [5] and [6] using screws (F).

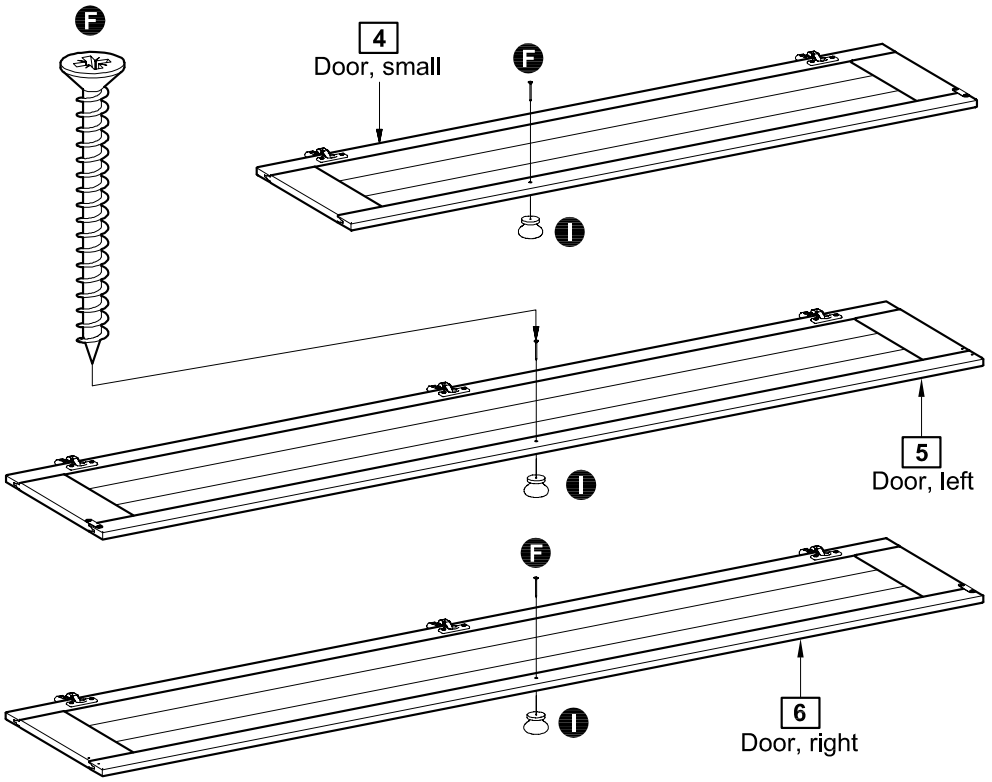

Step 24

Mounting the doors to the carcass.


When placing the doors, the magnetic catch plates must be at the top of the doors.


a: Place the adjustment hole of the cup hinge at the level of the fixing screw. Push the cup hinge towards the cross place - placing the fixing screw in the wider part of the adjustment hole.


Important: Ensure you catch all three of the fixing screws.


b: Push the door / cup hinge inwards - placing the fixing screw in the narrow end of the adjustment hole.


c: Tighten the fixing screws of all three of the cross plates.

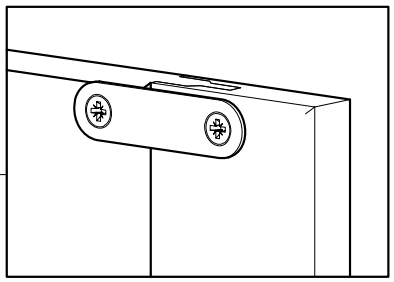

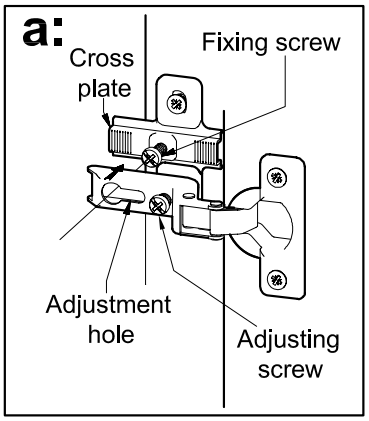

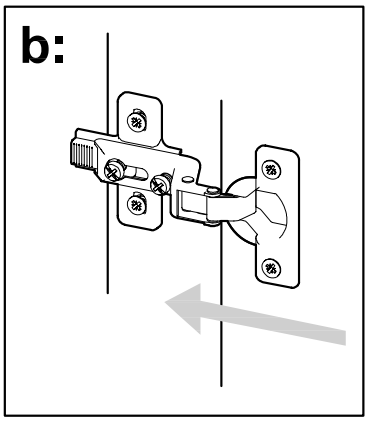

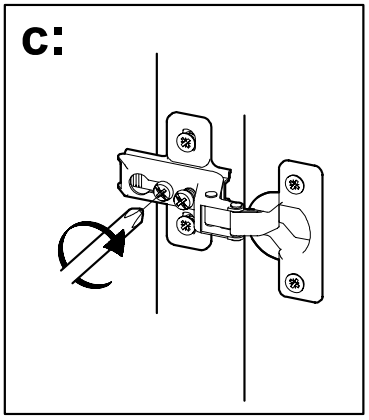


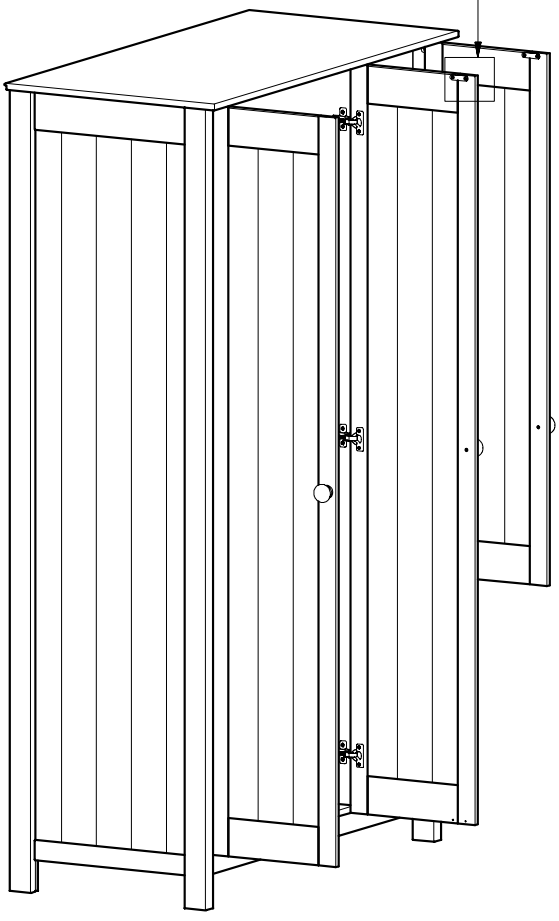


Step 25

Adjusting the doors.


Make sure the wardrobe is placed on a level surface before you begin to adjust the hinges.

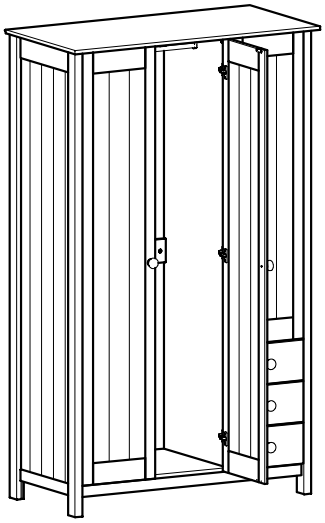

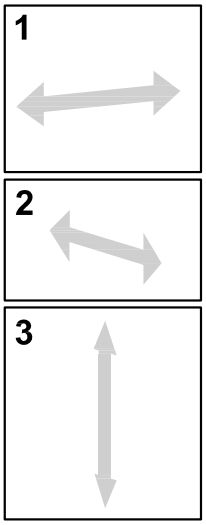


Right or left:


Loosen the fixing screw.

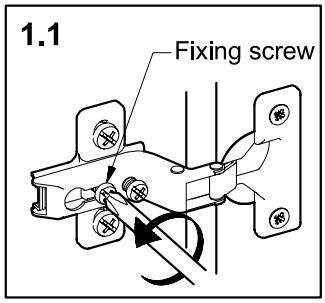


To adjust the door towards the lefthand side - turn the adjusting screw to the right.

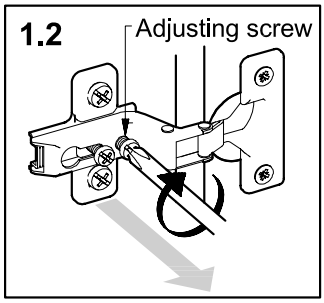

To adjust the door towards the right hand side - turn the adjusting screw to the left.

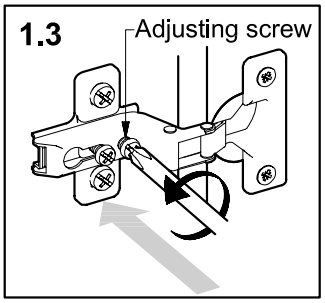


Continue adjustment - see 2 - or tighten the fixing screw of the cross plates

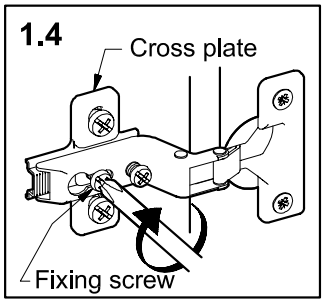


Forwards or backwards:


Loosen the fixing screw.

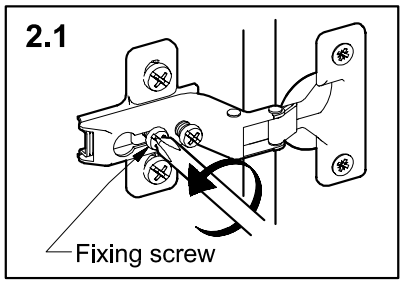

Push the cup hinges / the door back or forth to adjust. The door should level with the front edge of the sides.

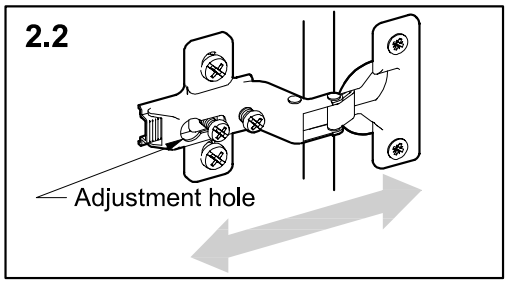


Tighten the fixing screws of all the cross plates.

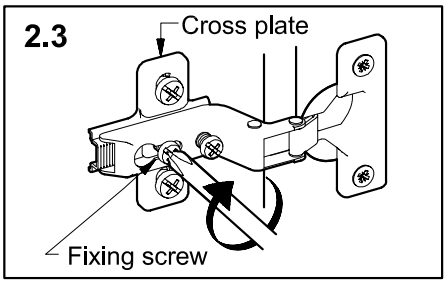


Up or down:


Loosen the two screws Ⓔ of each cross plate, but only as much as it will allow the cross plate to move up and down.

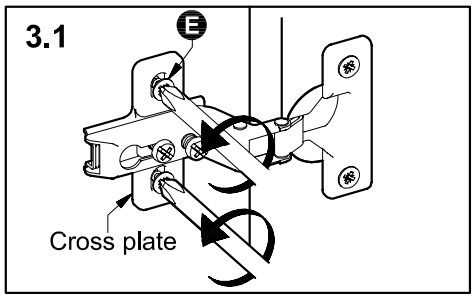

Adjust the cross plate / door.

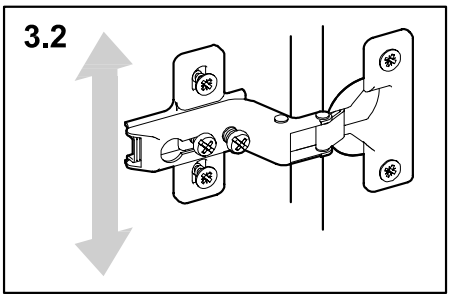

Tighten the screws Ⓔ of all the cross plates.

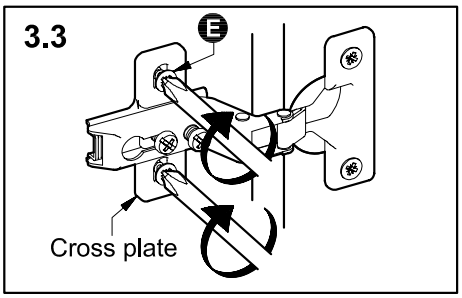

Step 26

Fixing to wall.

It is recommended that the wardrobe is fixed to a wall.

Fix wall straps P to top of wardrobe using screws D.

With help, move wardrobe into position.

Warning:
The wardrobe is heavy.
Lift with care.


Mark fixing holes on wall and remove wardrobe.

Drill 7mm holes and insert wall plugs Q.

Warning:
Before drilling, check wall for hidden pipes and cables.


Reposition wardrobe and fix wall straps using screws O .

Assembly is complete.

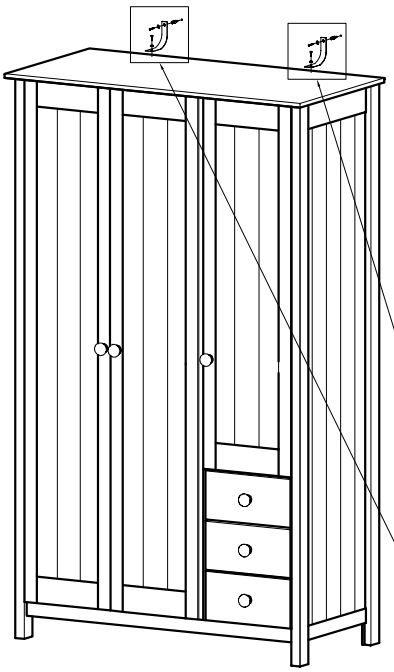

Note: Wall plugs supplied are for solid walls only.

The correct type of fixing must be used for your wall, seek professional advice if in doubt.

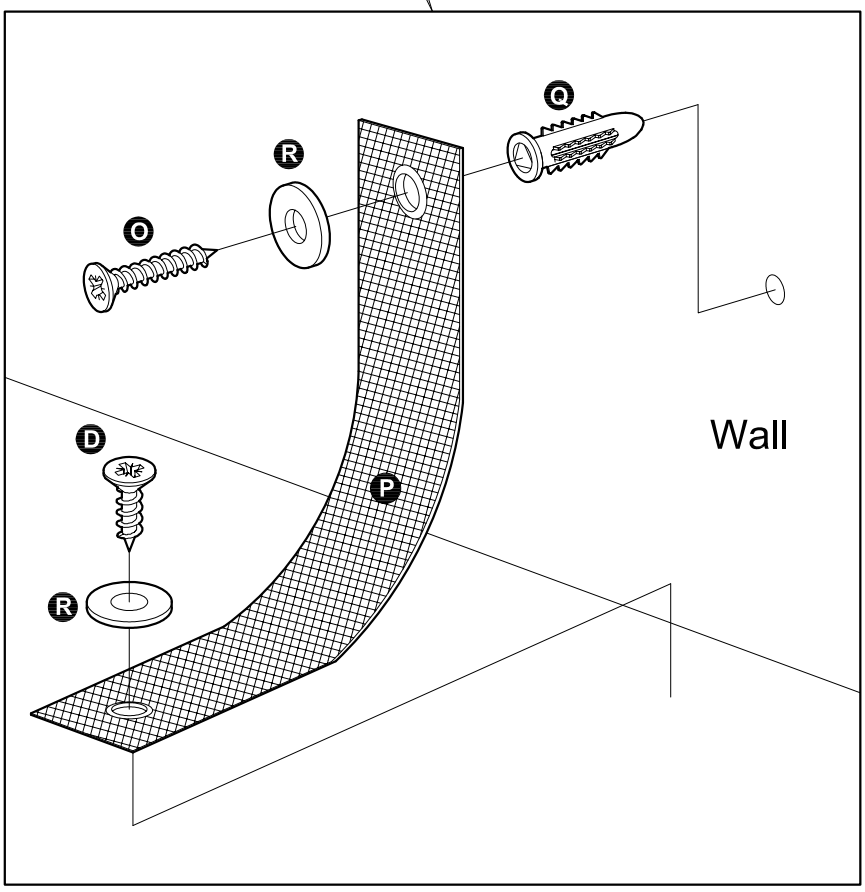

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: **General rule**: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

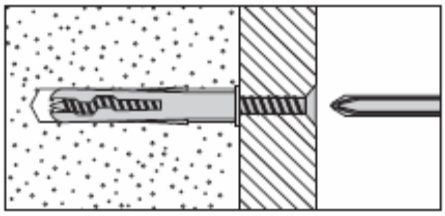


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

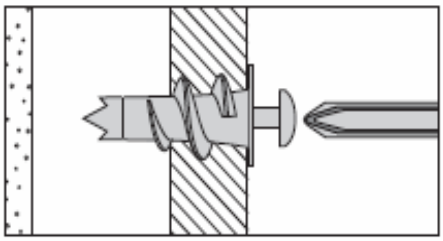


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

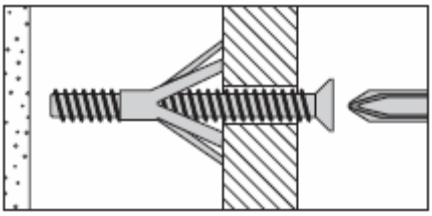


For use with plasterboard partitions or hollow wooden doors.

No.4 "**Cavity Fixing-Heavy Duty" wall plug**

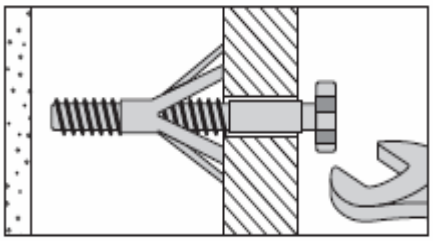


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

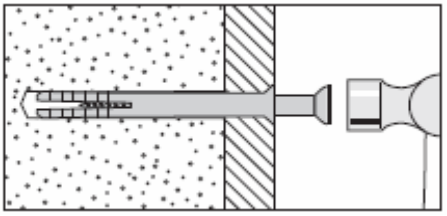

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

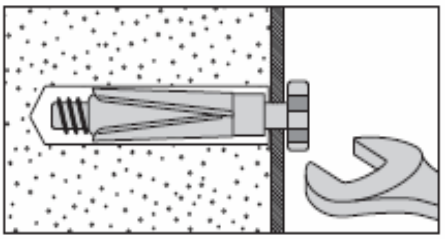

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Dear Customer

Please note that the product you have purchased is a natural living timber.

Just like nature itself, wood varies in shape and colour. Knots, vein patterns, resin pockets and colour differences contribute to giving the piece of furniture its beauty and form - a natural part of solid wood.

Although the tree has been cut down and dried, it is still alive and therefore will react to high and low temperatures, light, humidity, drought and time.

In cold and dry periods, the wood contracts which may lead to small cracks in the piece of furniture. The reverse happens in warm and humid periods where the wood expands and this may result in slight unevenness.

The colour of the wood also changes with time, particularly if the furniture is placed in a light place. This is a natural process and part of owning a piece of furniture made of solid wood.

Any flexing that has occurred during transport will re-correct it self once this product is correctly assembled.

Tighten all joints of the furniture after six months.


Please keep these instructions in a safe place for future use.

Scandinavia - 3 Door Robe w. 3 drws.

Assembly Instructions - Please keep for future reference

642/3784

643/8377

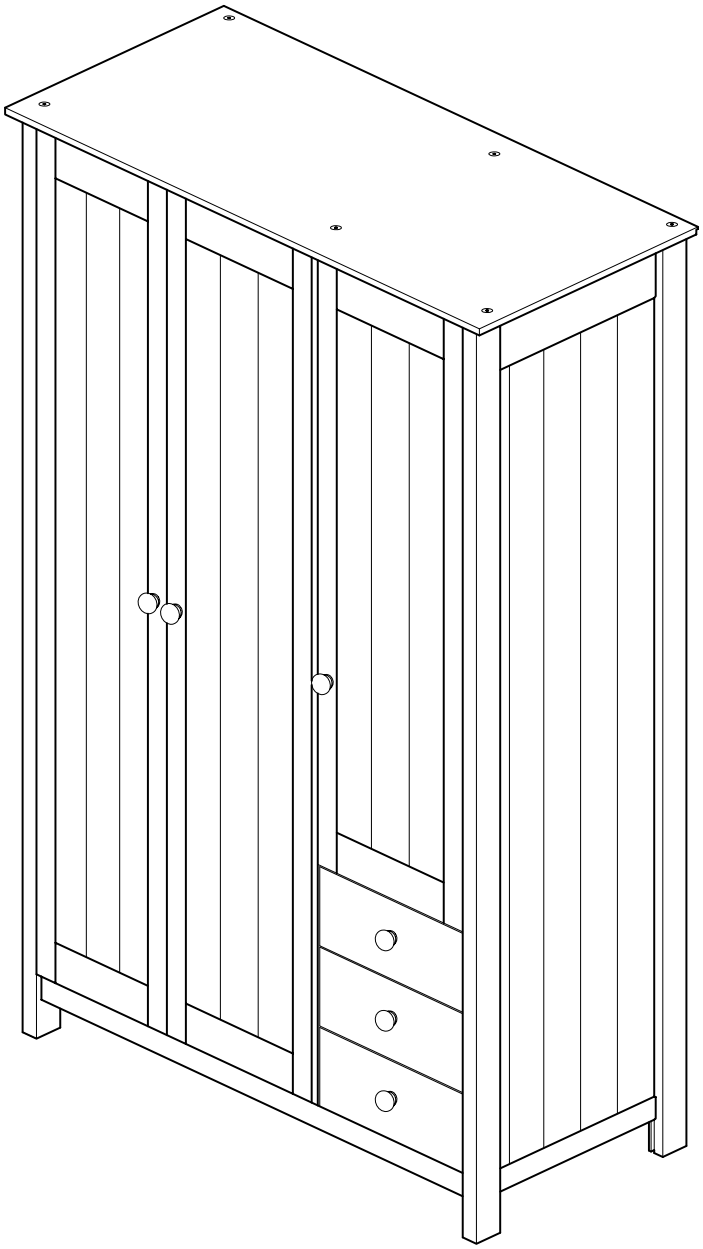

Dimensions

Width - 107cm
Depth - 53cm
Height - 179.9cm

Important - Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 3 - 01/10/13

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

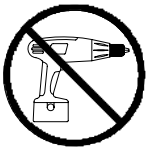

- We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance


- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the panels listed below

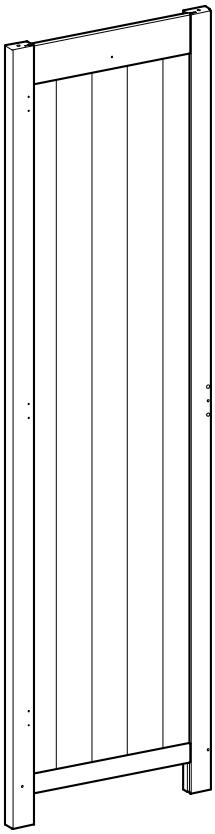


1 Left side
(178.5 x 49.8cm)

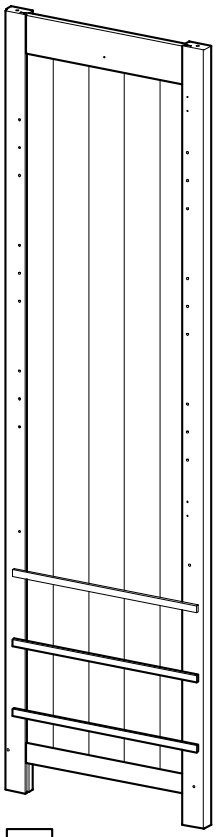


2 Right side
(178.5 x 49.8cm)

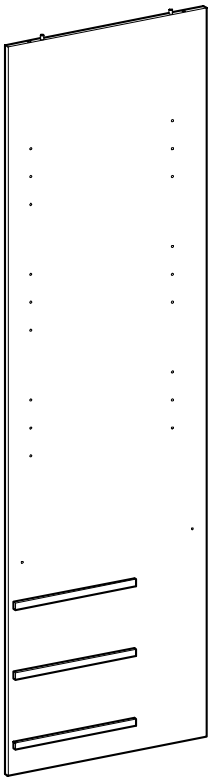


3 Large divider
(167 x 49.4cm)

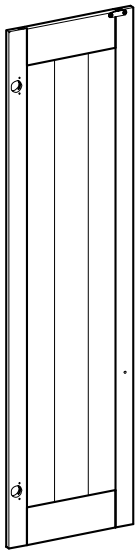


4 Small door
(118.4 x 30.9cm)

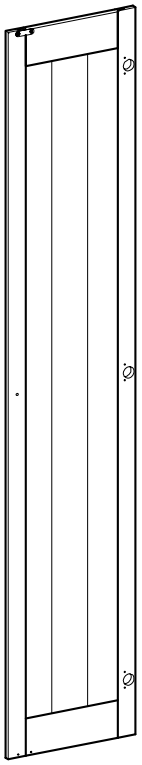

5 Left door
(166.6 x 31.6cm)

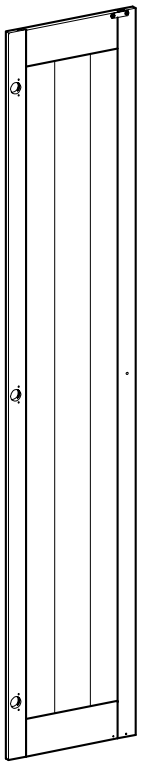


6 Right door
(166.6 x 31.6cm)

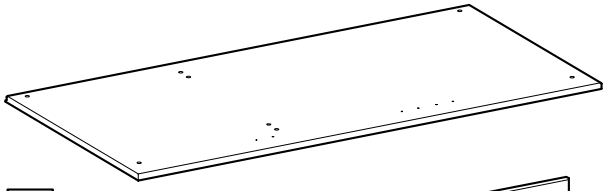


7 Top (107 x 53cm)




8 Rail (64 x 9cm)

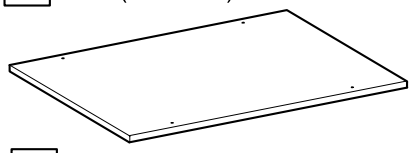


9 Large bottom (64 x 48cm)

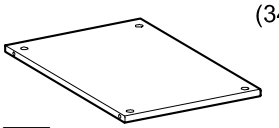


10 Small bottom (31.3 x 48cm)




11 Shelf x 3
(31.3 x 47.5cm)




12 Back plinth (96.7 x 4.5cm)

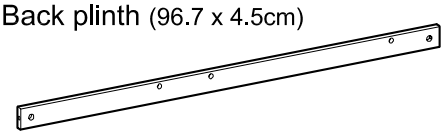


13 Front plinth (96.7 x 4.5cm)

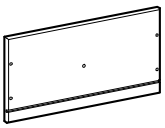

14 Drawer front x 3
(30.9 x 15.7cm)

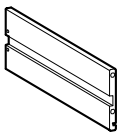


15 Left drawer side x 3
(34.2 x 10.7cm)

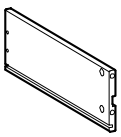


16 Right drawer side x 3
(34.2 x 10.7cm)



17 Drawer back x 3
(28.1 x 9cm)



18 Drawer bottom
(29.1 x 33.9cm)















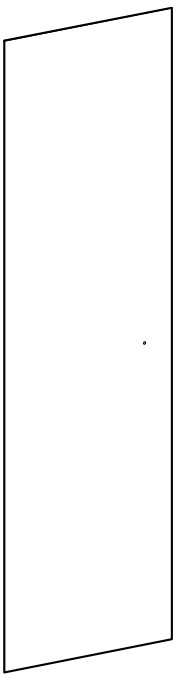



19 Back x 2
(171 x 49.1cm)

Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

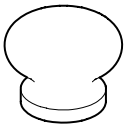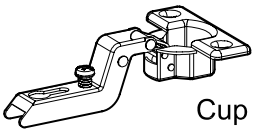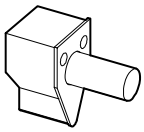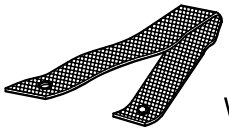
A  Cam x 22	**B**  Locking pin x 22	**C**  30mm Dowel x 4
D  14mm Screw x 36	**E**  25mm Screw x 10	**F**  35mm Screw x 18
G  16mm Nail x 30	**H**  Magnet x 3	**I**  Knob x 6
J  Hanging rail cup x 2	**K**  Cup hinge x 8	**L**  Cross plate x 8
M  636mm Hanging rail x 1	**N**  Miniblock x 6	**O**  Shelf support x 12
P  50mm Screw x 6	**Q**  Allen key x 1	**R**  20mm Screw x 2
S  Wall strap x 2	**T**  Wall plug x 2	**U**  Washer x 4

V 


1653mm Joining strip x 1


Tools required



Philips screwdriver (medium & large)



Flatblade screwdriver (medium)

Suitable drill bit (for use with wall plug)

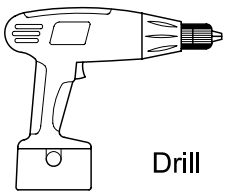

Drill


Small hammer



Ruler/tape measure

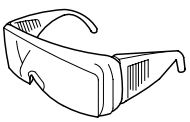
Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Components - Key Diagram

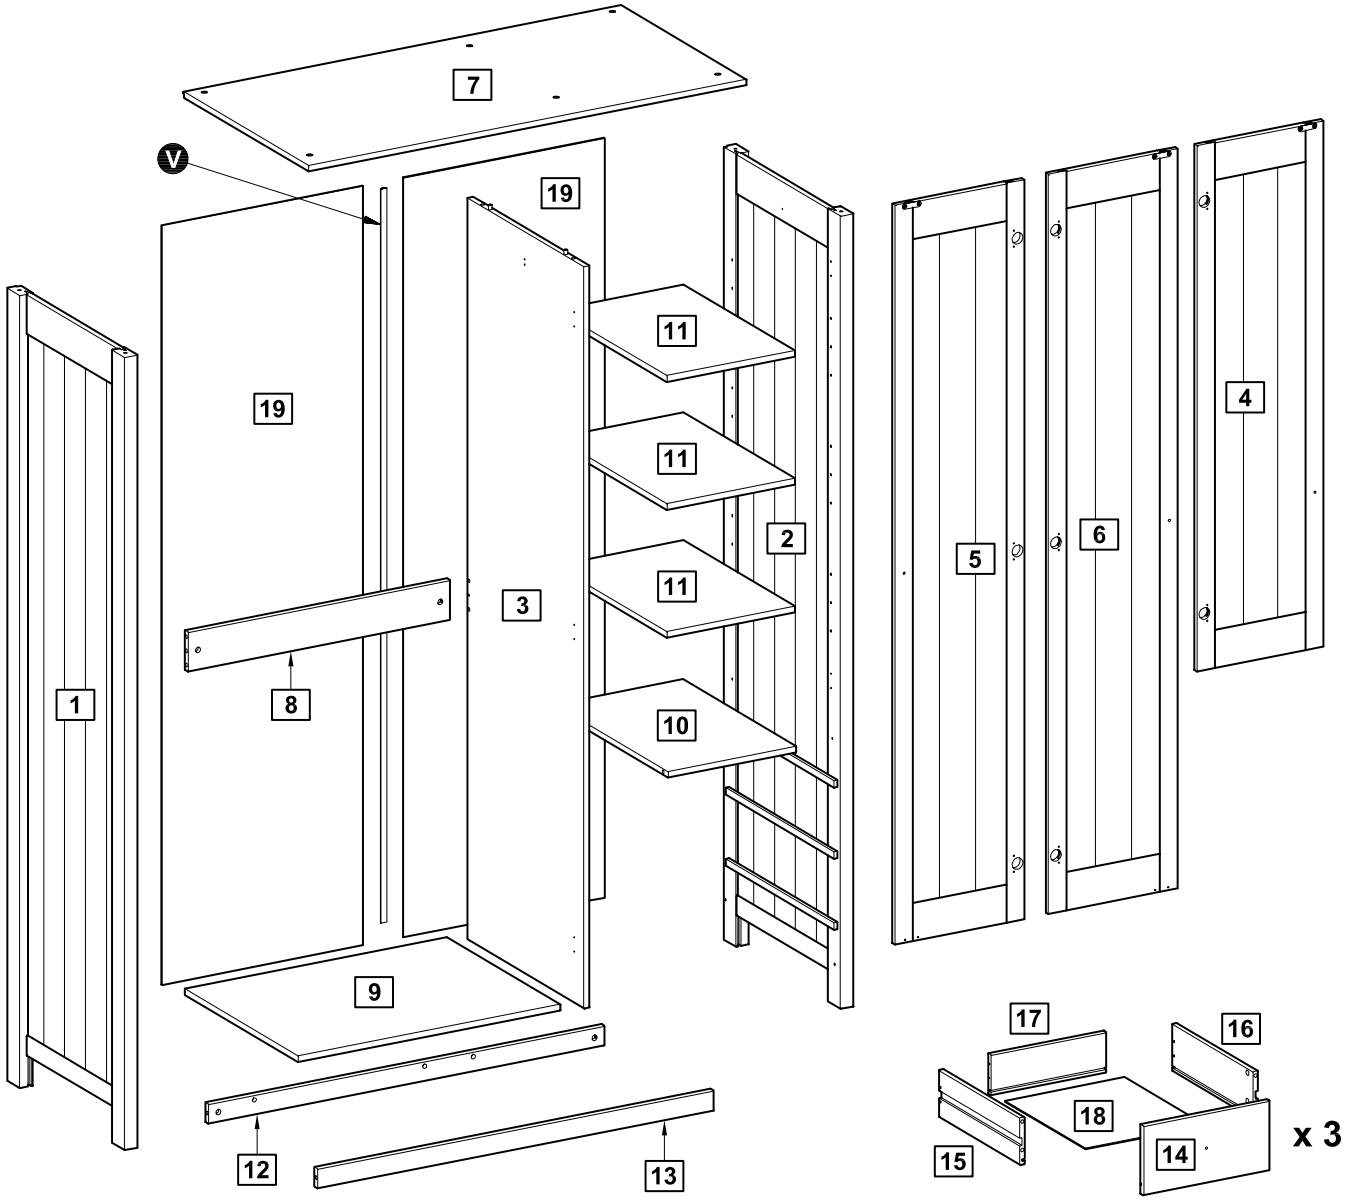


Function of Cam and Locking Pin

Step 1:
Fix the locking pin to the wooden panel.

Step 2:
Push the wooden panel with the attached locking pin onto the other wooden panel.

Step 3:
Place the cam into the hole, arrow pointing towards the locking pin.

Step 4:
Tighten: Turn the cam to the right.

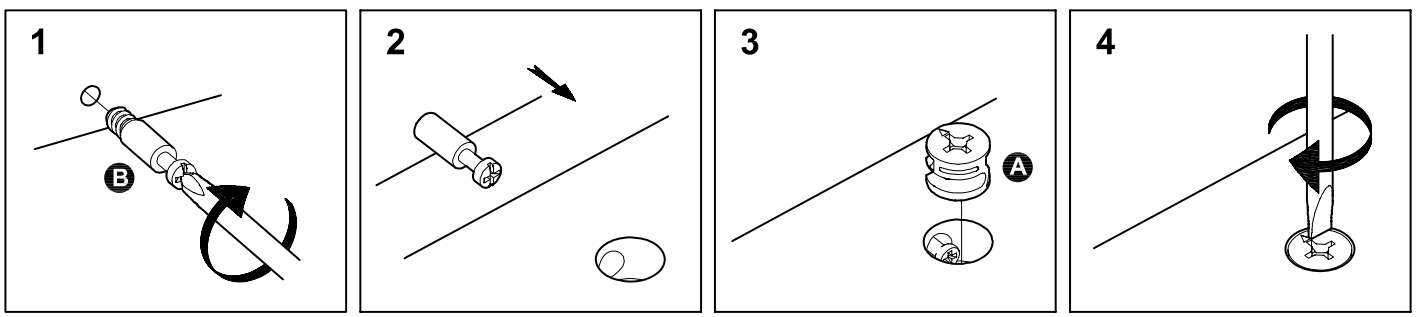

Assembly Instructions


Step 1

Mounting the cross plates to the sides.

Fix the cross plates L to the sides 1 & 2 using the screws E into the holes indicated.

It is important that the cross plates are placed exactly as shown.


The short end of the cross plates must point towards the front edge of the sides.

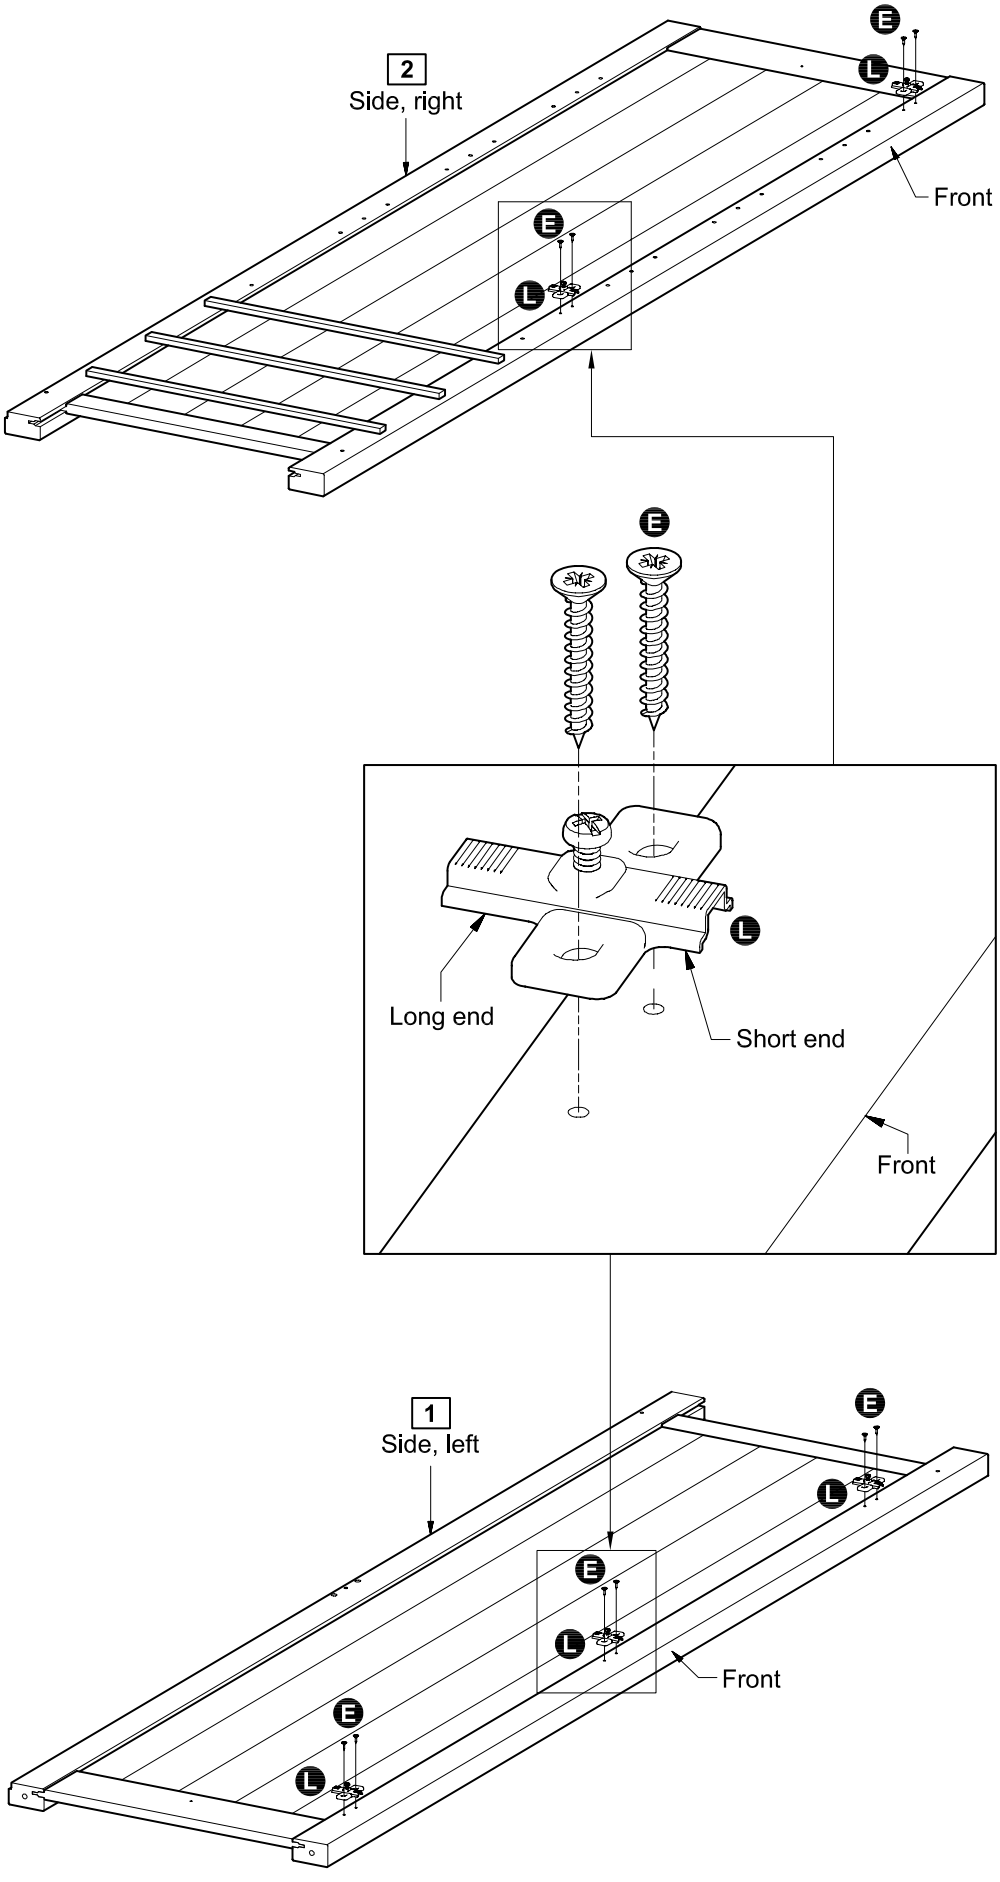


Step 2

Mounting the hanging rail cups to the sides.

Fix the hanging rail cups Ⓙ onto the sides [1] using screws Ⓓ into the pre-drilled holes.

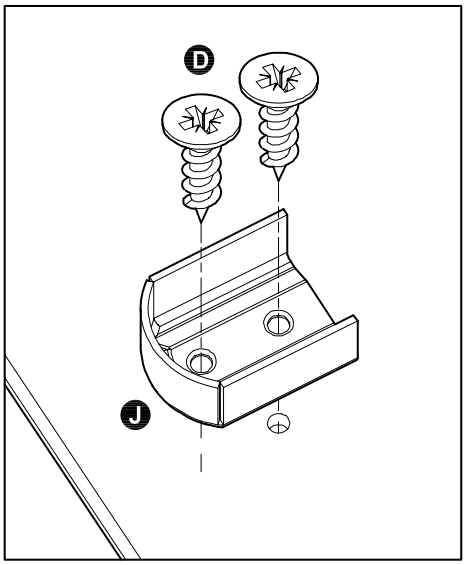

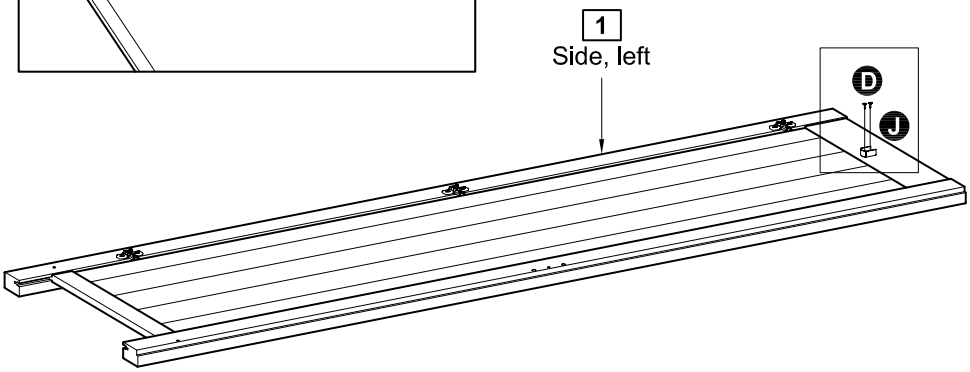



Step 3

Mounting the locking pins to the sides.

Screw the locking pins Ⓑ into the holes indicated on the sides [1] and [2].

Note: Insert locking pins Ⓑ as far as shown. **Do not over tighten.**

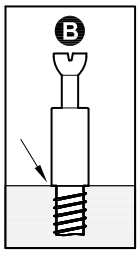

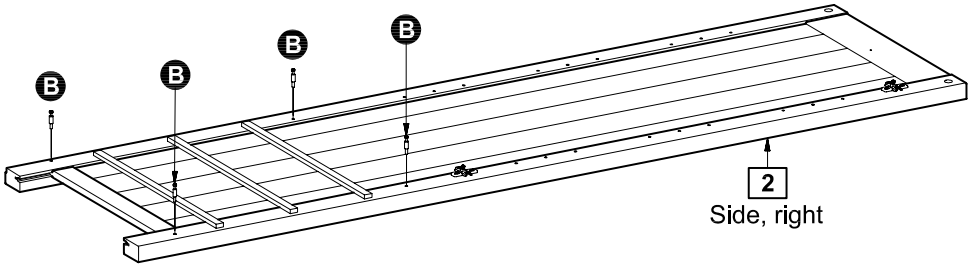


Step 4

Mounting the cross plates to the divider.

Fix the cross plates (L) to the divider [3] using screws (D) into the holes indicated.

It is important that the cross plates are placed exactly as shown.


The short end of the cross plates must point towards the front edge of the sides.

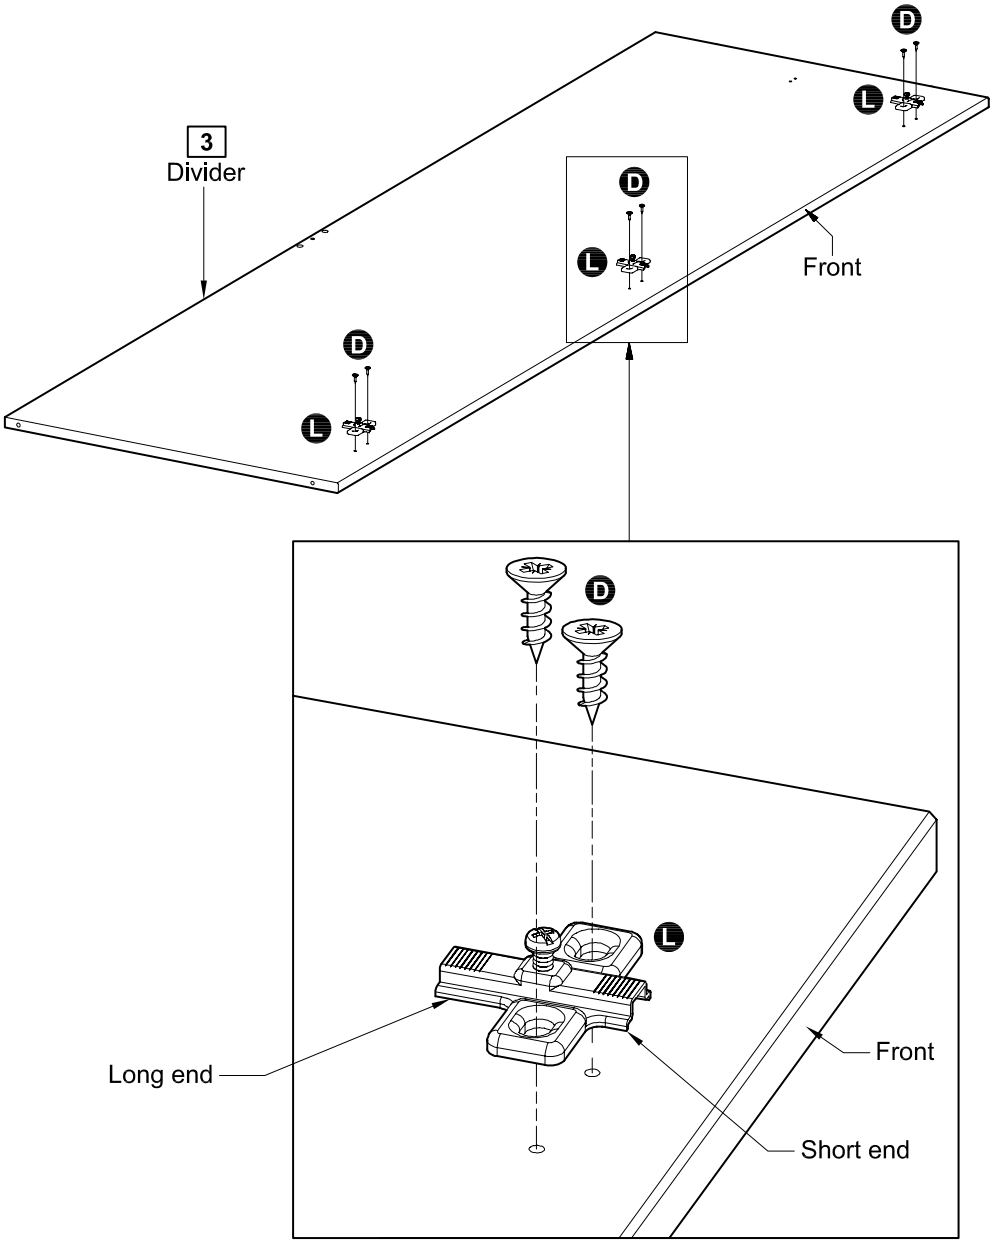

Step 5

Mounting the hanging rail cup to the divider.

Fix the hanging rail cup (J) onto the left hand side of divider [3] using screws (D) into the pre-drilled holes.

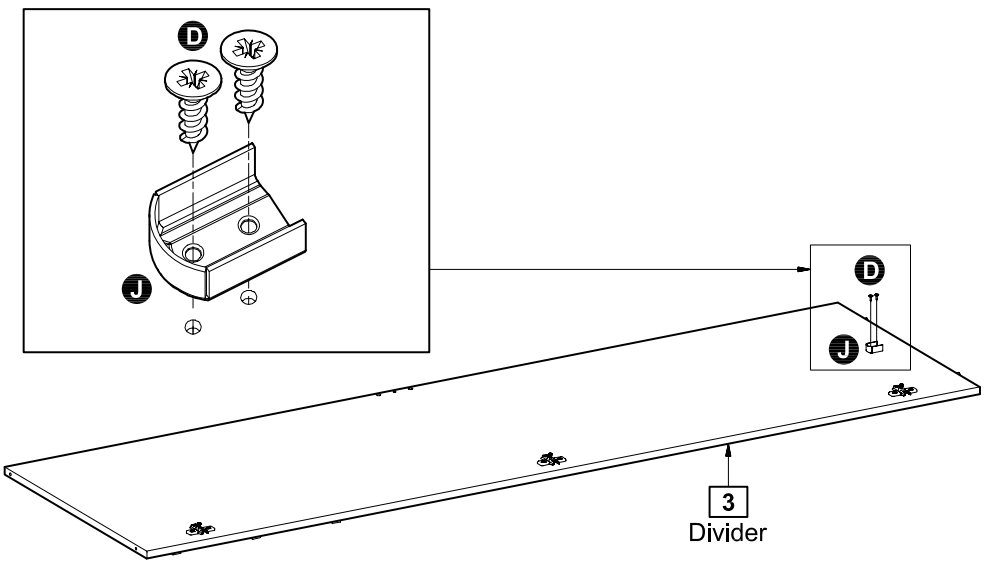


Step 6

Mounting the locking pin to the left hand side of the divider.

Screw the locking pin B into the hole indicated on the left hand side of the divider 3.

Note: Insert locking pin B as far as shown. **Do not over tighten.**

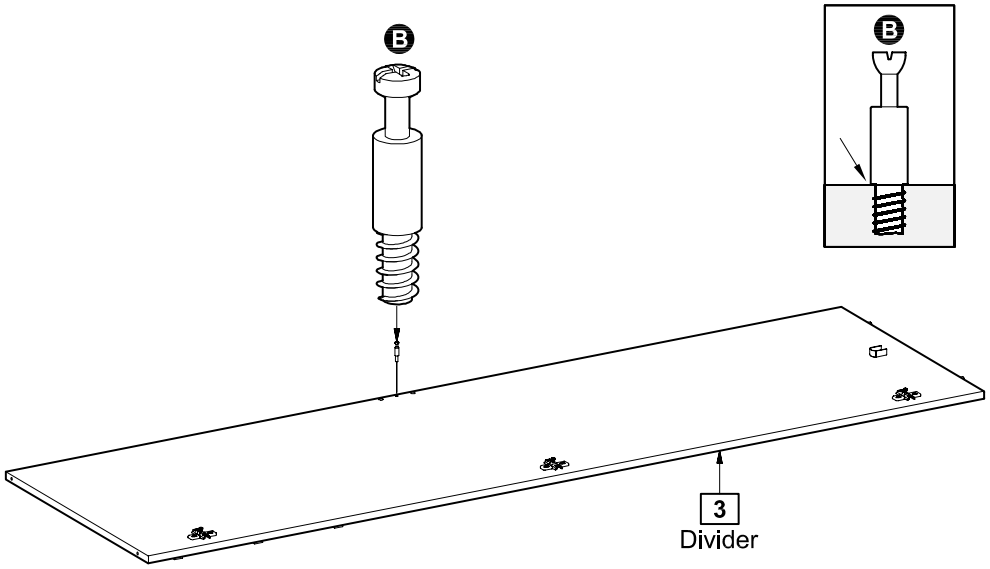


Step 7

Mounting the locking pins to the right hand side of the divider.

Screw the locking pins B into the holes indicated on the right hand side of the divider 3.


Note: Insert locking pins B as far as shown. **Do not over tighten.**

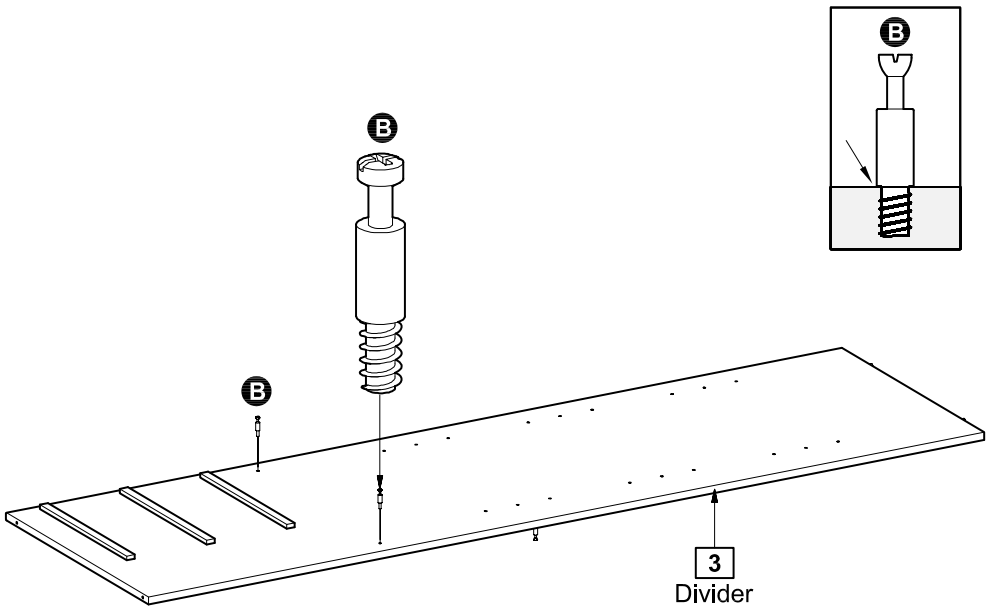

Step 8

Adding the dowels to the rail.


Insert the dowels C into the holes indicated on the rail 8.

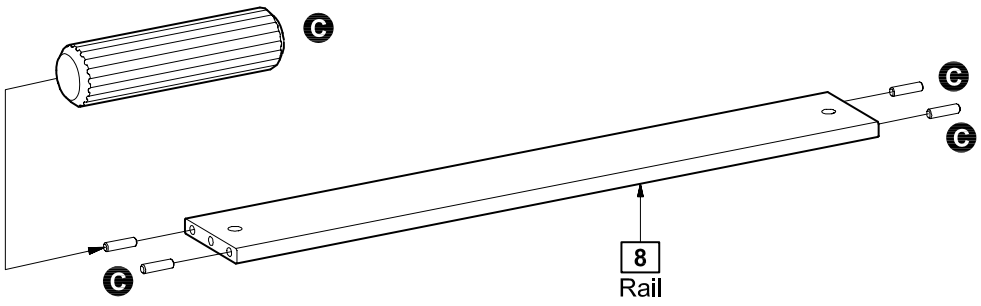

Step 9

Adding the miniblocks to the plinths.

Insert the miniblocks (N) into the holes indicated on the plinths [12] and [13].

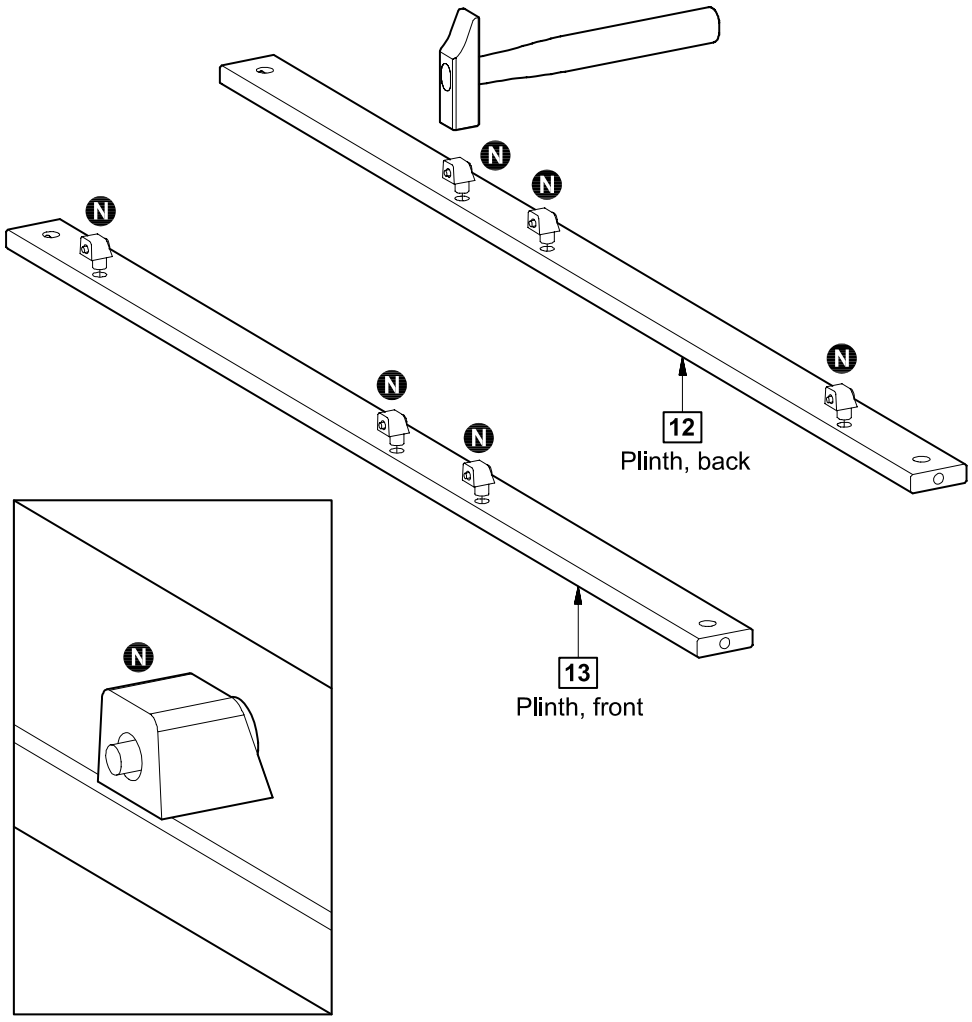


Step 10

Mounting the plinths to the bottom.

Fix the plinths [12] and [13] to the bottom [9] using screws in the miniblocks (N).

The front plinth [13] must be placed near the chamfered edge of the bottom.

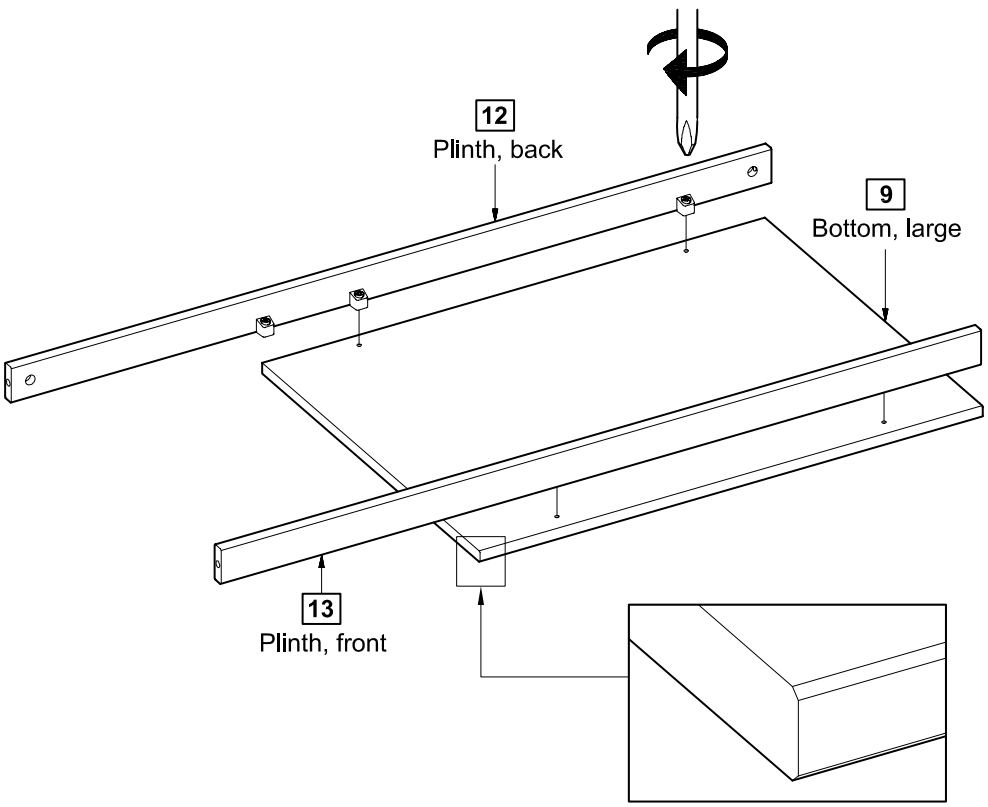

Step 11


Adding the plinths and the rail to the left hand side.

Fit the rail [8] and the plinths [12] and [13] onto the left hand side [1].

See page 4 "Function of cam and locking pin".

Place the cams Ⓐ into the holes indicated, arrows pointing towards the side / locking pins.

To tighten cams: Turn to the right using a screwdriver.

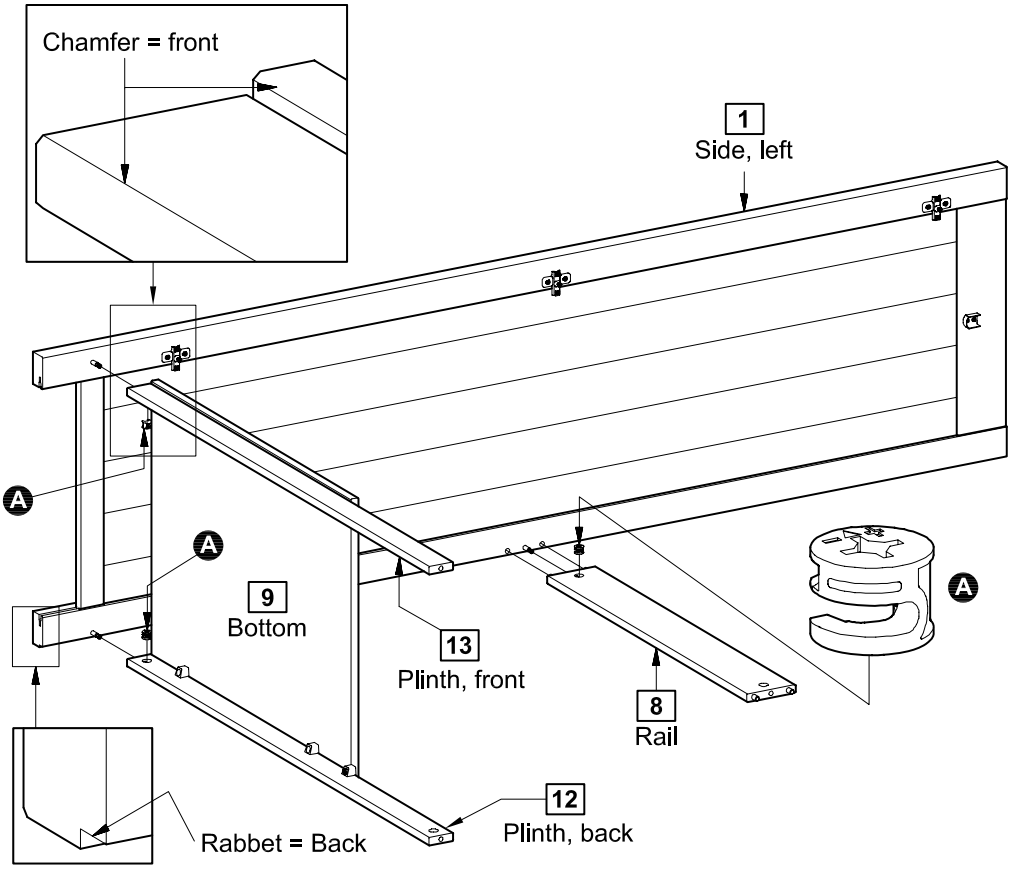

Step 12

Adding the divider to the plinths and the rail.


Fit the divider [3] onto the bottom [9] and the rail [8].

See page 4 "Function of cam and locking pin".

Place the cam Ⓐ into the hole indicated, arrow pointing toward the locking pin.

To tighten cams: Turn to the right using a screwdriver.

Finally fix the divider [3] onto the plinths [12] and [13] using the miniblocks Ⓝ.

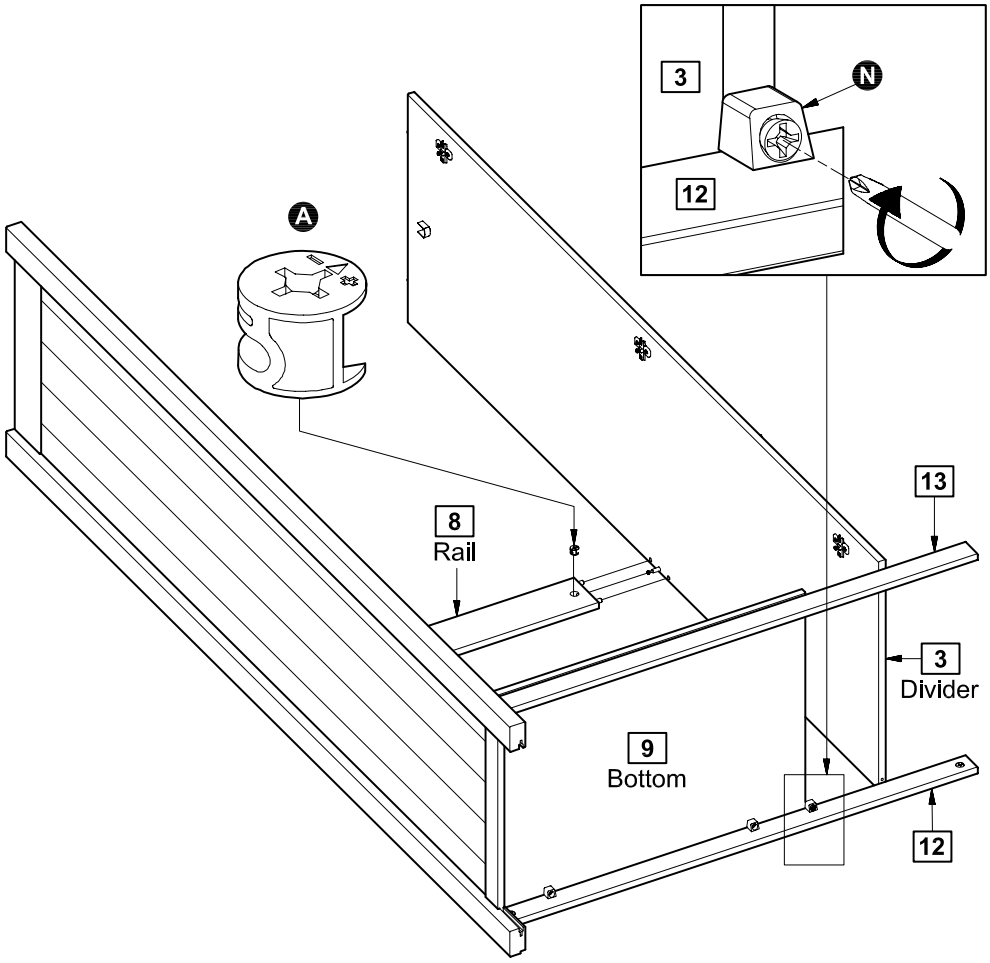

Step 13


Adding the small bottom to the divider.

Fit the small bottom [10] onto the divider [3].

See page 4 "Function of cam and locking pin".

Place the large cams Ⓐ into the holes indicated, arrows pointing towards the locking pins.

To tighten cams: Turn to the right using a screwdriver.

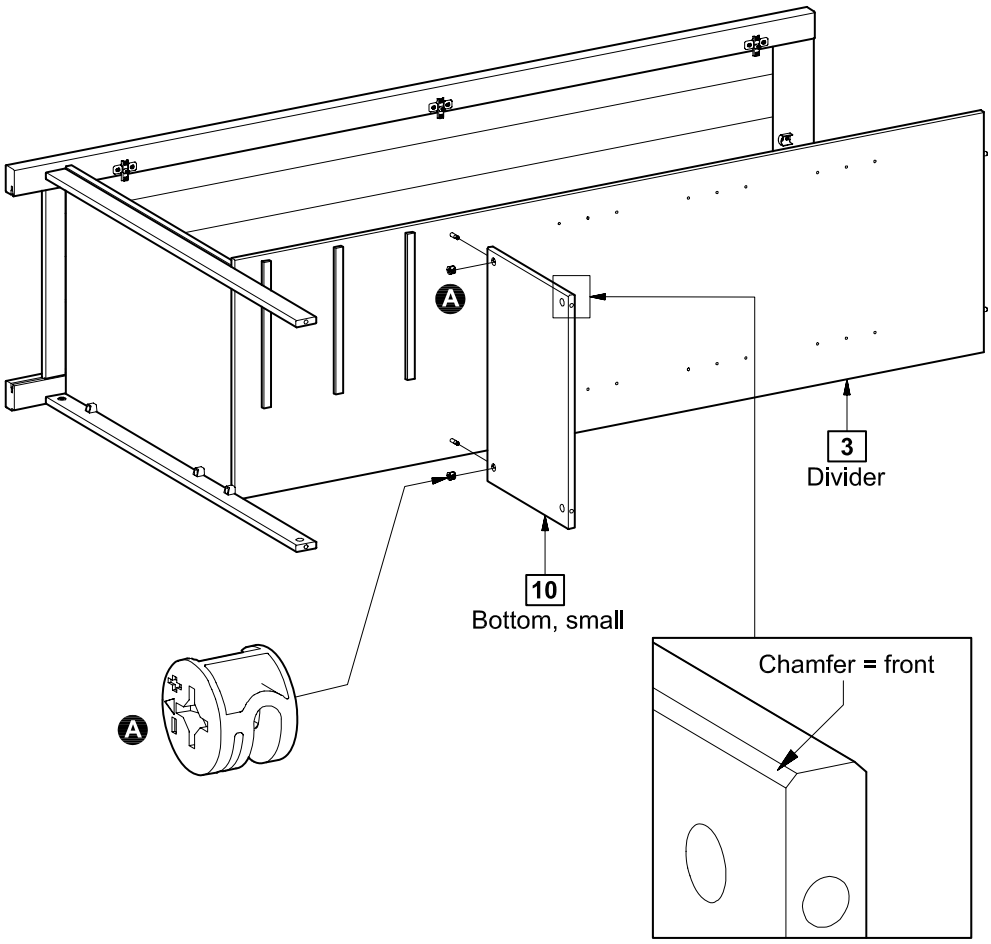

Step 14


Adding the right hand side to the small bottom and the plinths.

Fit the right hand side [2] onto the plinths [12] and [13] and the small bottom [10].

See page 4 "Function of cam and locking pin".

Place the large cams Ⓐ into the holes indicated, arrows pointing towards the locking pins.

To tighten cams: Turn to the right using a screwdriver.

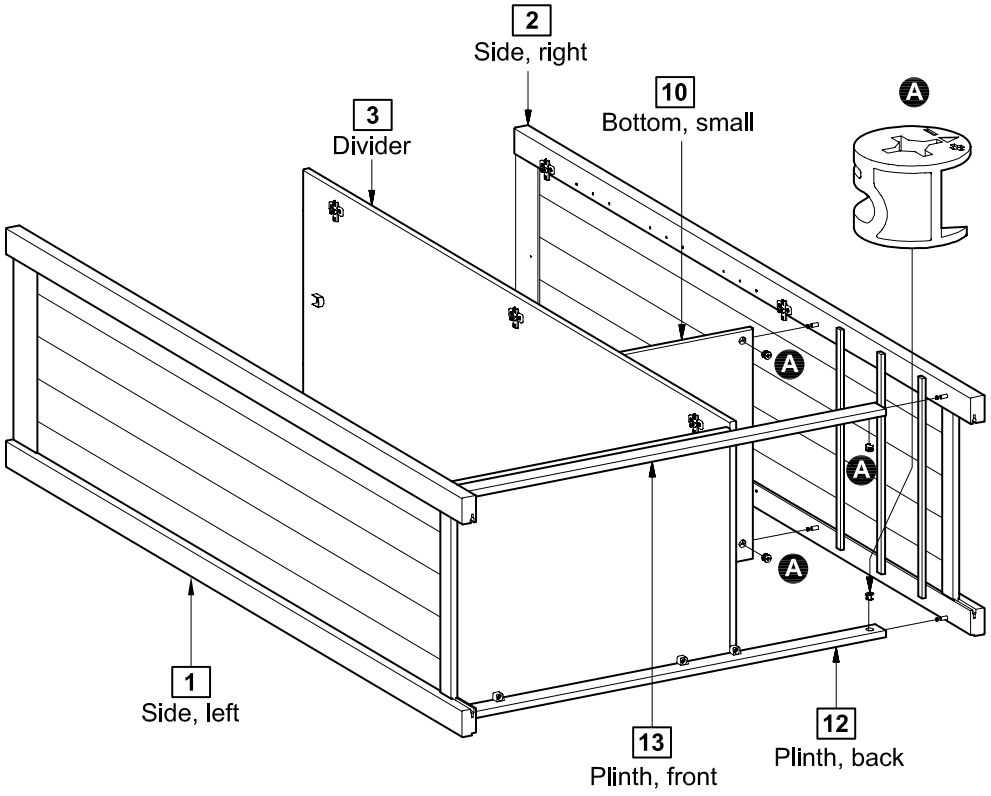


Step 15

Mounting the magnets to the top.

Fix the magnets (H) to the top [7] using screws (D) into the pre-drilled holes.

It is important that the magnetic part points towards the front edge of the top.

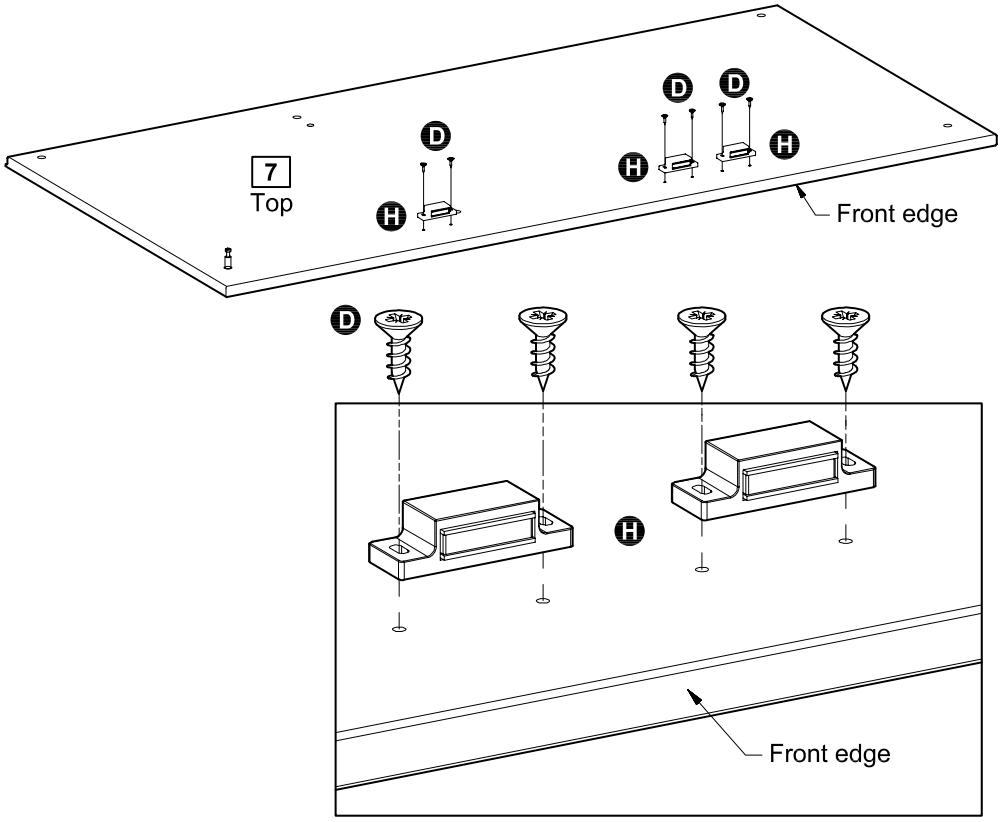


Step 16

Mounting the top onto the sides and divider.

Press the top [7] onto the sides [1] & [2] and the divider [3].

Fix the top using screws (P) and allen key (Q) through the holes indicated.

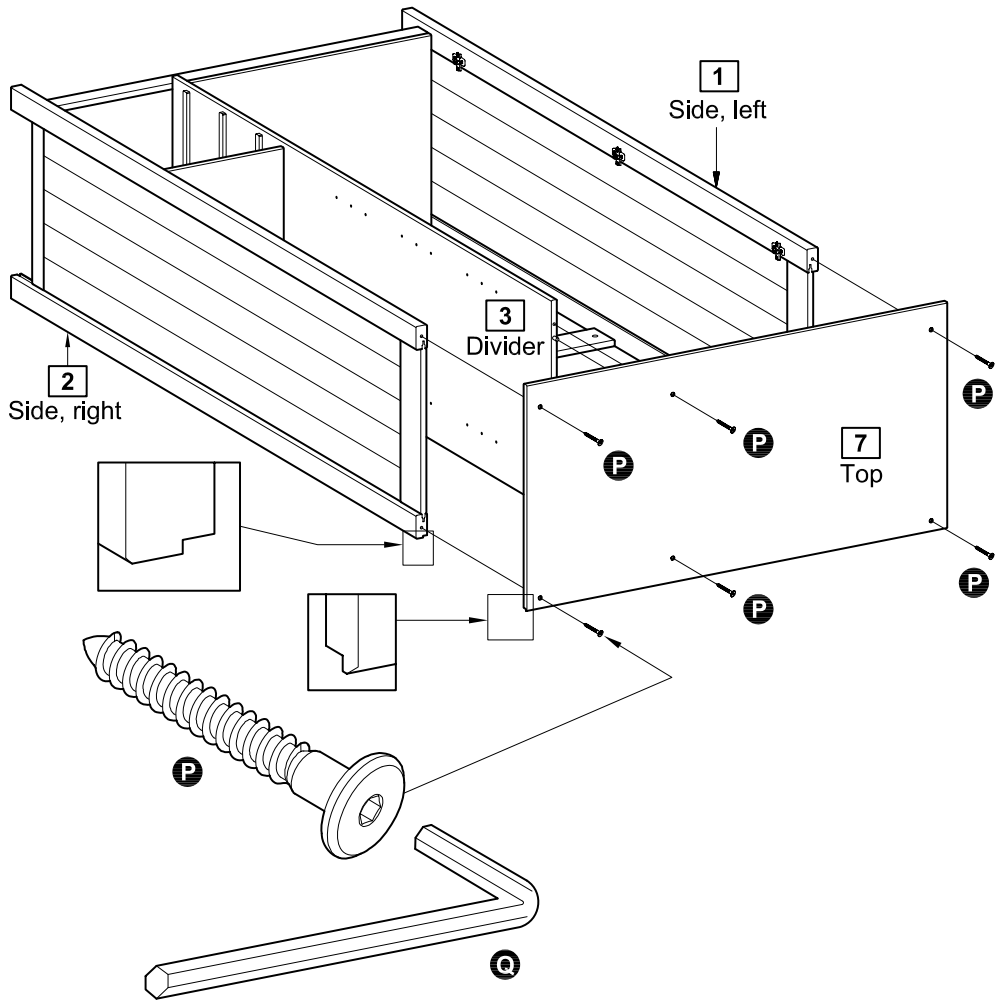

Step 17

Adding the back to the carcass.

Place the back [19] into the rabbet of the top [7] and the side [2].


Ensure that there is no gap between the side back, nor between the top and the back.

Fasten the back with nails (G) along the top.

The angle between the top and the side must be 90 degrees.

To accomplish this, ensure that there is no gap between the side & the back.

Fasten the back with nails (G) along the sides.

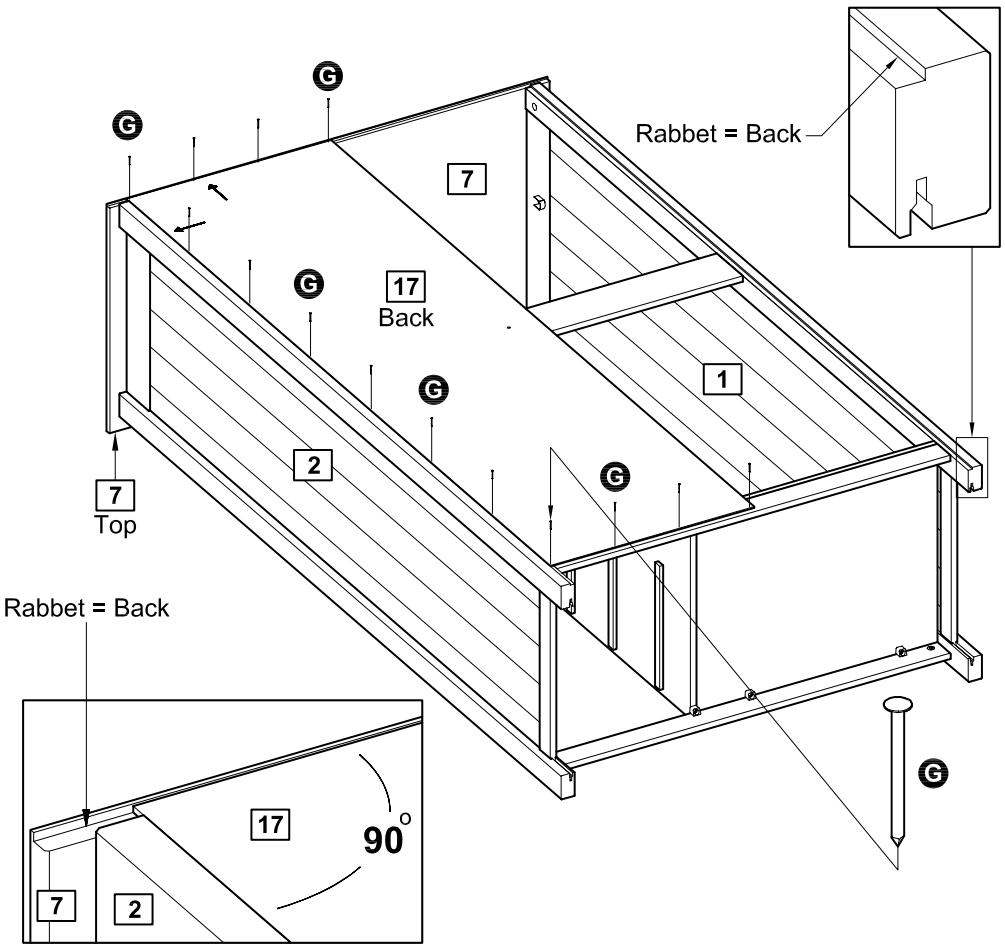

Step 18

Adding the back & the joining strip to the carcass.


Place the joining strip (V) onto the back.

Place the back [19] into the rabbet of the top [7] and the side [1].

Ensure that there is no gap between the side & back, nor between the top and the back.

Fasten the back with nails (G) along the side and bottom.

Fix the back onto the support rail [8] using screws (D) into the pre-drilled holes.

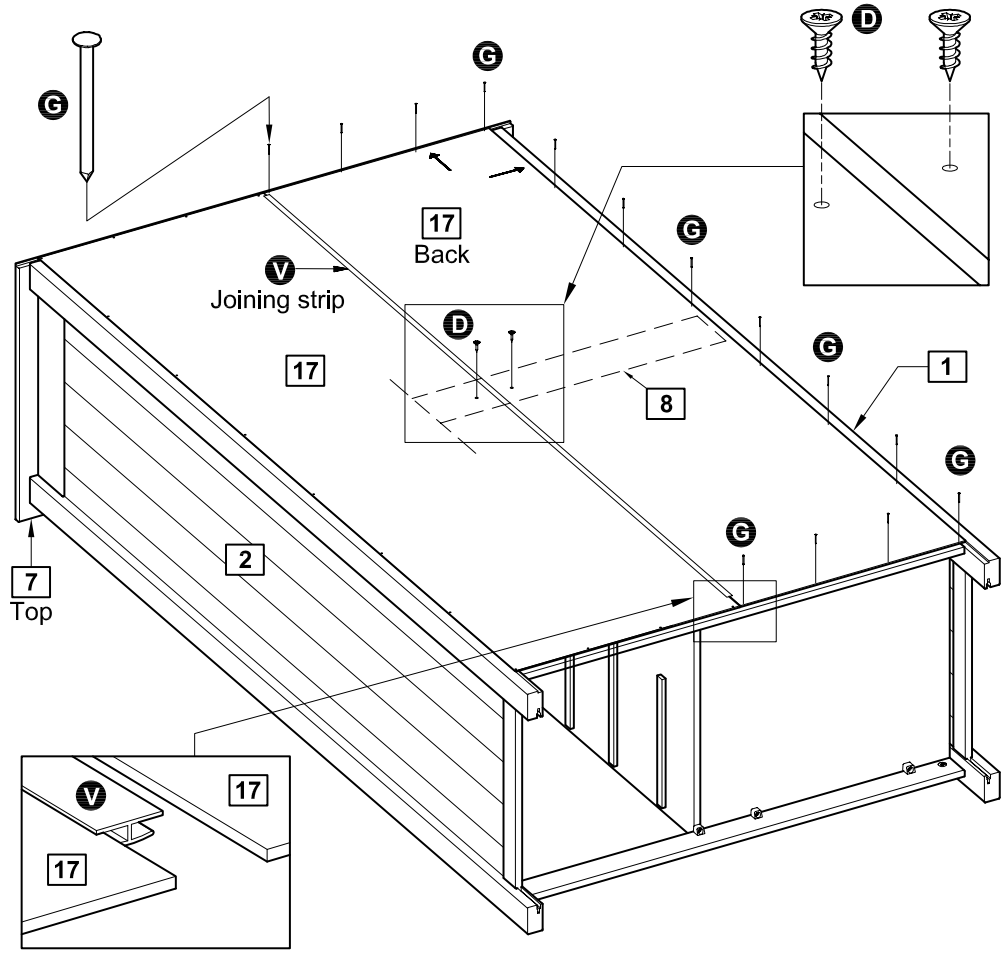


Step 19

Drawer assembly.


a: Fix the drawer sides [15] and [16] to the drawer back [17] using screws (F).

a:

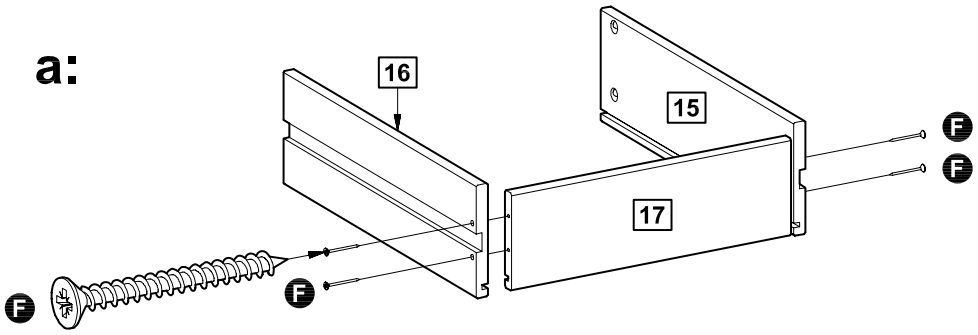

b: Slide the drawer bottom [18] into the grooves of the drawer frame.


b:

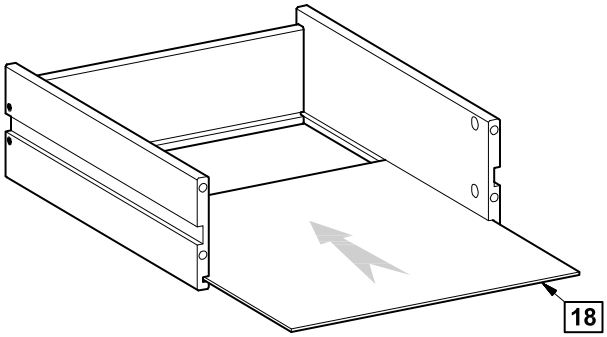

c: Screw the locking pins (B) into the holes indicated on the drawer front [14].


Note: Insert locking pins (B) as far as shown. **Do not over tighten.**

c:

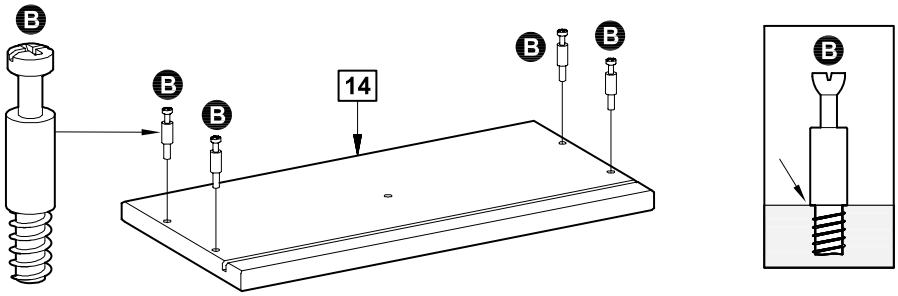

d: Press the drawer front [14] onto the drawer sides [15] and [16]. Place the cams (A) into the holes indicated, arrows pointing towards the drawer front / locking pins.
To tighten cams: Turn to the right using a screwdriver.
"Function of cam and locking pin" see page 4.


d:

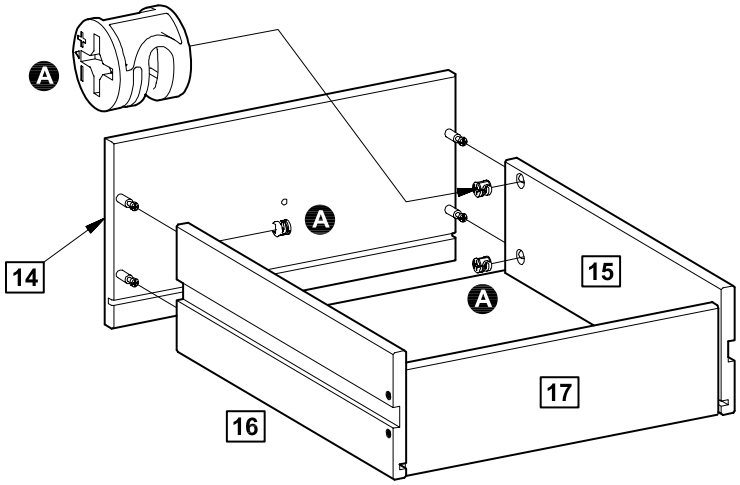

e: Fix the knob (I) to the drawer front [14] using screw (F).

Repeat with remaining drawer.

e:

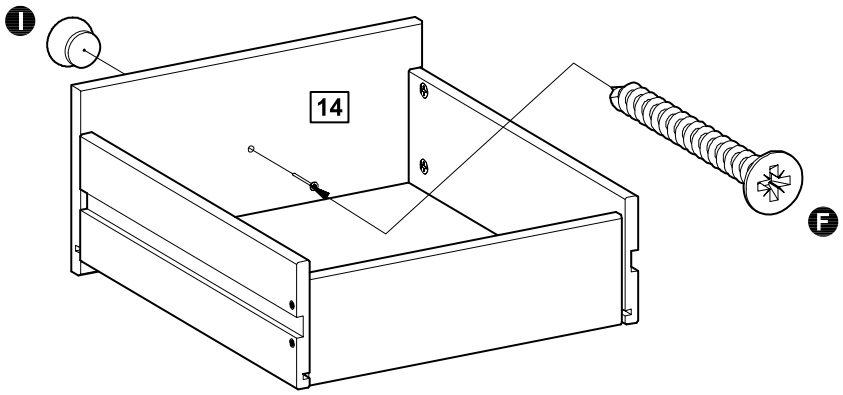

Step 20


Adding the shelves, the hanging rail and the drawers.


Lower the hanging rail Ⓜ into the hanging rail cups Ⓙ.

Place the shelf supports Ⓞ into the holes indicated.

Lower the shelves 11 onto the shelf supports.

Slide the drawer onto the drawer runners.

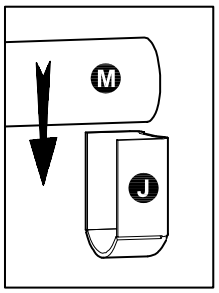

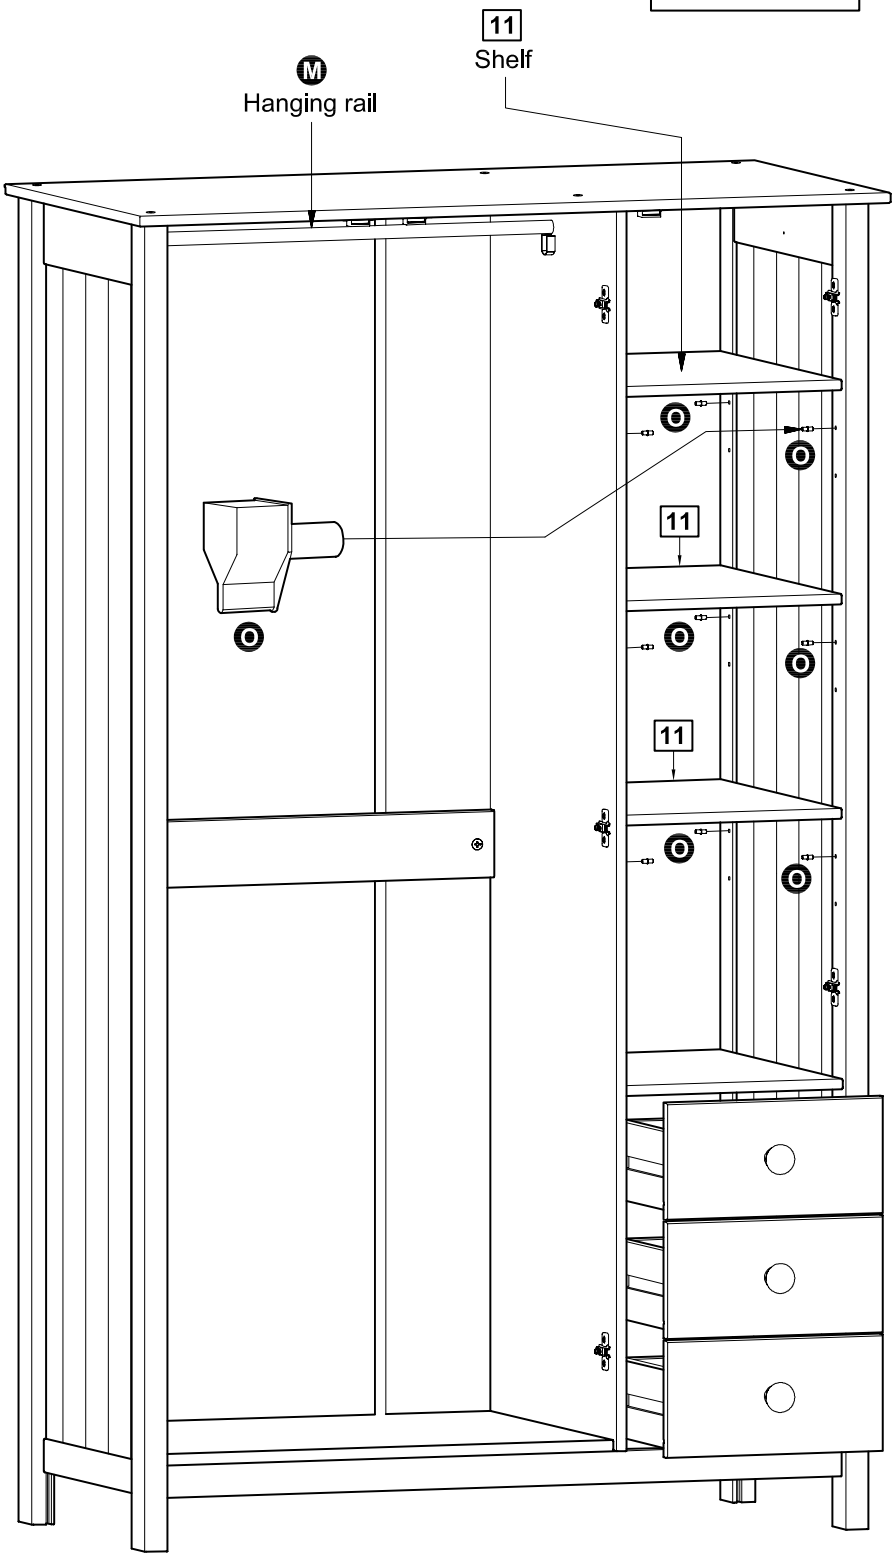



Step 21

Mounting the cup hinges to the doors.

Fix the cup hinges (K) into the holes indicated on the doors [4] and [5] and [6].

Attach the hinges using screws (D) into the holes indicated.

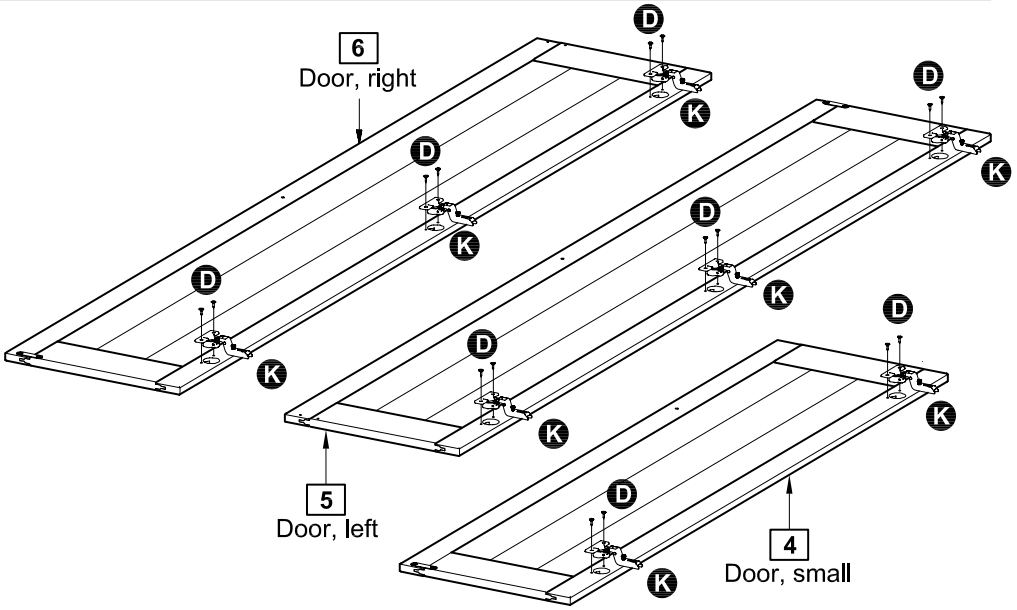


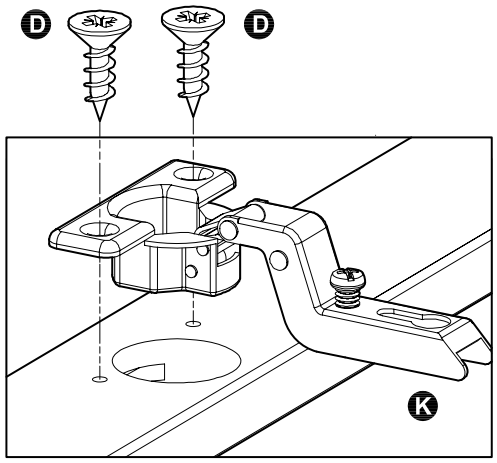

Step 22

Mounting the knobs to the doors.

Fasten the knobs (I) to the doors [4] and [5] and [6] using screws (F).

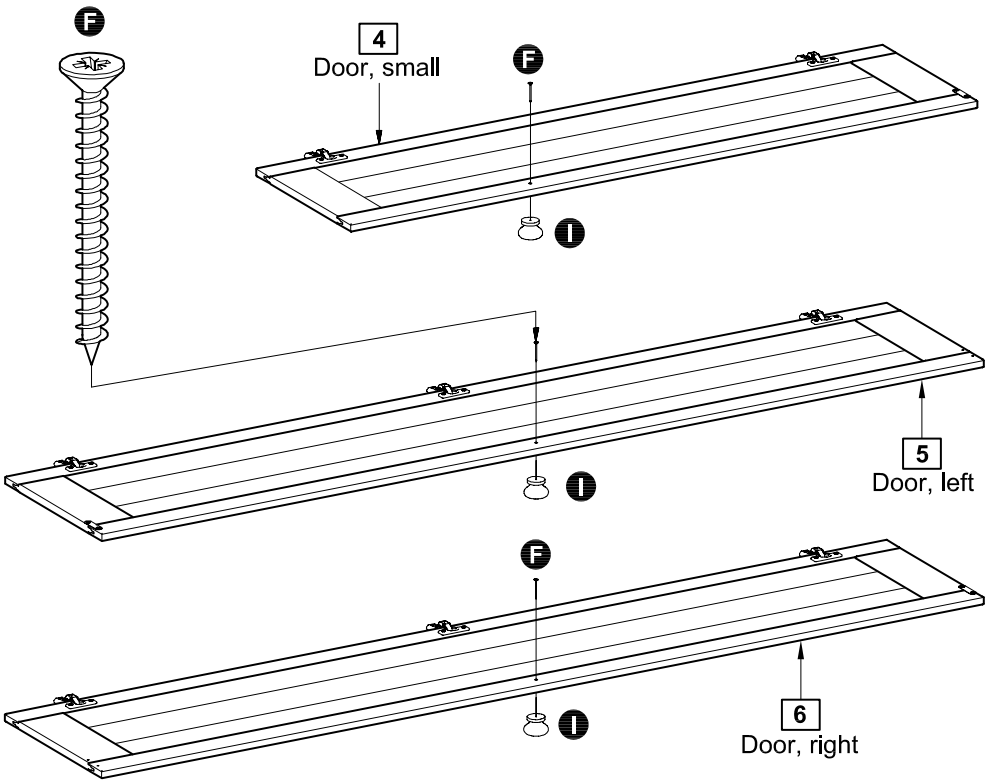

Step 23

Mounting the doors to the carcass.


When placing the doors, the magnetic catch plates must be at the top of the doors.


a: Place the adjustment hole of the cup hinge at the level of the fixing screw. Push the cup hinge towards the cross place - placing the fixing screw in the wider part of the adjustment hole.


Important: Ensure you catch all three of the fixing screws.


b: Push the door / cup hinge inwards - placing the fixing screw in the narrow end of the adjustment hole.


c: Tighten the fixing screws of all three of the cross plates.

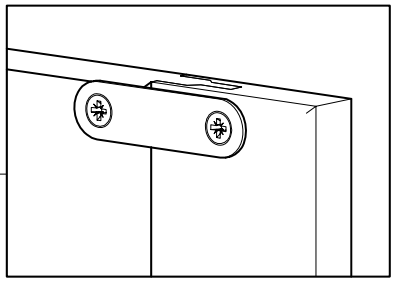

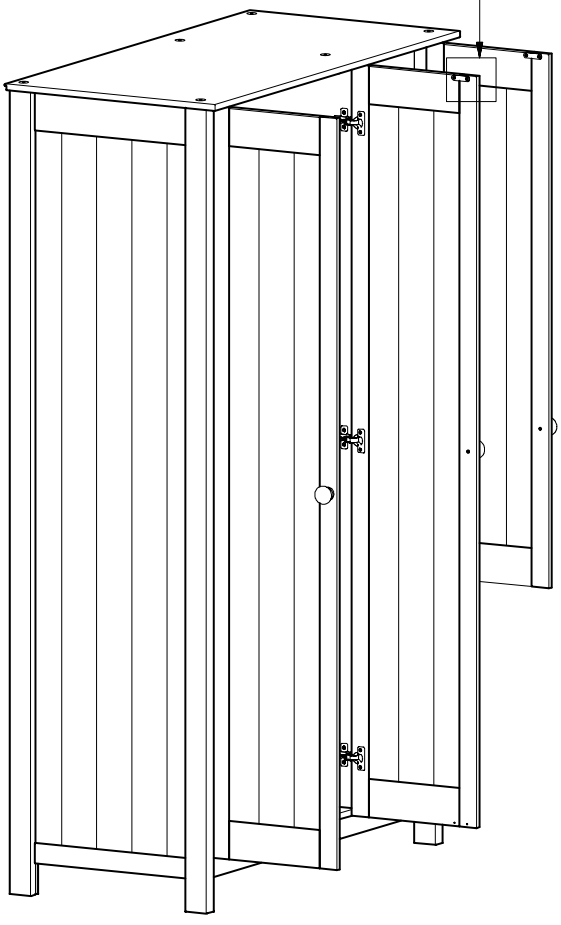

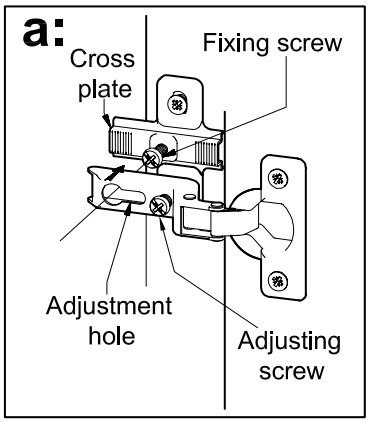

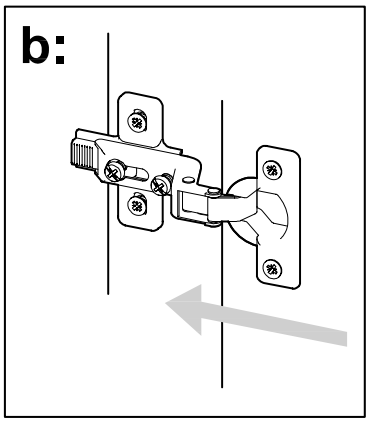

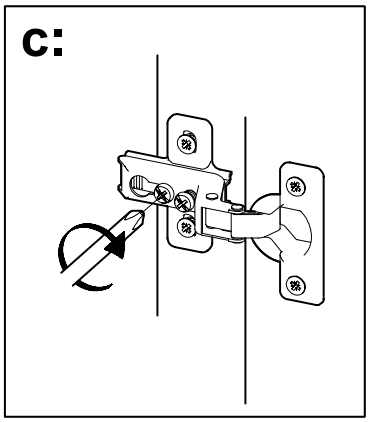



Assembly Instructions

Step 24

Adjusting the doors.


Make sure the wardrobe is placed on a level surface before you begin to adjust the hinges.

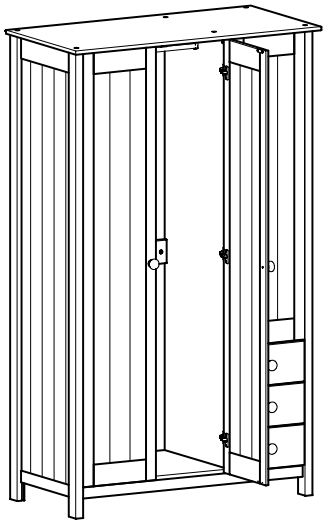

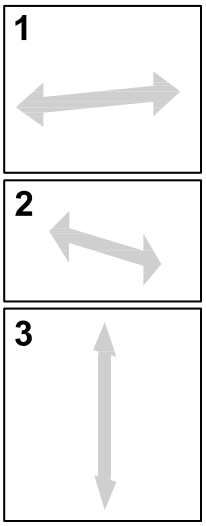


Right or left:


Loosen the fixing screw.

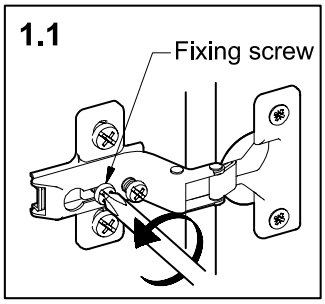


To adjust the door towards the lefthand side - turn the adjusting screw to the right.

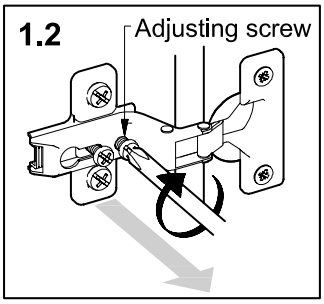

To adjust the door towards the right hand side - turn the adjusting screw to the left.

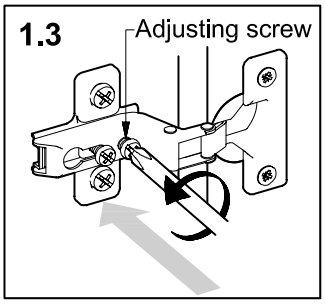


Continue adjustment - see 2 - or tighten the fixing screw of the cross plates

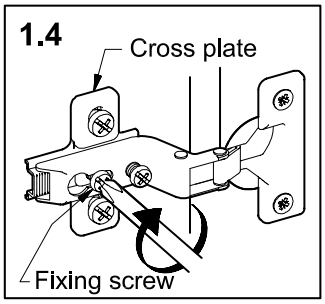


Forwards or backwards:


Loosen the fixing screw.

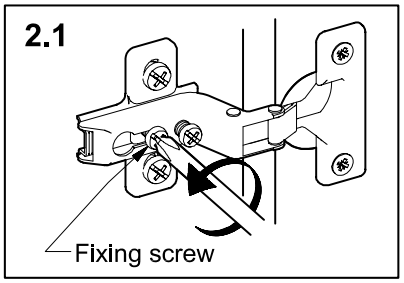

Push the cup hinges / the door back or forth to adjust. The door should level with the front edge of the sides.

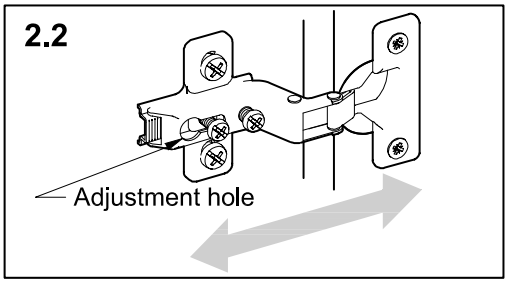


Tighten the fixing screws of all the cross plates.

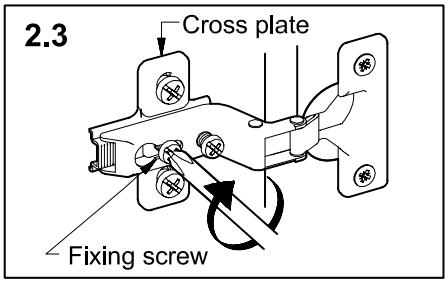


Up or down:


Loosen the two screws Ⓔ of each cross plate, but only as much as it will allow the cross plate to move up and down.

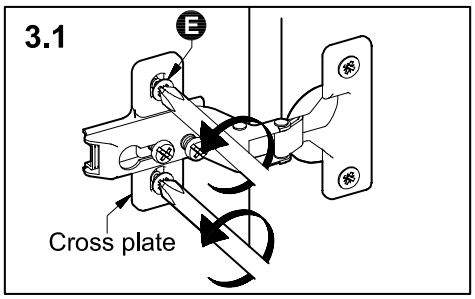

Adjust the cross plate / door.

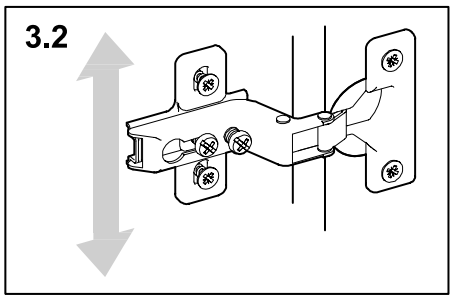

Tighten the screws Ⓔ of all the cross plates.

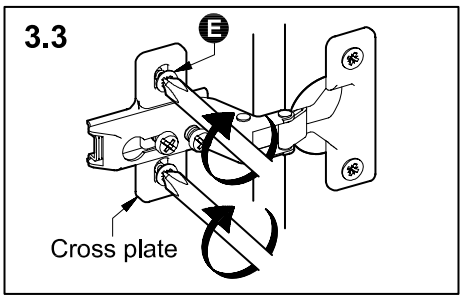

Step 25

Fixing to wall.

It is recommended that the wardrobe is fixed to a wall.

Fix wall straps (S) to top of wardrobe using screws (D).

With help, move wardrobe into position.

Warning:
The wardrobe is heavy.
Lift with care.


Mark fixing holes on wall and remove wardrobe.

Drill 7mm holes and insert wall plugs (T).

Warning:
Before drilling, check wall for hidden pipes and cables.


Reposition wardrobe and fix wall straps using screws (R) .

Assembly is complete.

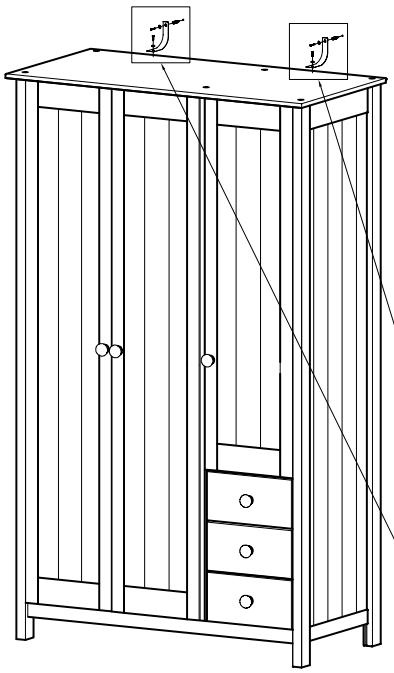

Note: Wall plugs supplied are for solid walls only.

The correct type of fixing must be used for your wall, seek professional advice if in doubt.

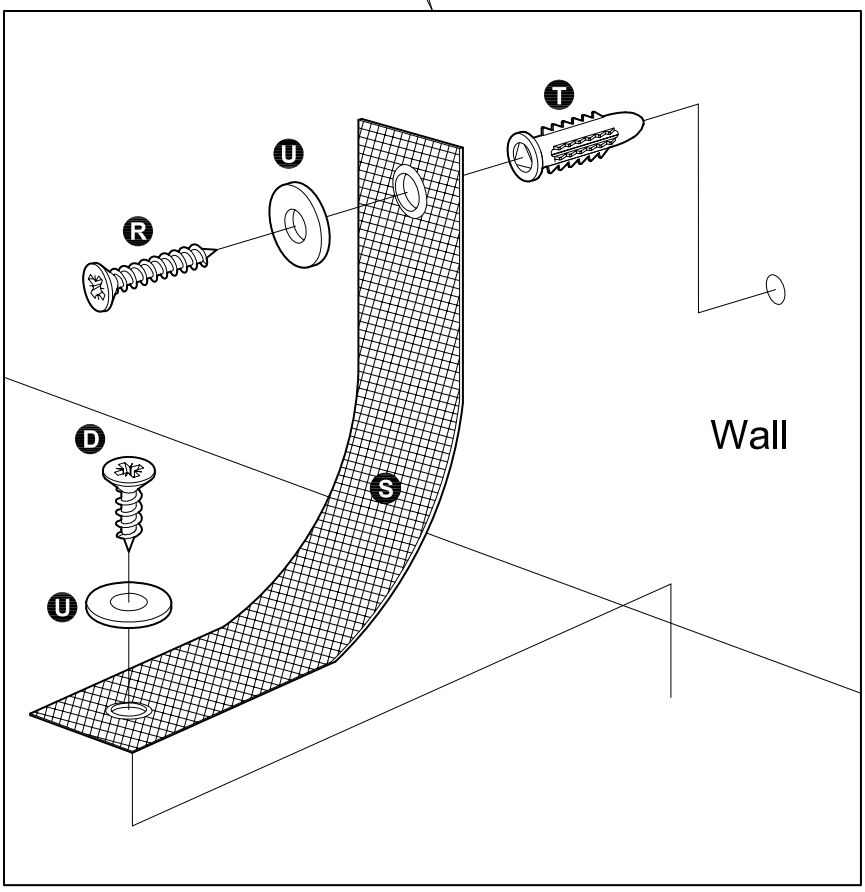


If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800

A Guide to - Wall Mouting & Fixings

Important note:

If plastic wall plugs are supplied with your product:

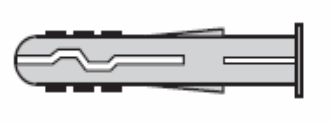

- these are only suitable for use in masonry walls.
If you are in ant double about the correct wall plugs for your wall, seek professional advice.
Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: **When drilling into walls always Check that there are no hidden wires or pipe etc**

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

1: **General rule:** Always use a larger screwand wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size..
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plus are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are ma of brick, breeze block, concrete, stone or wood.

No 1"**General Purpose" wall plug**

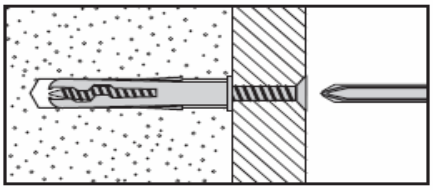


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No 2 **" Plasterboard" wall plug**

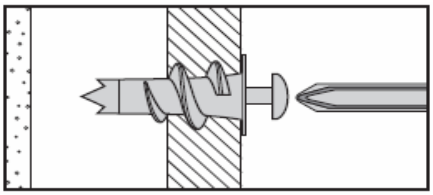


For use when attaching light loads on to plasterboard partitions.

No 3 **" Cavity Fixing" wall plug**

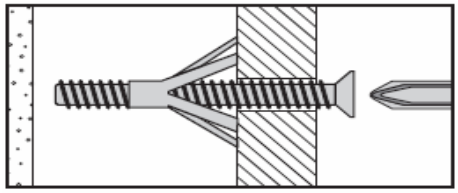


For use with plasterboard partitions or hollow wooden doors.

No 4**" Cavity Fixing – Heavy duty" wall plug**

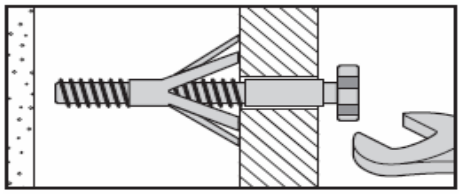


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No 5 **" Hammer Fixing" wall plug**

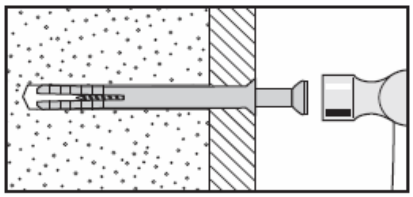

For use with walls stuck with plasterboard.The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No 6 **" Shield Anchor" wall plug Heavy Loads**

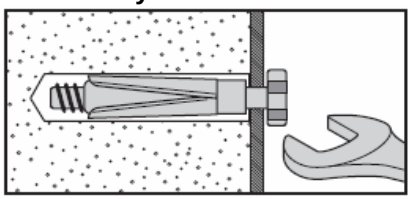

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Dear Customer.

Please note that the product you have purchased is a natural living timber.

Just like nature itself, wood varies in shape and colour. Knots, vein patterns, resin pockets and colour differences contribute to giving the piece of furniture its beauty and form - a natural part of solid wood.

Although the tree has been cut down and dried, it is still alive and therefore will react to high and low temperatures, light, humidity, drought and time.

In cold and dry periods, the wood contracts which may lead to small cracks in the piece of furniture. The reverse happens in warm and humid periods where the wood expands and this may result in slight unevenness.

The colour of the wood also changes with time, particularly if the furniture is place in a light place. This is a natural process and part of owning a piece of furniture made of solid wood.

Any flexing that has occurred during transport will re-correct it self once this product is correctly assembled.

Tighten all joints of the furniture after six months.

Please keep these instructions in a safe place for future use.