3X3M POP UP GAZEBO WITH SIDE PANELS

Simple assembly instructions - please keep for future reference

IMPORTANT PLEASE NOTE

1.These POP-UP gazebo instructions are for illustration purposes and may not represent the product you have purchased Eg. Size and colour may vary

2.Read these instructions carefully and familiarise your self with the probedure before assembling the unit

3. Cherck that you have all the component parts following the list at below and familiriise your self with each part before proceeding

4.Take all the fitting out of the plastic bag and separate them into their groups

5. Ensure you have enough space to lay out all the parts before assembly

6. To avoid scratching it is recommednded that you assemble the unit on a soft level surface

IMPORTANTANT SAFETY INSTRUCTIONS-- This Gaxebo must erected by 2 people

- This Gazebo is not water proof, but is shower proof.
- This Gazebo is not a permanent structure and should be disassembled and stored away after use.
- Do not repack your Gazebo until completely dry.
- We recommend assembly by two persons under light or no wind conditions.
- This Gazebo must not be left erect in windy conditions.
- Do not place the Gazebo near lights, fireplaces, gas or electric heaters, candles, radiators, or any other sources of heat, fire or flammable liquids.
- Keep the Gazebo Fabric away from screws, nails, staples, hooks, etc to avoid damage to the fabric and frame.

CAUTION

Fire Precautions

- WARNING: This Gazebo features a Fabric cover that is not flame retardant and we recommend caution and common sense when in use.
- This Gazebo can burn.
- Do not use naked flames in or around the Gazebo. We recommend you advise no smoking while inside.
- This Gazebo has no flame retardant cooking area and should not be use to house BBQs or other cooking methods.

Fittings Supplied



8 x Peg



4 x Rope



18 x Curtain Ring

Simple Assembly Instructions

STEP 1

Stand the gazebo upright with one person either side of the gazebo. Take hold of each corner and walk backwards slowly, so that the gazebo opens up slightly. Lift the edge of the canopy to see a `V` Shape, pointing towards the ground. Take hold of the `V` shape (With markings 'LIFT HERE TO OPEN') lifting and pushing at the same time walk slowly backwards until the gazebo is fully expanded.

As shown in fig. 1 and fig. 2



Fig.1



Fig.2

STEP 2

One corner at a time, fix the frame into position by moving the black sliding assembly into its spring clip lock position at the top of **the uprights. As shown in Fig. 3 and Fig. 4**



Fig.3



Fig.4

STEP 3

Raise the roof height by extending the uprights into position, lifting evenly with your foot holding the upright base plate until the legs lock into one of the 2 extended positions

As shown in Fig.5 and Fig.6



Fig.5



Fig.6

STEP 4

Fix the fabric roof over each corner of the frame and secure the metal hooked clips into either of the three holes provided at the bottom of each leg. Then use the pegs to fix the base plates .

As shown in Fig. 7



Fig.7

STEP 5

Attach the guy ropes through the holes provided at the top of each corner of the uprights. Then attach one end to the Peg and drive the Peg into the ground

As shown in Fig.8 and Fig.9

The length of the Guy rope can be adjusted .

As shown in Fig.10



Fig8



Fig.9



Fig.10

STEP 6

Secure the gazebo.Hang on all Panels at the top using the Curtain Ring

As shown in Fig. 11



Fig.11

IMPORTANT:

Always use this product with caution and read the important safety instructions.

Care and Maintenance

Safety

To avoid any risk of suffocation to animals or children dispose of the plastic bags immediately.

Cleaning

As with all surfaces clean with a damp cloth and mild detergent, do not use bleach or abrasive products.

After-sales Telephone number for spare parts:0870 600 8990

Simple Dismantling Instructions

Important : This Gazebo must be dismantled by 2 people

IMPORTANT

- The gazebo must be dismantled by 2 people
- Do not use force when dismantling your gazebo.
- If your gazebo does not dismantle easily review each step
- The gazebo is not a permanent structure and must be dismantled during adverse weather conditions

STEP 1

Undo the metal clips as shown here.



STEP 2

Lower the height of each leg by pressing the clip lock pins on the uprights as shown.



STEP 3

One corner at a time, push in the clip lock pins in each black Sliding assembly; slide the assembly down the upright to enable folding of the frame as shown



STEP 4

Gently lift the edge of the canopy where you see a `V` shape with a label saying'LIFT HERE TO CLOSE' (see diagram) with two people opposite each other hold the top of the plastic bracket and lift upwards, do not lift from the underneath of the bracket as this could entrap your hand/fingers. Now walk slowly forward to the centre, and your gazebo will fold, as shown.

LIFT HERE






The gazebo is now ready for storage.

AFTER-SALES TELEPHONE NUMBER FOR SPARE PARTS:0870 600 8990

3x3 Pop Up Gazebo with Side Panels

Assembly Instructions - Please keep for future reference

650/1974

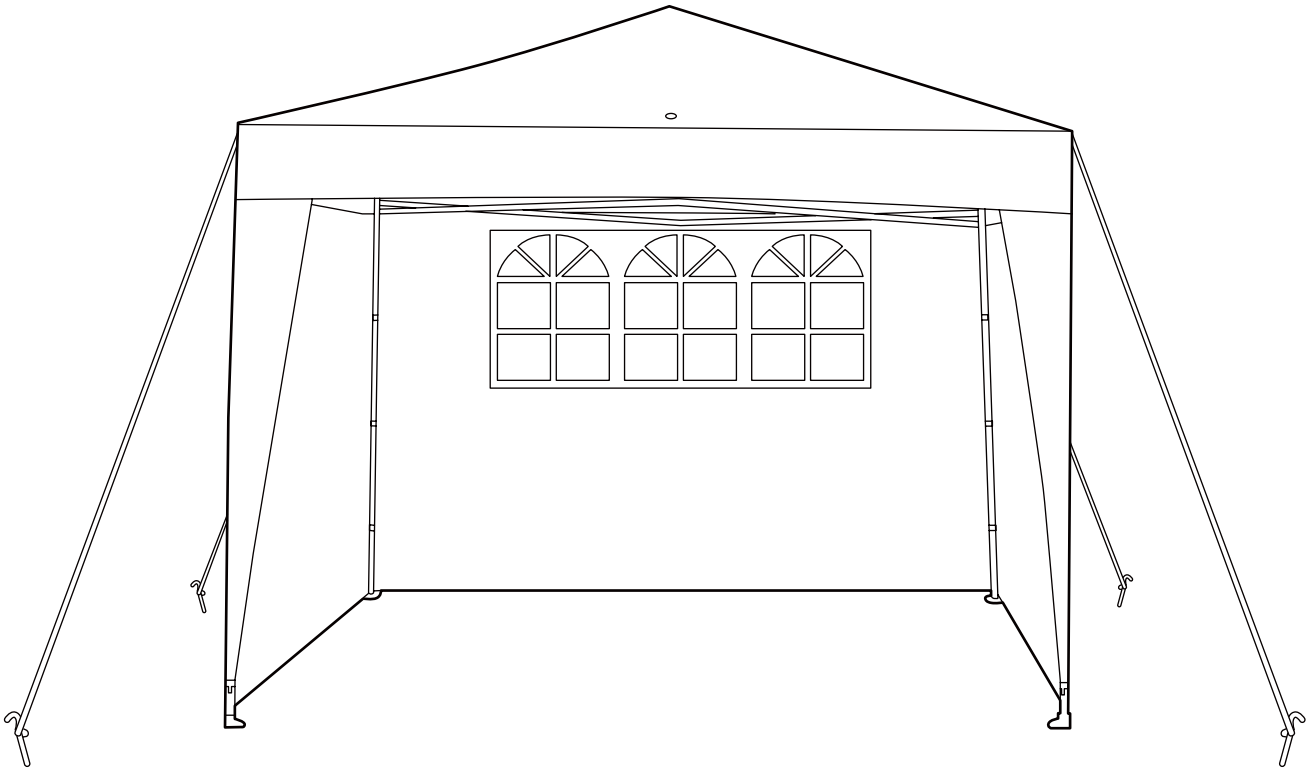

Dimensions

Width - 300cm
Depth - 300cm
Height - 255cm

Important: This Gazebo Must be opened, erected and dismantled by 2 people at least

Important: Make sure all the guy ropes and pegs are used, otherwise the gazebo will be unstable!

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**
Retailer: Argos
Address: 489-499 Avebury Boulevard Saxon Gate West, Central Milton Keynes Bucks, MK9, 2NW

Issue 1 - 13/09/13

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components, fittings and tools listed on page 2.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• **Do not Assemble or Dismantle during strong winds.**

• This unit is not a permanent fixture - **Do not use or leave erected in windy conditions.**

• Follow all safety and fire precautions when in or near this Gazebo.

• Please note that this Gazebo is Shower proof and not Waterproof.

• Practice assembling and dismantling the Gazebo before use to familiarise yourself with the components and fittings.

• Take note of all the components and fittings and ensure you don't forget anything when dismantling.

• Before each use check you have all the components and fittings, and that none of them are damaged.

Positioning:

• To prevent the wind blowing into the entrance, position the Gazebo so the entrance is away from prevailing winds.

• Ensure the ground is level, free from debris and sharp objects that could damage the fabric. Avoid pitching under trees but make use of any natural wind breaks such as hedge rows etc. **Heavy winds and rain could damage the Gazebo.**

• Try to locate the Gazebo at least 5 - 10 meters away from any other campers where possible.

• ***Warning:*** The unit weights approximately 14.5 kgs. **Please lift with care.**

Fire precautions and safety



The canopy and sides of this Gazebo are not fire proof, follow the fire precautions and safety at all times.

• Do not use naked flames in or around the Gazebo - **there is no cooking area within the Gazebo.**

• Do not store cooking apparatus, BBQs etc within the Gazebo as it may cause a fire hazard.

• Do not smoke or allow smoking in or around the Gazebo.

Care and storage

• Take care when dismantling the Gazebo. Follow the assembly instructions in the reverse order and do not force the frame.

• Never remove the pegs by pulling on the guy ropes, fabric or Gazebo legs.

• Ensure all parts of the Gazebo are **completely dry before repacking**.

If necessary unpack the parts when you return home and allow to dry completely before repacking and storing.

• All parts should be cleaned and packed separately. **When completely dry** gently remove any dirt and debris from the fabric with a soft brush.






• **Never use abrasive cleaners or detergents.**

Components - Parts & Fittings


If you have damaged or missing components, call the **Customer Helpine: 0845 640 0800**

Please check you have all the parts & fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

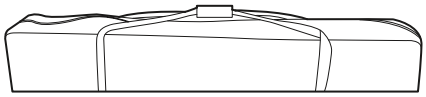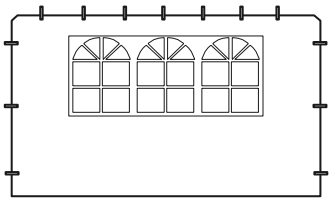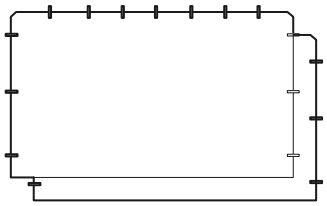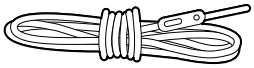1  Tent bag x 1	**2**  Gazebo x 1	**3**  Back panel x 1
4  Side panel x 2	**A**  Peg x 8	**B**  Guy rope x 4

Tools required

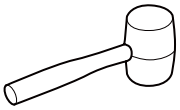

D Rubbor mallct x 1

Assembly Instructions

Step 1

Opening the Gazebo

Note: At least 2 people are required for this procedure.

a & b: Stand the Gazebo [2] upright.


With people at diagonally opposite corners, carefully pull the Gazebo partly open.

Move to each side, carefully pulling the frame apart until it has expanded as shown in diagram b.


a:



b:

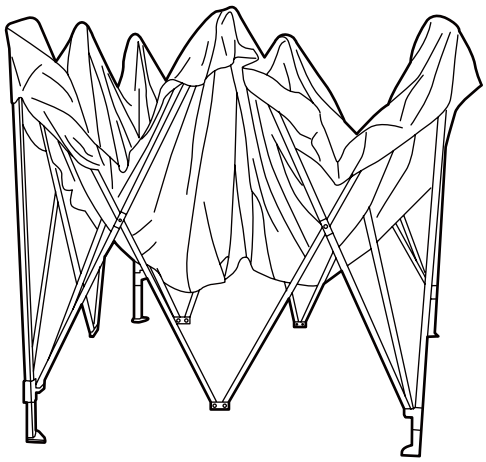

c:

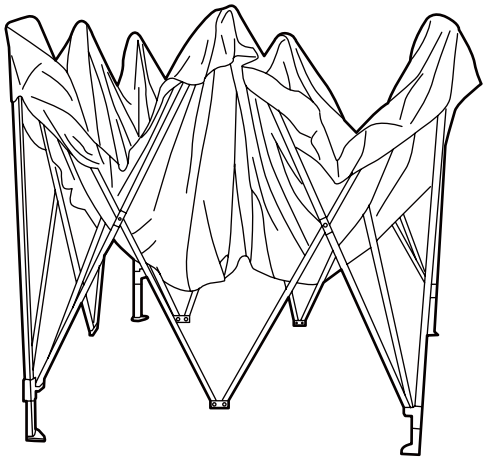


Step 2

c & d: Lift the canopy to reveal the framework.

With people at opposite sides,carefully push up and down on the frames where shown.

Move to each side, carefully pulling (compressing) the frame together until it has expanded as shownin diagram d.

d:

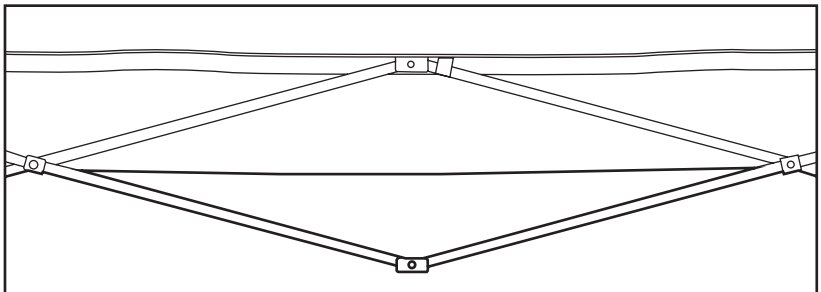

Caution: Do not compress frame sides more than shown.

Assembly Instructions

Step 3

Locking and extending the Gazebo frame

Note: At least 2 people are required for this procedure.

a: In one corner at a time, lock the Gazebo frame **2** in position by sliding the corner bracket up until the spring clip engages into the bracket.

Pull and extend each leg until the spring clips engage into the hole in the outer tubes.

Note: There are two spring clip location holes in each leg, using the lower holes will increase the canopy tension, pulling it tighter.

b: Use the velcro tapes top frame as shown


c: From inside, check that of the frame sides are as shown.

Note: each velcro tap frame are as shown.
① stretch the tap first
③ stick velcro tap second


Warning: the velcro tap must stretch tight as this could cause rain water to collect on the canopy and a hazard.

Do not compress more than shown or the frame can be damaged.


a:

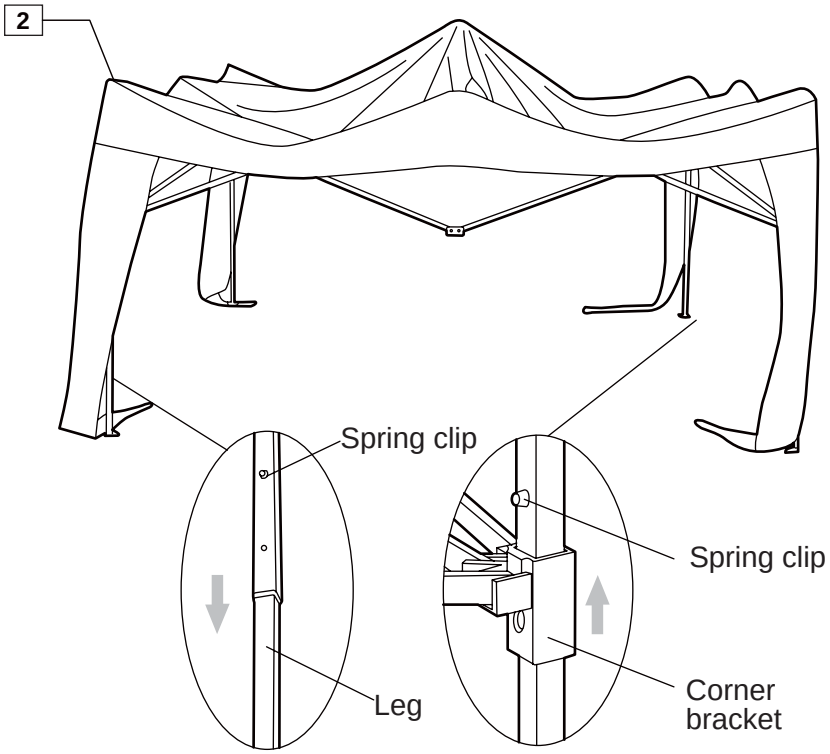


b:

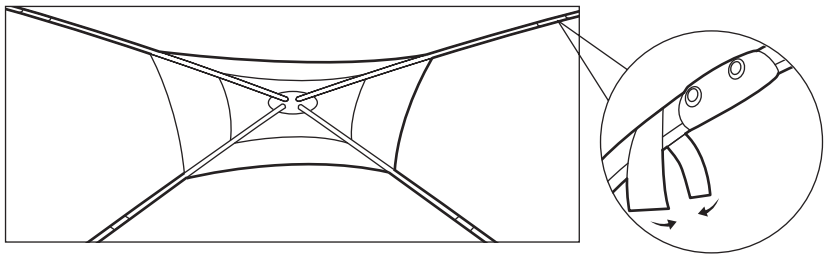

c:

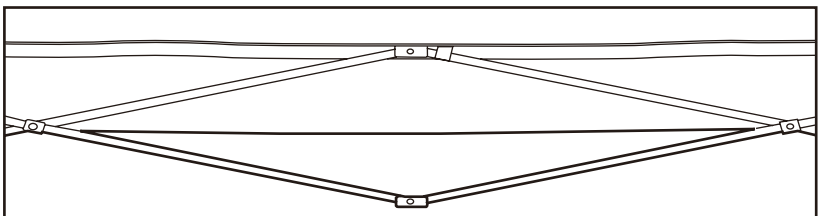

Finished position of frame sides - Do not compress any more.

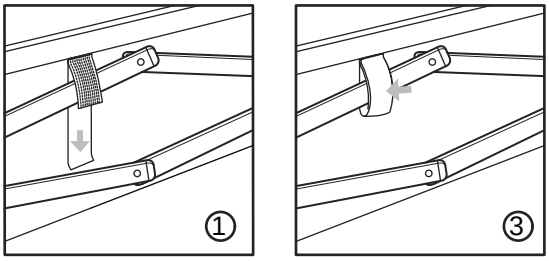

Assembly Instructions


Step 4

Fitting the legs

a: Secure the gazebo 2 to the ground at each corner, Insert two pegs Ⓐ through the hole in each Frame leg into the ground (insert at an angle).

Take care not to bend the pegs, use a rubber mallet to help Insert if required.

b: Attach the hooks on the end of the canopy legs to the holes at the end of the frame leg,the canopy cover can be tightened by moving the hooks to a lower Hole.

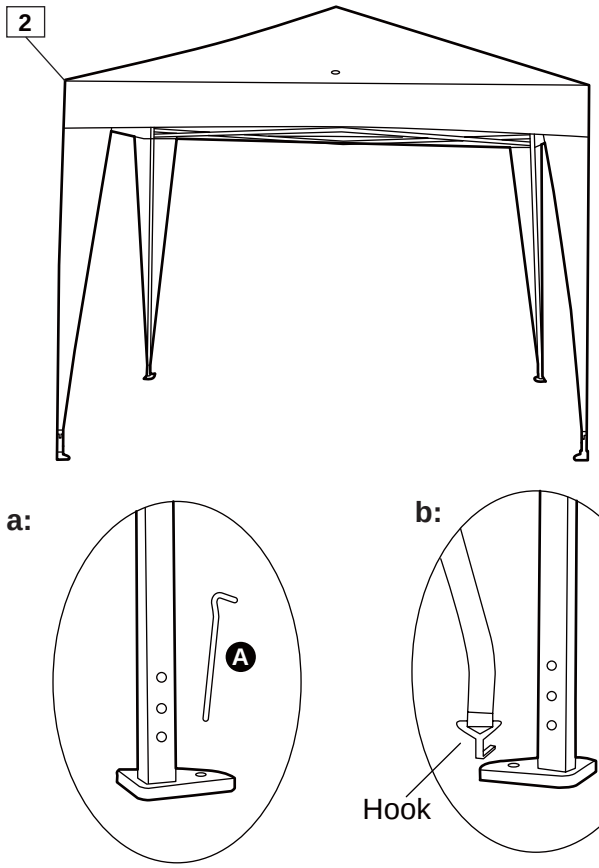

Step 5


Attaching the guy ropes

Note: At least 2 people are required for this procedure.

a: Attach the end of each guy Rope Ⓑ to a”D” ring at each corner of the canopy cover.
b: Use the pegs Ⓐ to secure the other end of the guy rope to the ground (insert at an angle).
c: The length of the guy rope Ⓑ can be adjusted by feeding the rope through the tensioner.

Remove any slack from the Guy rope by holding the lower end of the rope and sliding the tensioner up towards the tent.

Caution:
Do not over tighten the Guy ropes as this can damage the fabric seams.

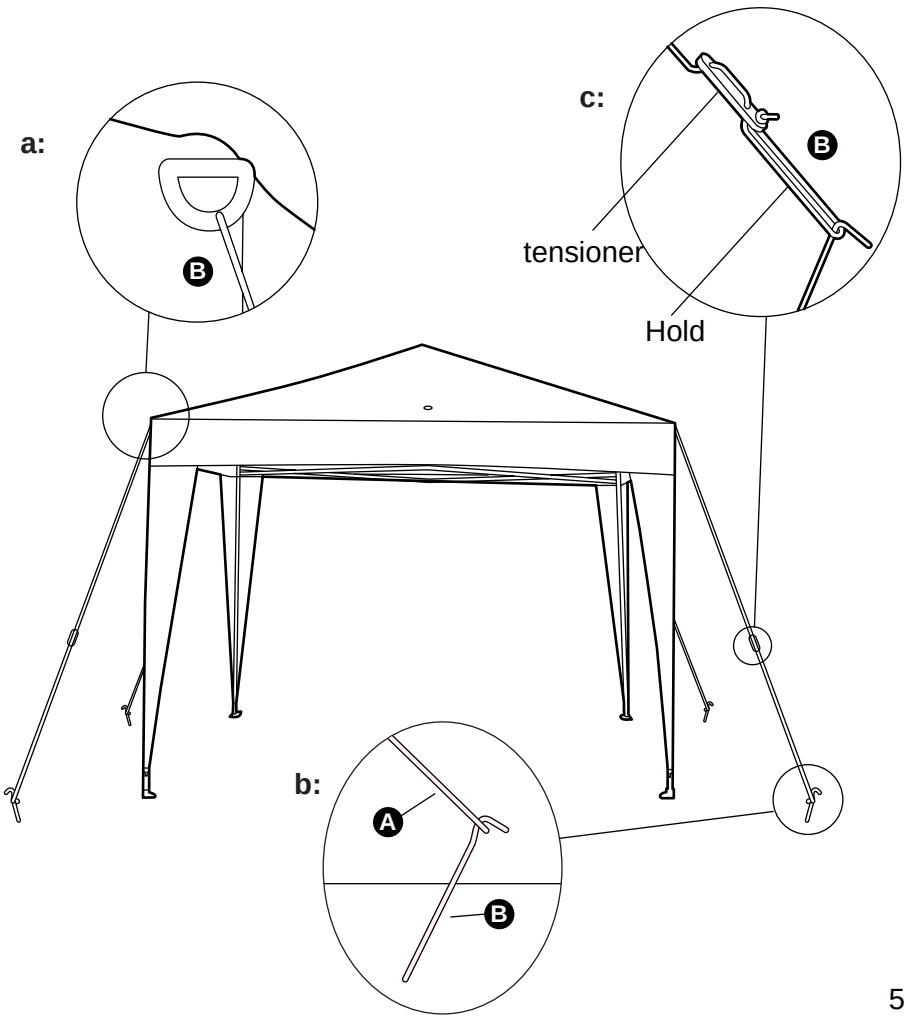

Assembly Instructions

Step 5

Assembly Instrctions
Fitting the sides

Note:At least 2 people are Required for this procedure.

a: Use the Velcro tapes on the Back and side panels 3 & 4
To secure the panels onto the frame work.


Note: each velcro tap frame are as shown.
① stretch the tap first
② stick velcro tap second

Warning: the velcro tap must stretch tight as this could cause rain water to collect on the canopy and a hazard.


b:There are 1 drainage hole on each side to allow rainwater to drain off the canopy.

Note: Do not block or obstruct This hole as this could cause rain water to collect on the Canopy and cause a hazard.


The assembly is now complete

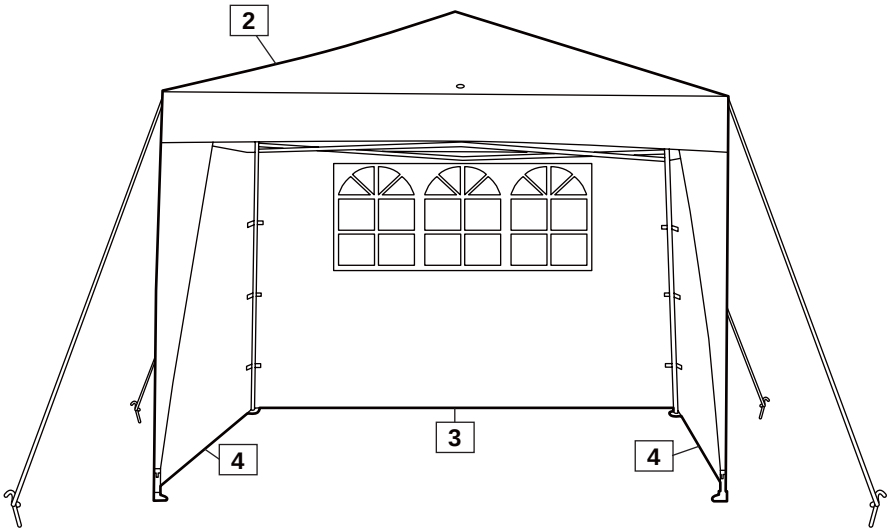

a:

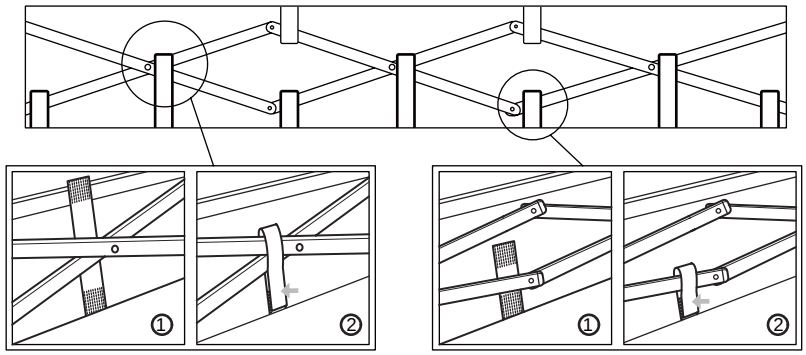

b:

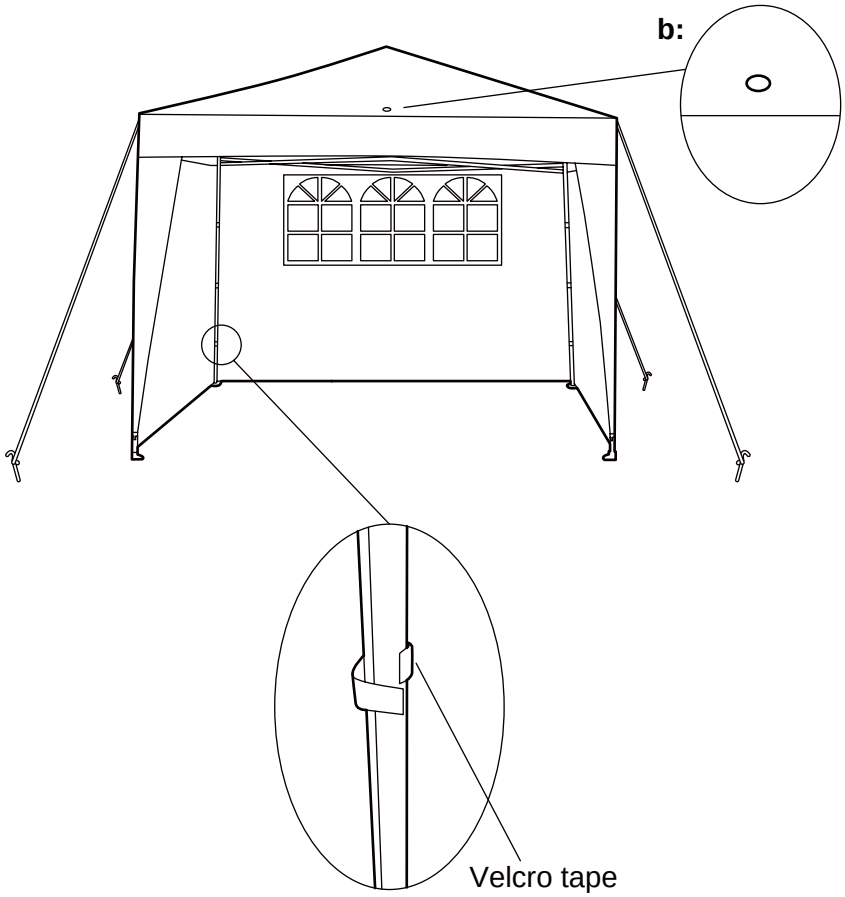

Folding Instructions

Step 7

Folding the Gazebo

Note: At least 2 people are required for this procedure.

Take care when dismantling the Gazebo. Follow the assembly instructions in the reverse order and do not force the frame.

a: Remove the back and side panels

b: Remove the guy ropes and pegs

c: Unhook the canopy from the frame legs and remove the pegs

d: Push in the spring clips and slide up the frame legs


e: Push in the spring clips and (slightly) lower the corner brackets.


f: With people at diagonally opposite corners, carefully lift and push the gazebo together.


Do not force the frame.


Repeat at each corner until the gazebo is fully folded.

Store all of the components and fittings in the tent bag 1 provided.

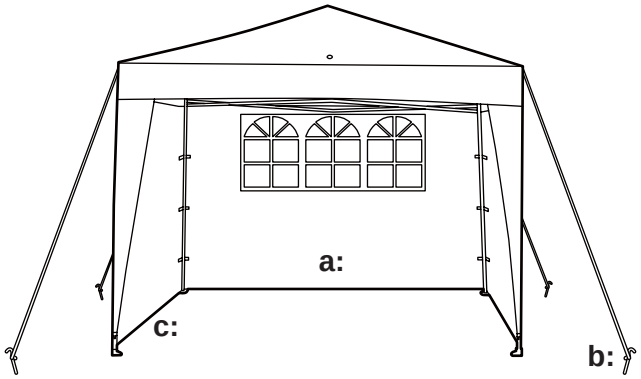

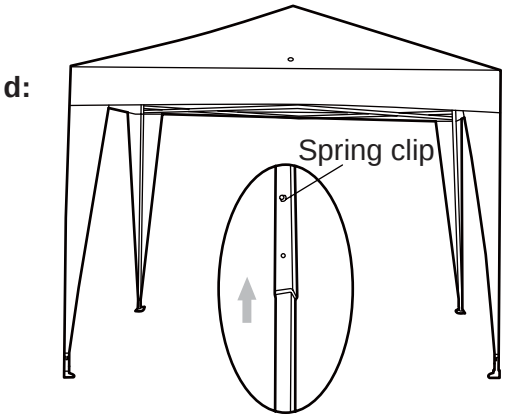

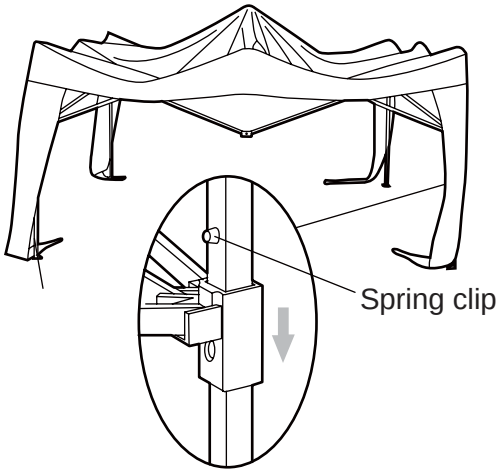

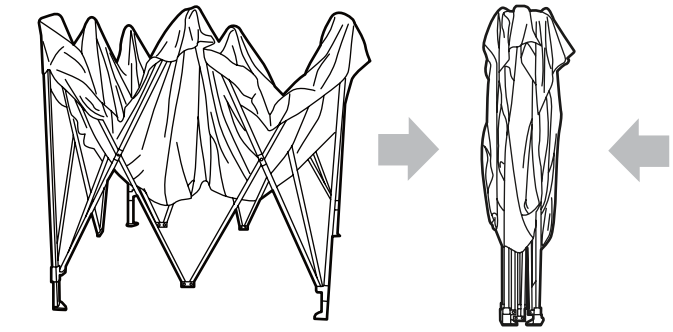


Warning: in heavy wind , if you want to leave the gazebo outside , please remove the side panels

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**
Retailer: Argos
Address: 489-499 Avebury Boulevard Saxon Gate West, Central Milton Keynes Bucks, MK9, 2NW

3x3 Pop Up Gazebo with Side Panels

Assembly Instructions - Please keep for future reference | 650/1974

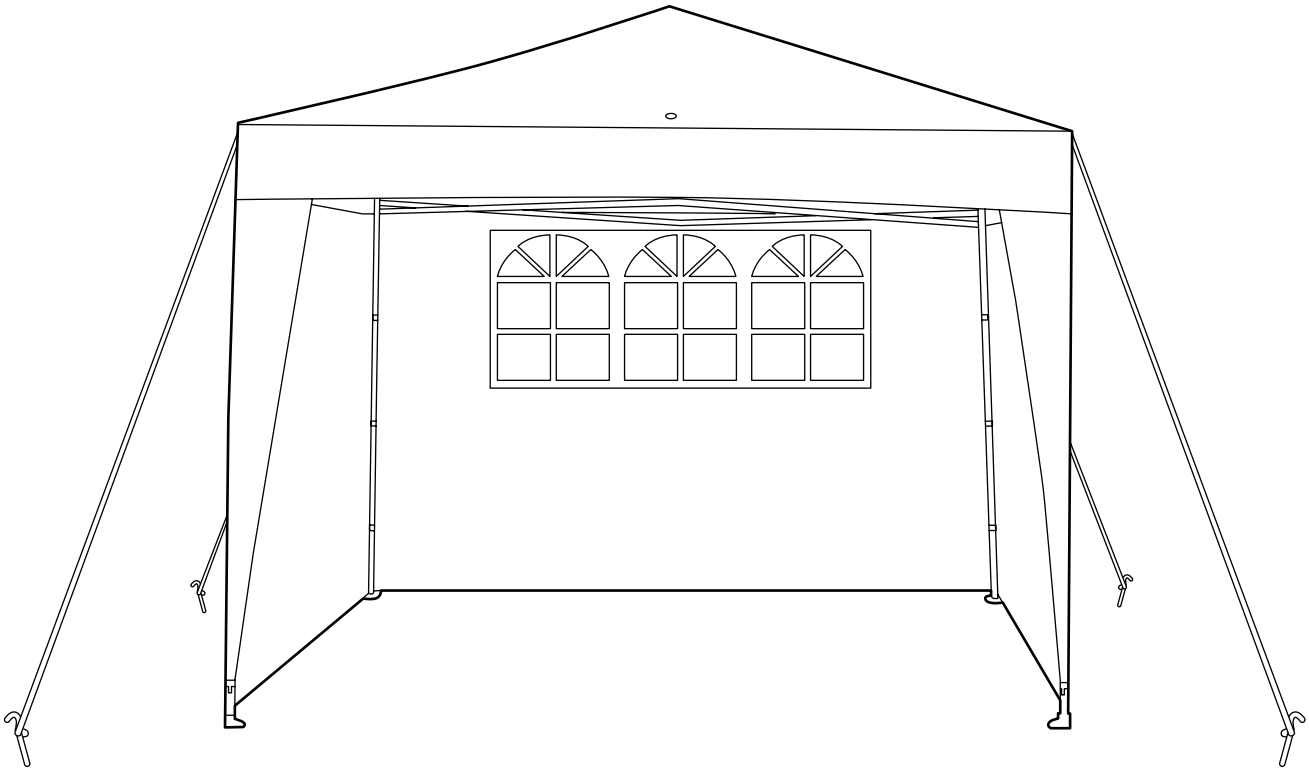

Dimensions
Width - 300cm
Depth - 300cm
Height - 255cm

Important: This Gazebo Must be opened, erected and dismantled by 2 people at least

Important: Make sure all the guy ropes and pegs are used, otherwise the gazebo will be unstable!

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the

Customer Helpline: Argos = 0345 6400800

Address: 489-499 Avebury Boulevard Saxon Gate West, Central Milton Keynes Bucks,MK9, 2NW

Issue 1 - 13/09/13

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components, fittings and tools listed on page 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- **Do not Assemble or Dismantle during strong winds.**
- This unit is not a permanent fixture - **Do not use or leave erected in windy conditions.**
- Follow all safety and fire precautions when in or near this Gazebo.
- Please note that this Gazebo is Shower proof and not Waterproof.
- Practice assembling and dismantling the Gazebo before use to familiarise yourself with the components and fittings.
- Take note of all the components and fittings and ensure you don't forget anything when dismantling.
- Before each use check you have all the components and fittings, and that none of them are damaged.

Positioning:

- To prevent the wind blowing into the entrance, position the Gazebo so the entrance is away from prevailing winds.
- Ensure the ground is level, free from debris and sharp objects that could damage the fabric. Avoid pitching under trees but make use of any natural wind breaks such as hedge rows etc. **Heavy winds and rain could damage the Gazebo.**
- Try to locate the Gazebo at least 5 - 10 meters away from any other campers where possible.
- ***Warning:*** The unit weights approximately 14.5 kgs. **Please lift with care.**

Fire precautions and safety



The canopy and sides of this Gazebo are not fire proof, follow the fire precautions and safety at all times.

- Do not use naked flames in or around the Gazebo - **there is no cooking area within the Gazebo.**
- Do not store cooking apparatus, BBQs etc within the Gazebo as it may cause a fire hazard.
- Do not smoke or allow smoking in or around the Gazebo.

Care and storage

- Take care when dismantling the Gazebo. Follow the assembly instructions in the reverse order and do not force the frame.
- Never remove the pegs by pulling on the guy ropes, fabric or Gazebo legs.
- Ensure all parts of the Gazebo are **completely dry before repacking**.






  If necessary unpack the parts when you return home and allow to dry completely before repacking and storing.
- All parts should be cleaned and packed separately. **When completely dry** gently remove any dirt and debris from the fabric with a soft brush.
- **Never use abrasive cleaners or detergents.**

Components - Parts & Fittings


If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400800**

Please check you have all the parts & fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

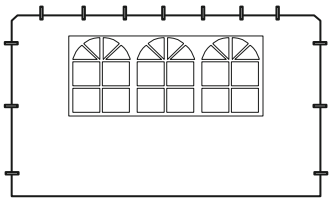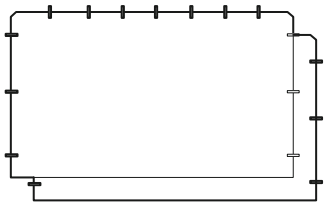1  Tent bag x 1	2  Gazebo x 1	3  Back panel x 1
4  Side panel x 2	A  Peg x 12	B  Guy rope x 4

Tools required



D Rubber mallet x 1

Assembly Instructions

Step 1

Opening the Gazebo

Note: At least 2 people are required for this procedure.

a & b: Stand the Gazebo [2] upright.


With people at diagonally opposite corners, carefully pull the Gazebo partly open.

Move to each side, carefully pulling the frame apart until it has expanded as shown in diagram b.


a:



b:

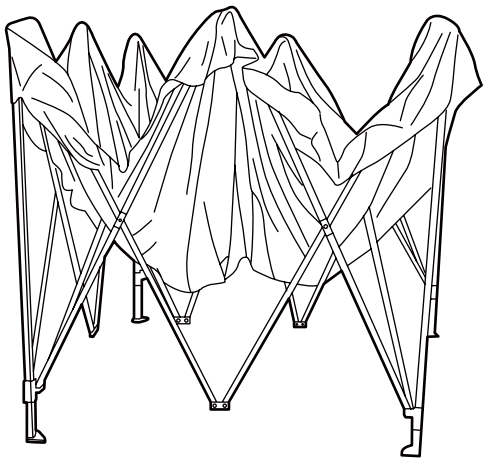

c:

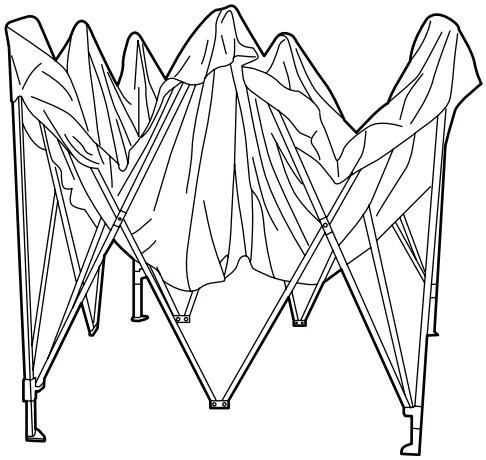


Step 2

c & d: Lift the canopy to reveal the framework.

With people at opposite sides,carefully push up and down on the frames where shown.

Move to each side, carefully pulling (compressing) the frame together until it has expanded as shownin diagram d.

d:

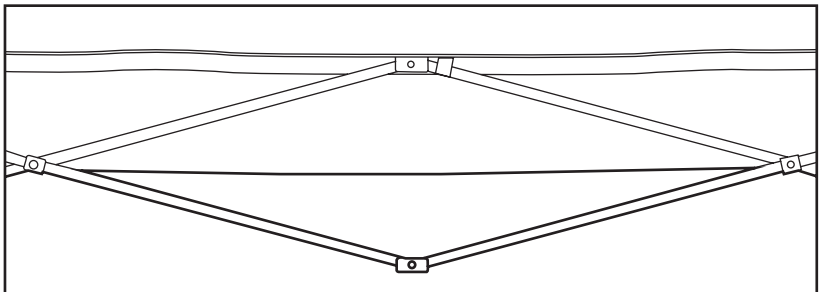

Caution: Do not compress frame sides more than shown.

Assembly Instructions

Step 3

Locking and extending the Gazebo frame

Note: At least 2 people are required for this procedure.

a: In one corner at a time, lock the Gazebo frame **2** in position by sliding the corner bracket up until the spring clip engages into the bracket.

Pull and extend each leg until the spring clips engage into the hole in the outer tubes.

Note: There are two spring clip location holes in each leg, using the lower holes will increase the canopy tension, pulling it tighter.

b: Use the velcro tapes top frame as shown


c: From inside, check that of the frame sides are as shown.

Note: each velcro tap frame are as shown.
① stretch the tap first
③ stick velcro tap second


Warning: the velcro tap must stretch tight as this could cause rain water to collect on the canopy and a hazard.

Do not compress more than shown or the frame can be damaged.


a:

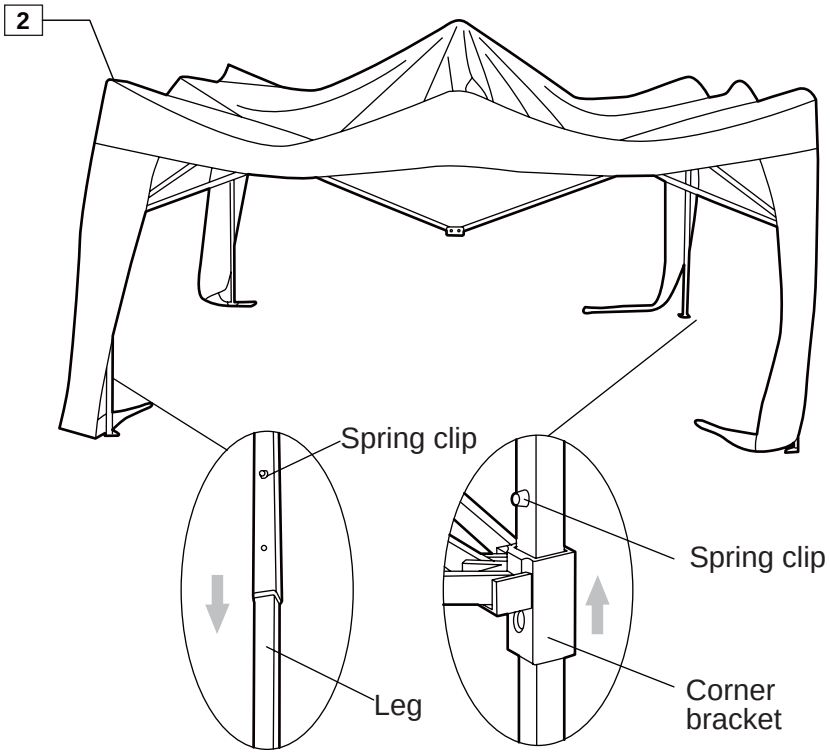


b:

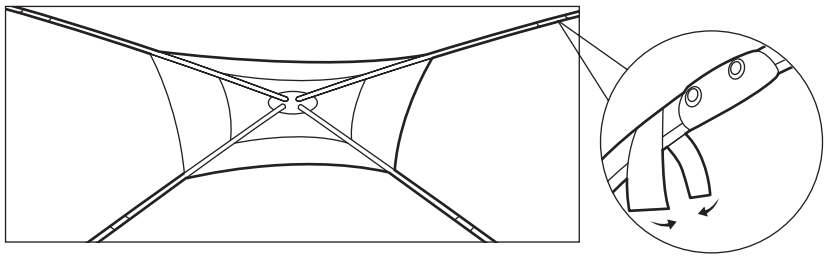

c:

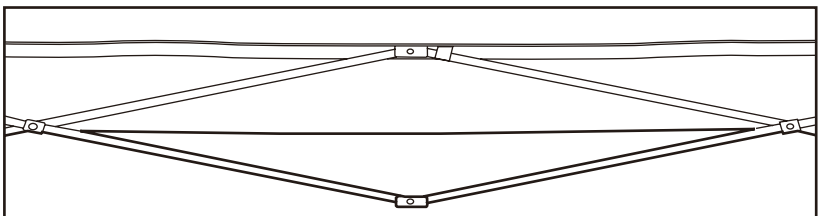

Finished position of frame sides - Do not compress any more.

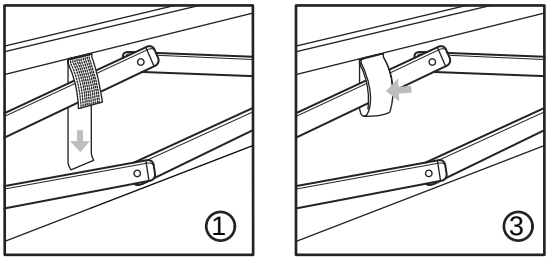

Assembly Instructions


Step 4


Fitting the legs

a: Secure the gazebo 2 to the ground at each corner, Insert two pegs Ⓐ through the hole in each Frame leg into the ground (insert at an angle).

Take care not to bend the pegs, use a rubber mallet to help Insert if required.

b: Attach the hooks on the end of the canopy legs to the holes at the end of the frame leg,the canopy cover can be tightened by moving the hooks to a lower Hole.

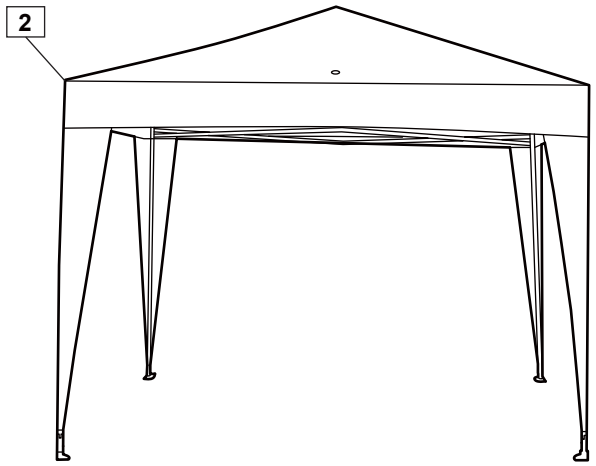

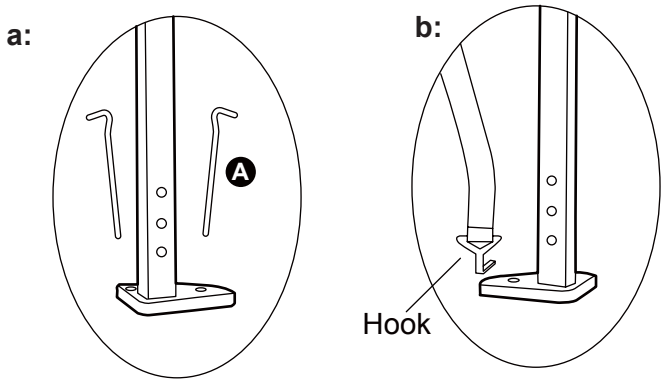

Step 5


Attaching the guy ropes

Note: At least 2 people are required for this procedure.

a: Attach the end of each guy Rope Ⓑ to a”D” ring at each corner of the canopy cover.
b: Use the pegs Ⓐ to secure the other end of the guy rope to the ground (insert at an angle).
c: The length of the guy rope Ⓑ can be adjusted by feeding the rope through the tensioner.

Remove any slack from the Guy rope by holding the lower end of the rope and sliding the tensioner up towards the tent.

Caution:
Do not over tighten the Guy ropes as this can damage the fabric seams.

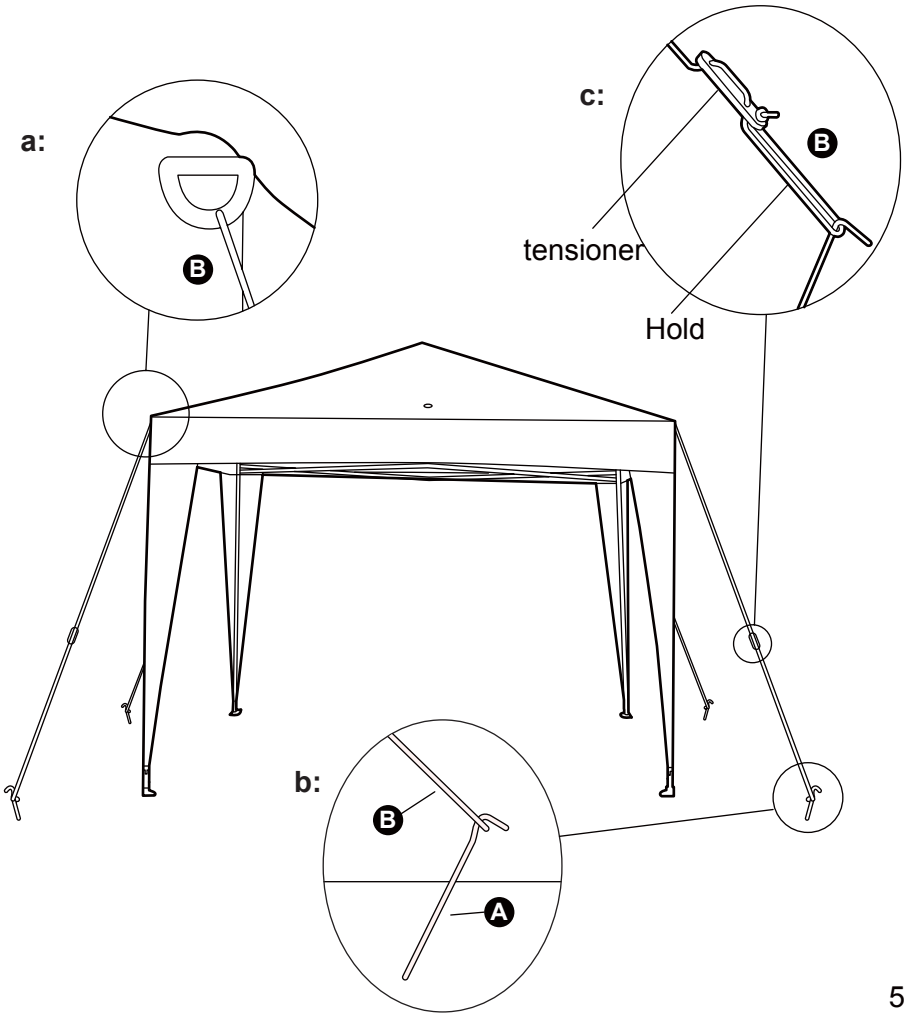

Assembly Instructions

Step 5

Assembly Instrctions
Fitting the sides

Note:At least 2 people are Required for this procedure.

a: Use the Velcro tapes on the Back and side panels 3 & 4
To secure the panels onto the frame work.


Note: each velcro tap frame are as shown.
① stretch the tap first
② stick velcro tap second

Warning: the velcro tap must stretch tight as this could cause rain water to collect on the canopy and a hazard.


b:There are 1 drainage hole on each side to allow rainwater to drain off the canopy.

Note: Do not block or obstruct This hole as this could cause rain water to collect on the Canopy and cause a hazard.


The assembly is now complete

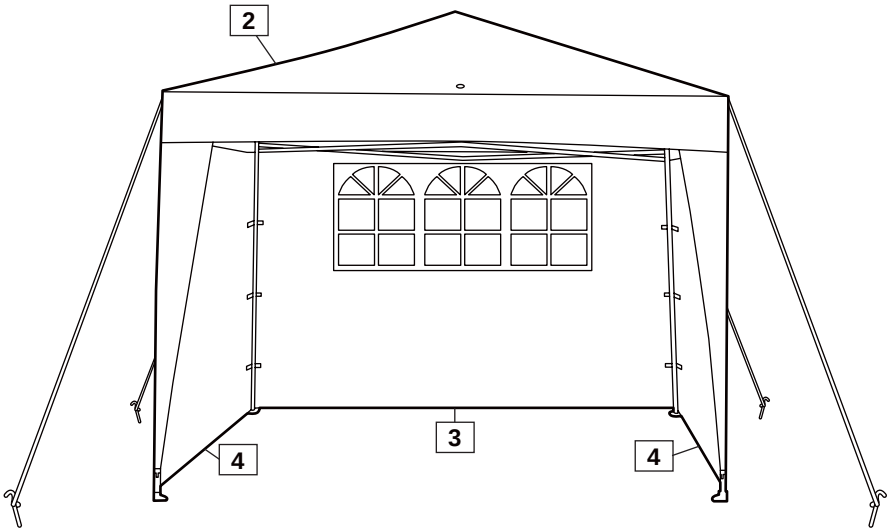

a:

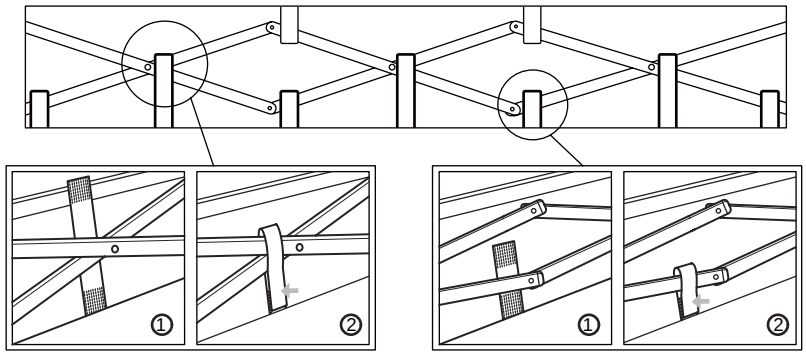

b:

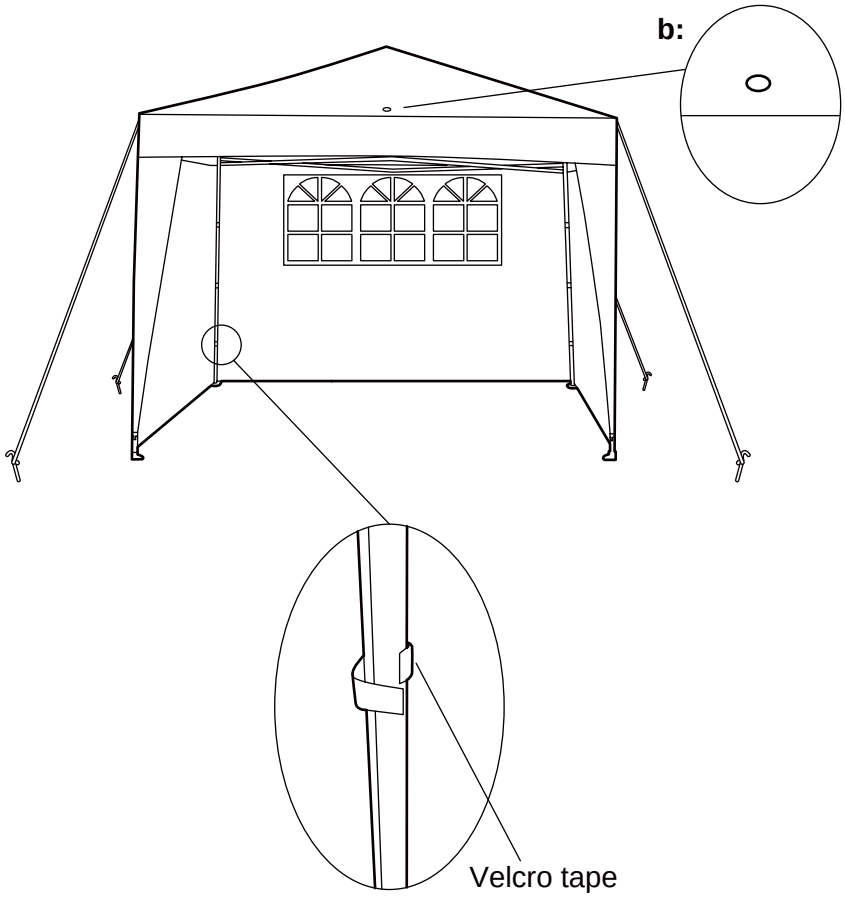

Folding Instructions

Step 7

Folding the Gazebo

Note: At least 2 people are required for this procedure.

Take care when dismantling the Gazebo. Follow the assembly instructions in the reverse order and do not force the frame.

a: Remove the back and side panels

b: Remove the guy ropes and pegs

c: Unhook the canopy from the frame legs and remove the pegs

d: Push in the spring clips and slide up the frame legs


e: Push in the spring clips and (slightly) lower the corner brackets.


f: With people at diagonally opposite corners, carefully lift and push the gazebo together.


Do not force the frame.


Repeat at each corner until the gazebo is fully folded.

Store all of the components and fittings in the tent bag 1 provided.

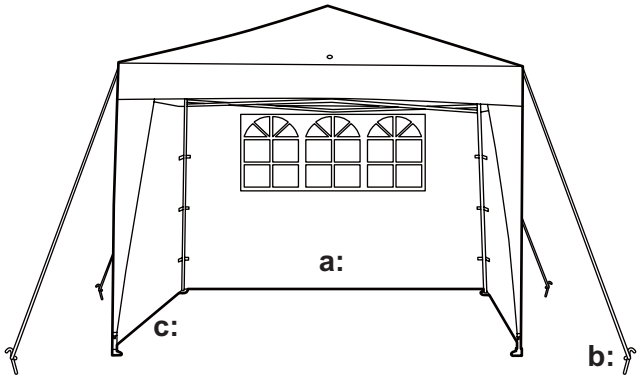

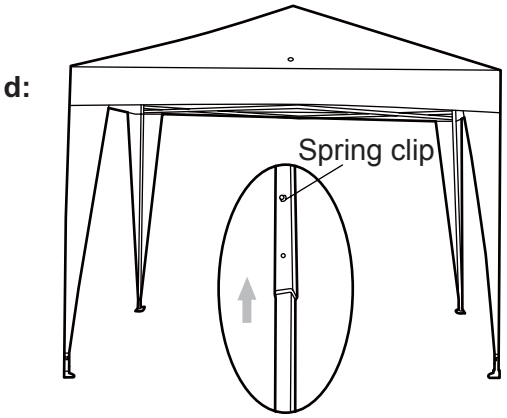

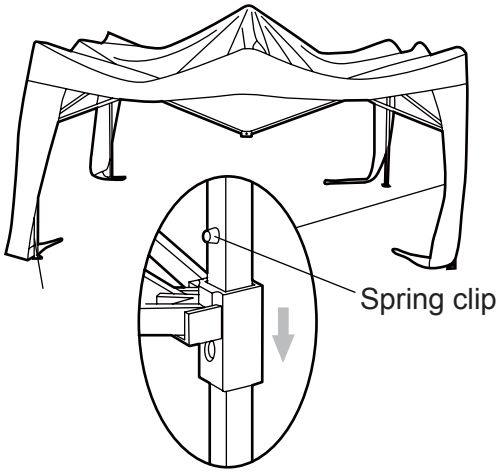

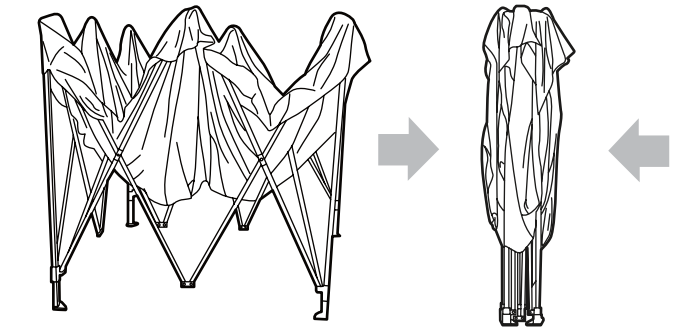

Warning: in heavy wind , if you want to leave the gazebo outside , please remove the side panels

If you need help or have damaged or missing parts, call the

Customer Helpline: Argos = 0345 6400800

Address: 489-499 Avebury Boulevard Saxon Gate West, Central Milton Keynes Bucks,MK9, 2NW