
MALIBU 2 SEAT SWING

Assembly Instructions - Please keep for future reference | 6503501

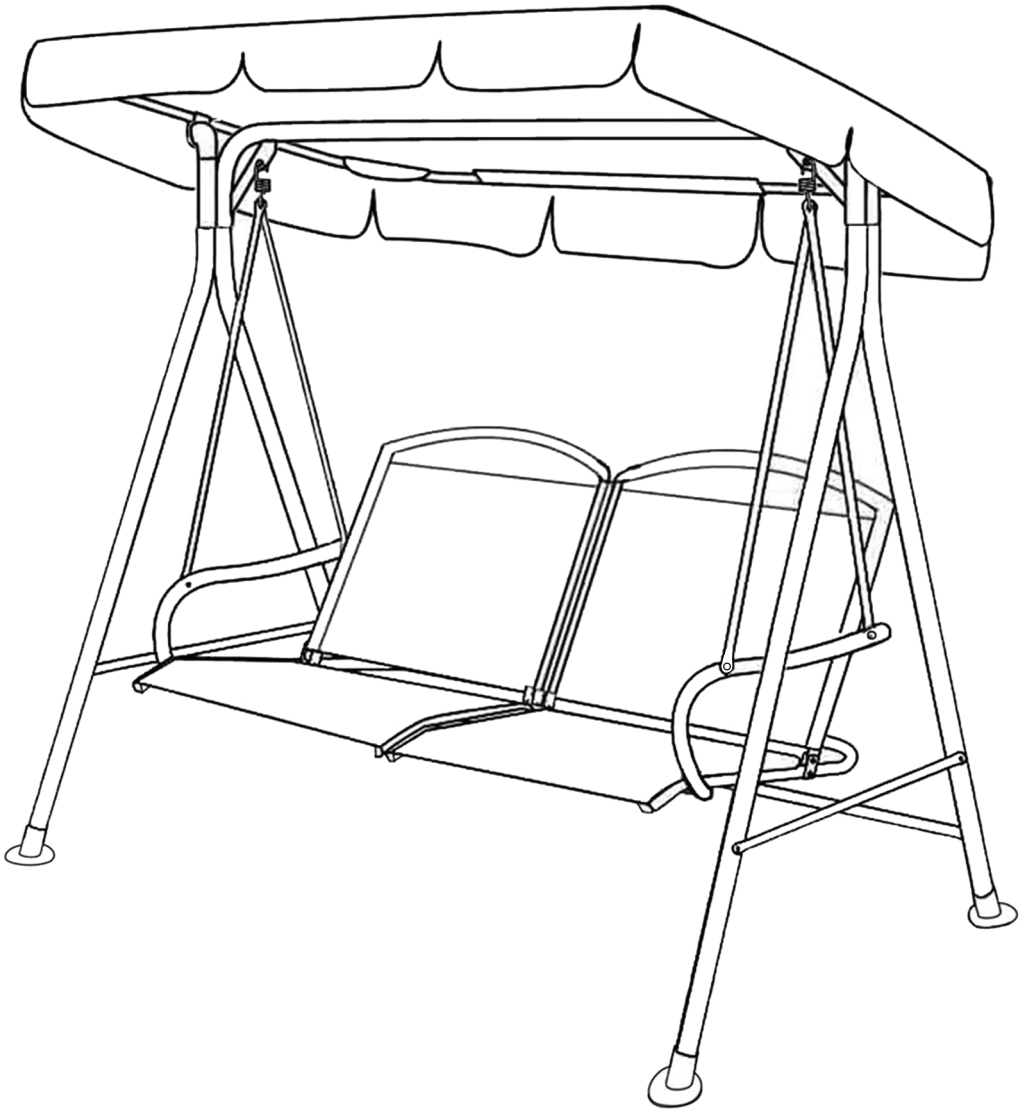

Dimensions

Width - 153cm
Depth - 120cm
Height - 162cm

Important - Read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 03456400800
For further assistance please visit http://www.argos-support.co.uk/

Issue 1 - 24/10/16

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 & 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the parts during assembly, this could cause damage.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.
- The user of this swing should always inspect it before each use.
- Check the tightness of all nuts and bolts on a regular basis.
- Always remove the canopy in heavy wind conditions, otherwise the canopy may tip over and cause damage to its parts.
- Oil all of the metal parts that move during usage season.
- The manufacturer will not accept responsibility for unauthorized repairs or modifications to the swing or its parts.
- Weight limit is 227 kgs.
- Warning: The unit weighs approximately 21.4 kgs. Please lift with care.












Care and maintenance

- Wash frame parts with mild soap and water, rinse thoroughly, and dry frame completely. Do not use bleach, acid, or other solvents on the frame parts.
- The canopy may be surface washed with mild soap and water if necessary. Commercial foaming upholstery cleaner may also be used. Rinse well and hang to dry. Do not machine wash or dry.
- We recommend the use of furniture covers to protect your swing when not in use.
- Please inspect and tighten all bolts or fasteners on a regular basis to ensure proper performance and safety of your swing.
- In order to prolong the life and beauty of your swing, we recommend that it be stored in a dry and protected area when not in use.


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly.

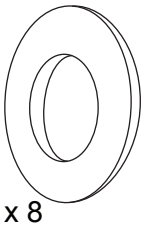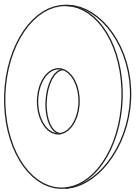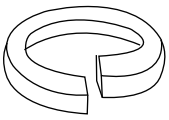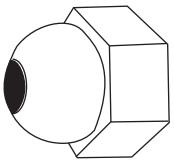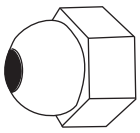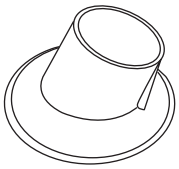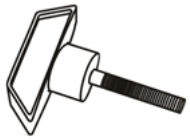
A  M8 x 75mm Bolt x 4	B  M6 x 50mm Bolt x 10	C  M6 x 45mm Bolt x 8
D  ST4.2 x 16mm Screw x 4	E  D17 Washer x 8	F  D16 Washer x 28
G  D12 Spring Washer x 4	H  D10 Spring Washer x 10	I  M8 x P1.25mm Plastic Nut x 4
J  M6 x P1.0mm Plastic Nut x 10	K  Leg Cap x 4	L  Suspension Spring x 2
M  Canopy/Frame Connector x 2	N  Plastic Screw x 2	

Tools required

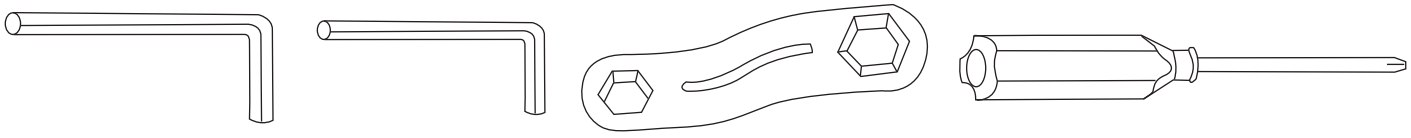


6mm Hex Key | 4mm Hex Key | 13 & 17mm Nut Wrench | Screwdriver (Not provided)

Ruler - Use this ruler to help correctly identify the screws

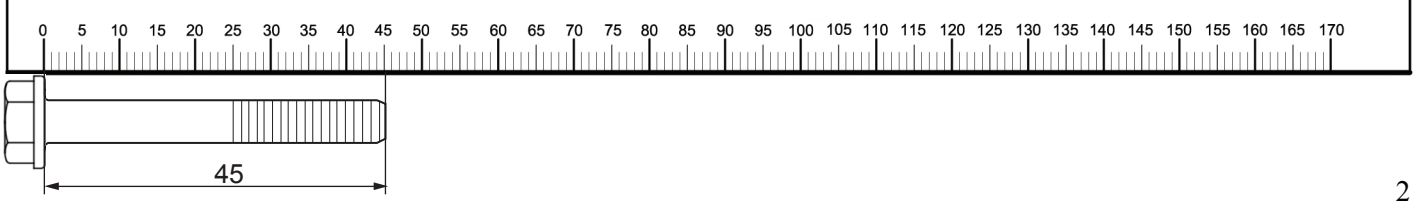


Components - Parts


Please check you have all the parts listed below

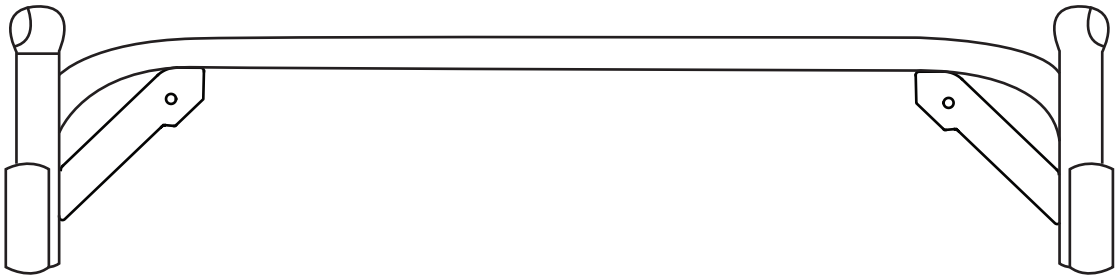


1 Top Cross Beam x 1

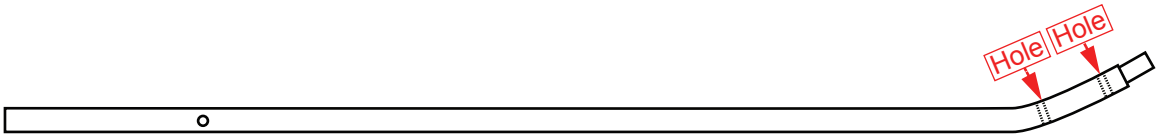


2 Front Upright Support x 2

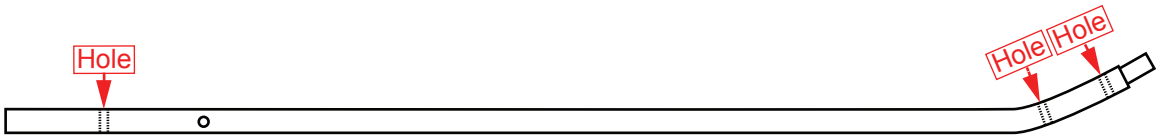

3 Rear Upright Support x 2




4 Rear Cross Brace x 1




5 Lateral Cross Brace x 2

Components - Parts


Please check you have all the parts listed below

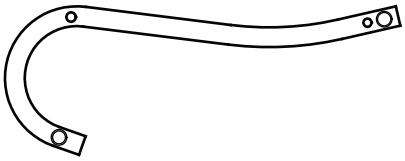


6 Right Seat Arm x 1

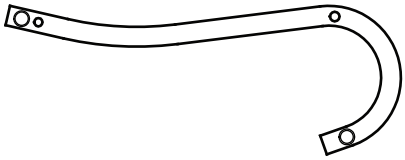


7 Left Seat Arm x 1

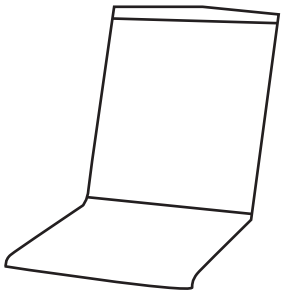


8 Seat Assembly x 2




9 Swing Arm Tube x 4




10 Front/Rear Canopy Brace x 2

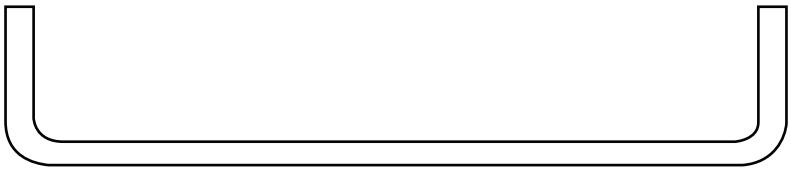

11 Side Canopy Brace x 2



12 Support Brace x 2

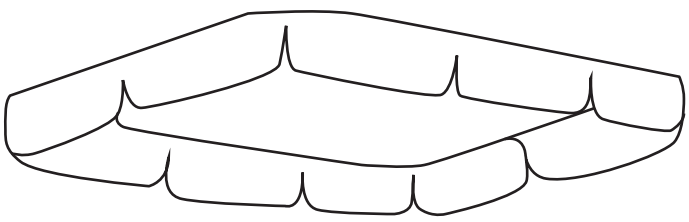

13 Canopy x 1

Assembly Instructions

Step 1

Note: When fastening with bolts and nuts, always use washer E, F, G or H the tube and the bolt or the tube and the plastic nuts.

A:
Fasten the front and rear upright supports 2 and 3 at the top by using two sets of bolts A, washers E, spring washers G and plastic nuts I. Complete the same procedure for both sides. Do not completely tighten the plastic nuts and bolts.

B:
Attach the top cross beam 1 at each end of the upright support 2 and 3. Fasten the bolts and plastic nuts on top of the upright support.


C:
Attach the lateral cross braces 5 to the upright supports 2 and 3 by using bolts B, washers F, spring washers H and plastic nuts J.

D:
Fasten the rear cross brace 4 to the rear upright supports 3 by using bolts B, washers F, spring washers H and plastic nuts J.


E:
Insert the leg caps K into the base of the feet. Completely tighten all of the plastic nuts and bolts.

FRAME ASSEMBLY


A:

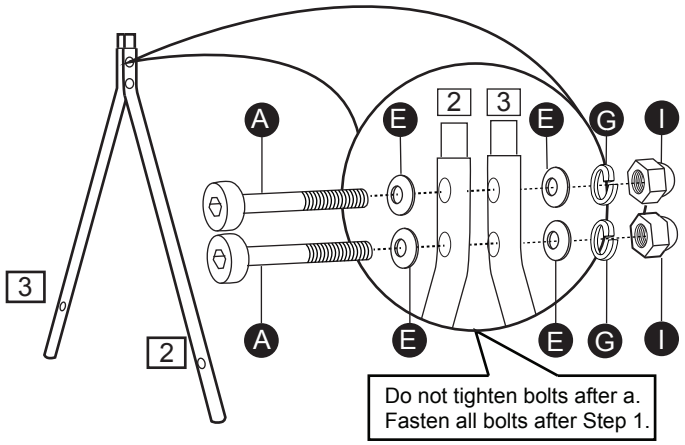


B:

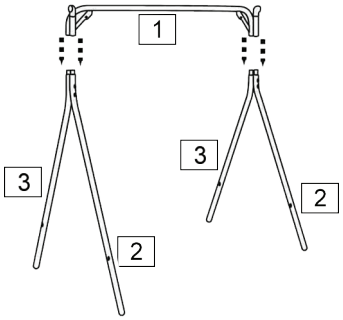


C:

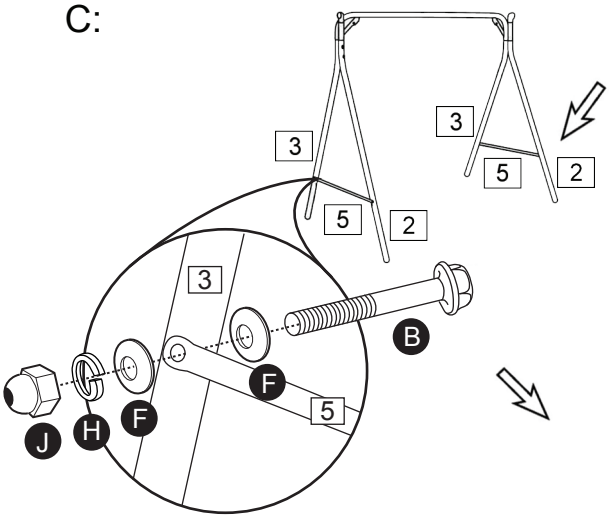

D:

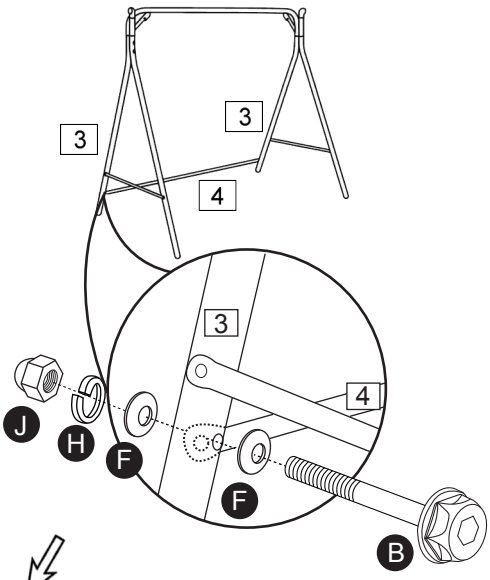

E:

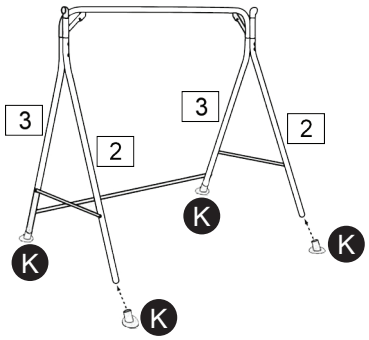

Assembly Instructions

Step 2

Connect right seat arm 6 and left seat arm 7 together by using support braces 12. See Figure for correct position of support braces 12.

NOTE:
The labels marked “L” and “R” on the seat arms 6 and 7 should coincide with Figure to ensure proper assembly.


Step 3


Align the holes of the support braces 12, seat arms 6 and 7, and seat assembly 8. Fasten them together by using bolts C, washers F.


Step 4

Attach the swing arm tubes 9 to the front of the seat arms 6 and 7 by using bolts B, washers F, spring washers H and plastic nuts J. Fasten the remaining swing arm tubes 9 to the back of the seat arms 6 and 7 by using bolts B, washers F, spring washers H and plastic nuts J.

SEAT ASSEMBLY

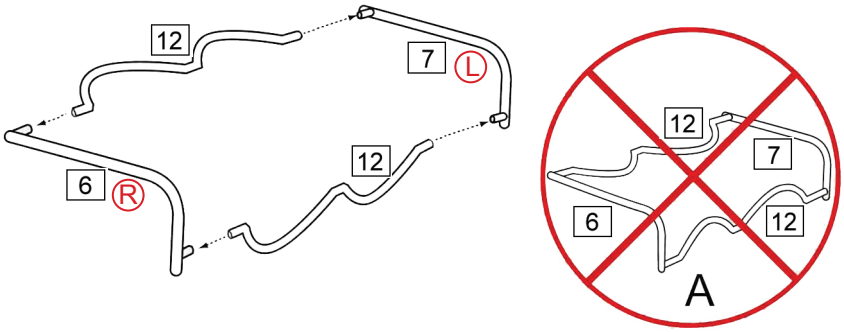

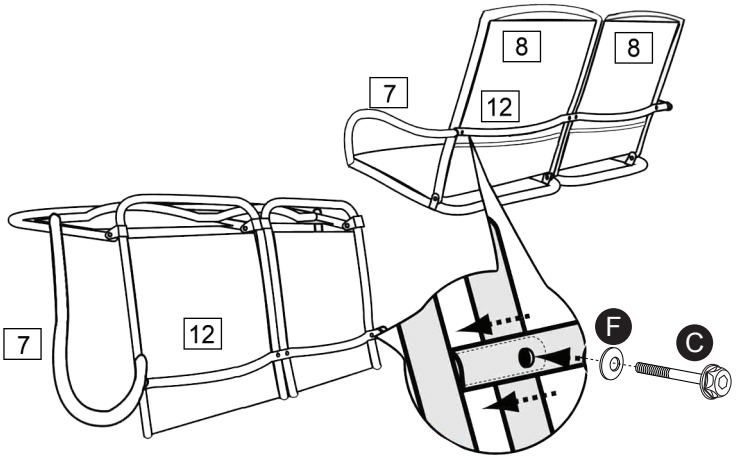

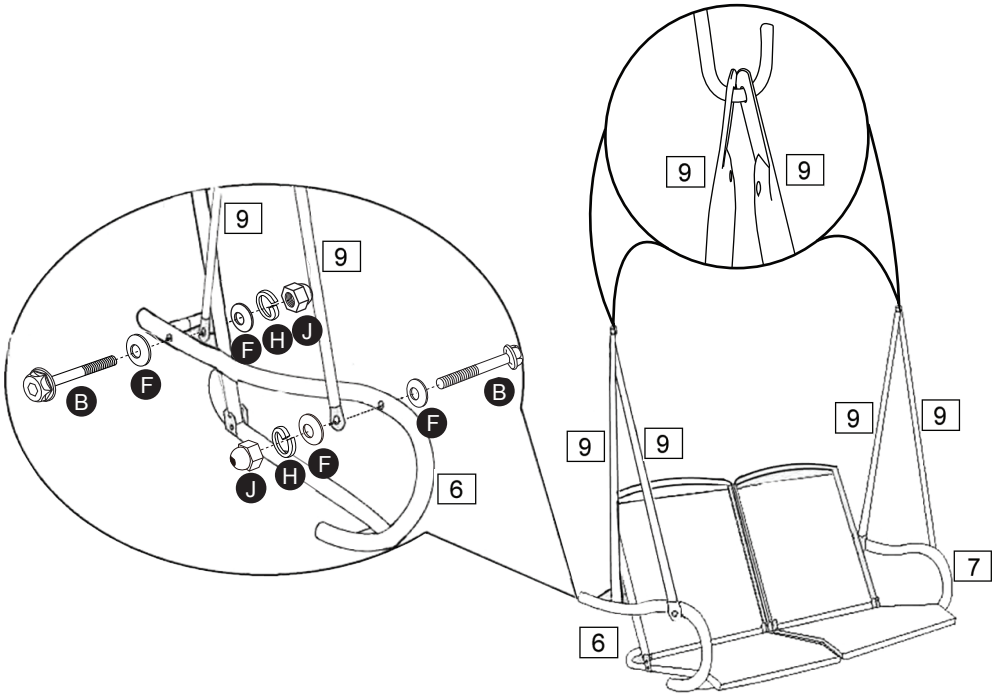

Assembly Instructions


Step 5

A:
Hook the suspension springs (L) into the top of both swing arm tubes [9]. Repeat both sides.


B:
Hang the opposite ends of the suspension spring (L) into the holes located on the angled braces of the top cross beam [1]. Repeat both sides.

Warning:
Make sure that both ends of the suspension springs (L) go completely through the holes on the angled braces of the top cross beam [1] and the swing arm tubes [9].

A:

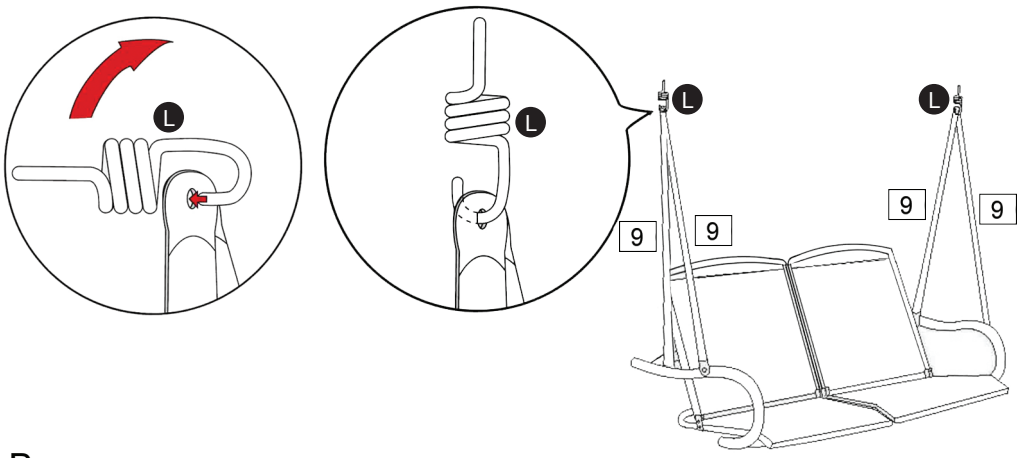


B:

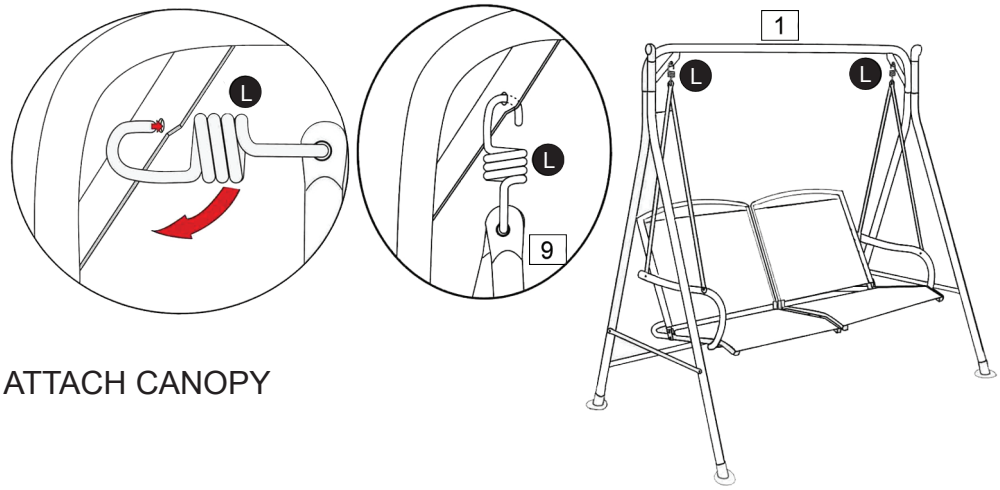

Step 6

ATTACH CANOPY


A:
Slide the canopy frame connectors (M) onto the U-shaped side canopy braces [11] and fasten them into position by using screws (D).
Please make sure that the teeth on the canopy frame connectors (M) are facing towards the inside of the swing.

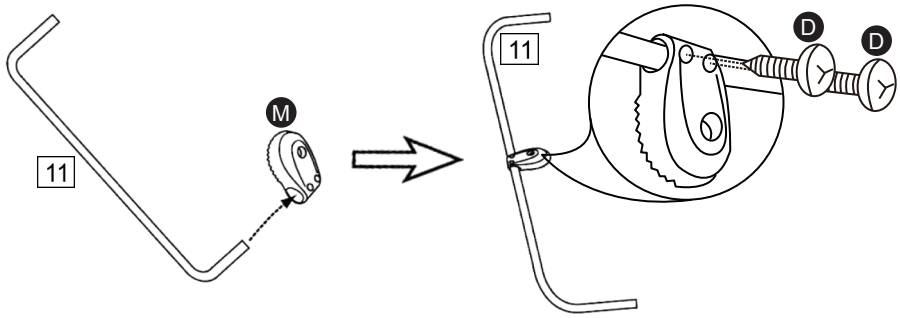

B:
Insert the front/rear canopy braces [10] into the sleeves of the canopy [13].

C:
Insert the tube ends of front/rear canopy braces [10] into the U-shaped side canopy braces [11].

D:
Insert the corners of U-shaped canopy braces [11] into the pockets of canopy [13].

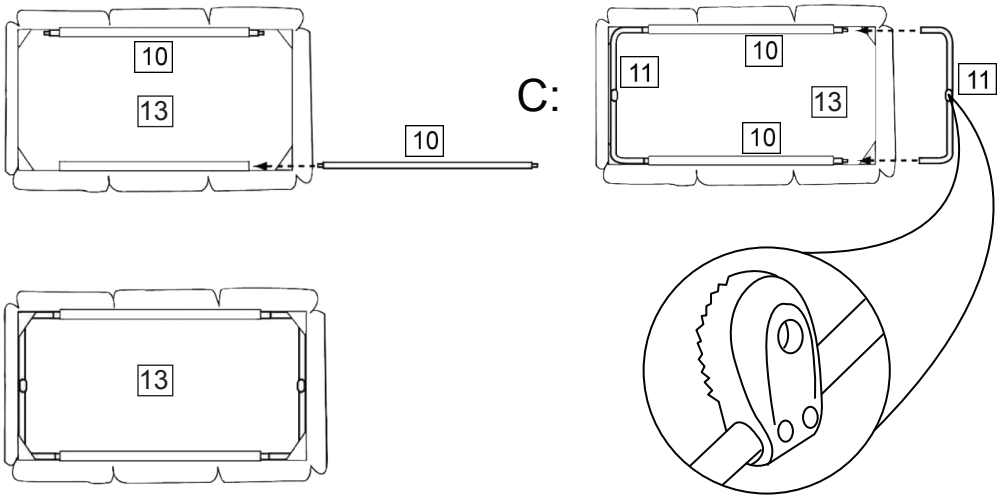


Assembly Instructions

Step 7

Attach the canopy/frame connectors (M) onto the canopy assembly to the adjustable teeth on the top cross beam [1] by using plastic screws (N). Repeat both sides.

Re-check and re-tighten all nuts and bolts to assure stability.

Warning:
To avoid danger of suffocation, please always keep plastic bags or small parts away from babies and children.

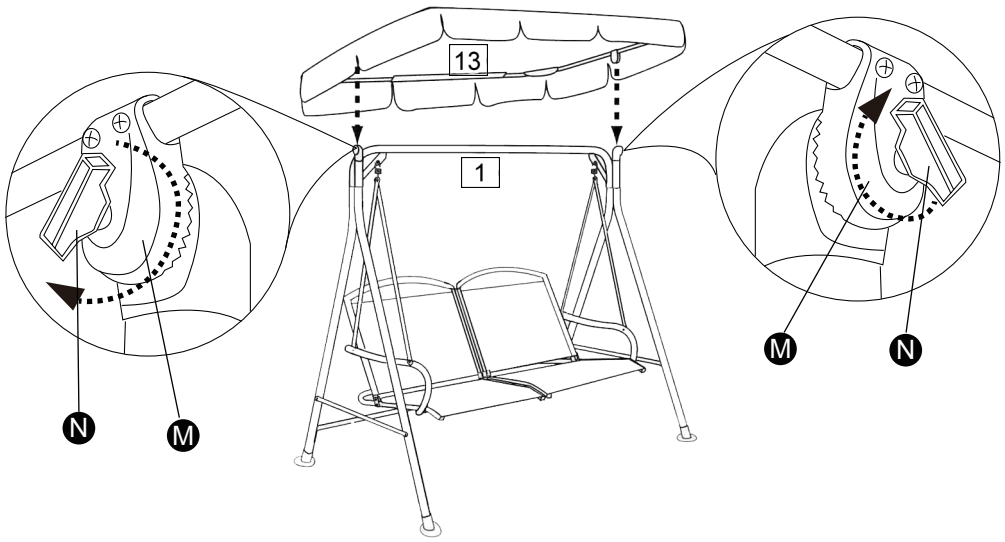



Assembly is completed.

If you need help or have damaged or missing parts, call the Customer Helpline: 03456400800
For further assistance please visit http://www.argos-support.co.uk/
Retailer: Argos
Address: 489-499 Avebury Boulevard Saxon Gate West, Central Milton Keynes Bucks, MK9, 2NW