
9x4M Gazebo With 4 Side Panels

Simple Assembly Instructions - Please keep for future reference | 652/2719

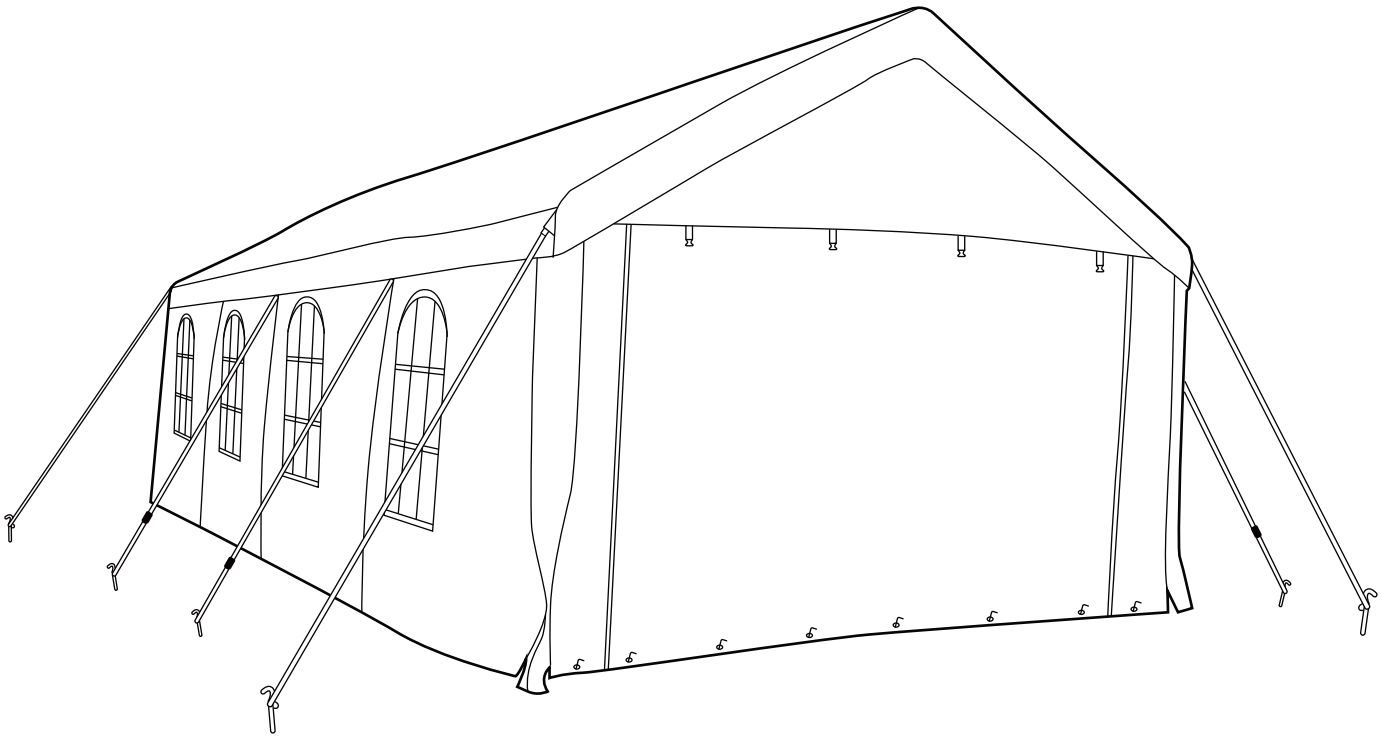

Dimensions

Width - 400cm
Depth - 900cm
Height - 320cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the

Customer Helpline: Argos = 0345 6400800

For further assistance please visit http://www.argos-support.co.uk

Address: 489-499 Avebury Boulevard Saxon Gate West, Central Milton Keynes Bucks,MK9, 2NW

Issue 1 - 13/09/13

IMPORTANT SAFETY INSTRUCTIONS

Important – Please read these instructions fully before starting assembly

• Check you have all the components, fittings and tools listed on page 2.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• **Do not Assemble or Dismantle during strong winds.**

• This unit is not a permanent fixture- **Do not use or leave erected in windy conditions.**

• Follow all safety and fire precautions when in or near this Gazebo.

• Please note that this Gazebo is Shower proof and not Waterproof.

• Practice assembling and dismantling the Gazebo before use to familiarise yourself with the components and fittings.

• Take note of all the components and fittings and ensure you don't forget anything when dismantling.

• Before each use check you have all the components and fittings, and that none of them are damaged.

Positioning:

• To prevent the wind blowing into the entrance, position the Gazebo so the entrance is away from prevailing winds.

• Ensure the ground is level, free from debris and sharp objects that could damage the fabric. Avoid pitching under trees but make use of natural wind breaks such as hedge rows etc. **Heavy winds and rain could damage the Gazebo.**

• Try to locate the Gazebo at least 5-10 meters away from any other campers where possible.

• ***Warning:*** The unit weights approximately 111kgs. **Please lift with care.**

Fire Precautions and safety



The canopy and sides of this Gazebo ate not fire proof, follow the fire precautions and safety at all times.

• Do not use naked flames in or around the Gazebo-there is no cooking area within the Gazebo.

• Do not store cooking apparatus, BBQs stc within the Gazebo as it may cause a fire hazard.

• Do not smoke or allow smoking in or around the Gazebo.

Care and storage

• Take care when dismantling the Gazebo. Follow the assembly instructions in the reverse order and do not force the frame.

• Never remove the pegs by pulling on the guy ropes, fabric or Gazebo legs.

• Ensure all parts of the Gazebo are completely dry before repacking.
If necessary unpack the parts When you return home and allow to dry completely before repacking and storing.

• All oarts should be cleaned and packed separately. When completely dry gently remove any dirt and debris from the fabric with a soft brush.

•Never use abrasive cleaners or detergents.

Care and storage







•To avoid any risks of suffocation to animals or children dispose of the plastic bags immediately.

•As with all surfaces clean with a damp cloth and mild detergent,do not use bleach or abrasive products.

Components - Parts & Fittings

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400800**


Please check you have all the parts listed below

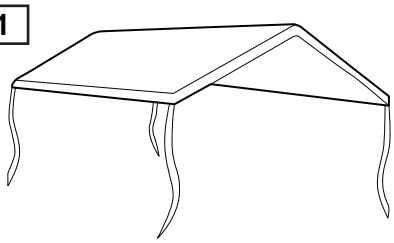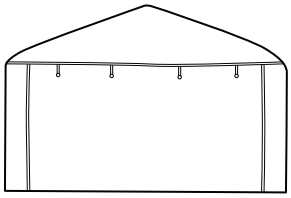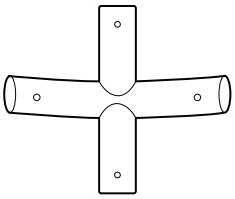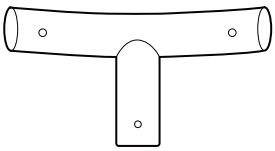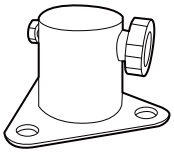1  1 x Roof	**2**  2 x Side panel	**3**  2 x End Panel
4  9 x Centre Joint	**5**  6 x Corner Joint	**6**  10 x Base Plate
7 10 x Top Pole	**8** 12 x Support Pole	**9** 10 x Leg Pole


Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.



A Peg x 46



B Long Peg x 14




C Large Peg x 4


D Metal Bar x 1




E Wing Screw x 54




F Guy rope x 4



G Canopy Ties x 60




H Ratchet Bell x 4



I Spanner x 1

Ruler - Use this ruler to help correctly identify the screws





Assembly Instructions

Stage 1 – Assembling the connecting frames

Step 1

1.Fully insert Support Pole 8 into the Centre joint 4 and Corner Joint 5 . Then use Wing Screws E to fix the Centre Joint 4 and Corner Joint 5 onto the Support Pole 8 . See fig.1.

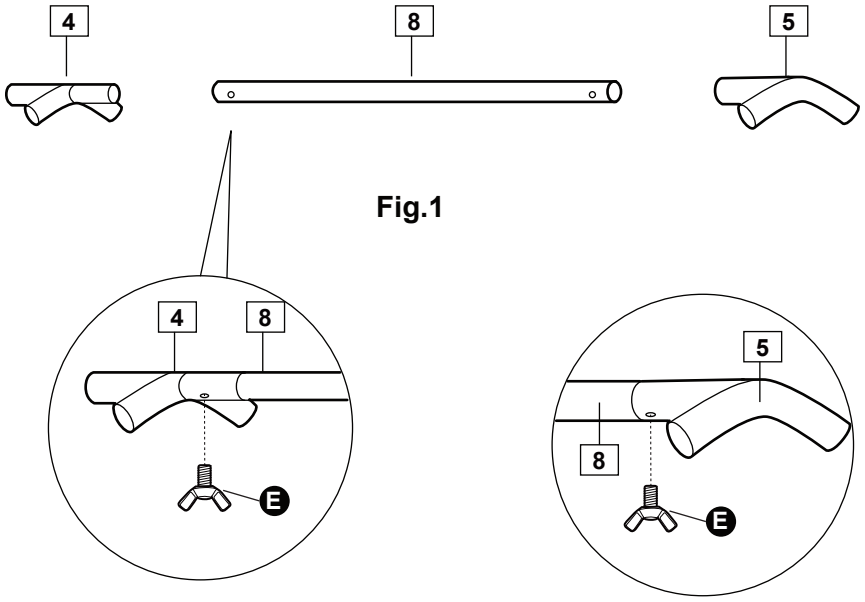


Fig.1

Step 2

Use the same method as in fig 1 to fix the other 3 Support Poles 8 on the centre Joint 4 and Corner Joint 5 .
See fig.2.

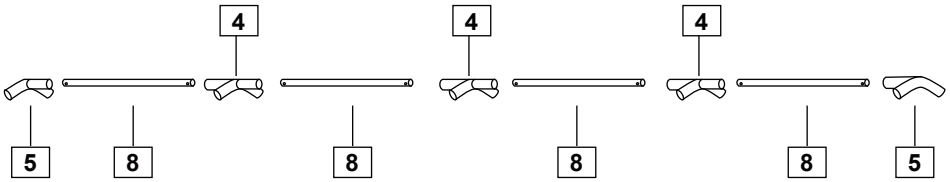


Fig.2

Repeat steps 1 and 2 to assemble Two more connecting frames.
See fig.3.

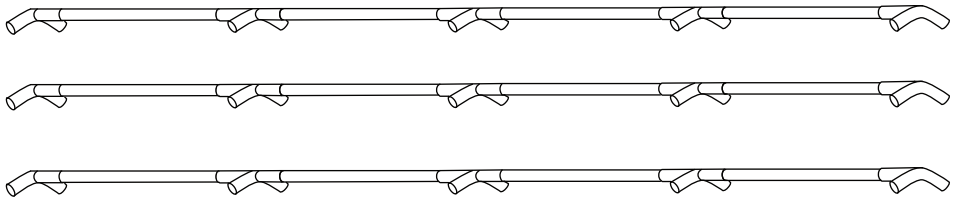


Fig.3

Assembly Instructions

Stage 2 – Fitting the connecting frames

Step 3

Fully insert Top Poles [7] into one of the connecting frames. Then use Wing Screws (E) to fix the Top Pole [7] in the unit. See fig.4.

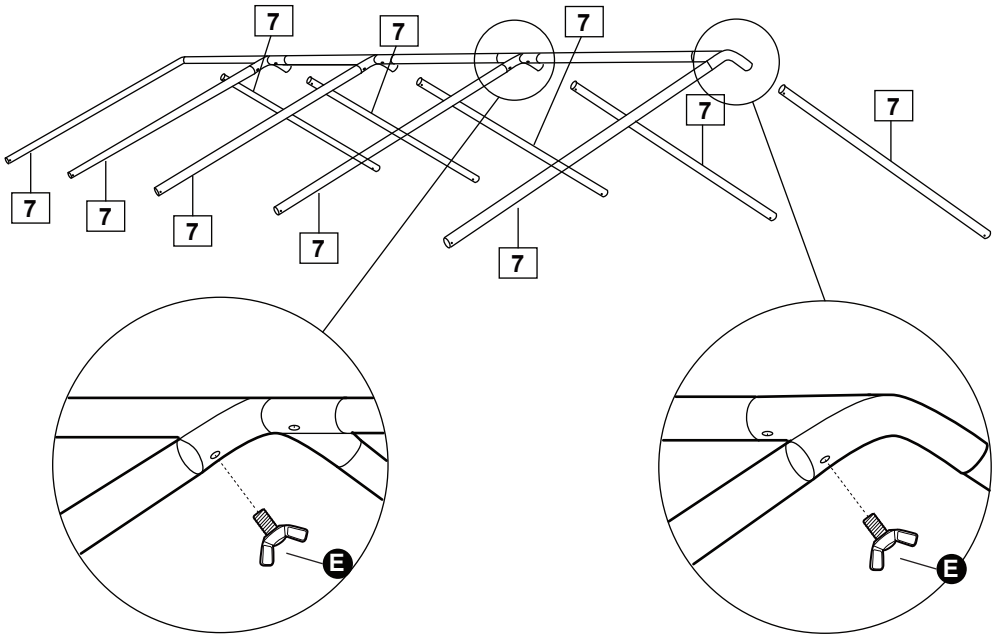


Fig.4

Step 4

Firmly fit the other two connecting frames to the unit. Then use Wing Screws (E) to fix them. See fig.5.

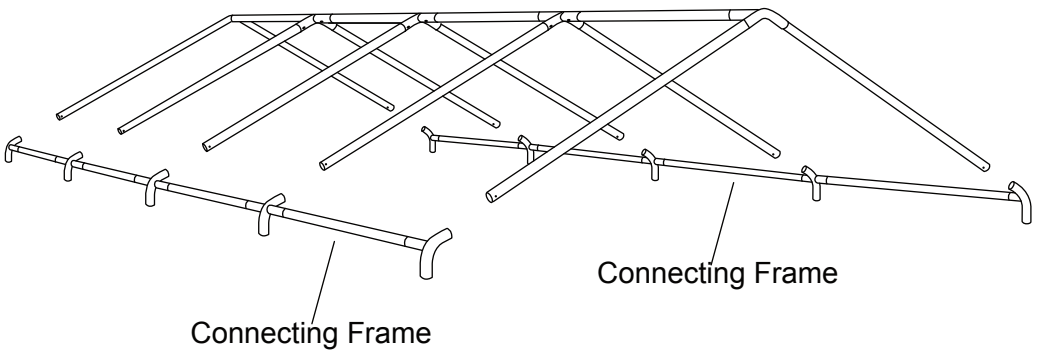


Fig.5

Assembly Instructions

Stage 3 – Fitting the Roof

Step 5

Carefully locate the Roof 1 on top of the unit. Then use Canopy Ties G to fix the Roof onto the unit.
See fig.6.

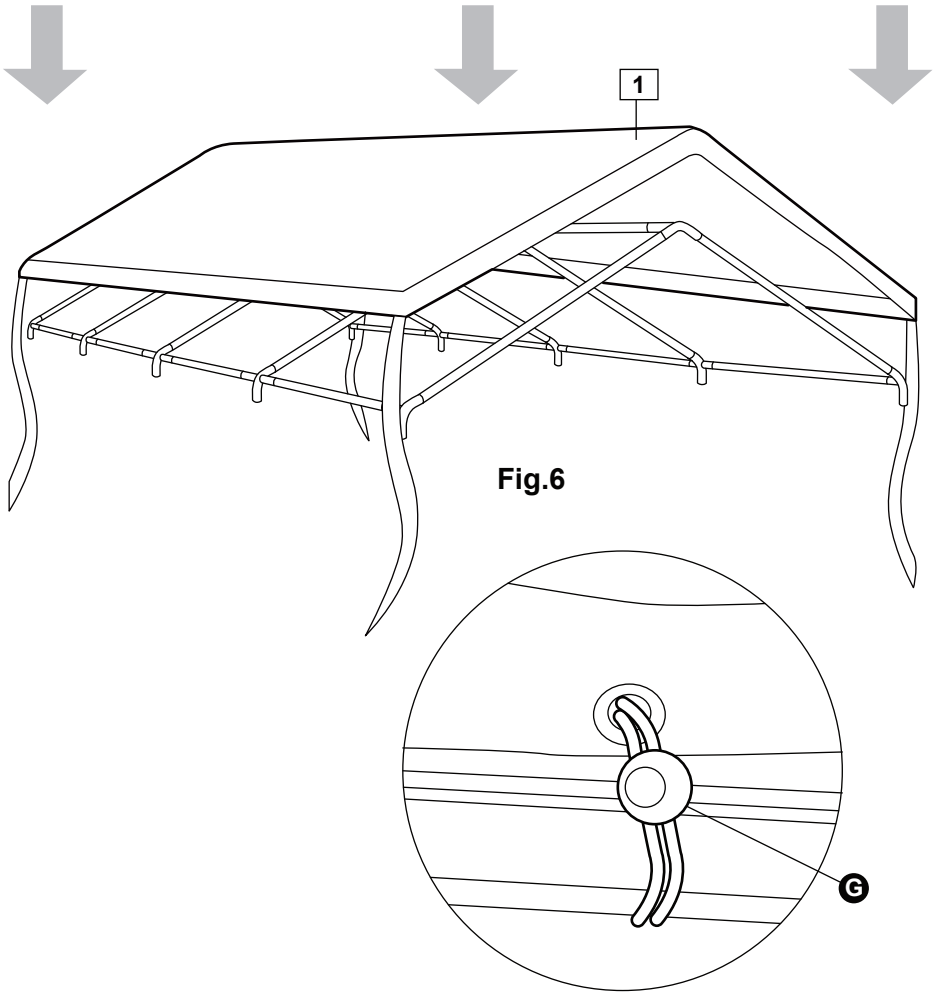


Fig.6

Step 6

Unscrew the Nut and Screw from the Base Plate 6 .
See fig.7.

Use the Nut and Screw to fix the Base Plate 6 on the Leg Pole 9 .
See fig.7.

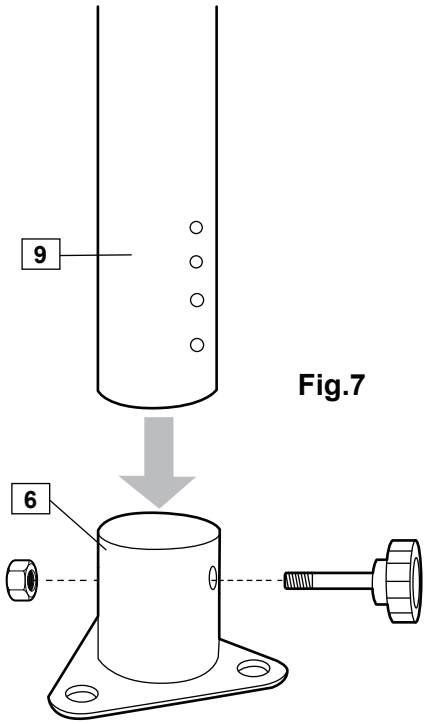


Fig.7

Assembly Instructions

Stage 4 – Fitting the Leg Poles

Step 7

Use Wing Screws Ⓔ to fix 5 Leg Poles [9] on one side of the unit.
See fig.8.

Use the same Canopy Ties Ⓖ as before to fix the top of the End Panels [3] onto the unit.
See fig.9.

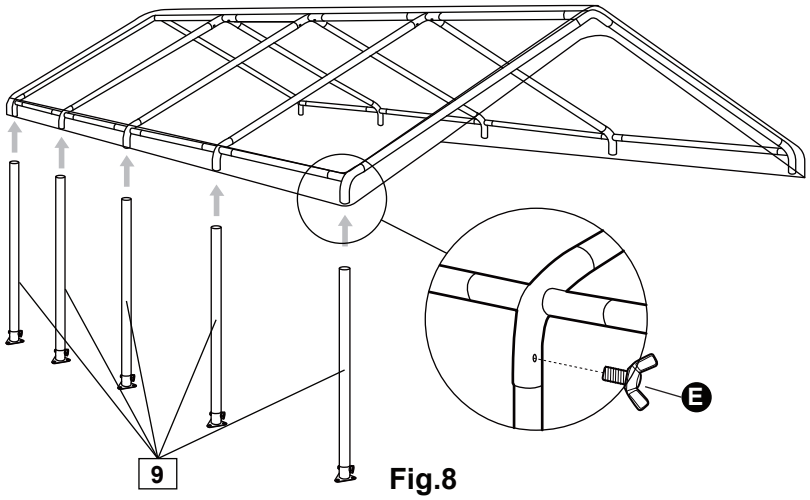


Fig.8

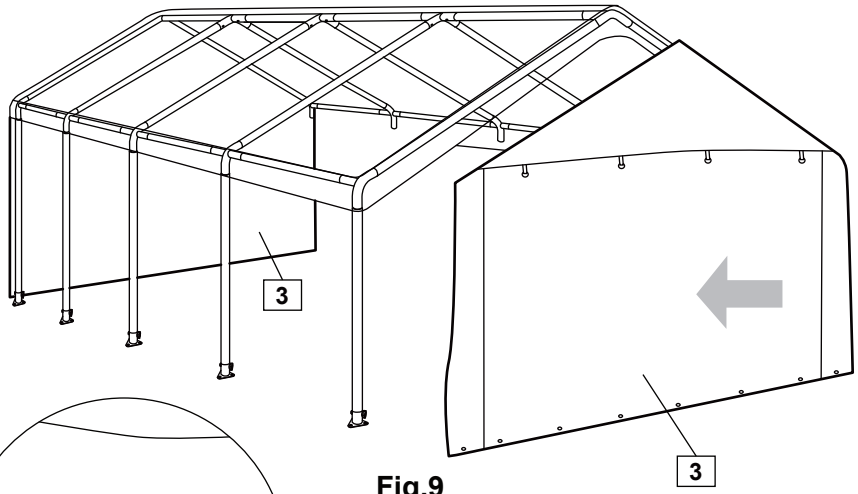
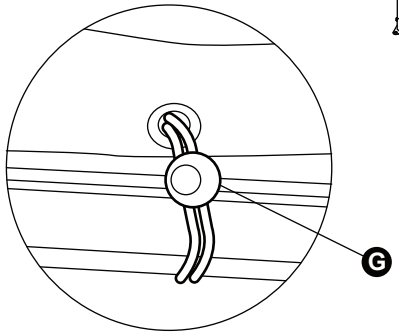


Fig.9

Step 8

Use Wing Screws Ⓔ to fix the other 5 Leg Poles [9] on the other sides of the unit.
See fig.10.



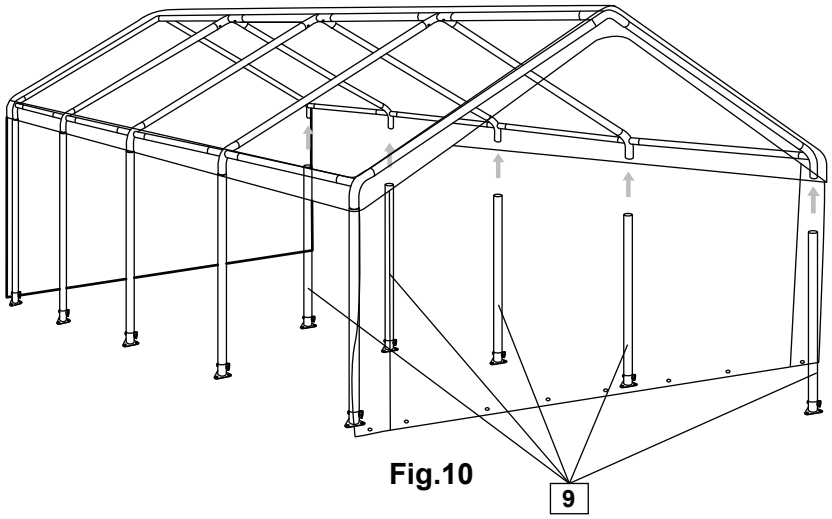


Fig.10

Assembly Instructions

Stage 5 – Fitting the Side Panels

Step 9

Use the same Canopy Ties **G** as before to fix the top of the Side Panels **2** onto the unit.
See fig. 11.

Use the Velcro tapes on the Side Panels **2** and End Panels **3** to fix them on the Leg Poles.
See fig. 11

Attach the Roof's Hooks into holes on the Leg Poles. Tighten by moving the Hook to a lower hole.
See fig. 12.

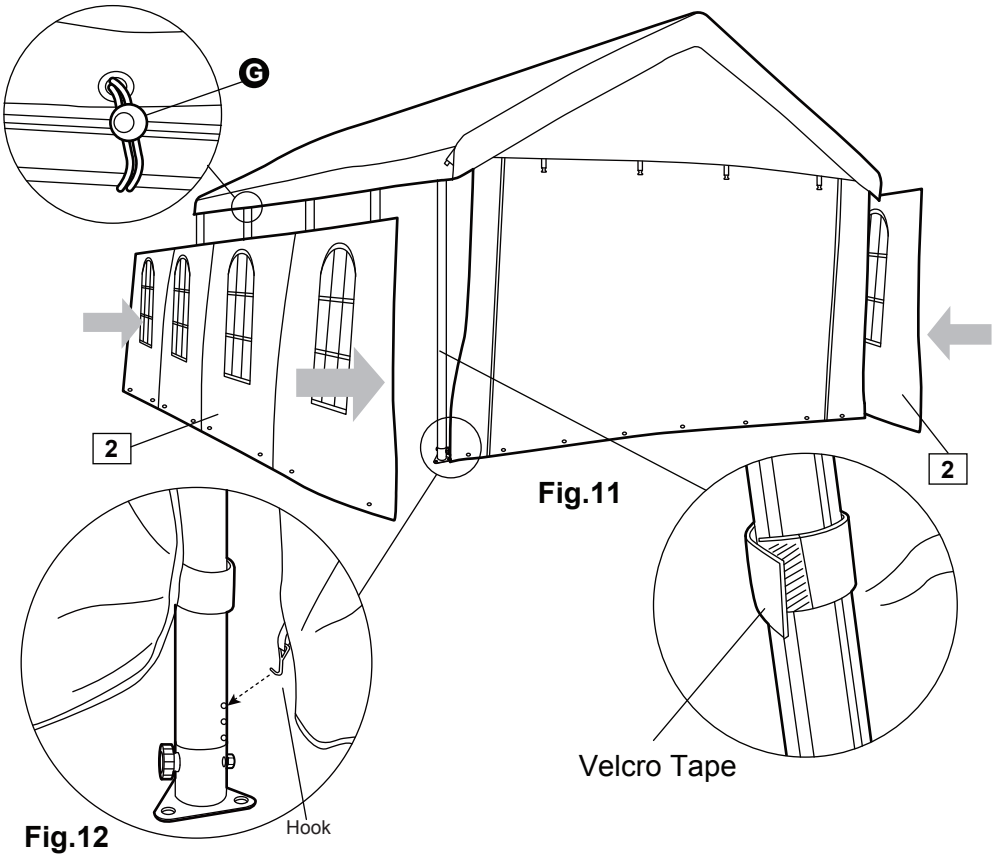


Fig.11

Fig.12

Stage 6 – Pegging Down the Gazebo

Step 10

Secure the Gazebo by pegging the Side and End Panels into the ground using Pegs **A** Care must be taken not to bend the Pegs.
use a rubber mallet if the ground is hard.
See fig. 13.

Use the Pegs **B** to secure the Base Plates on the ground.
See fig. 16.

Attach the ends of the Guy Ropes **F** to the D rings on Gazebo. Use Long Pegs **B** to secure the other ends to the ground.
See fig. 14 and 15.

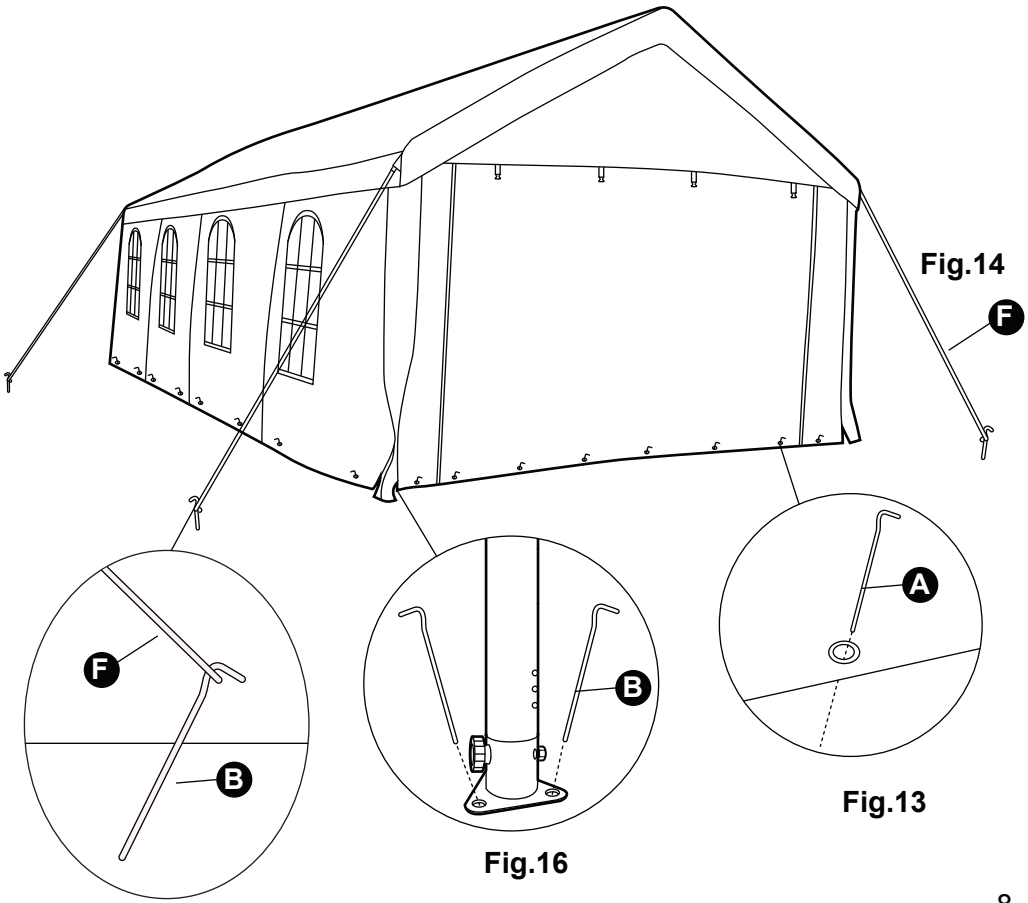


Fig.14

Fig.13

Fig.16

Fig.15

Assembly Instructions

Stage 7 – Fitting the Ratchet Bells

Step 11

Attach one end of the Ratchet Bell Ⓗ to the unit. See fig. 17 and 18.

Insert Metal Bar Ⓓ into top of hole of the Large Peg Ⓒ , with the help of the Bar, rotate the Large Peg into the ground at the desired location. See fig. 18 and 20.

Hook the other end of the Ratchet Bell Ⓗ onto the Large Peg Ⓒ . See fig. 18 and 19.

Repeat steps 1 to 3 to attach the other Ratchet Bells Ⓗ . See fig. 18.

Use the Ratchet on the Ratchet Bells Ⓗ to tension the canvas. See fig.21.

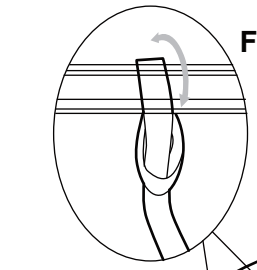


Fig.17

Fig.18

Fig.19

Fig.20

Fig.21

Stage 8 – Finishing the Unit

Step 12

CAUTION: Do not Assemble or Dissemble during strong wind.

Always zip up both doors when you leave the Gazebo.

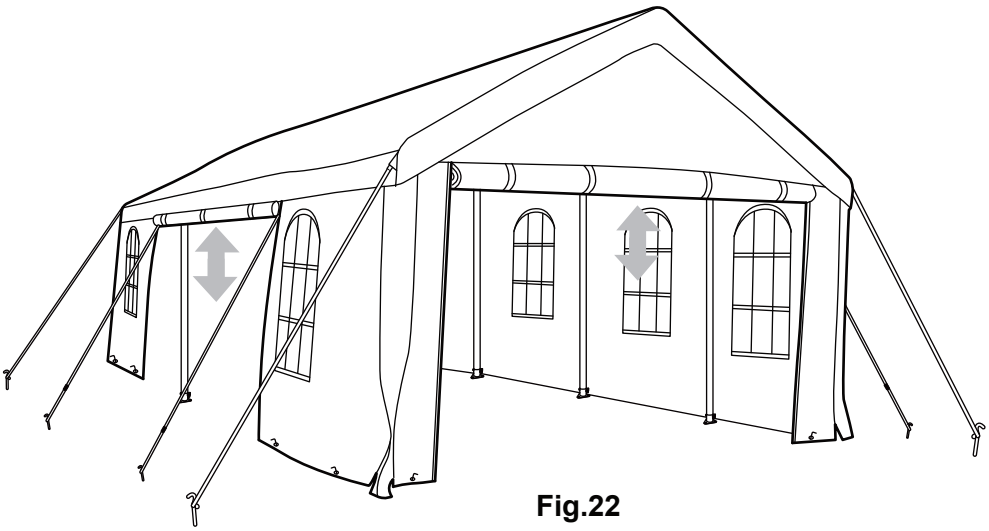


Fig.22

If you need help or have damaged or missing parts, call the

Customer Helpline: Argos = 0345 6400800

For further assistance please visit http://www.argos-support.co.uk

Address: 489-499 Avebury Boulevard Saxon Gate West, Central Milton Keynes Bucks,MK9, 2NW