

Double Metal Futon

Assembly Instructions

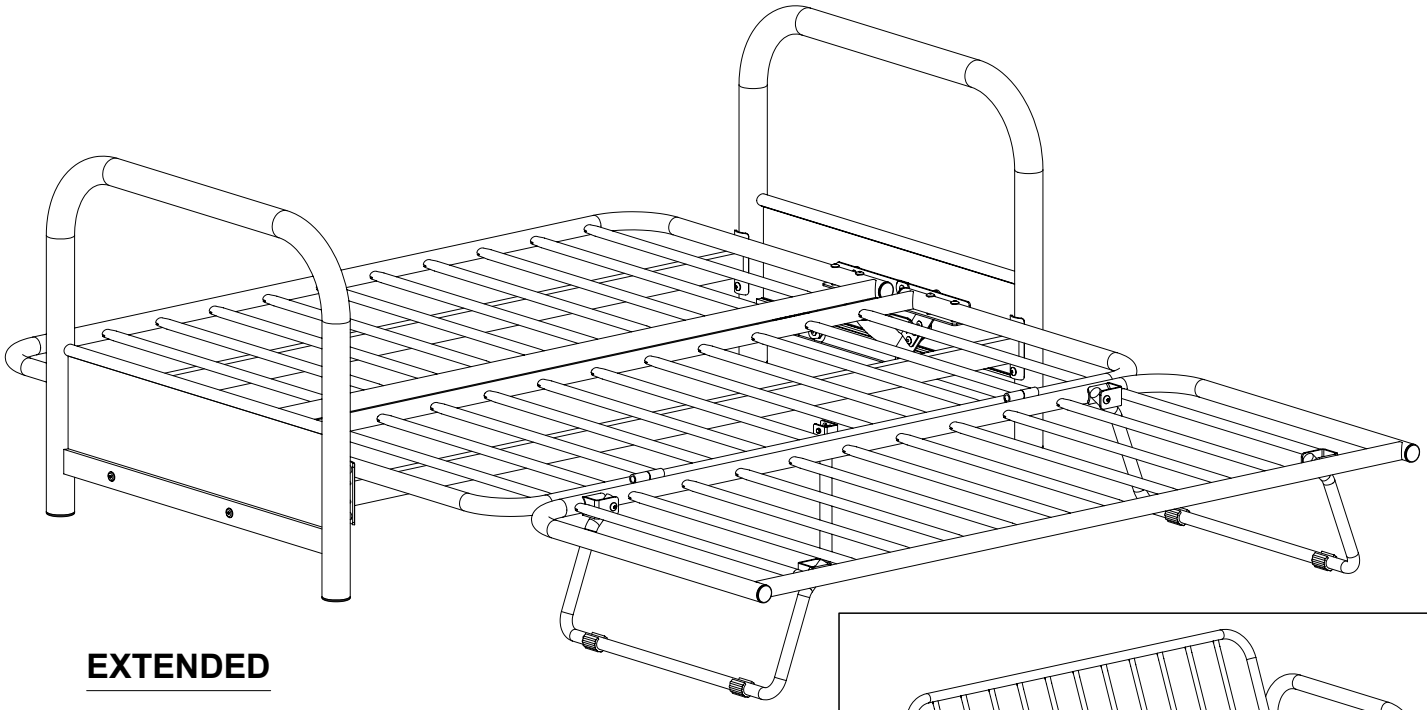

EXTENDED

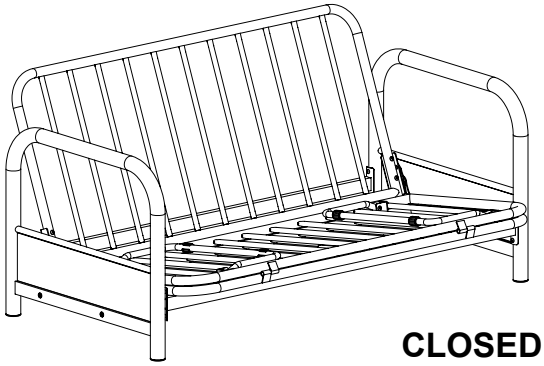

CLOSED

Note: It will require two people to complete this assembly.


Before you start, here is some helpful advice

1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. If you follow the instructions carefully the end result should be worth the effort.
3. Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.
4. Assemble this product on a carpet.
5. To ensure an easier assembly, we strongly advise that all fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.
6. We recommend a periodic check on all fixing points to make sure they remain fully tightened.
7. Keep glue and fittings out of children's reach.










After-sales telephone number for spare parts : 08456 400800

Component parts and fittings contained in the box


Parts

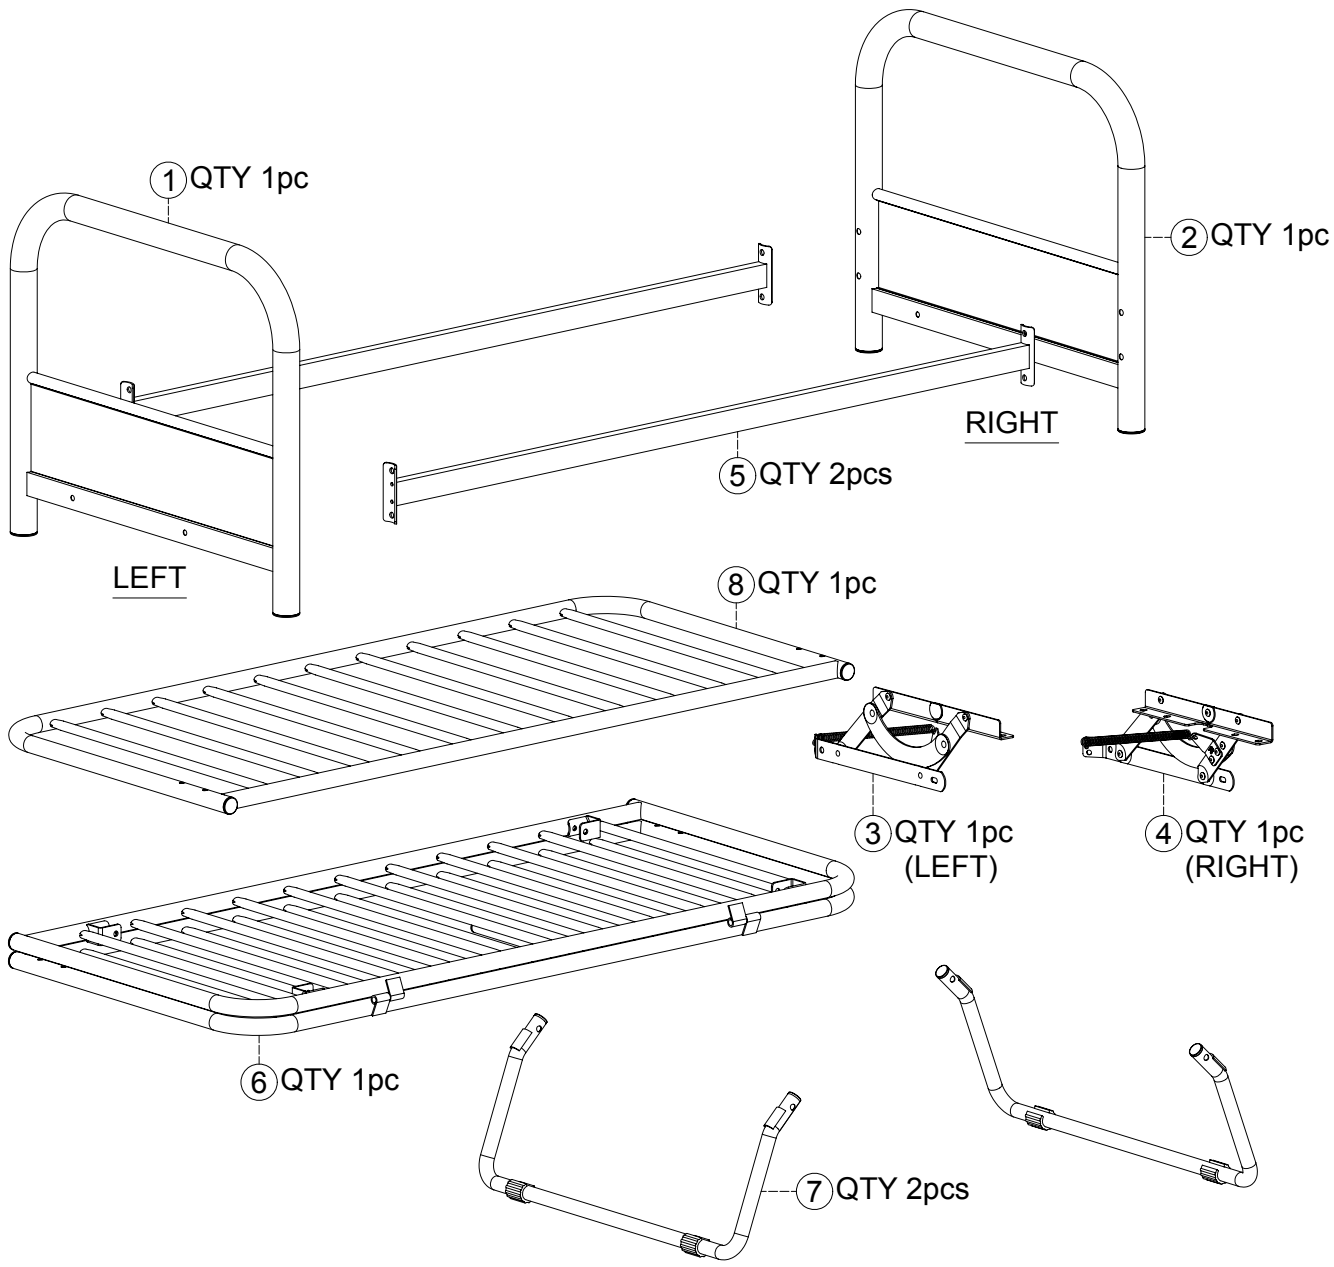

Fittings

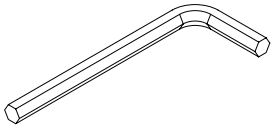Ⓐ QTY 4 	Ⓑ QTY 12 Ø16mm  Washer	Ⓒ QTY 12 
Ⓓ QTY 16 	Ⓔ QTY 8  Rubber Washer	Ⓕ QTY 4 
Ⓖ QTY 4 	Ⓗ QTY 2 	Ⓙ QTY 1 


ASSEMBLY

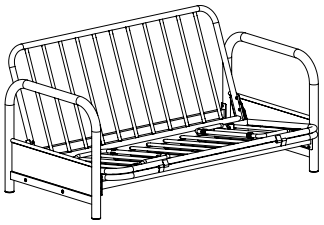


1) Assemble left hand hinge ③ to left side frame ① using fixings Ⓐ Ⓑ and Ⓒ.

Note:
Both the hinge and frame are identified Ⓛ!

STEP 1

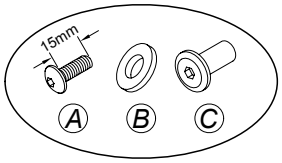


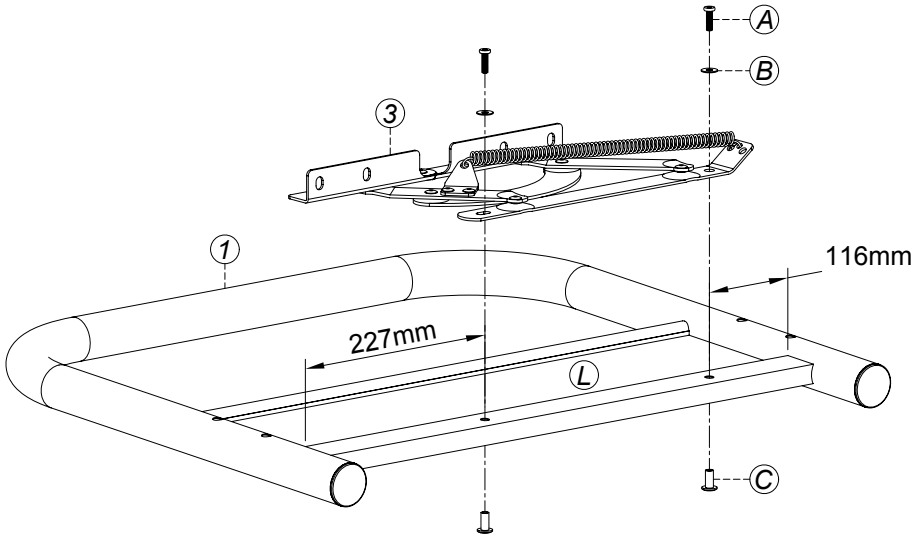


1) Assemble right hand hinge ④ to right side frame ② using fixings Ⓐ Ⓑ and Ⓒ.


Note:
Both parts are identified Ⓡ!

STEP 2

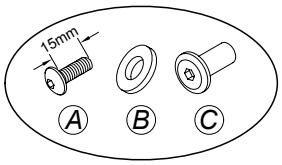

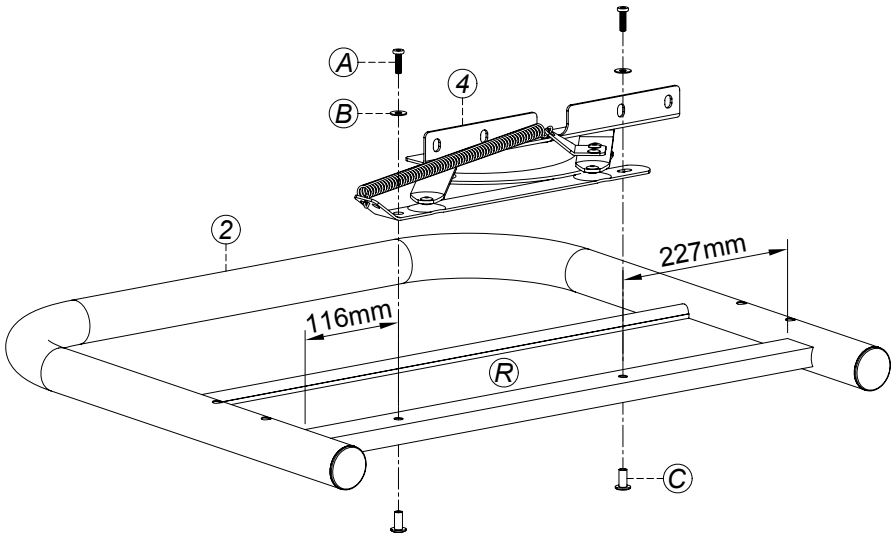


ASSEMBLY

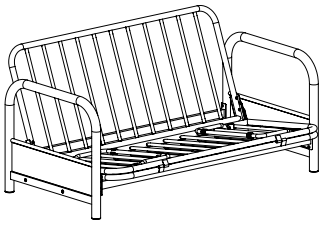


1) Assemble rails ⑤ in between side frames ① and ② using fixings Ⓑ Ⓓ and Ⓔ.

STEP 3

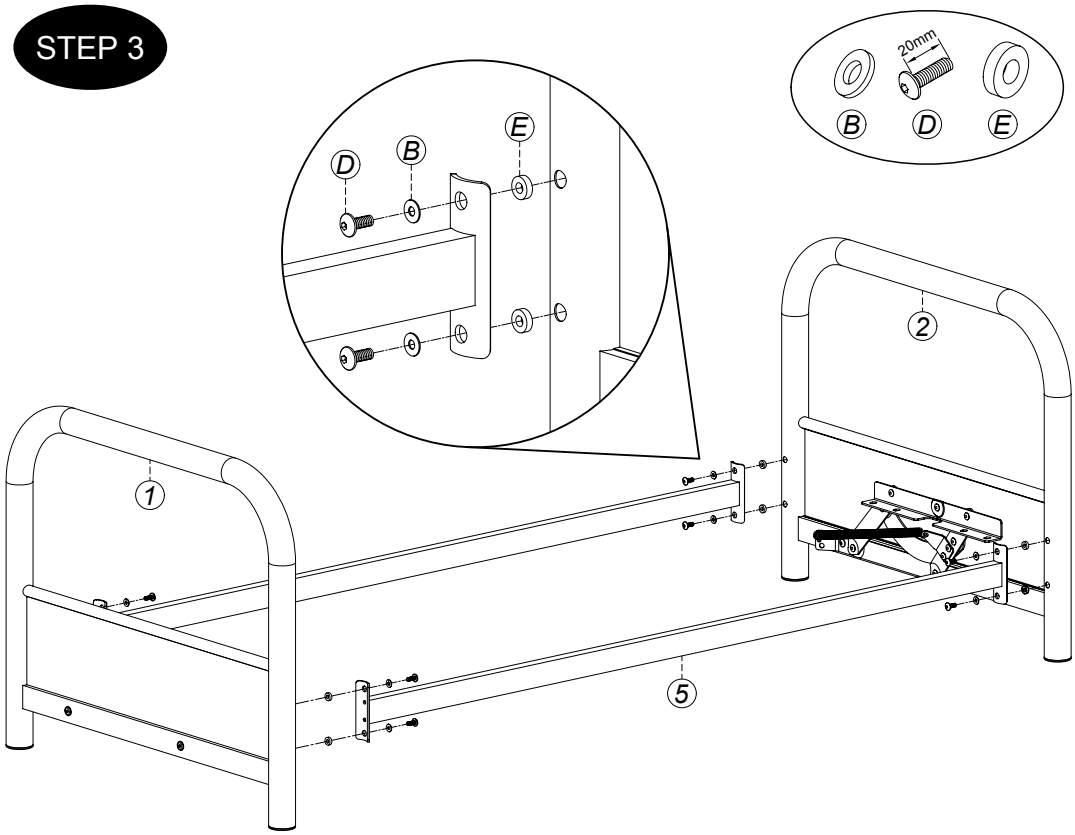


1) Assemble support legs ⑦ to the underside of main base panel ⑥ using fixings Ⓕ.

STEP 4

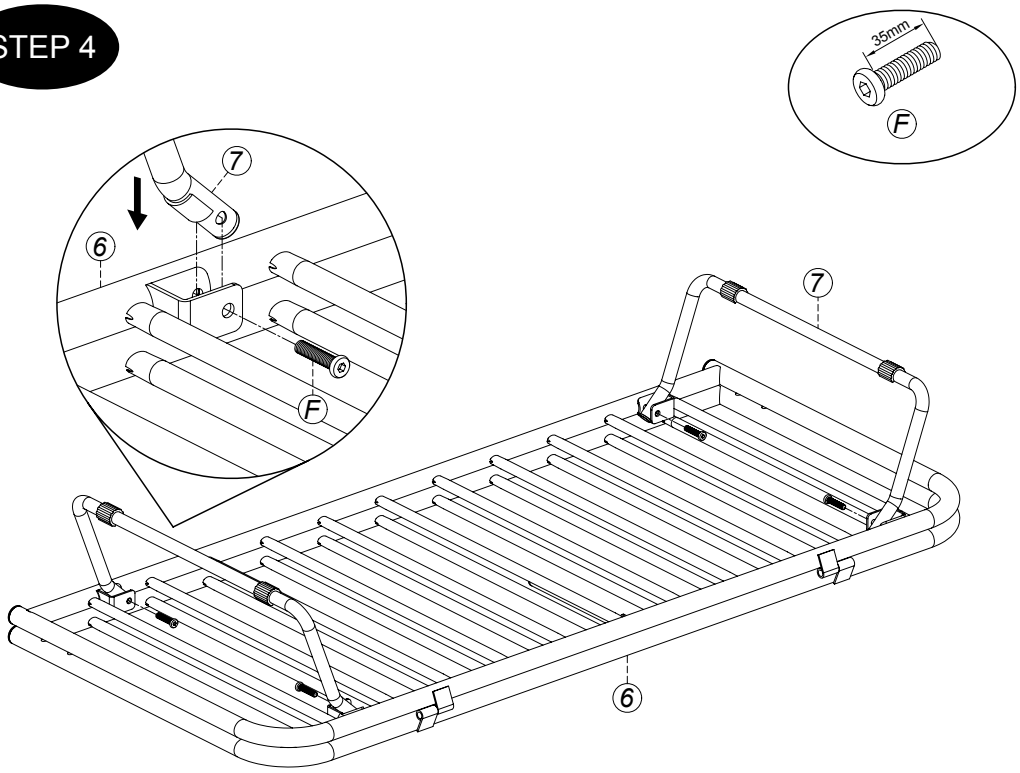


ASSEMBLY

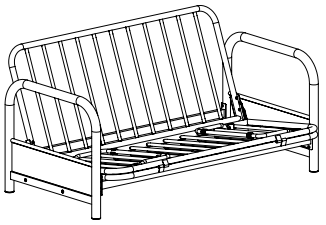

1) Assemble back panel ⑧ to hinges using fixings Ⓒ and Ⓓ.


STEP 5

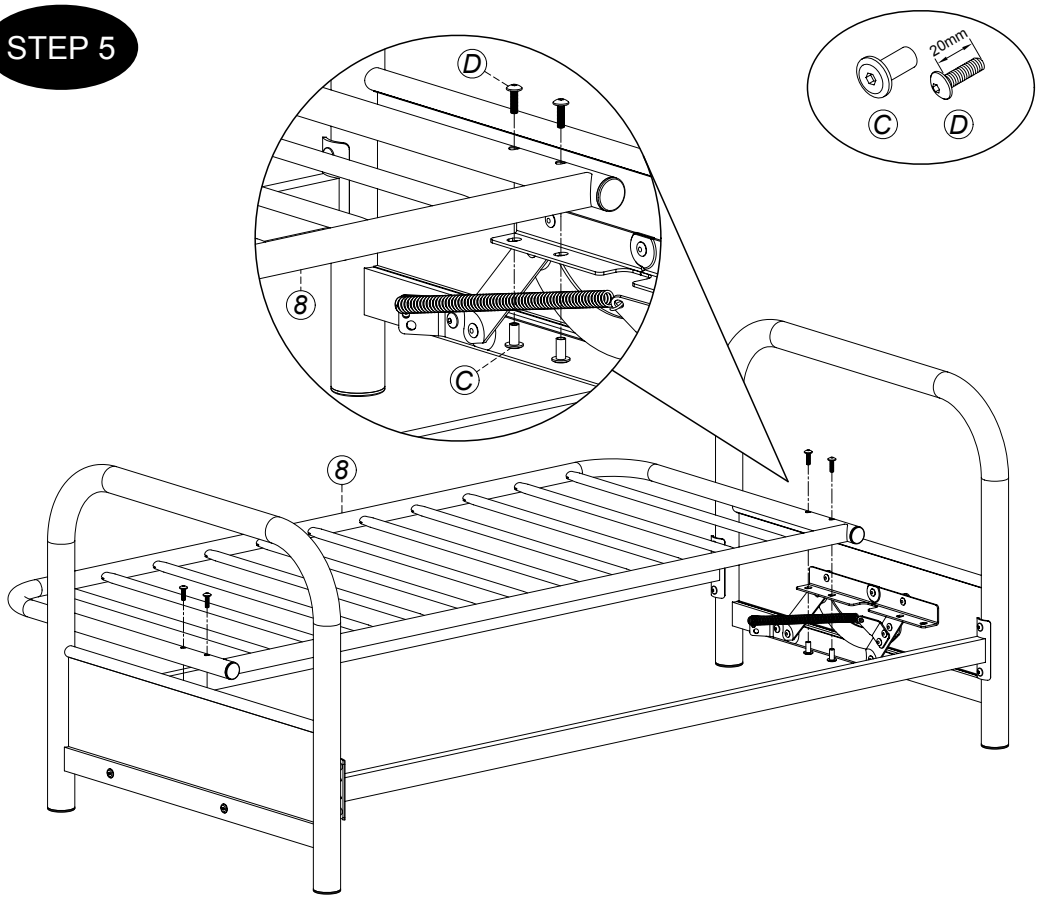


1) Open out main base panel ⑥.

2) Fold out the support foot by releasing the spring pin as shown.

STEP 6

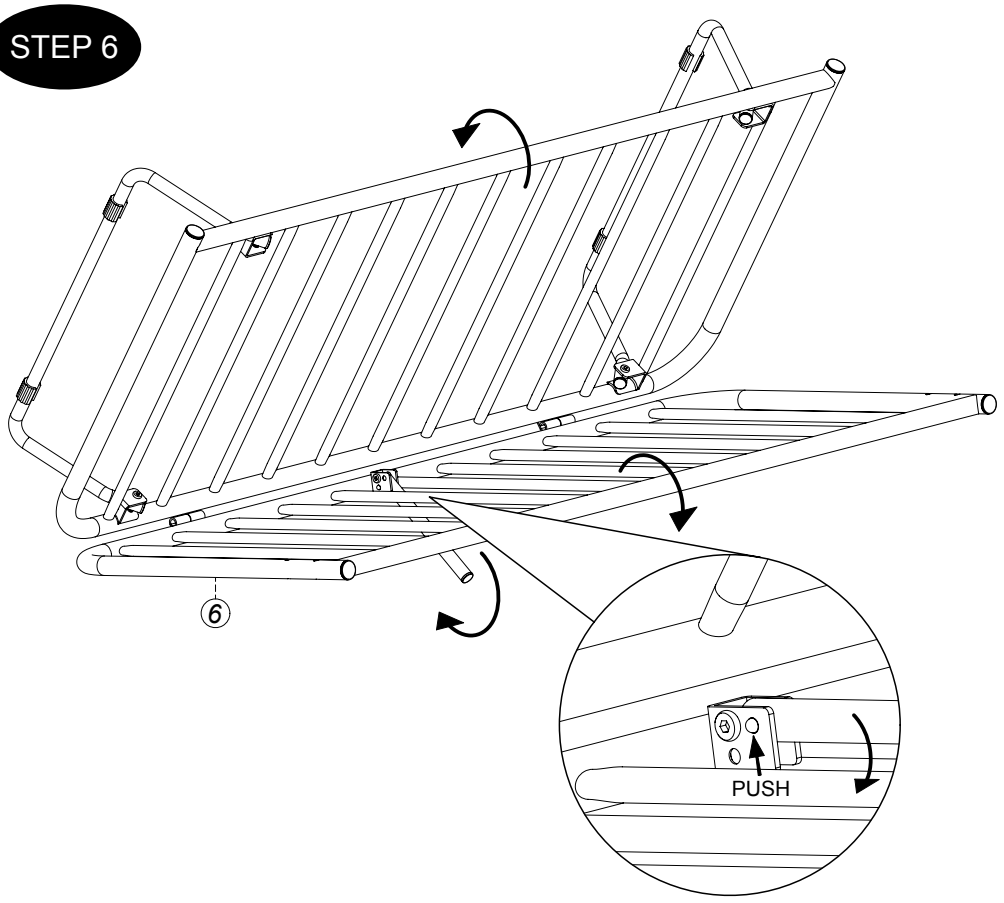


ASSEMBLY

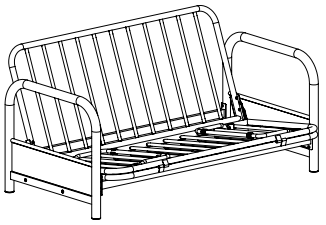


1) Assemble base panel ⑥ to the hinges using fixings Ⓒ and Ⓓ.


2) Stick self adhesive foam pads Ⓖ onto rails ⑤ at the base frame contact points.

STEP 7

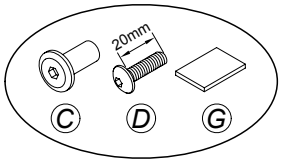

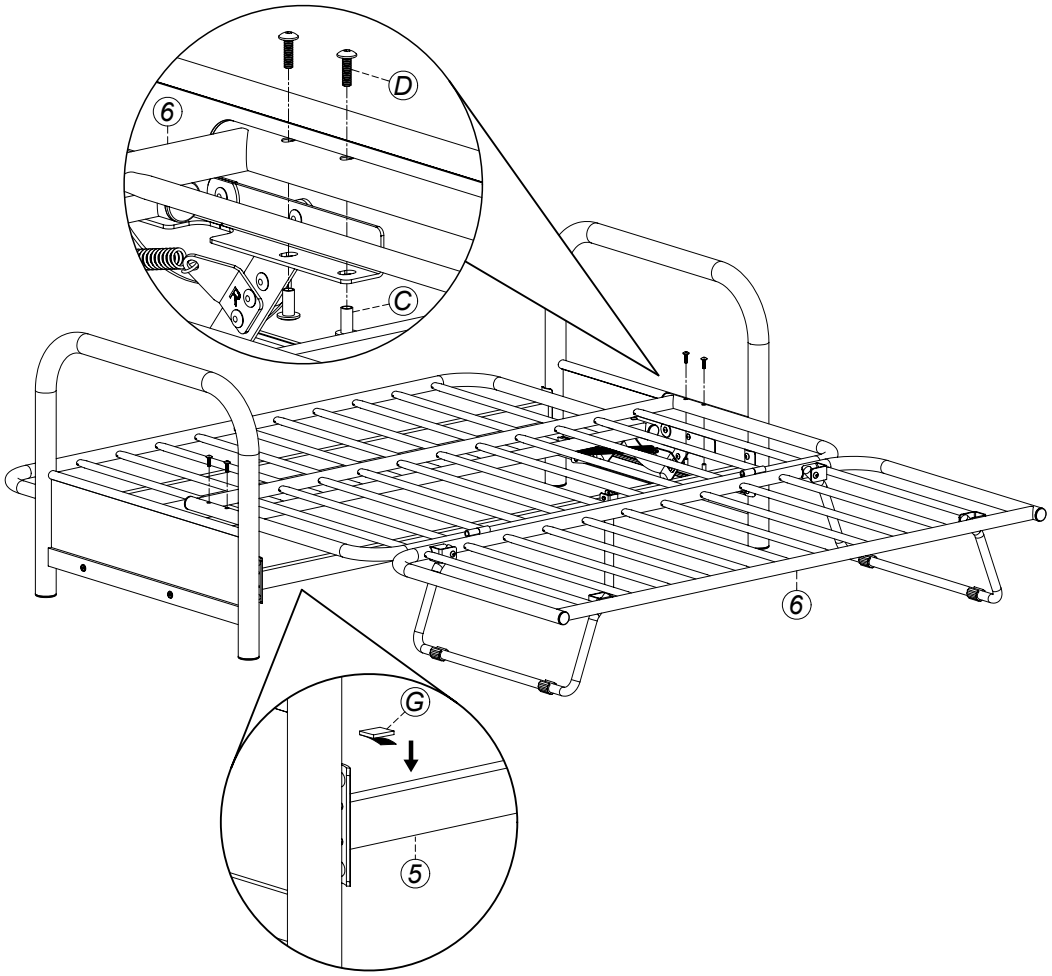

ASSEMBLY

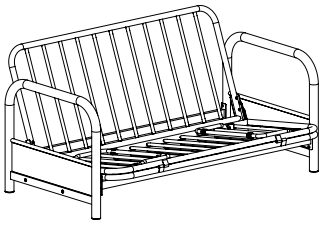

TO OPEN

1) Lift the front edge of the seat section.

2) Push the back section down until both sections are flat.

3) By depressing the release pin, fold down the support foot.

4) Open out the folding seat.

5) Extend the support legs.

TO CLOSE

1) Fold up the support legs.

2) Close the folding seat section.


3) Using the release pin, close the support foot.


4) Lift the front edge of the seat section.


5) Lift the back section until it settles into the raised position.

6) Lower the seat section onto the frame.

STEP 8

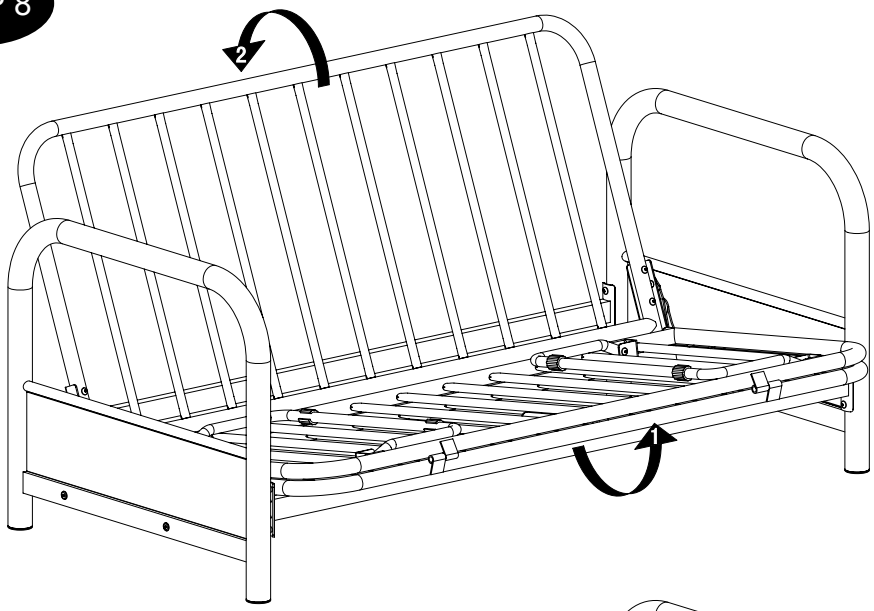


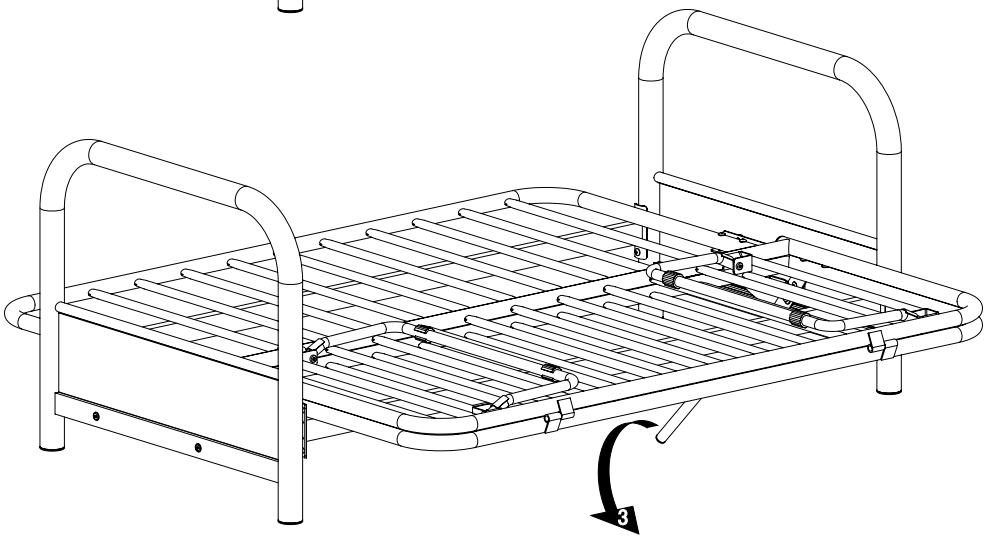


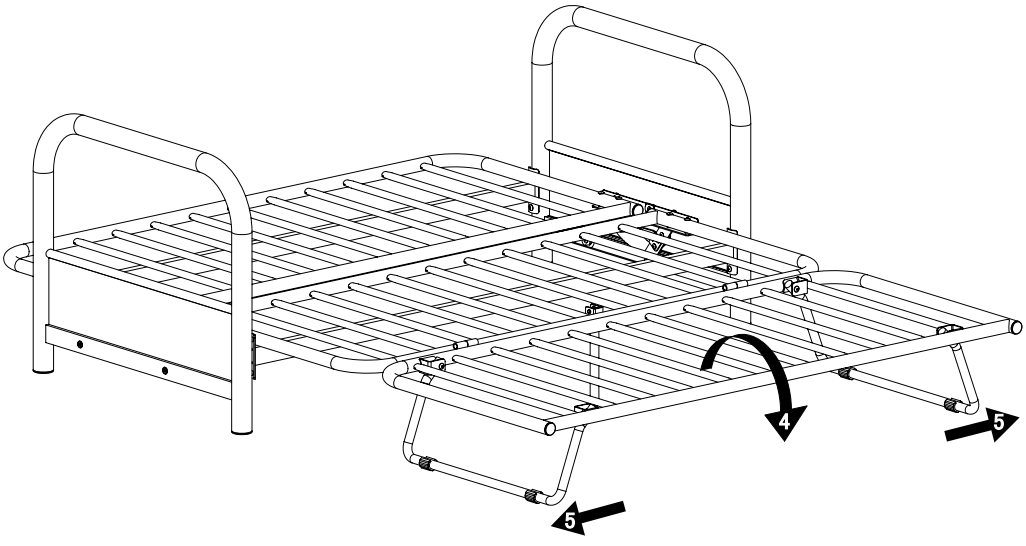

Double Metal Futon

Assembly Instructions – Please keep for future reference | 656/0898

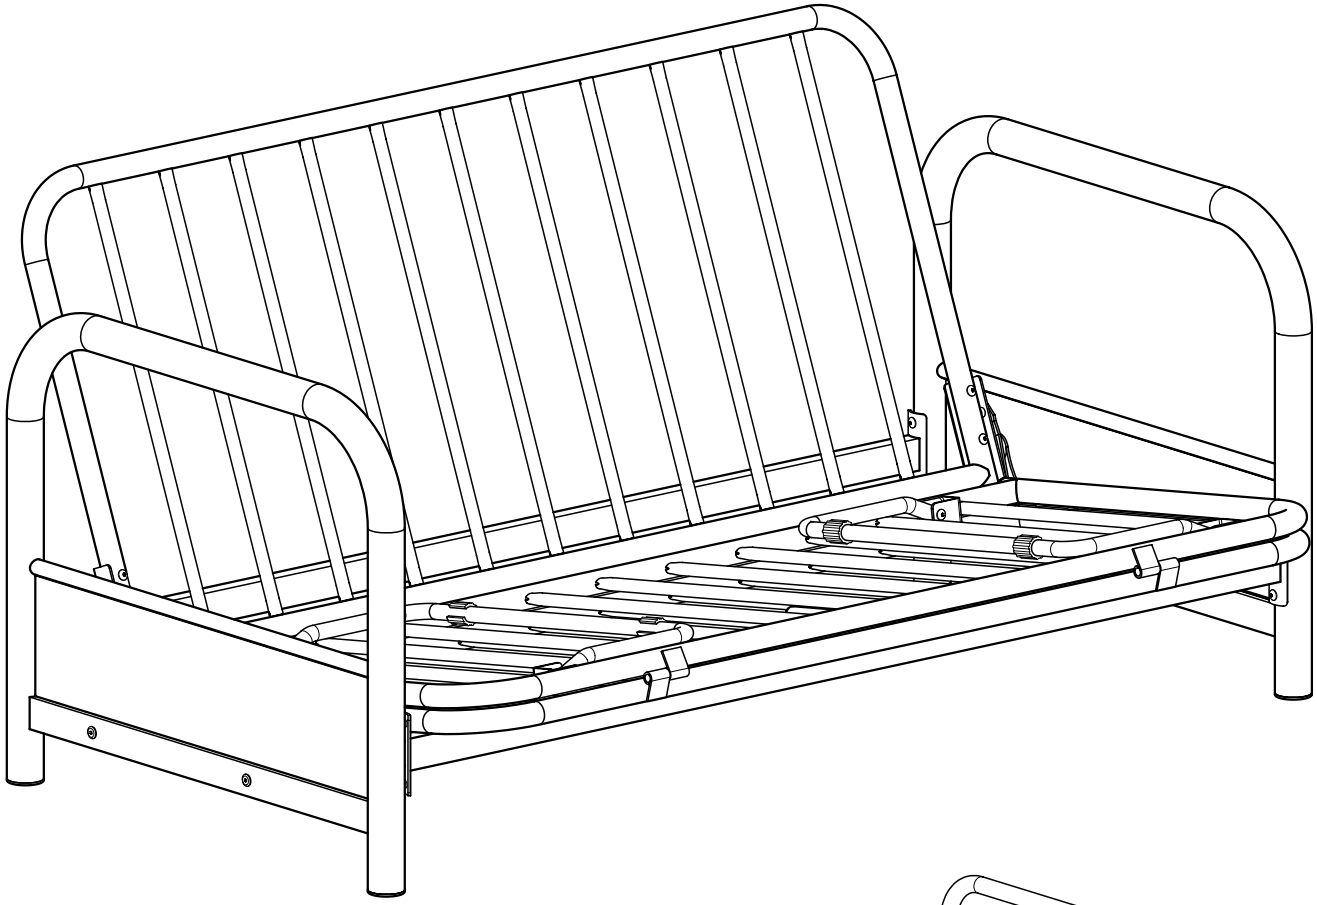

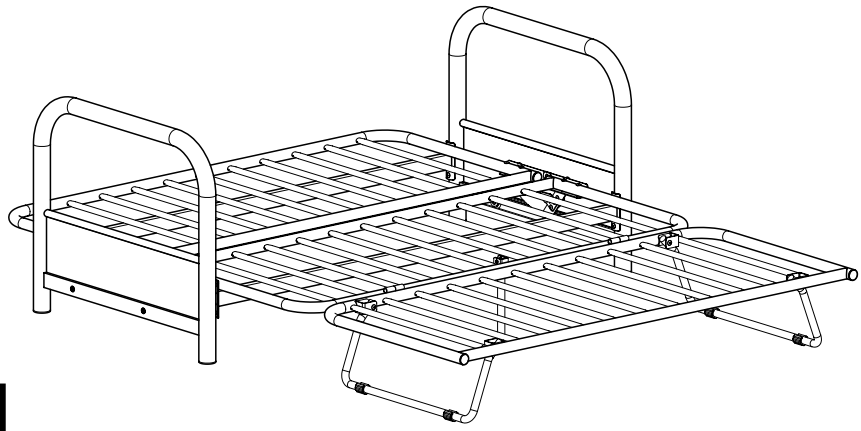

Dimensions	
Extended	Closed
Width - 191cm	Width - 149.5cm
Depth - 149.5cm	Depth - 87cm
Height - 60.5cm	Height - 72.5cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 07/01/10

Safety and Care Advice

Important – Please read these instructions fully before starting assembly


- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Make sure that support legs are fully open during use.
- Keep hands clear of the hinge folding area when opening or closing the frame.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.
- Place the product on flat and steady surface during use.
- Legs can be folded away for flat storage.
- Keep children away from the area when opening or closing the frame.
- Keep these instructions for further use.
- To ensure an easier assembly, we strongly advise that all fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.

Care and maintenance


- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Parts


Please check you have all the parts listed below

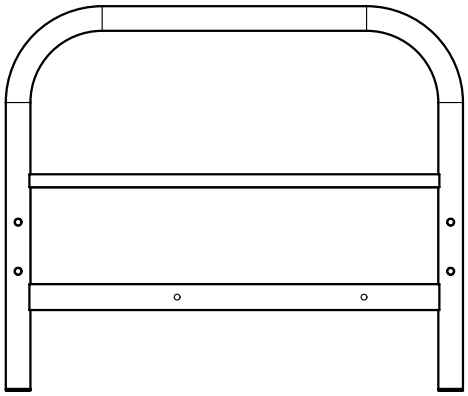


1 Left side frame
(72 x 60.5cm)

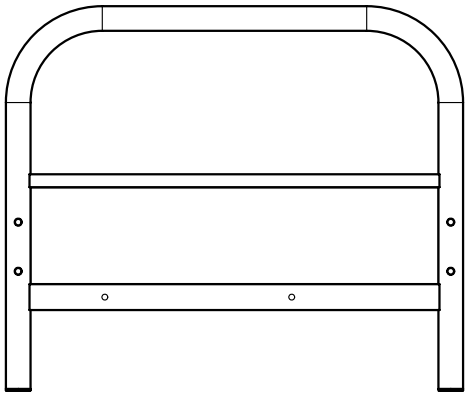


2 Right side frame
(72 x 60.5cm)




3 Left hand hinge
(47 x14.5cm)




4 Right hand hinge
(47 x 14.5cm)



5 Side rail x 2 (141 x 10cm)

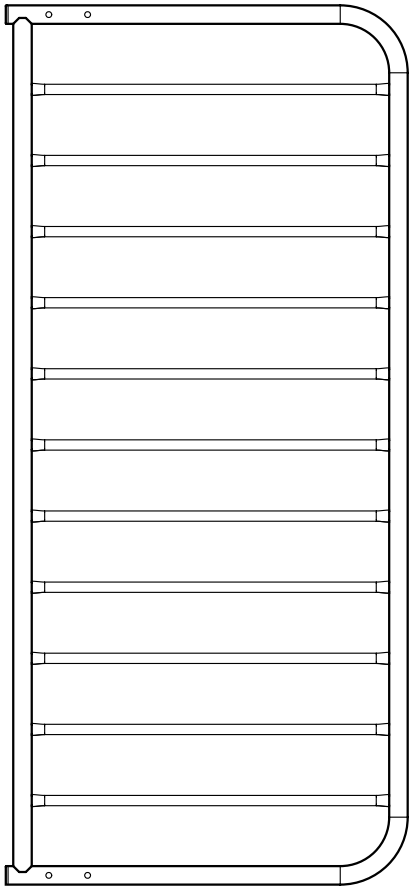

6 Back frame (136 x 62cm)

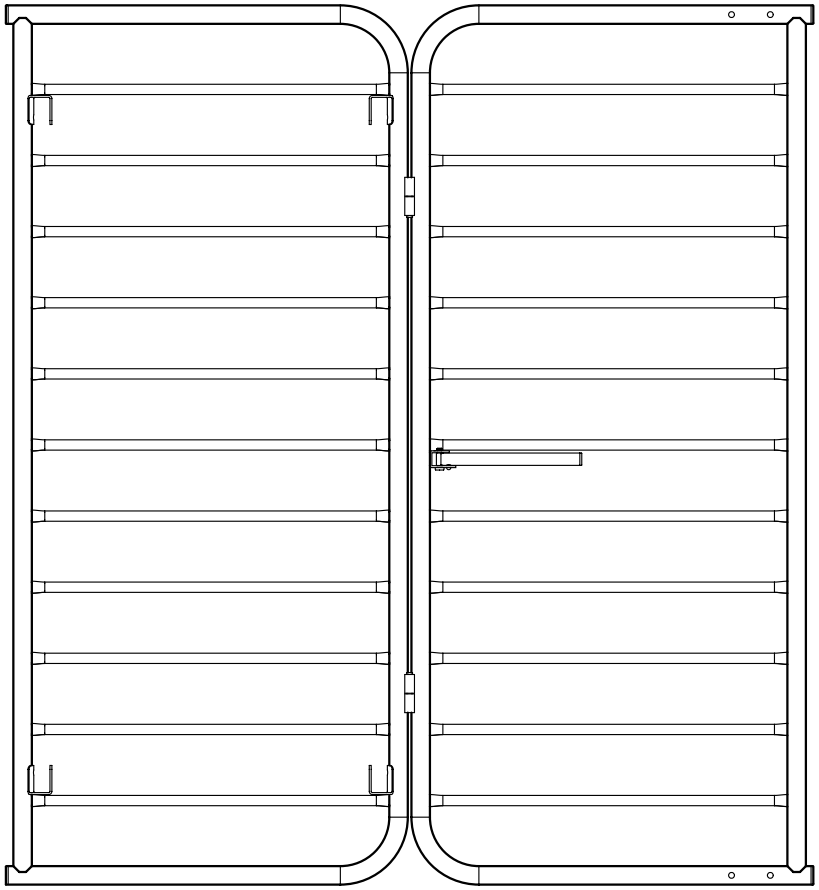

7 Seat frame (136 x 124.7cm)











8 Support leg x 2 (54 x 24cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

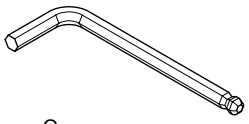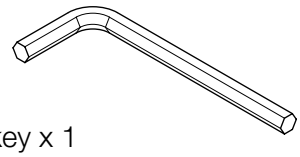A  15mm screw x 4	**B**  Plain washer x 12	**C**  Nut x 12
D  20mm screw x 16	**E**  Rubber washer x 8	**F**  35mm Allen screw x 4
G  Self adhesive pad x 4	**H**  Allen key x 2	**J**  Allen key x 1

Ruler – Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Assembling hinges


Place side frames 1 and 2 flat onto the floor with the L or R labels facing upwards.

a: Assemble left hand hinge 3 to left side frame 1 using fixings A B and C.

Note: Both the hinge and frame are identified L.

b: Assemble right hand hinge 4 to right side frame 2 using fixings A B and C.

Note: Both parts are identified R.

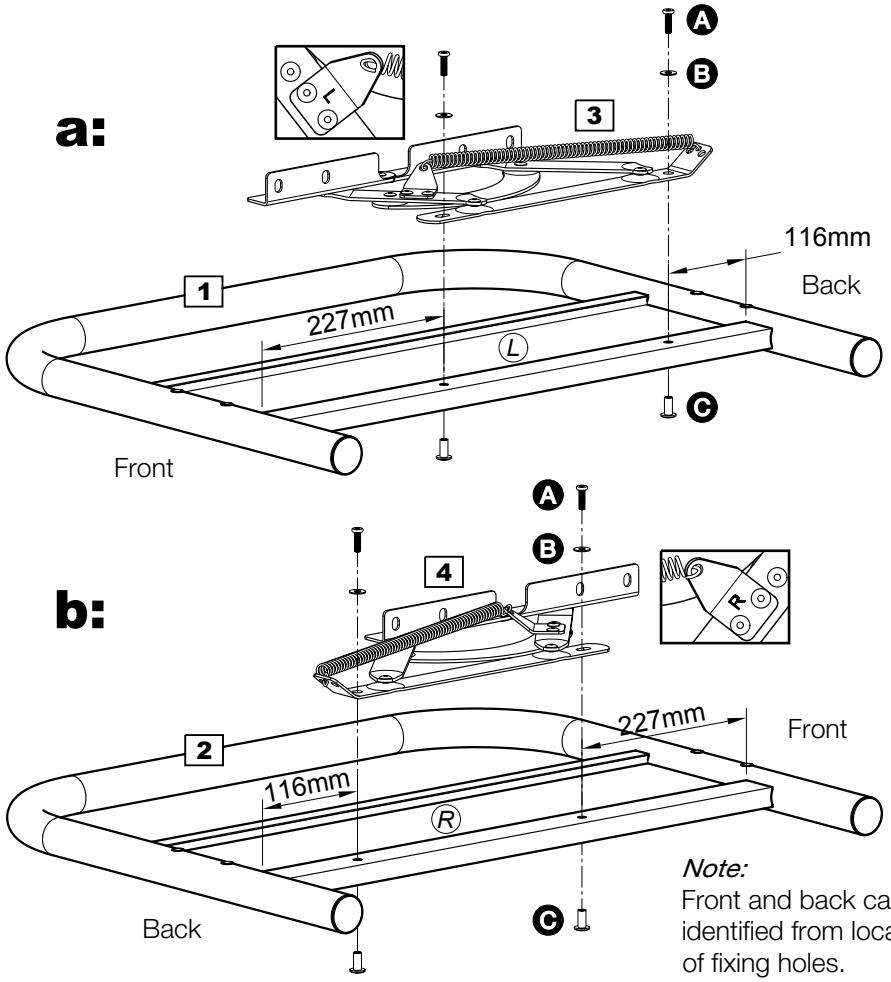


Note:
Front and back can be identified from location of fixing holes.

Step 2

Assembling side rails

Two people will be needed here.


With help, assemble side rails 5 in between side frames 1 and 2 using fixings B D and E.

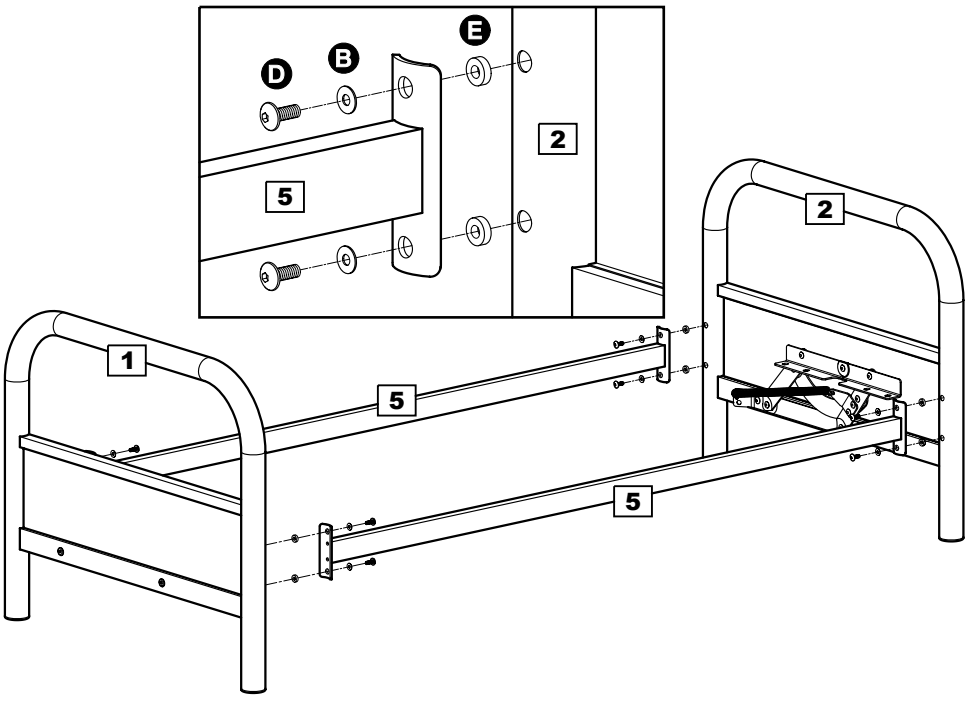

Step 3

Assembling back frame


Assemble back frame 6 to the hinges using fixings C and D.

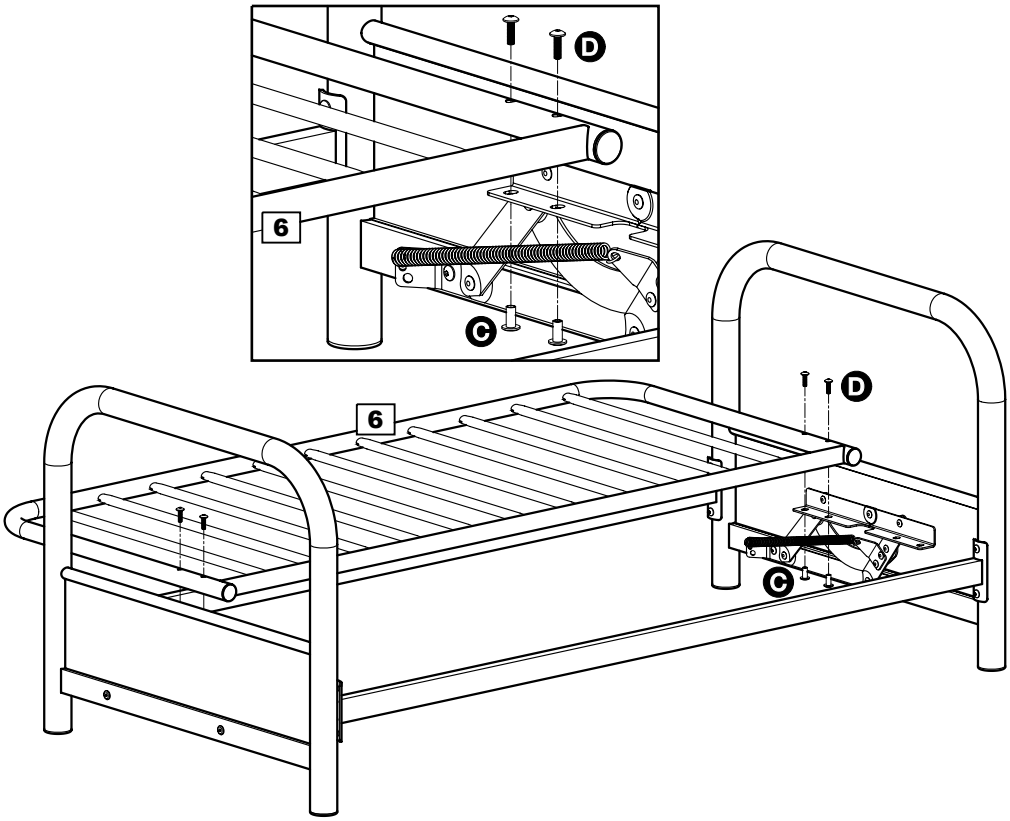

Step 4

Assembling support legs

Assemble support legs 8 to the underside of seat frame 7 using fixings F.

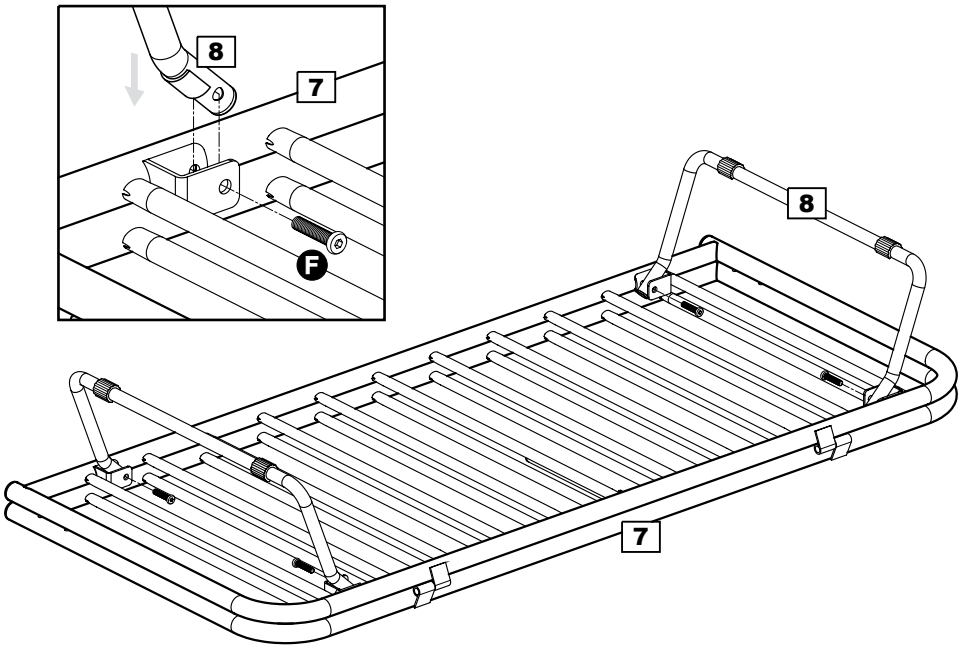


Step 5

Open out seat frame

Open out seat frame 7.

Fold out the support foot by releasing the spring pin as shown.

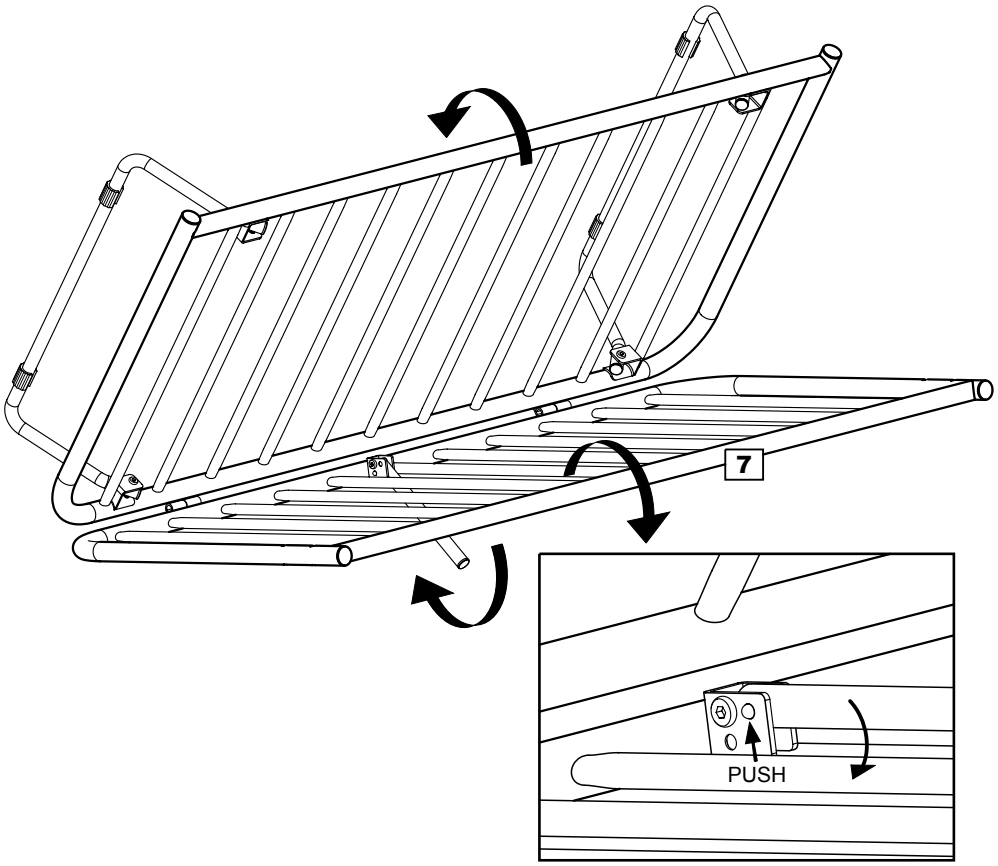


Step 6

Assembling seat frame

a: Assemble seat frame 7 to the hinges using fixings C and D.

b: Stick self adhesive foam pads G onto rails 5 as shown.

These are located to cushion the seat and back frames when the futon is folded flat.

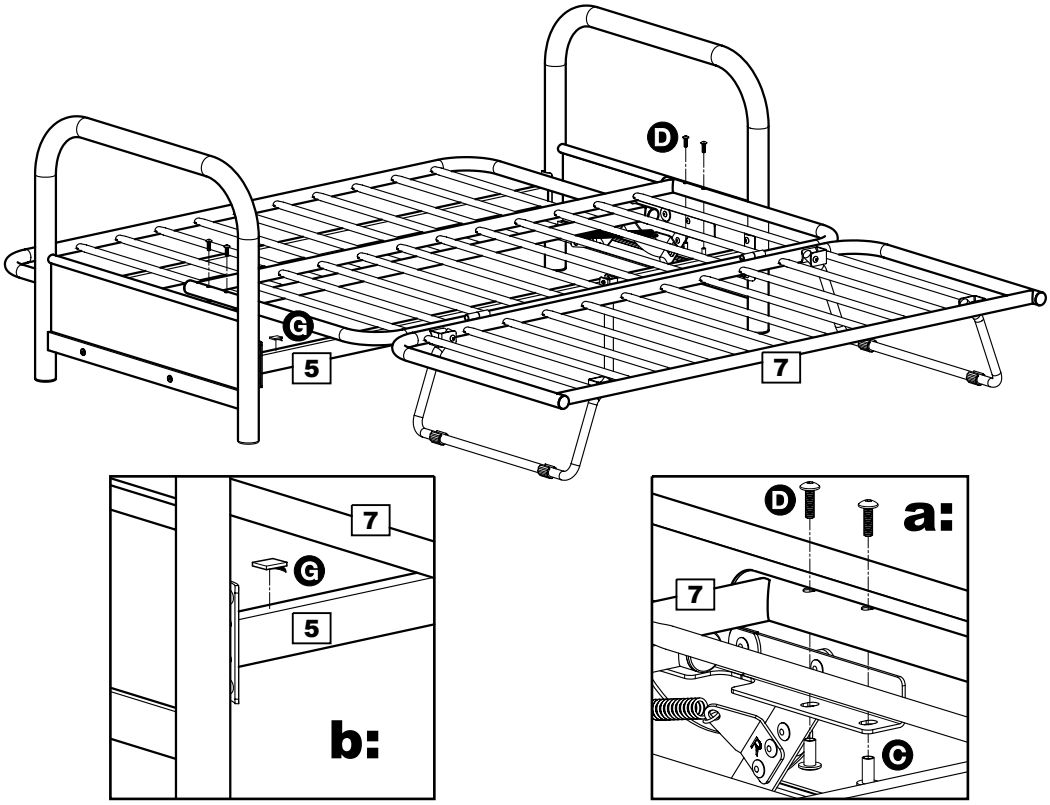

Assembly Instructions

Step 7

TO OPEN

1) From the front corner of the seat frame, raise the seat frame slightly.

2) At the same time, push the back frame down until both frames are flat.

3) Press the release pin on the support foot and fold down until it clicks into position.

4) Open out the folding seat.

5) Fold out the two main legs.

Warning: Keep hands clear of hinge area when opening and closing the futon.

TO CLOSE

Fold in the main legs.

Close out the folding seat.


Press the release pin to fold up the support feet.


Lift the front edge of the seat frame.


Lift the back section until both frames are raised into the seating position.

Warning: Keep hands clear of hinge area when opening and closing the futon.

Assembly is complete.

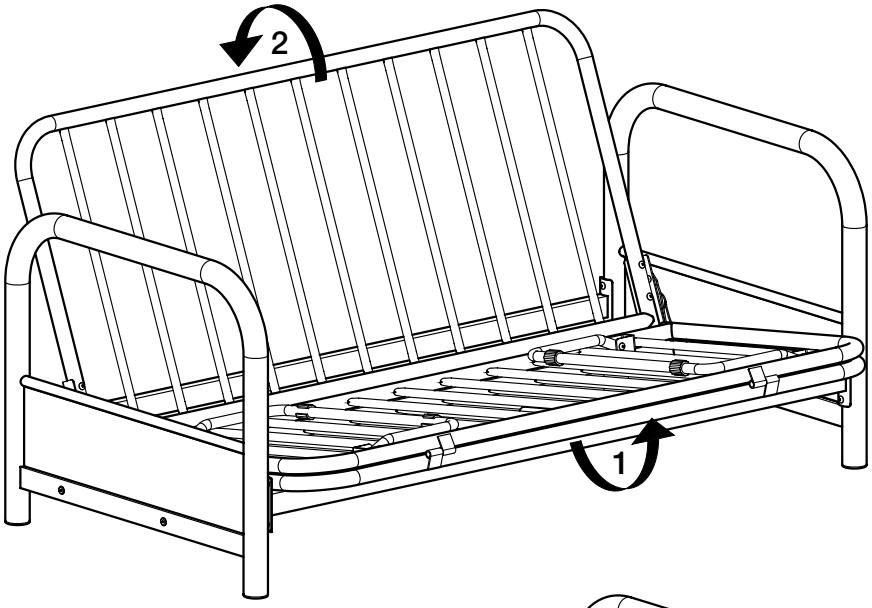

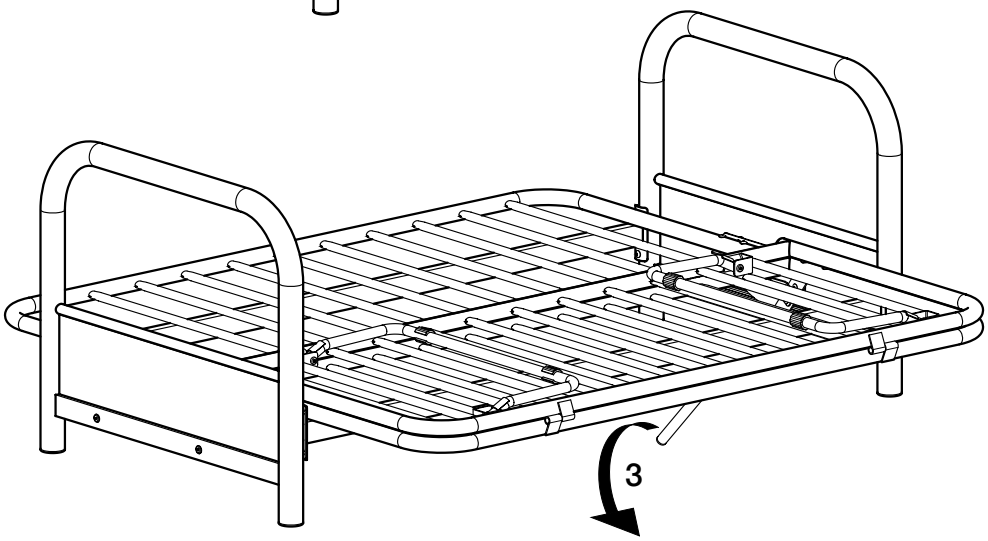

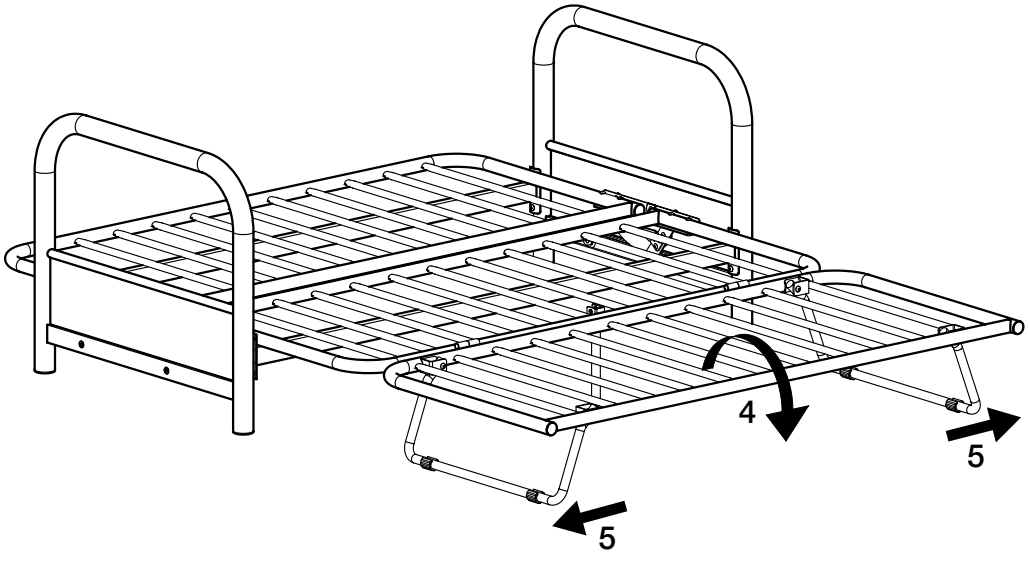

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**
Home Retail Group. 489-499 Avebury Boulevard. Saxon Gate West. Central Milton Keynes. MK9 2NW