
Rio - 2 door dresser

Assembly Instructions - Please keep for future reference

656/7138

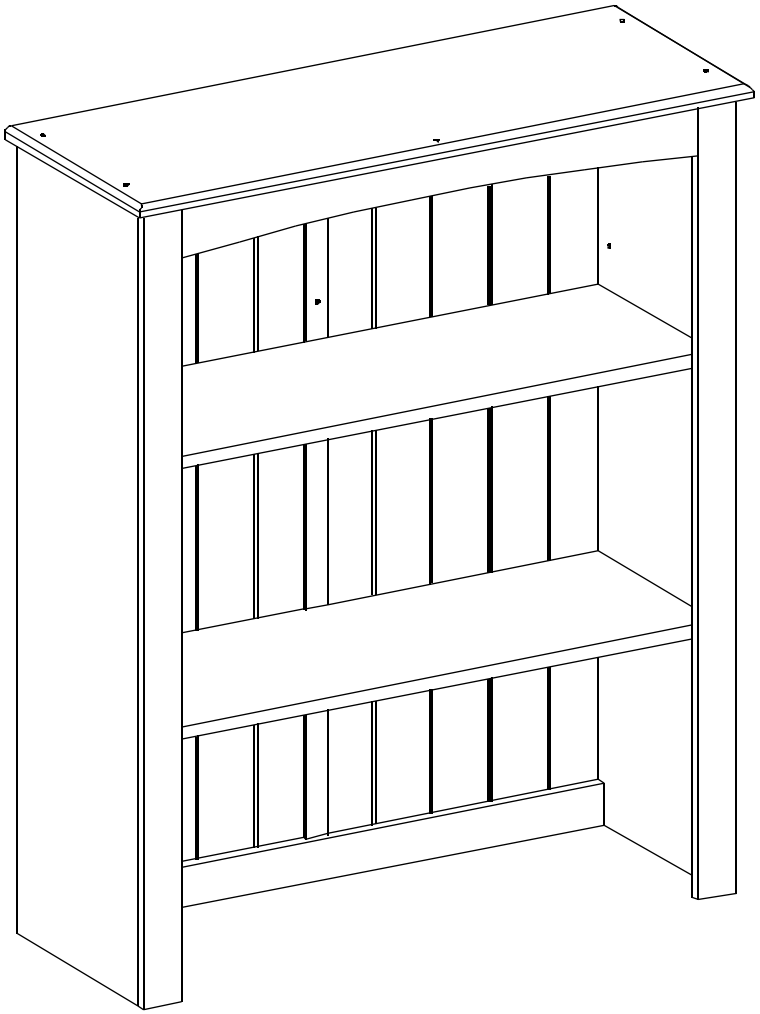

Dimensions

Width - 81.5cm
Depth - 31cm
Height - 99cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

Issue 1 - 26/03/10

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

▪ Check you have all the components and tools listed on pages 2 and 3.

▪ Remove all fttings from the plastic bags and separate them into their groups.

▪ Keep children and animals away from the work area, small parts could choke if swallowed.


▪ Make sure you have enough space to layout the parts before starting.

▪ Do not stand or put weight on the product, this could cause damage.

▪ This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

· Assemble the item as close to its fnal position (in the same room) as possible.

· Assemble on a soft level surface to avoid damaging the unit or your floor.

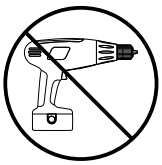

▪ We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

▪ Parts of the assembly will be easier with 2 people.

▪ Dispose of all packaging carefully and responsibly.

care and maintenance

▪ Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

▪ Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


▪ From time to time check that there are no loose screws on this unit.

▪ This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below

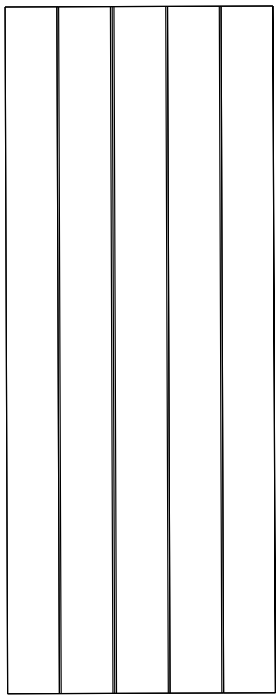


8 Back panel x 2 (98.5 x 38.3cm)

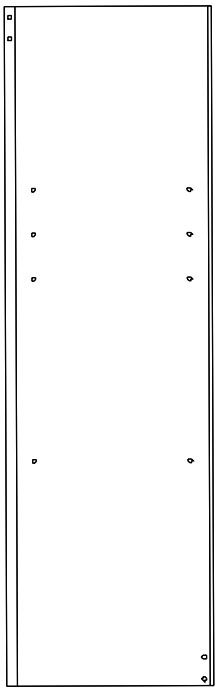


2 Left side (97.5 x 28.6cm)

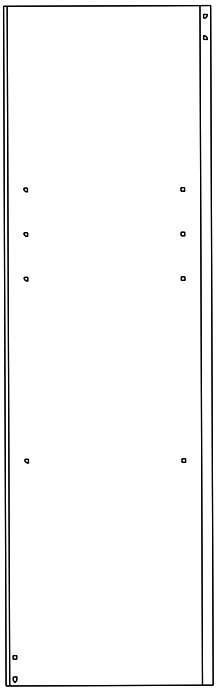


3 Right side (97.5 x 28.6cm)

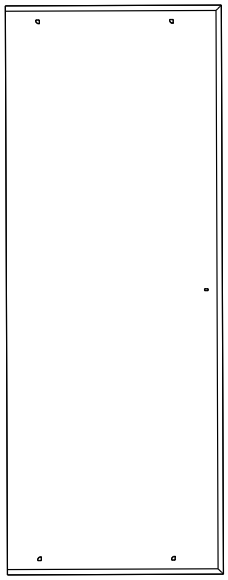


1 Top (81.5 x 31cm)

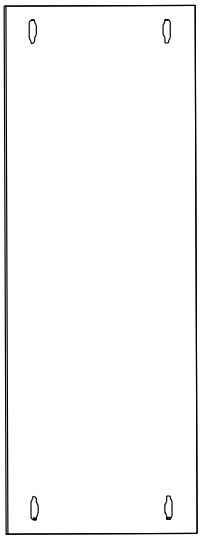


4 Fixed shelf (75.5 x 27.5cm)

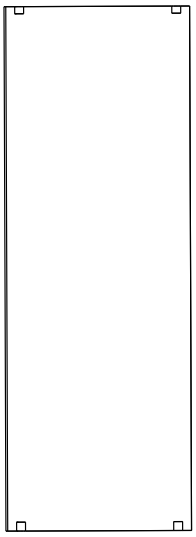


7 Shelf (75.2 x 26.6cm)



5 Back crossrail (75.5 x 5cm)



6 Crossrail (68.7 x 6.4cm)




9 Back bar (92.2 x 3cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Wooden dowel x 16	**B**  Shelf support pin x 5	**C**  30mm Screw x 6
D  Bracket x 2	**E**  14mm Screw x 5	**F**  35mm Screw x 5
G  Nail x 25	**H**  20mm Screw x 1	**I**  Wall strap x 1
J  Washer x 1		


Tools required




Phillips screwdriver (medium & large)

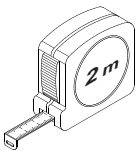

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Fitting Wooden Dowels:


Insert Dowels Ⓐ into holes in the indicated parts.

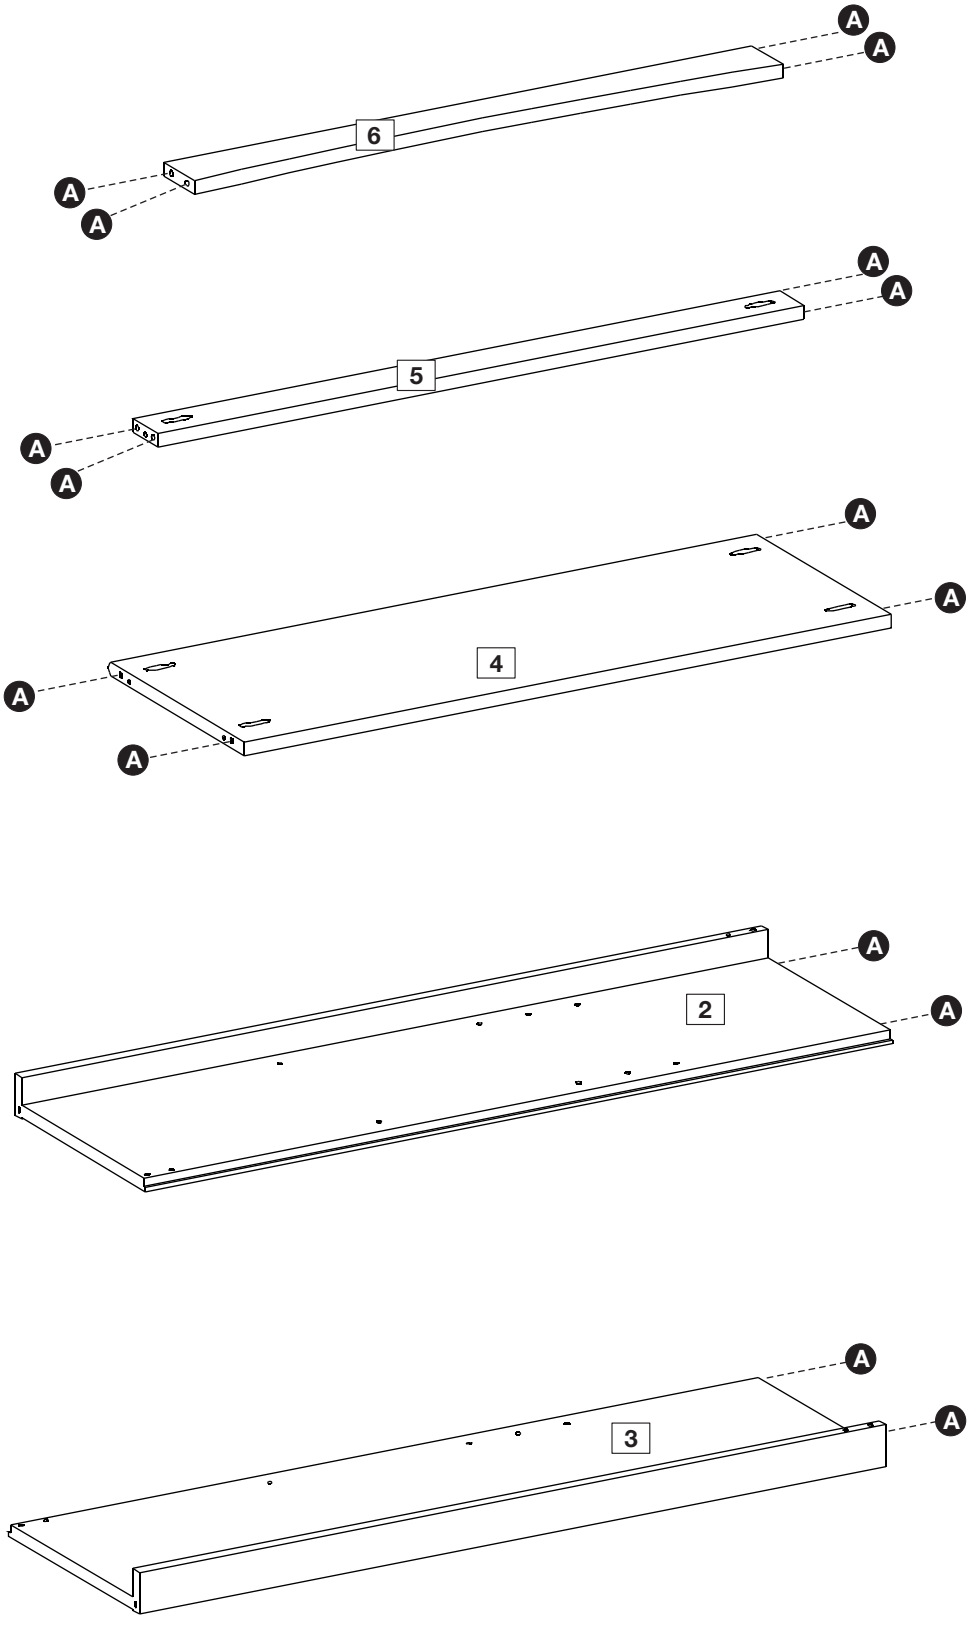

Assembly Instructions

Step 2


Push shelf support pins B to the holes on sides 2 and 3 as well as on back bar 9 as shown.

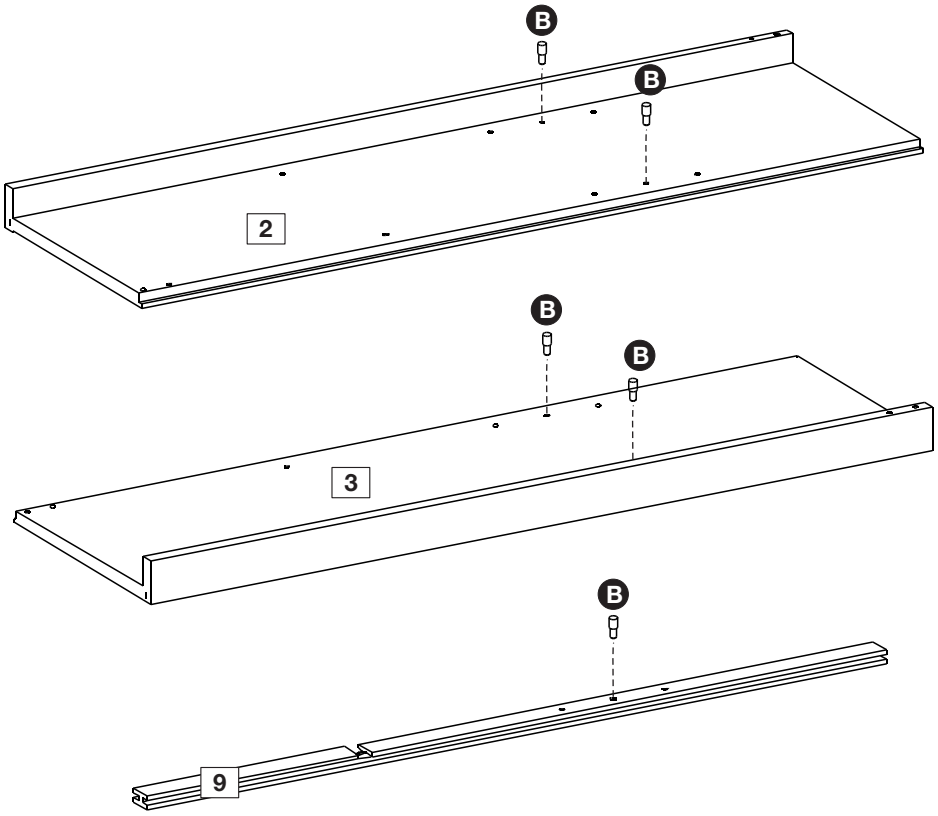

Step 3

Fixing panels:


Fix parts 4, 5 and 6 to the side panel 2 using screws C.

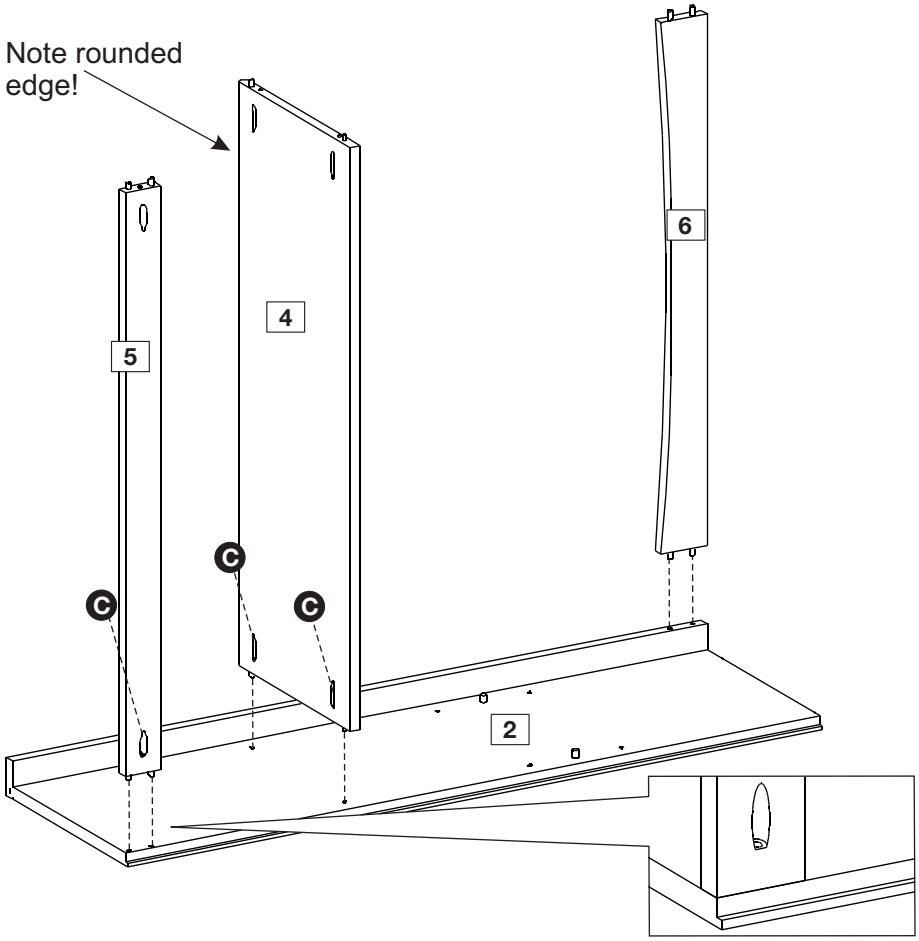

Assembly Instructions

Step 4

Fix the side 3 in furniture using screws C.

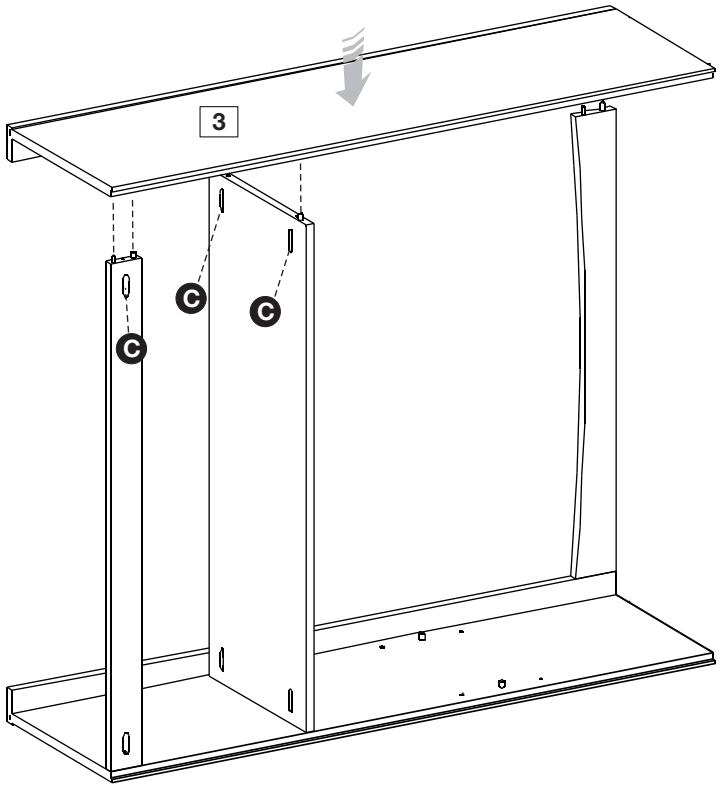


Step 5

Fixing top panel:

Carefully stand the product upright.

Fix the top 1 in furniture using screws F.

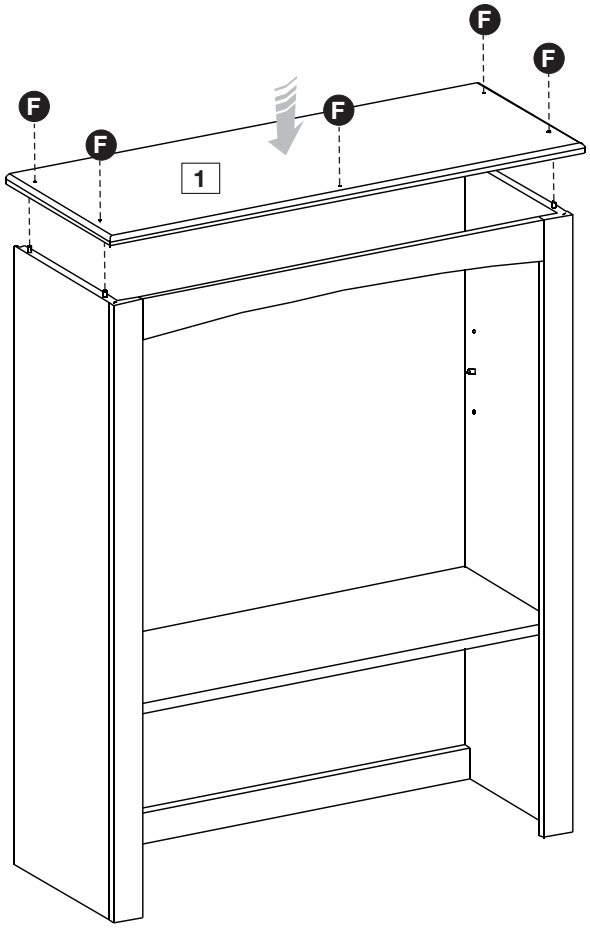



Step 6


Fixing back panel:

Carefully lie down the product with its front facing down.

Fix back panels 8 in the back rebates using nails G.
Ensure back bar 9 is in place before nailing as shown.

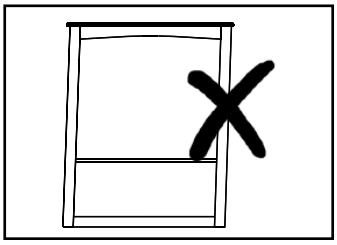

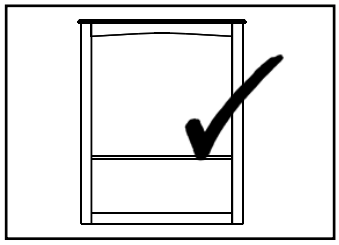


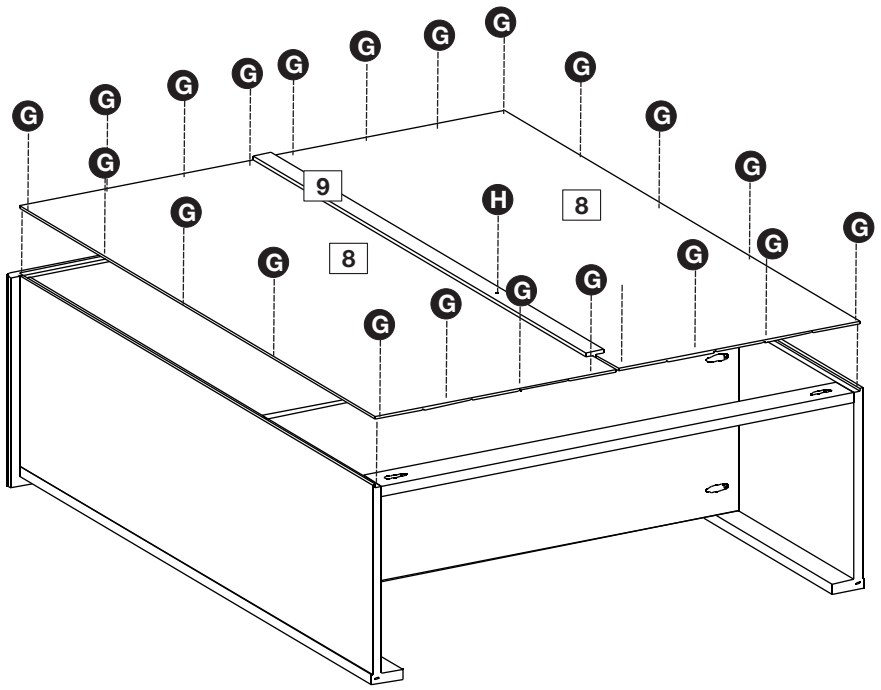


Important: Cabinet MUST be 'square' when back is attached.

Step 7

Place the Shelf 7 in furniture.

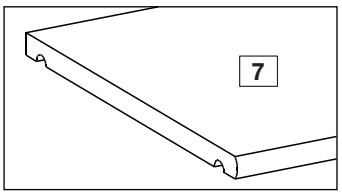


Note rounded edge!

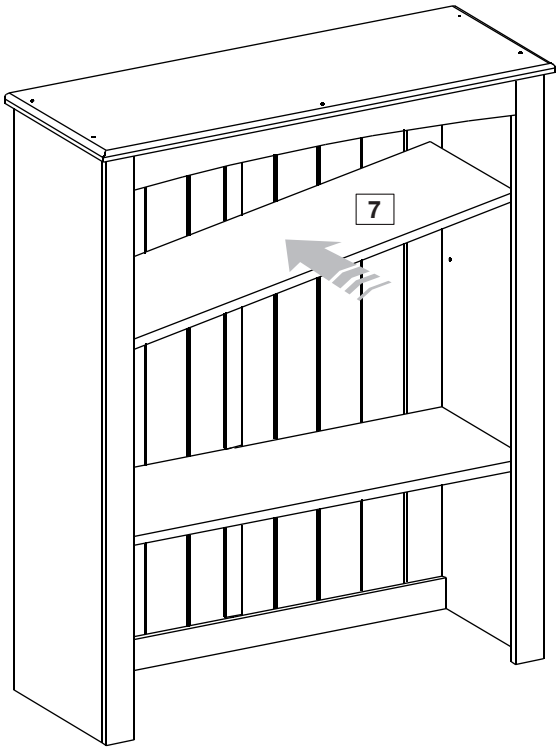

Assembly Instructions

Step **8**

Fix dresser top to the sideboard using bracket Ⓓ and screws Ⓔ as shown.

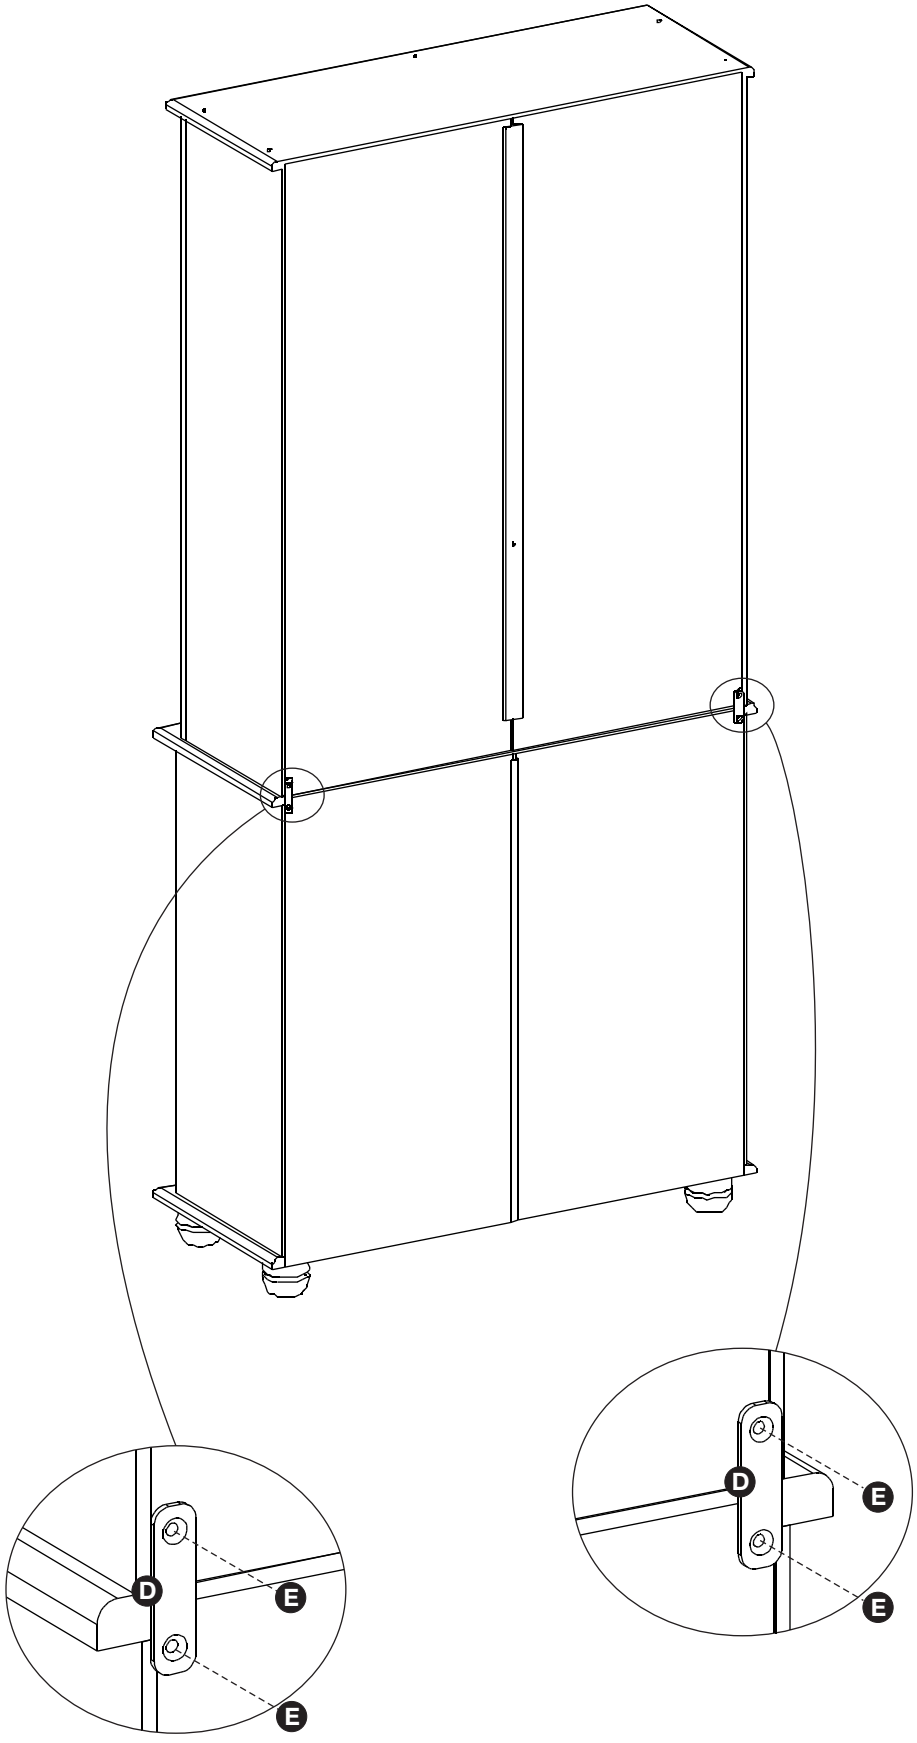

Assembly Instructions

Step 9

Fixing to wall
It is recommended that the furniture is fixed to a wall.
Fix wall strap **I** to top of furniture using washer **J** and screw **E**.
With help, move furniture into position.

Lift with care.


Mark fixing hole on wall and remove furniture.
Drill hole and insert wall plug (not supplied)


Warning:
Before drilling check wall for hidden pipes and cables.

Reposition furniture and fix wall strap using washer **J** and suitable screw.

Assembly is complete.

Note: Wall plugs not supplied. The correct type of fixing must be used for your wall, seek professional advice if in doubt.

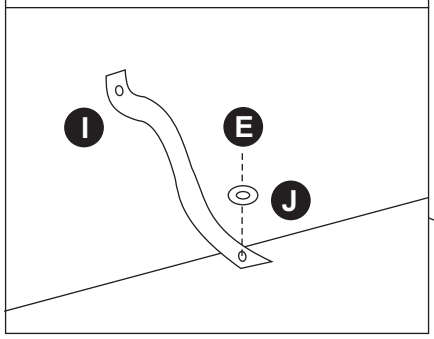

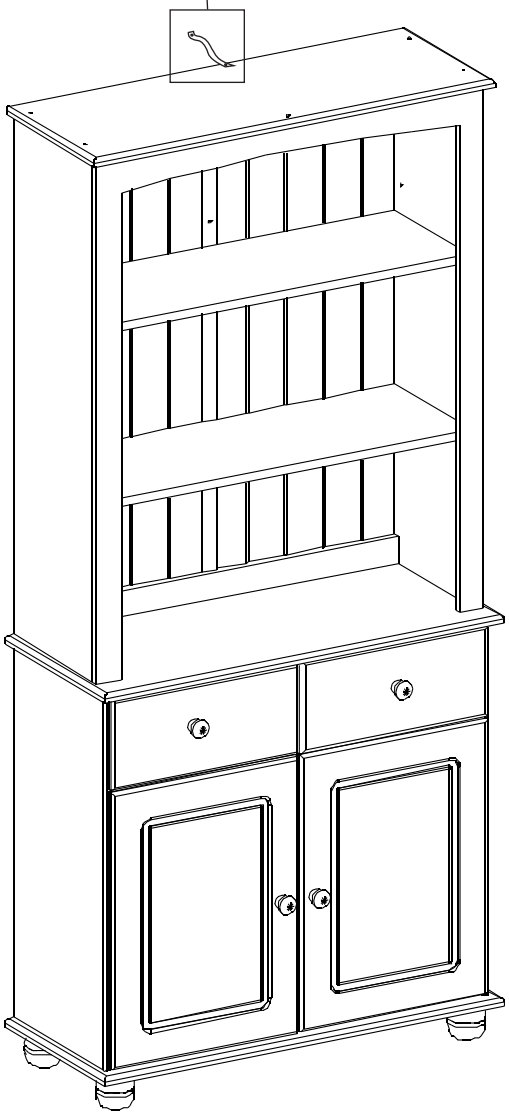

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fxings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.

1: General rule: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well ftted and are a tight ft in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 “General Purpose” wall plug

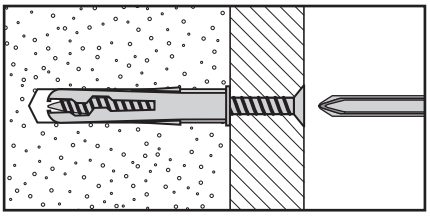


Generally aerated blocks should not be used to support heavy loads, use a specialist ftting in this case. For light loads, general purpose wall plugs can be used.

No.2 “Plasterboard” wall plug

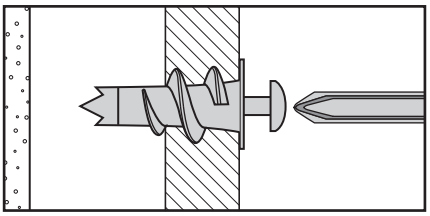


For use when attaching light loads on to plasterboard partitions.

No.3 “Cavity Fixing” wall plug

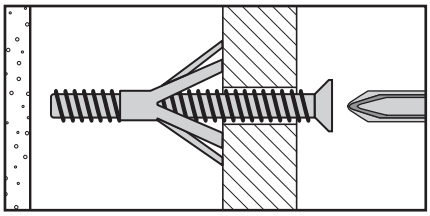


For use with plasterboard partitions or hollow wooden doors.

No.4 “Cavity Fixing-Heavy Duty” wall plug

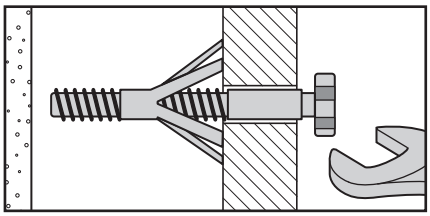


For use when ftting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 “Hammer Fixing” wall plug

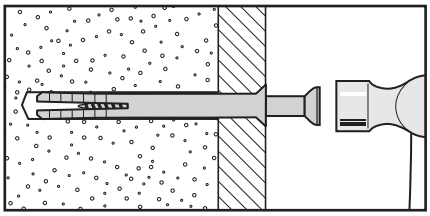

For use with walls stuck with plasterboard. The hammer fxing allows it to be fxed to the wall rather than the plasterboard. Always check the fxing is secure to the retaining wall.

No.6 “Shield Anchor” wall plug Heavy loads

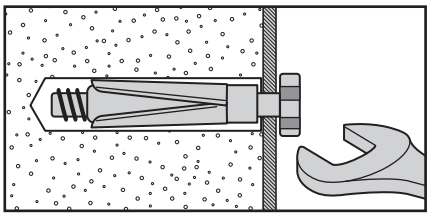

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the ftting and location to ensure your safety in and around the home.

Fitting: From time to time check the ftting to ensure the wall plugs or screws do not become loose.