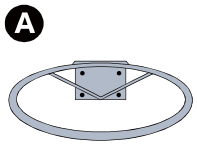
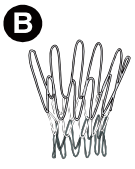
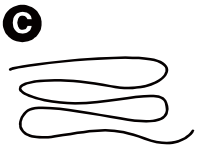
OPTI BASKETBALL RING NET AND BALL


Assembly & User Instructions - Please keep for future reference | 7543814


Components - Parts



Ring x 1


Net x 1


Net Cord x 1

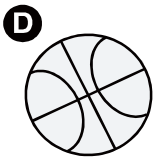
Basketball x 1


Ball Needle x 1

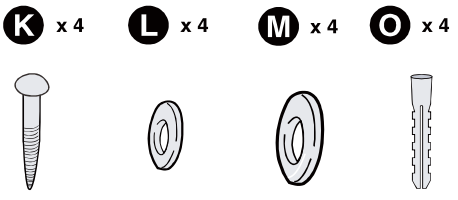
K x 4 L x 4 M x 4 O x 4


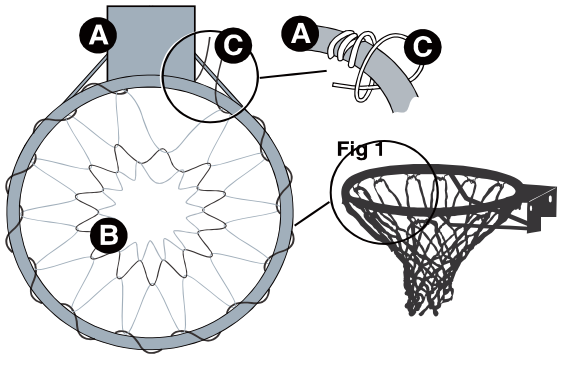



Fig 1

1 ASSEMBLE THE NET TO THE RING

How to fix the net?

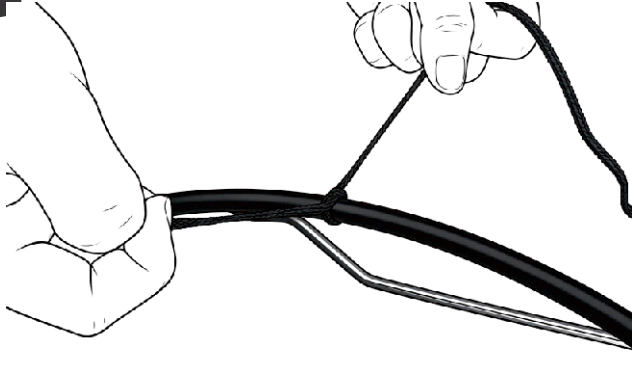

1,Tie the net to the hoop at the welded joint to prevent slipping.

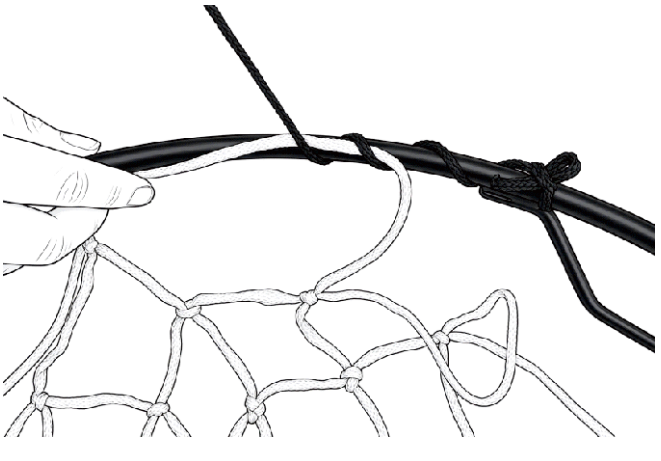

2,Wrap the string twice around each net loop.

WARNING



- Do not hang or swing on the ring or use it to "Slam Dunk" or anything similar where you may touch the ring.
- This product should be assembled by an adult prior to use.
- The suppliers cannot accept responsibility for any damage caused to or by the product through misuse or incorrect installation.
- When inflating the ball firstly moisten the needle inflator before inserting into the ball carefully so that you do not bend or break the needle inflator.
- Keep the needle inflator in a safe place for future use.
- You will find it easier to use two people to assemble this unit.
- Please check all nuts and bolts are firmly secured before use.



WARNING-CHOKING HAZARD
This item contains small parts,not suitable for children under 3 years old.

Important – Please read these instructions fully before assembly or using

These instructions contain important information which will help you get the best from your equipment and ensure safe and correct assembly, use and maintenance.
If you need help or have damaged or missing parts, call the Customer Helpline:0345 6402020


Produced in China for Argos Limited. Sainsbury's Supermarkets Ltd, London, EC1M 6HA,UK. Argos (N.I.) Ltd and Sainsbury's (NI) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.
argos.co.uk/help/contact-us
help.sainsburys.co.uk/help/contact-us

Issue 1 9/26/16


OPTI BASKETBALL RING NET AND BALL


Assembly & User Instructions - Please keep for future reference | 7543814

How to fix the net?

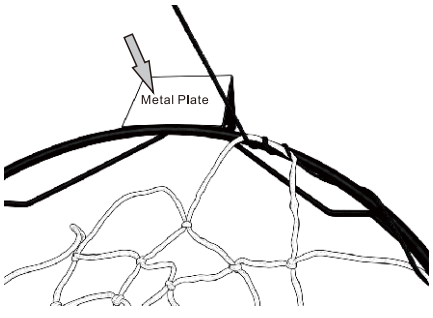

3,Wrap the string three times around the net loops on each side of the metal plate.

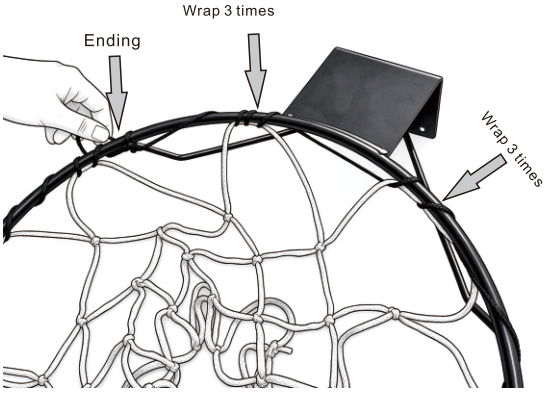

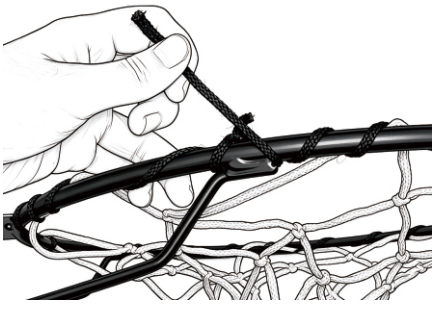


Tips: Tie off the string opposite the starting point.




ASSEMBLE THE RING TO THE WALL

1 To attach the ring to the wall; select a suitable wall and mark the four holes through the ring at your chosen height. Regulation height is 10ft/305cm from the ring to the ground, but this can be varied to suit the height of the users. Then drill 4 holes with a masonry drill in the positions marked. (**Fig 2**)

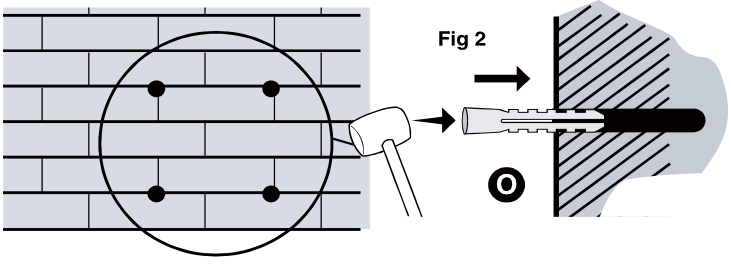

2 Insert the wall plugs (**O**) and fix the ring to the wall with 4 screws (**K**), washer (**L**) and washer (**M**). (**Fig 3**)

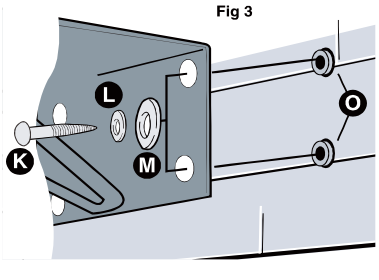

Important – Please read these instructions fully before assembly or using

These instructions contain important information which will help you get the best from your equipment and ensure safe and correct assembly, use and maintenance.
If you need help or have damaged or missing parts, call the Customer Helpline:0345 6402020

Produced in China for Argos Limited. Sainsbury's Supermarkets Ltd, London, EC1M 6HA,UK. Argos (N.I.) Ltd and Sainsbury's (NI) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.
argos.co.uk/help/contact-us
help.sainsburys.co.uk/help/contact-us

Issue 1 9/26/16