TP331/332 Forest Acorn Growable Swing with Swing Seats.

(TP913/TP913A Folding Swing Seat & TP916 Standard Swing Seat)

INSTRUCTIONS FOR ASSEMBLY MAINTENANCE AND USE

PLEASE RETAIN FOR FUTURE REFERENCE.



Important!

These instructions must be followed for safe assembly and use.
Please retain for future reference.

WARNING!

TOY MUST BE ASSEMBLED BY AN ADULT BEFORE USE.

CHILDREN MUST NOT USE THE EQUIPMENT UNTIL PROPERLY INSTALLED.

THIS PRODUCT MAY CONTAIN SMALL PARTS AND IS NOT SUITABLE FOR CHILDREN UNDER 36 MONTHS UNTIL FULLY ASSEMBLED.

REMOVE ALL PACKAGING BEFORE GIVING TO YOUR CHILDREN.

WARNING: OWNERS SHALL BE RESPONSIBLE FOR MAINTAINING THE LEGIBILITY OF THE WARNING LABELS.

WARNING: ONLY FOR DOMESTIC USE. FOR OUTDOOR USE ONLY.

ADULT SUPERVISION IS REQUIRED.

WARNING: THIS PRODUCT IS INTENDED FOR USE BY CHILDREN FROM AGES 6 MONTHS TO 10 YEARS.

ANCHORS THAT ARE SUPPLIED WITH THIS PRODUCT MUST BE FITTED BEFORE USE.

Swing Frame

WARNING: MAXIMUM USER WEIGHT 100KGS

TP913/TP913A Folding Swing Seat

WARNING: THIS PRODUCT IS INTENDED FOR USE BY CHILDREN FROM AGES 6 MONTHS TO 3 YEARS.
WARNING: MAXIMUM USER WEIGHT 45KGS

TP916 Standard Swing Seat

WARNING: THIS PRODUCT IS INTENDED FOR USE BY CHILDREN FROM AGES 3 YEARS TO 10 YEARS.
WARNING: MAXIMUM USER WEIGHT 60KGS

CE

2 Person Assembly Build Recommended

INSTRUCTIONS FOR ASSEMBLY, MAINTENANCE AND USE OF TP TOYS - Please read carefully and keep all enclosed information for future reference.

1. ASSEMBLY AND SAFETY INFORMATION

TP toys must be assembled by an adult. They must be erected exactly in accordance with the assembly instructions. Enlisting the aid of a helper will make assembly easier. In order to ensure the correct tensions and to ease assembly, it is important to assemble the product hand tight to begin with. Only when complete, should the fastenings be fully tightened and checked. This pack may contain small parts and is not suitable for children under 36 months until fully assembled. We recommend that you place small parts on a tray, or something similar, to prevent the frustration and disappointment of mislaying them. Please take care during assembly as the manufacturing process can sometimes result in the occasional sharp edge and small pieces of waste metalwork.
Should there be any missing parts, the toy must not be used until replacement parts have been fitted.

2. SITING

Under no circumstances should any of our toys be positioned on a hard surface such as concrete or asphalt, unless the ground under the toy plus the recommended freespace area is covered with a safety surface. Examples of suitable surfaces are grass, sand or a play surface intended for this use. TP toys should be sited on level ground.

3. USAGE

TP toys are designed and made for use only by children aged between 6 months and 10 years, unless otherwise stated, and must not be used by anybody else. Misuse can result in injury. TP tents must not be walked or climbed upon. "Warning only for Domestic use." For outdoor use only.

4. SUPERVISION

Children should always be supervised while they are playing on TP toys and should be instructed not to use the toy in an inappropriate or hazardous manner. We recommend that they do not wear loose-fitting clothing or jewellery that may catch or snag during play. Children should not wear cycle helmets while playing on TP toys. Whilst using this swing seat children must have constant adult supervision.

5. WEATHER CONDITIONS

Special care should be taken as weather conditions change. In particular, outdoor toys can become slippery in wet weather and tongues and lips can stick to metalwork at subzero temperatures. In warmer and sunnier weather, parts can become hot, and the temperature should be regularly checked during play, especially metal parts and slides. If there is any doubt over safety then the toys should not be used. If high wind is expected or forecasted, please ensure that the outdoor toys are either moved to a sheltered position or well secured to the ground or other immoveable object. Please store plastic swing accessories indoors if temperature falls below 40˚F (4˚C).

6. WATER PLAY

Many surfaces can become slippery during water play. Extra caution and supervision is required when combining water (e.g. paddling pools, aqua slides etc.) with other forms of outdoor play.

7. MAINTENANCE

With all toys it is vital that the equipment is checked regularly and often by an adult. The complete toy should be checked at least once a month, and particular attention should be paid to connections and fastenings. If any parts exhibit signs of wear and tear, they may need to be replaced. Replace defective parts in accordance with the manufacturer's instructions." Checks must be carried out at the beginning of the usage season as well as at regular intervals throughout the usage season. Check all nuts and bolts for tightness and tighten when required. Failure to do this may result in the product malfunctioning and causing injury. Children must not be allowed to use the toy until properly installed and checked. Galvanised tubular products may require occasional maintenance. If surface rust appears it should be removed with either a wire brush or coarse sandpaper, and the area treated with a non-toxic paint. Changes to the original toy (for example the adding of an accessory) shall be carried out according to the instructions of the retailer of the original toy.

8. FIRE RISKS AND DISPOSAL

Never allow TP toys to be placed or used near a fire. When it becomes necessary to dispose of your equipment, remove all bolts and disassemble. Store out of the reach of children until it can be properly disposed of. These instructions are issued in the interest of child safety, and we do ask you to follow our advice.

9. SWINGING TOYS

When fitting swinging toys it is vital that moving parts have no metal to metal contact. Children should be instructed not to pass in front of or behind moving items, not to twist or swing an empty swing seat, and not to get off a swinging toy when it is in motion.

10. ROPES

These ropes will degrade over time. When signs of degradation appear, the toy should be replaced.




Unlike steel, wood is a natural, organic material and each piece will be unique, bearing its own knots, cracks and variations in colour and, unlike steel, wood will react significantly to changes in atmospheric conditions.
Wood will expand and contract as fluctuations of temperature and humidity affect the water content of the cell structure. In warm sunny weather it will shrink and in wet weather it will expand. As these physical changes do not, necessarily, take place uniformly throughout a piece of wood, forces are set up which cause cracks and splits to arise.

It is not necessary to stain your Wooden frame


It is made from selected wood which has been pressure treated. This is a process by which preservatives are forced under pressure into the fabric of the timber to protect it from decay and insect damage.
If you do wish to stain your Wooden frame for aesthetic reasons, please use a water-based stain, which is available from any good DIY store.

Instruction Guide


Read Instructions Before Starting

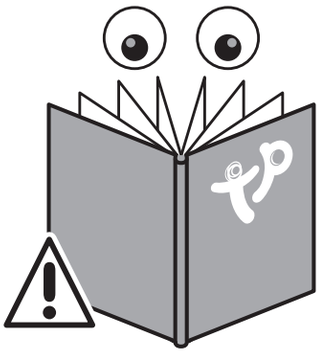


Sort Fixings

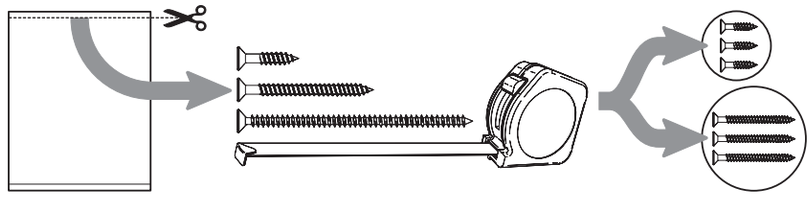


Hidden Lines

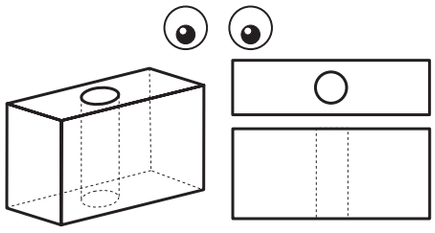


Sort Parts

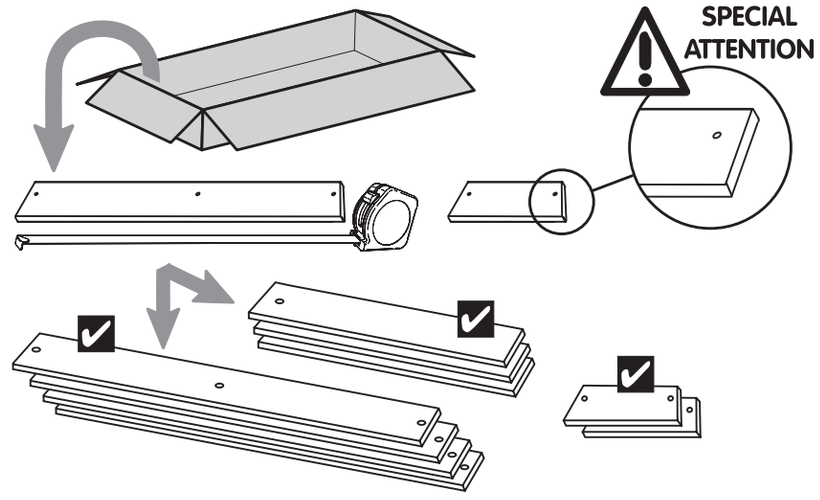


Assembly Tips - Fixings

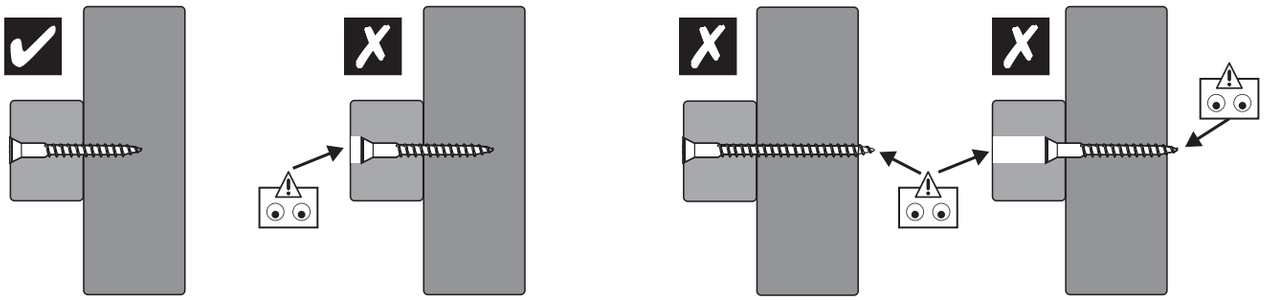

Bolt Tigthening Guide

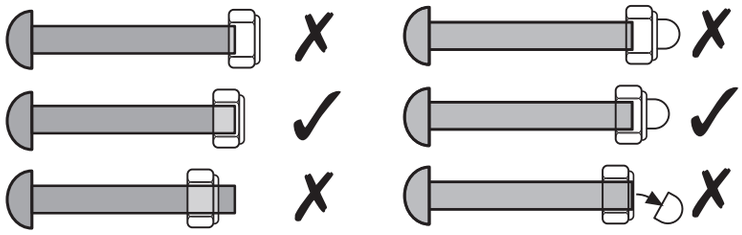

Need Help? Visit www.tptoys.com TP Customer Services: (English Speaking)




Stage 1


TP331/332 Forest Acorn Growable Swing Frame with swing seats

Contents - Please check


Tools - You will need:

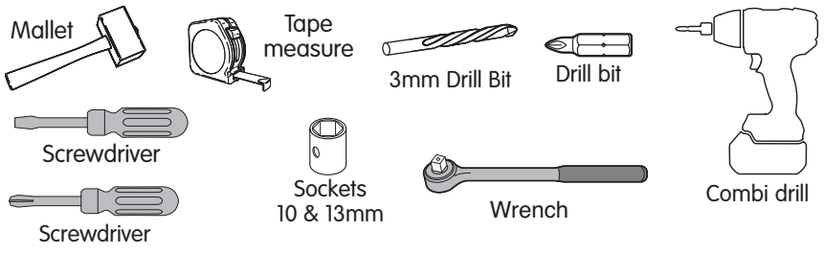


Also Required:

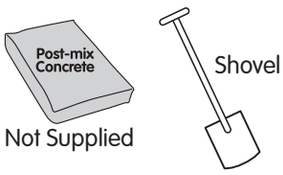


MW1232 / MW1232P
Single Swing Top bar **x1**




PM1007 **x1**

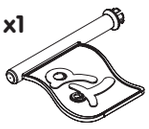

PR7691 Bracket **x2**

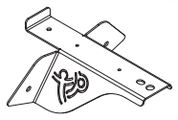


MW1233 Swing Leg **x4**




MW1234 Swing Leg Extension **x4**




22 Degree Angled Foot
PM2021
x4




Leg Extension Bracket
PM2058
x4



MW1226 / MW1226P
Angled Leg Brace **x2**



PM2001 Ground peg **x4**




Fixings SP3302

4.5 x 50mm Woodscrew **x12**
FA9705



M8 Hook bolt **x2**
FA9774






M8 x 30mm Coach screw **x4**
FA5124

M6 x 70mm **x4**
FA5170



M8 x 25mm Large washer
FA7184
x10



M8 Nylon Insert Nut
FA5174
x4



M6 Nylon Insert Dome Nut
FA5192
x16



M6 x 20mm Washer
FA5094
x21



M8 x 140mm **x2**
FA9775



M6 x 65mm **x8**
FA5694




M6 x 80mm **x4**
FA5168



13mm x 10mm Spanner **x1**
PR9554






Stage 1

Contents continued - Please check

TP913/TP913A Folding Swing Seat

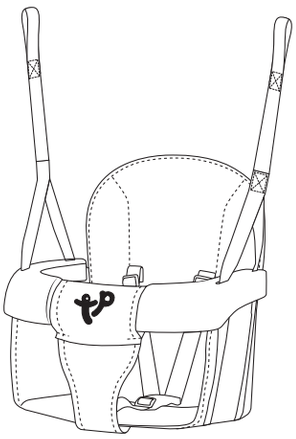


TP913/TP913A
Folding Swing Seat
x1



Extension
Straps
FB9030
x2




Top
Karabiner
FC9908
x2

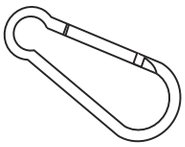

Bottom
Karabiner
WF9787
x2

TP916 Standard Swing Seat

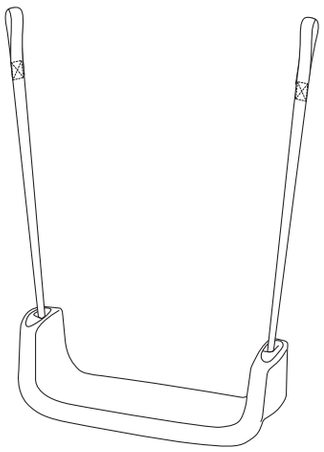

TP916
Standard Swing Seat
x1

Stage **2**


Low Height Frame Assembly

Full Height Frame Assembly

MW1232 Single Swing Top bar **x1**




PR7691 Bracket **x2**

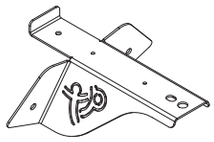

M8
Nylon Insert Nut
FA5174
x2




M8 x 25mm
Large washer
FA7184
x2



4.5 x 50mm Woodscrew **x4**
FA9705





M8 Hook bolt **x2**
FA9774





Top
Karabiner
FC9908
x2

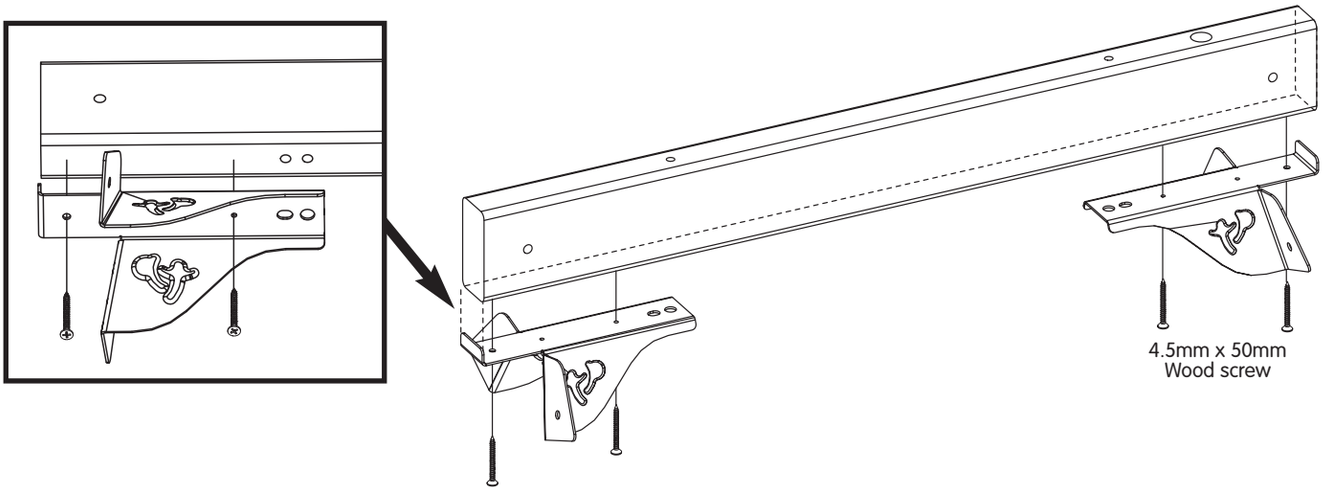

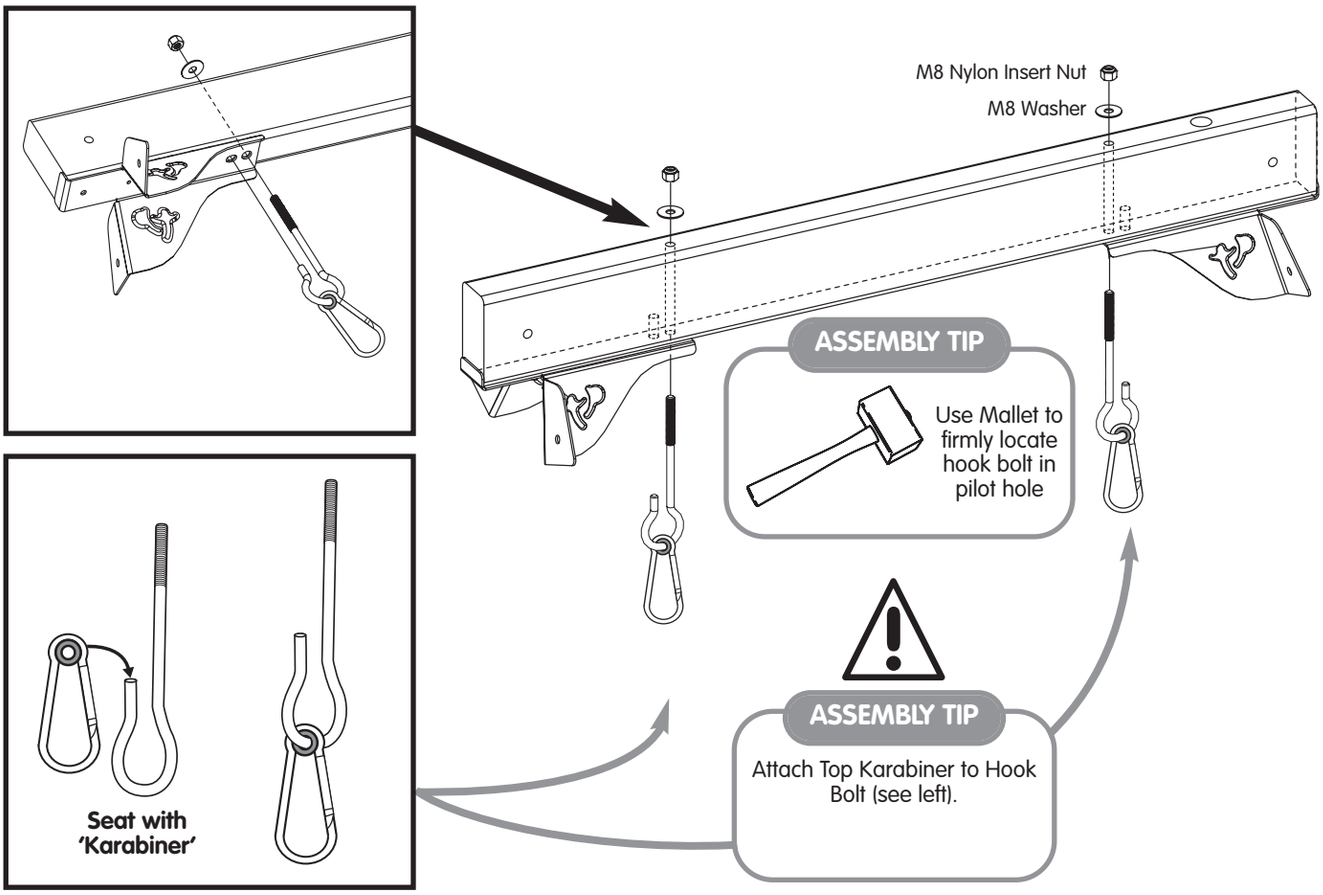

Stage 3

Low Height Frame Assembly

Full Height Frame Assembly

MW1233 Swing Leg **x4**



MW1226 / MW1226P
Angled Leg Brace **x2**



M8 x 140mm **x2**
FA9775



M6 Nylon Insert Dome Nut
FA5192
x4



M6 x 20mm Washer
FA5094
x4




M8 x 25mm Large washer
FA7184
x4





M8 Nylon Insert Nut
FA5174
x2




M6 x 70mm x4
FA5170



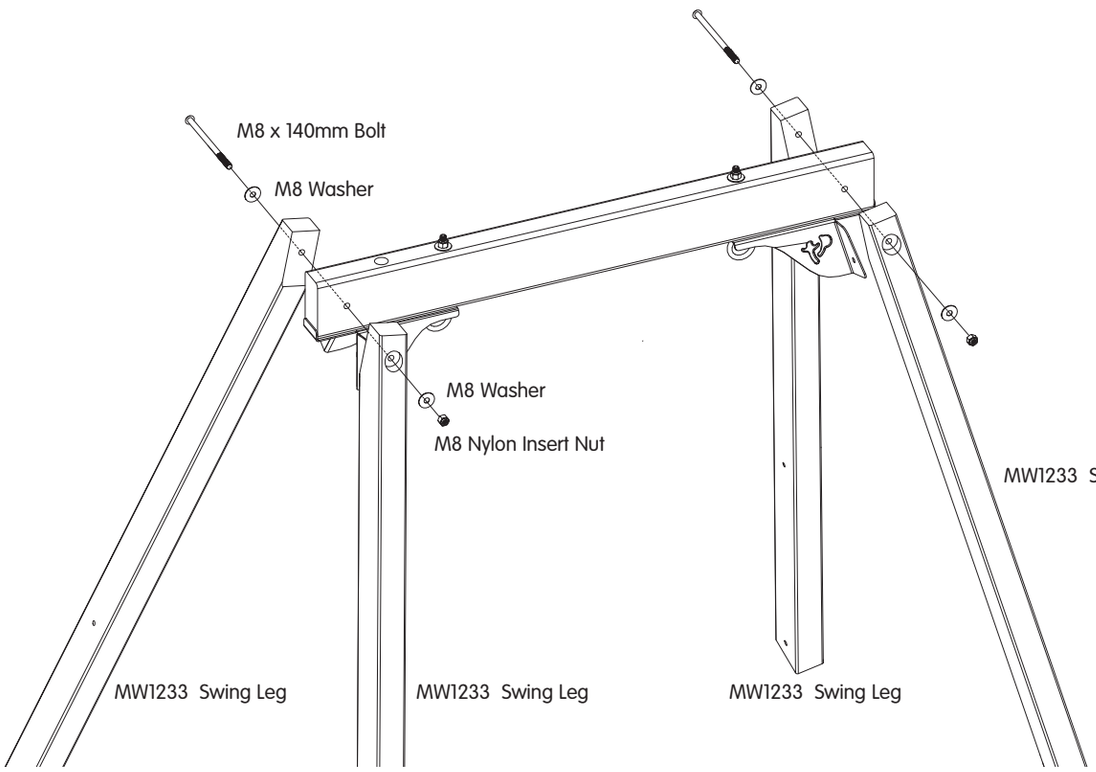

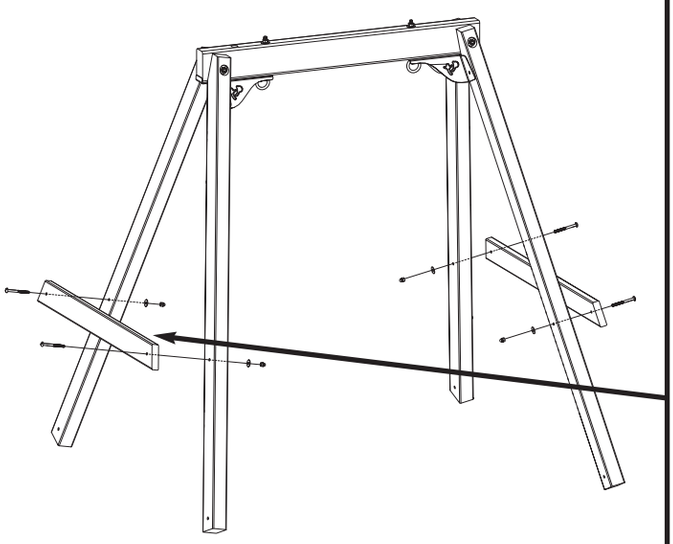

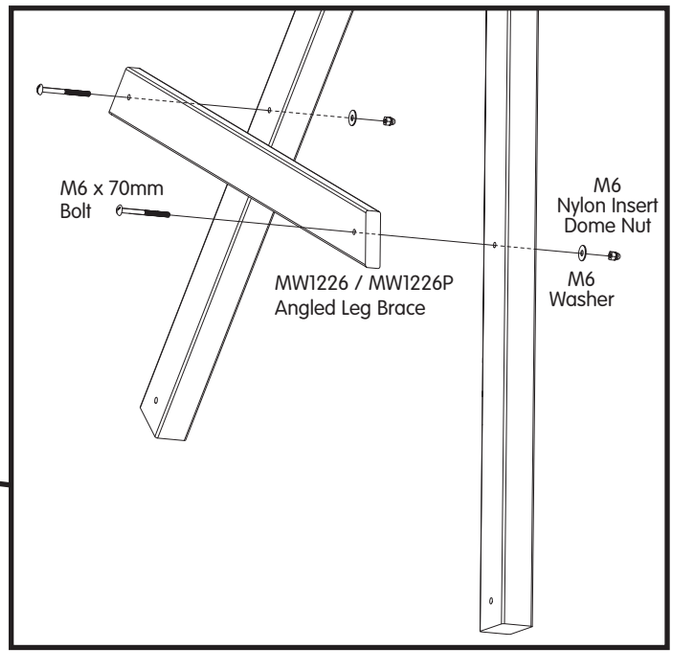


Stage 4


Low Height Frame Assembly

Full Height Frame Assembly

PM1007 **x1**

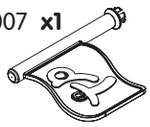


PM2001 Ground peg **x4**



M8 x 30mm
Coach screw FA5124
x4



22 Degree
Angled Foot
PM2021
x4



M6 x 80mm **x4**
FA5168




M6 Nylon Insert
Dome Nut
FA5192
x4




M6 x 20mm
Washer
FA5094
x4




M8 x 25mm
Large washer
FA7184
x4



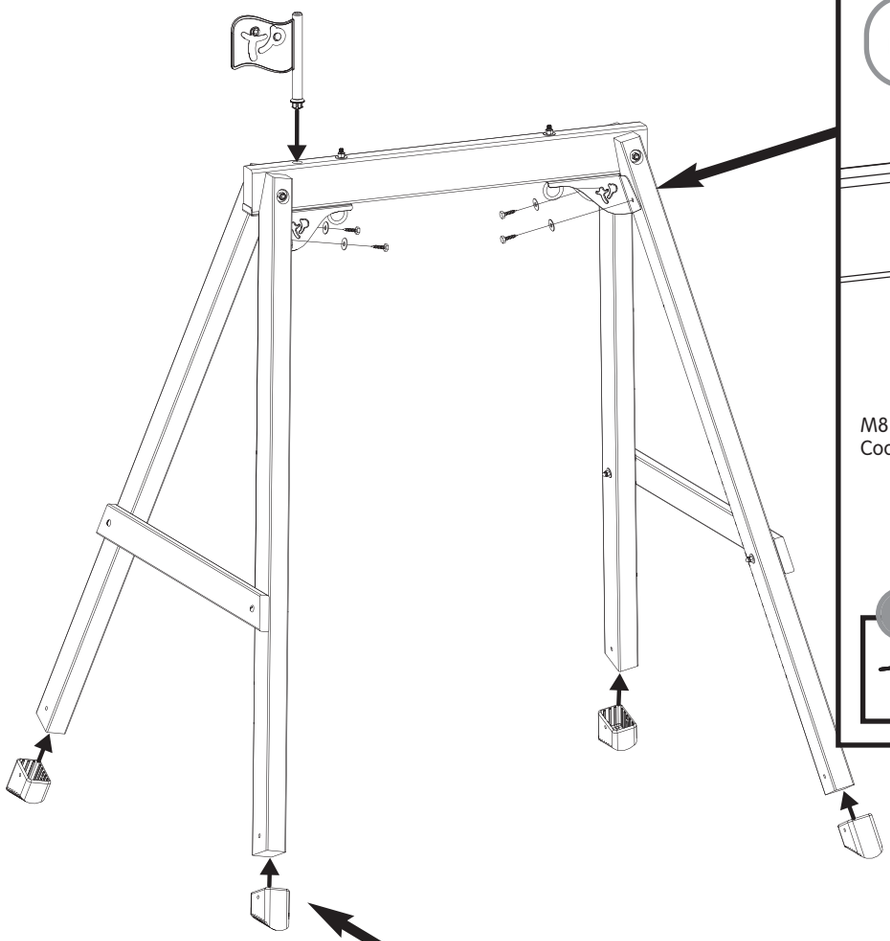


ASSEMBLY TIP

Fit for both low and full height assembly

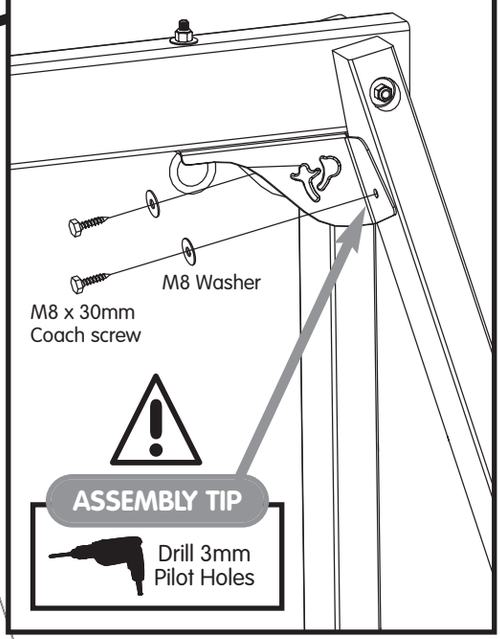

ASSEMBLY TIP

Drill 3mm
Pilot Holes

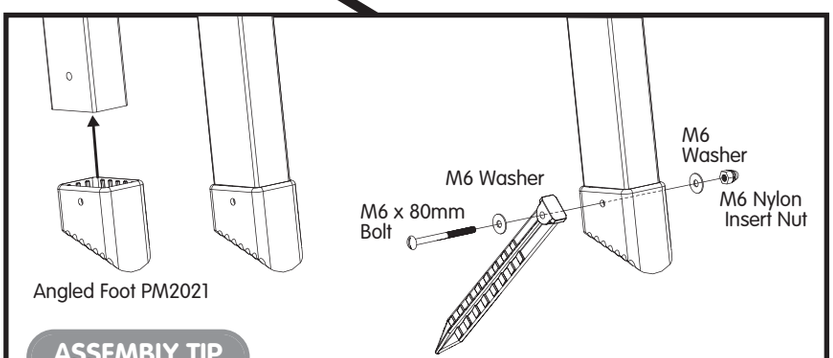


ASSEMBLY TIP

Only attached Angled feet/Stakes if building for Low Height usage.

For Full Height Assembly - Do not fit Angled feet/Stakes just yet. Go to stage 7

Stage 5 Low Height Frame Assembly - Staking

Recommended ground fixing at **LOW HEIGHT.**

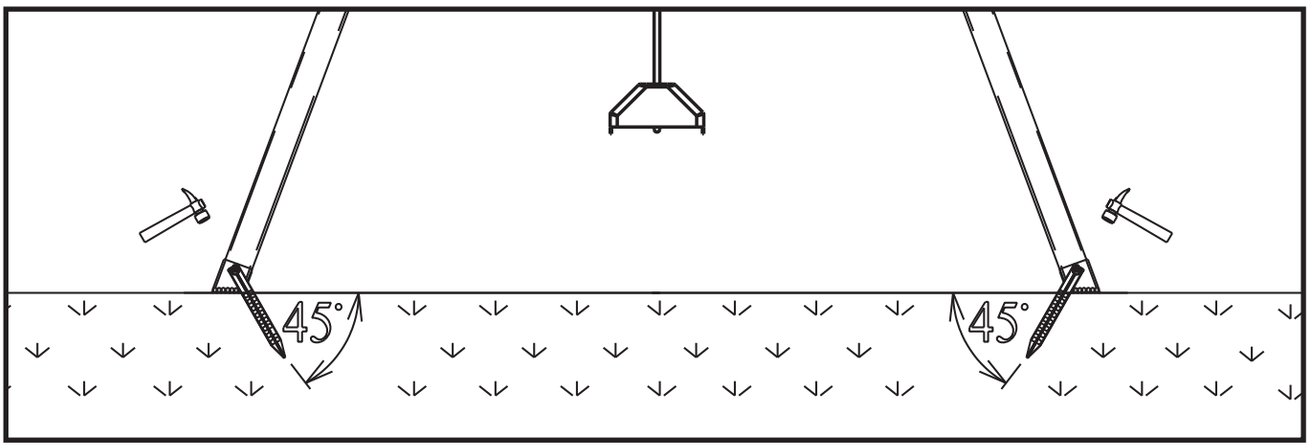

Stage 6 Low Height Frame Assembly - Completed

IMPORTANT


Please go to
Stage 12 now for fitting the
Swing Seat to the Frame.




Stage 7


Full Height Frame Assembly


Leg Extension Bracket
PM2058
x4



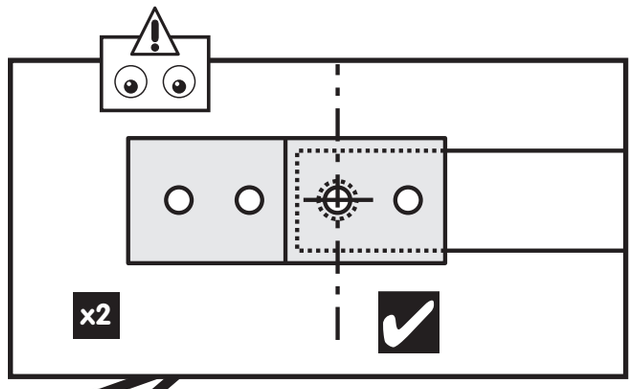



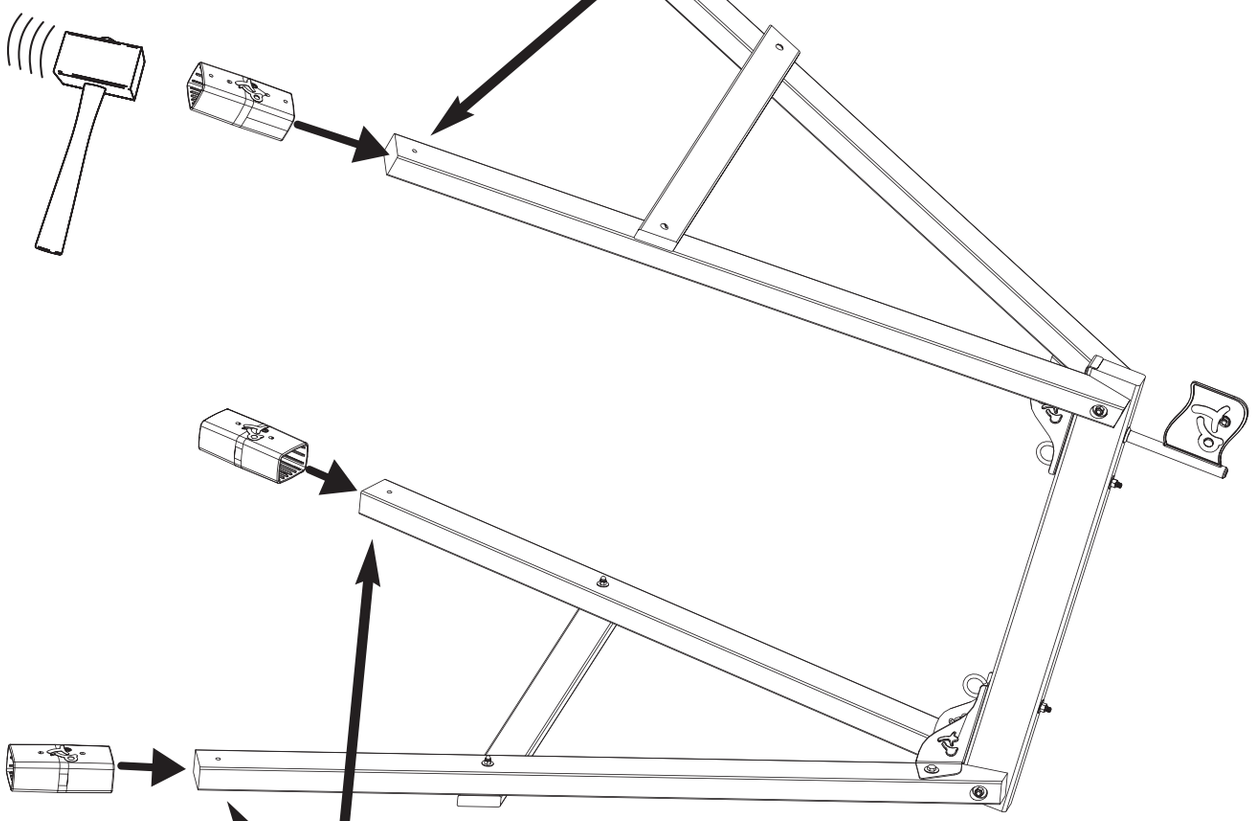


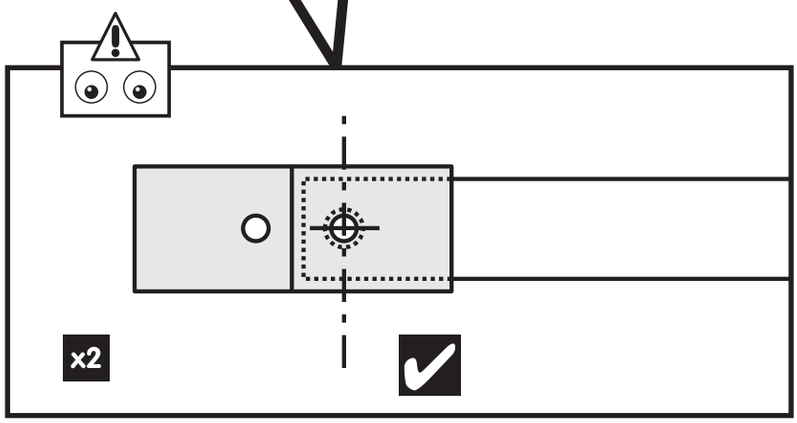



Stage
8

Full Height Frame Assembly

MW1234 Swing Leg Extension **x4**

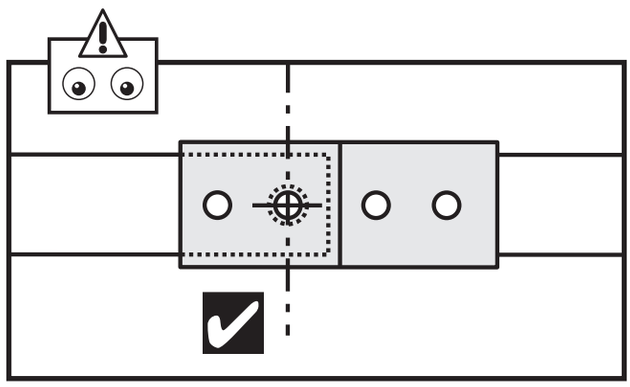

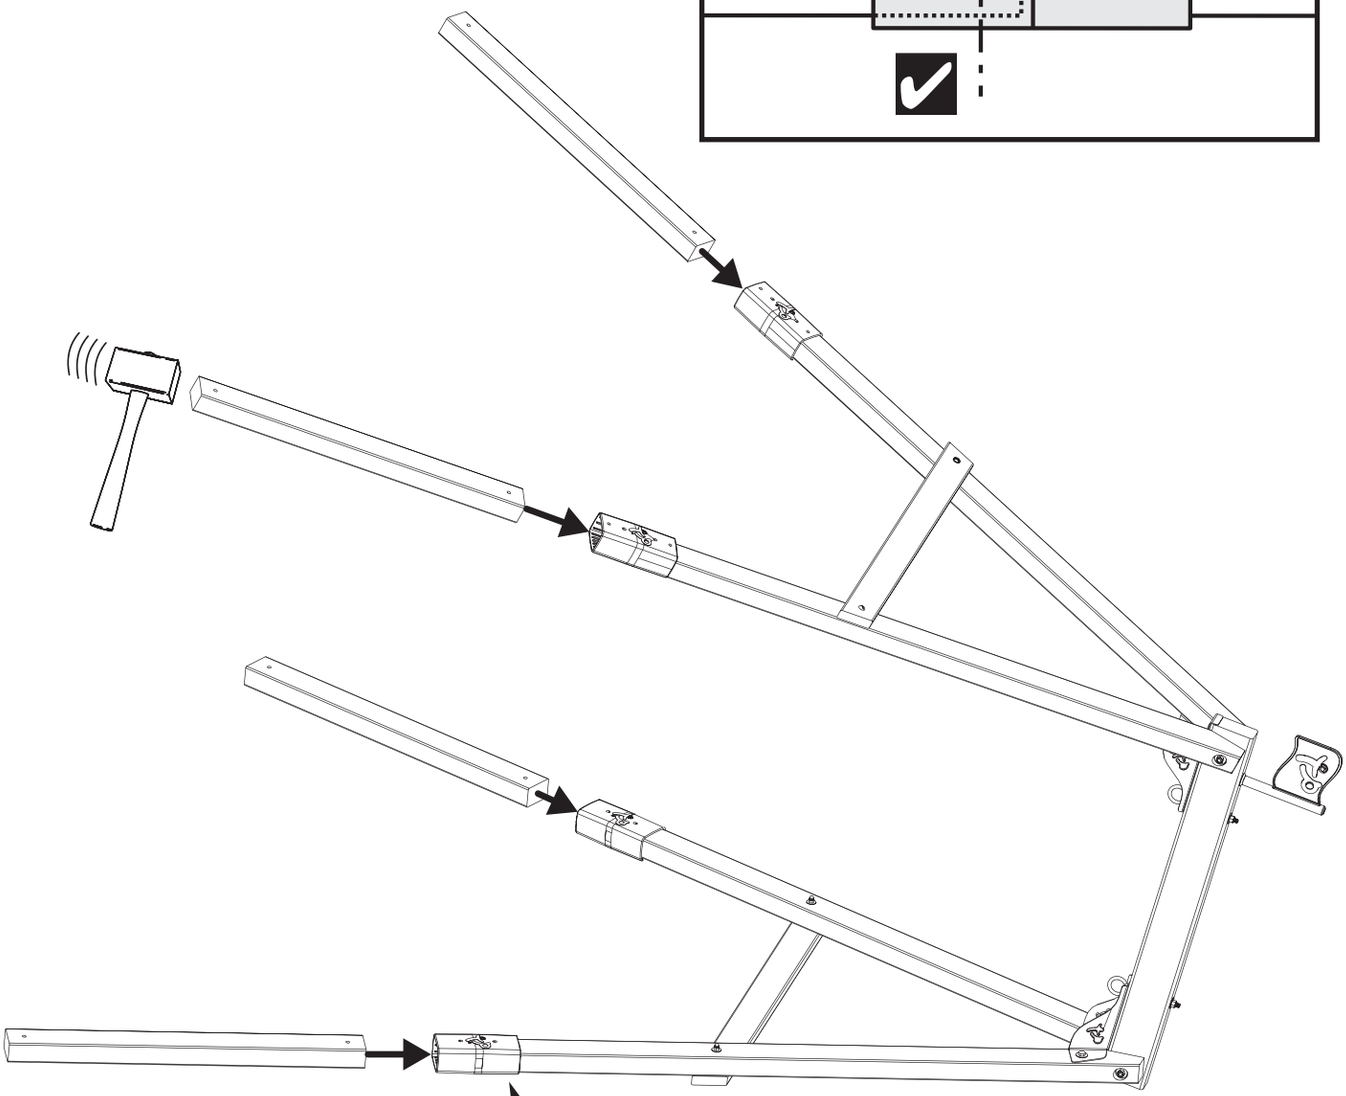

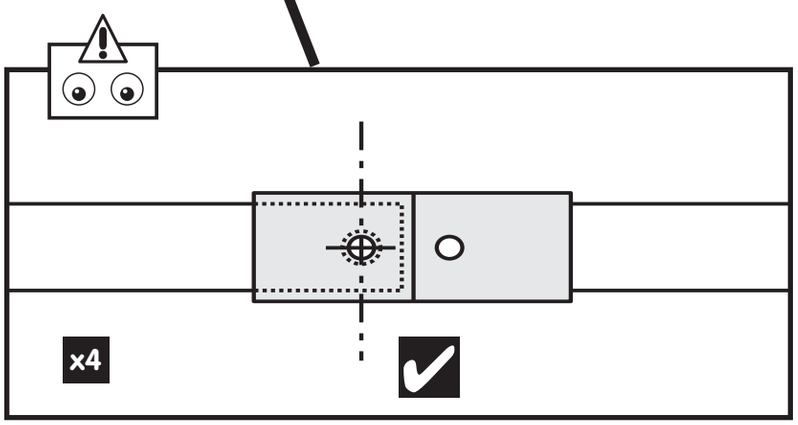


Stage 9

Full Height Frame Assembly

4.5 x 50mm Woodscrew **x8**
FA9705



M6 x 65mm **x8**
FA5694





M6 x 20mm Washer
FA5094
x8



M6 Nylon Insert Dome Nut
FA5192
x8



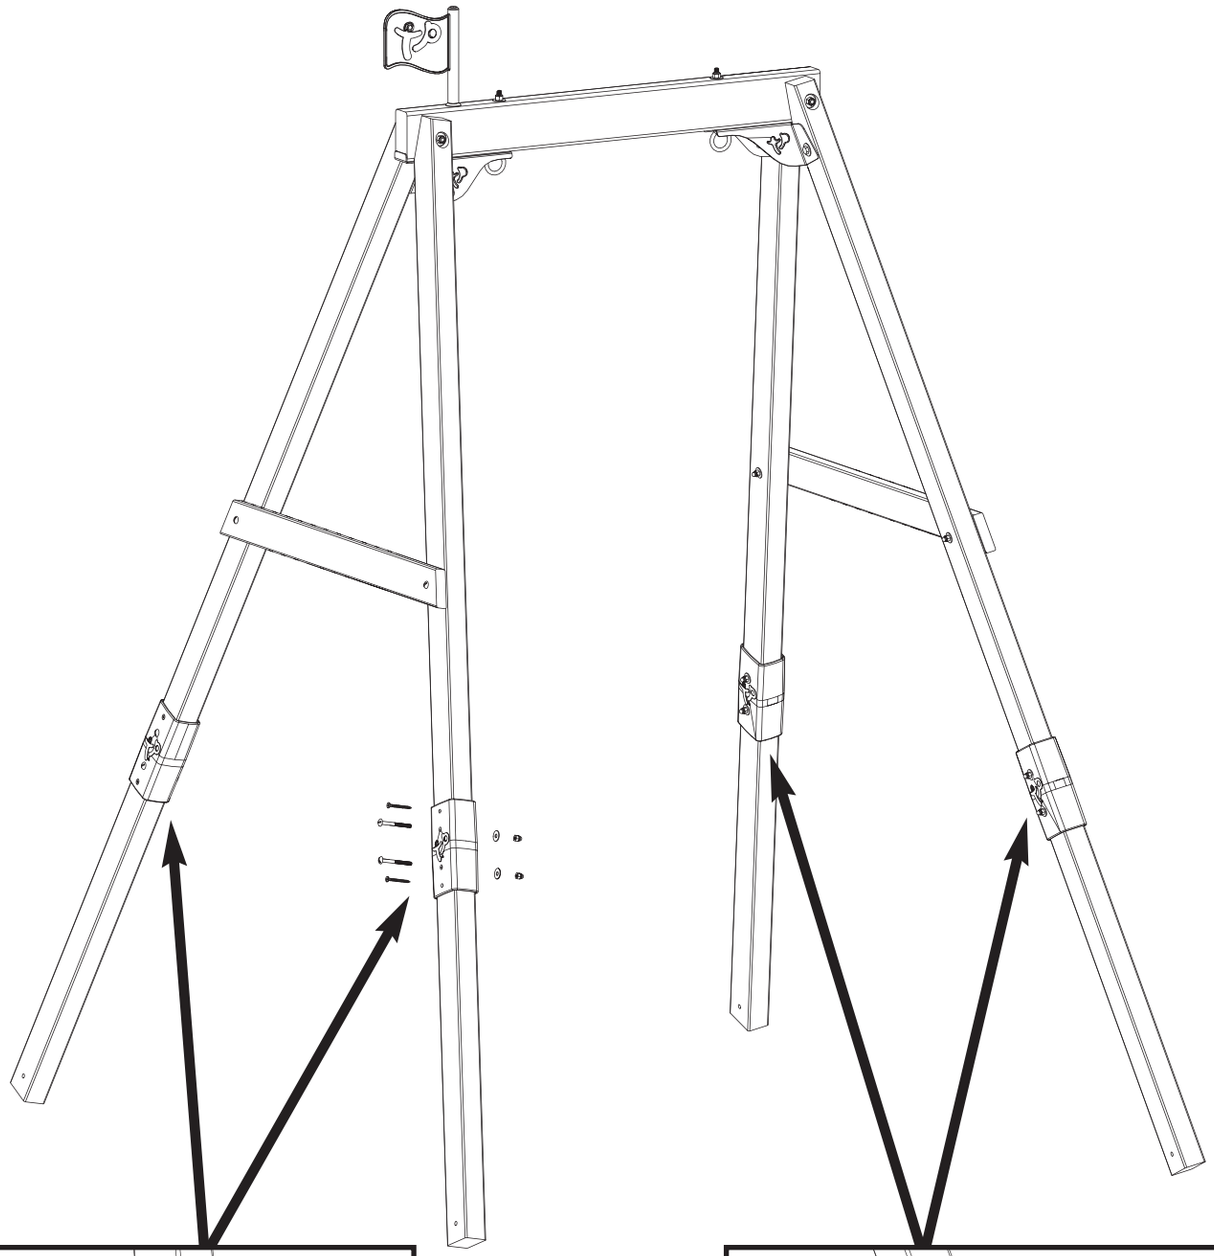


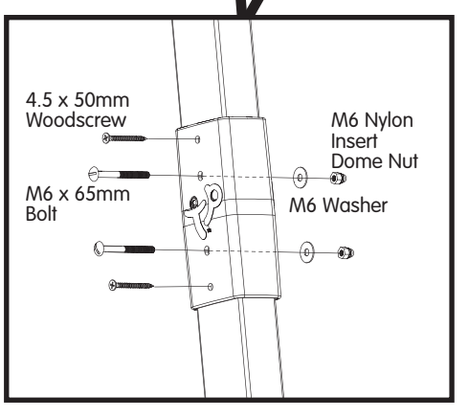

ASSEMBLY TIP




Drill 3mm Pilot Holes for 4.5 x 50mm Woodscrew

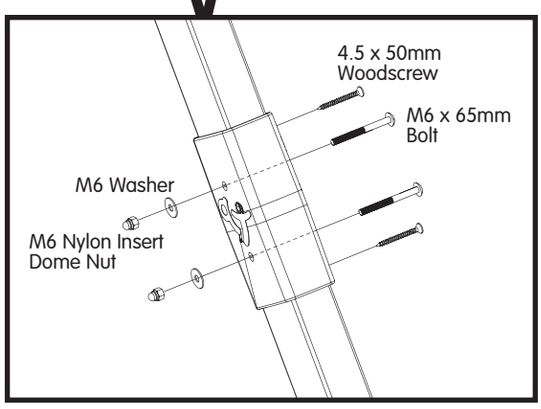


Stage
10

Full Height Frame Assembly

PM2001 Ground peg **x4**



22 Degree Angled Foot
PM2021
x4




M6 x 80mm **x4**
FA5168



M6 x 20mm Washer
FA5094
x4





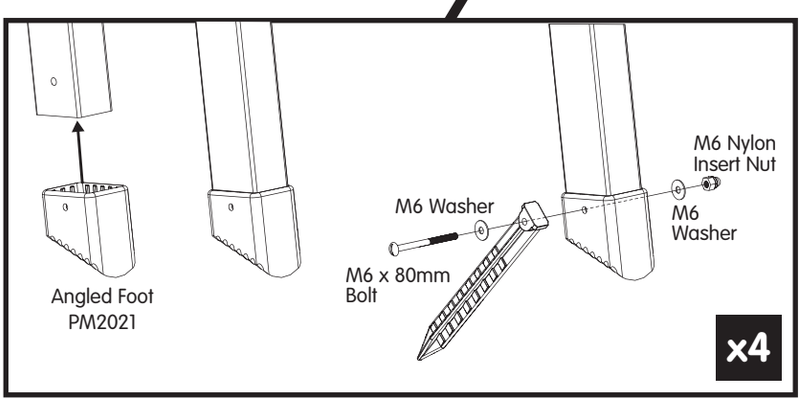



Stage 11

Full Height Frame Assembly

Recommended ground fixing at **FULL HEIGHT.**




Not Supplied




Shovel

1

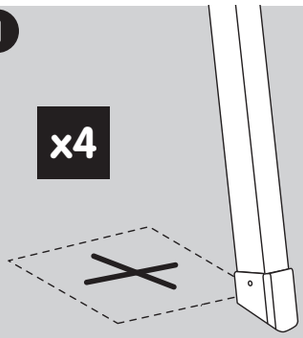


Mark leg/hole position.

2

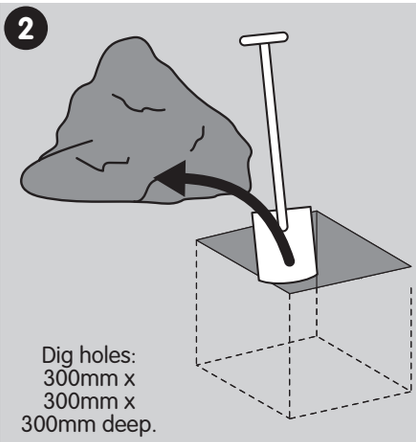


Dig holes:
300mm x
300mm x
300mm deep.

3

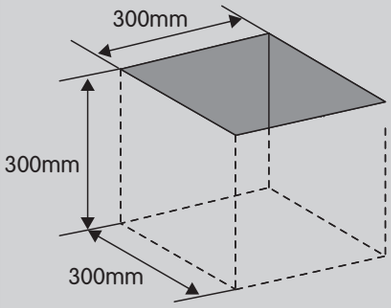


4

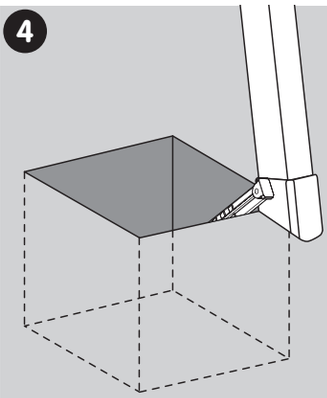


Position legs to slide of hole

5

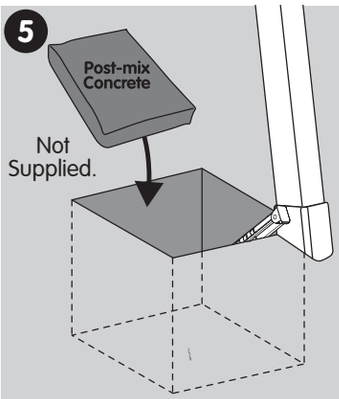


Fill holes with Post-Mix concrete.

6

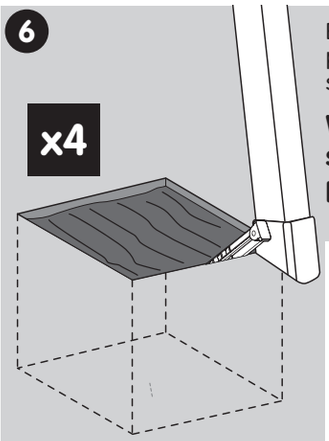

Ensure the stakes are positioned into the setting Post-Mix concrete.

Warning: Never set the legs of the playset in concrete.

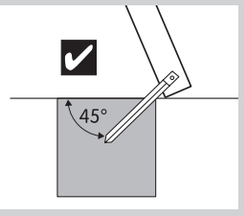

IMPORTANT

Please go to Stage 12 now for fitting the Swing Seat to the Frame.


Stage 12

All about your New TP Swing Seats


TP913/TP913A Folding Swing Seat

The TP Folding Swing Seat can be used at both low and full height.

Before you use your TP Folding Swing Seat please read the safety information carefully and follow its advice at all times.

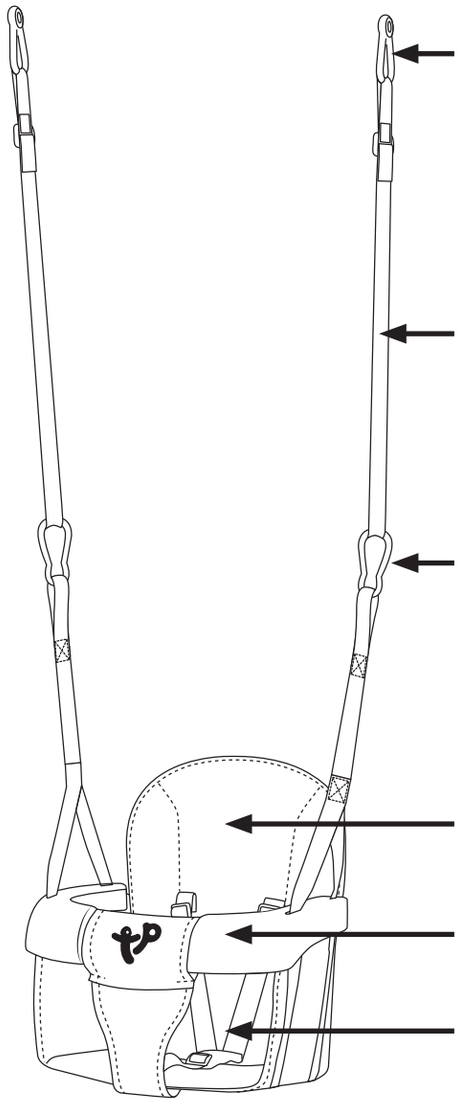


FC9908 x2
Top Karabiner with Nylon Bush.
The top karabiners should always be used to attach the seat to the frame.

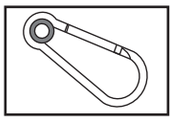

FB9030 x2
Extension Straps.
Used to suspend Swing seats on full height frame.

WF9787 x2
Bottom Karabiner
Used to connect the seat to the extension straps.

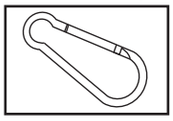

TP913/TP913A x1
Folding Swing Seat
Includes safety Harness.


Seat Frame

Safety Harness
The safety harness must be used at all times to secure the child into the Folding Swing Seat.

TP916 Standard Swing Seat

The Swing Seat can only be used at full height.

Before you use your Swing Seat please read the safety information carefully and follow its advice at all times.

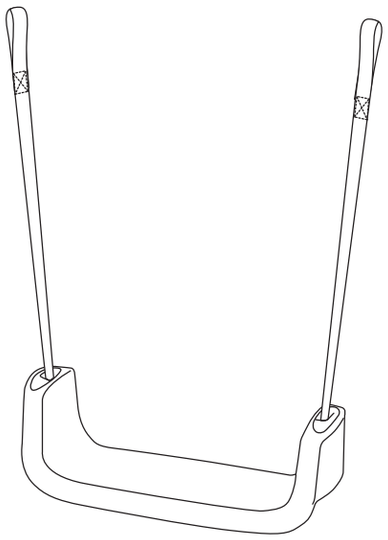


Stage 13


Important Safety Information for your new TP Folding Swing Seat

Always ensure that the safety Harness is fitted as shown below.


The safety harness must be used at all times to secure the child into the Folding Swing Seat.

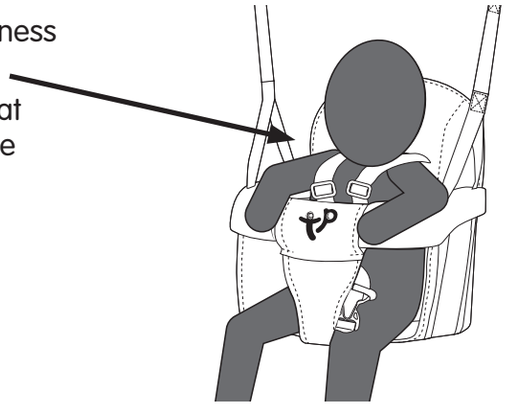

How to seat your child safely in their TP Folding Swing Seat

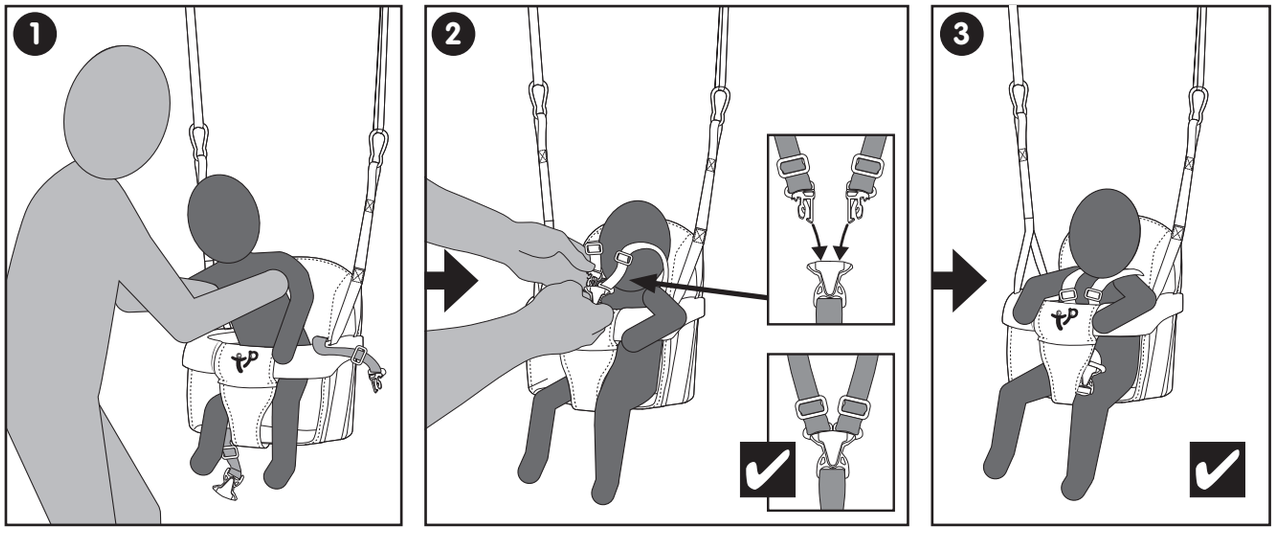


How to remove your child safely from their TP Folding Swing Seat

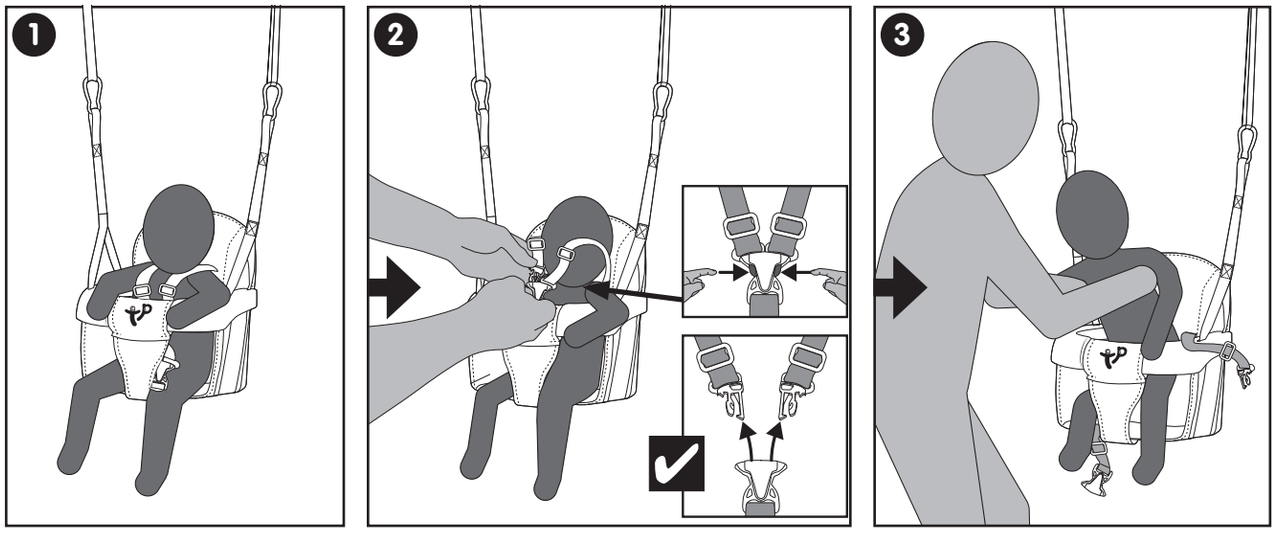


Stage 14

Attaching your Swing seats to the frame

Unfolding the Swing Seat

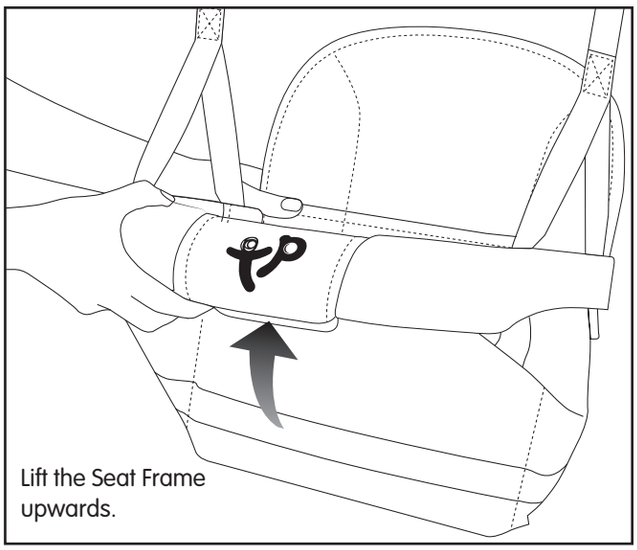


Lift the Seat Frame upwards.

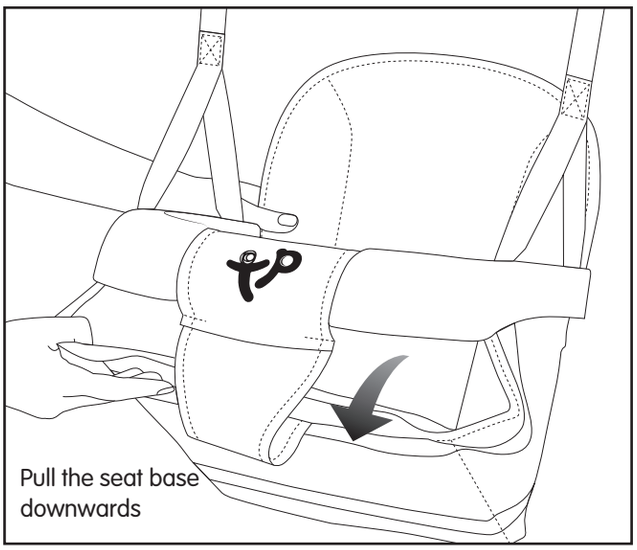



Pull the seat base downwards

Folding away the Swing Seat (after use)

To fold away - simply reverse the above steps.

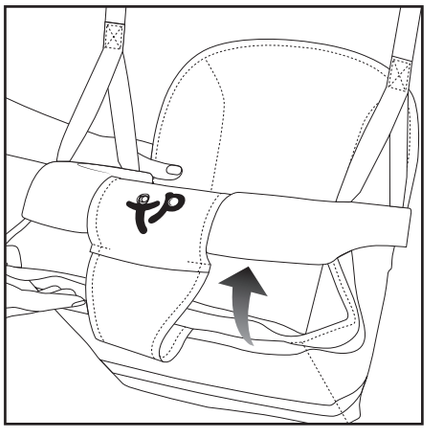


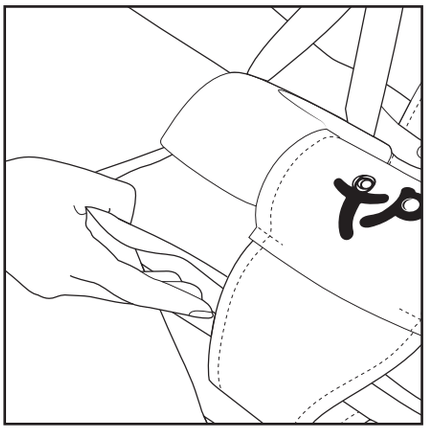


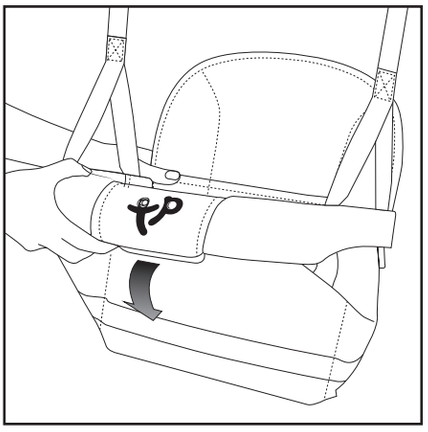

Important! Check frame attachment


Before use, please ensure that the sides of the seat are fully inserted to the frame. The sides are snap fit so press firmly to fit.

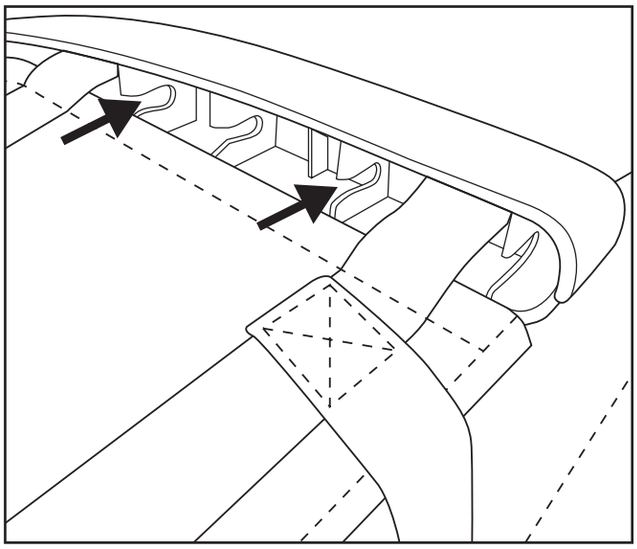

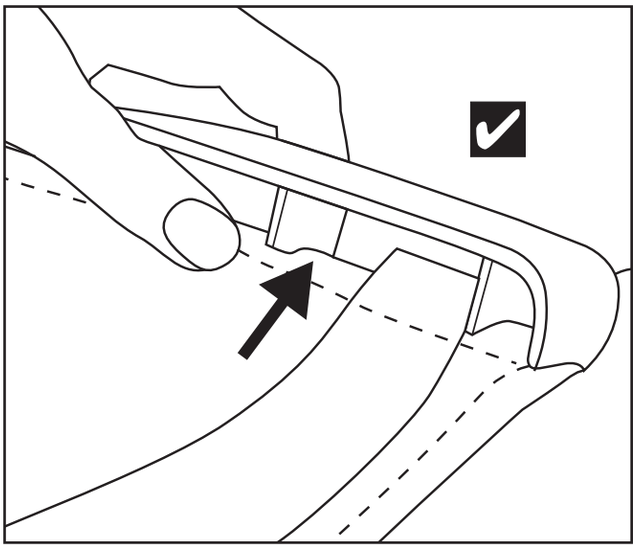



Stage
15

Seat assembly to Low Height Frames

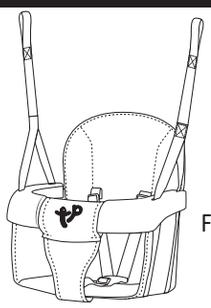


TP913/TP913A
Folding Swing Seat
x1

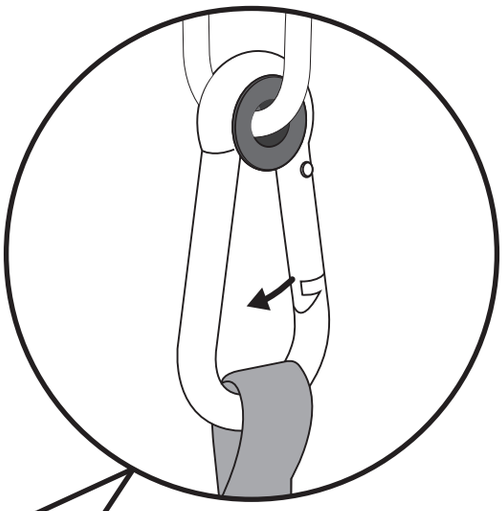

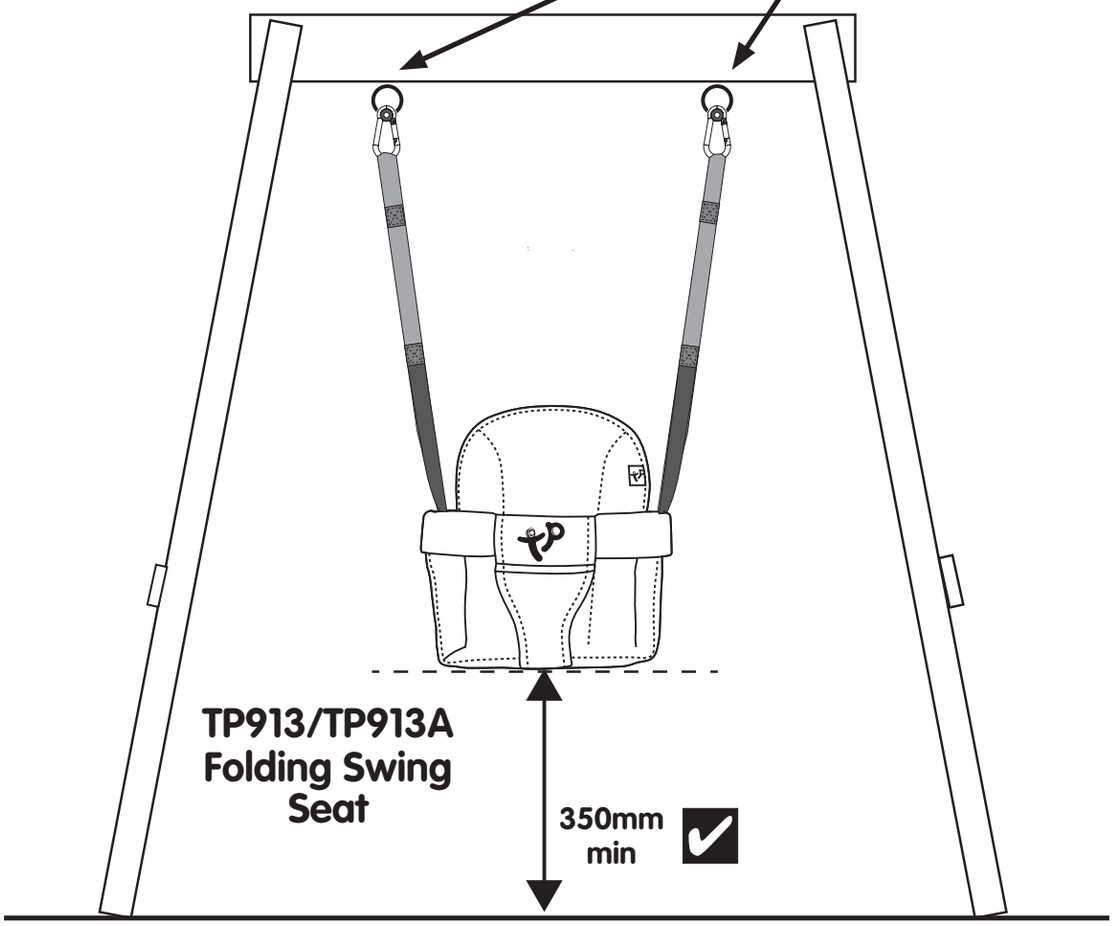


Stage
16


Seat assembly to Full Height Frames

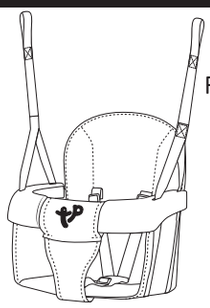


TP913/TP913A
Folding Swing Seat
x1

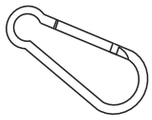

Bottom Karabiner
WF9787
x2




Extension Straps
FB9030
x2

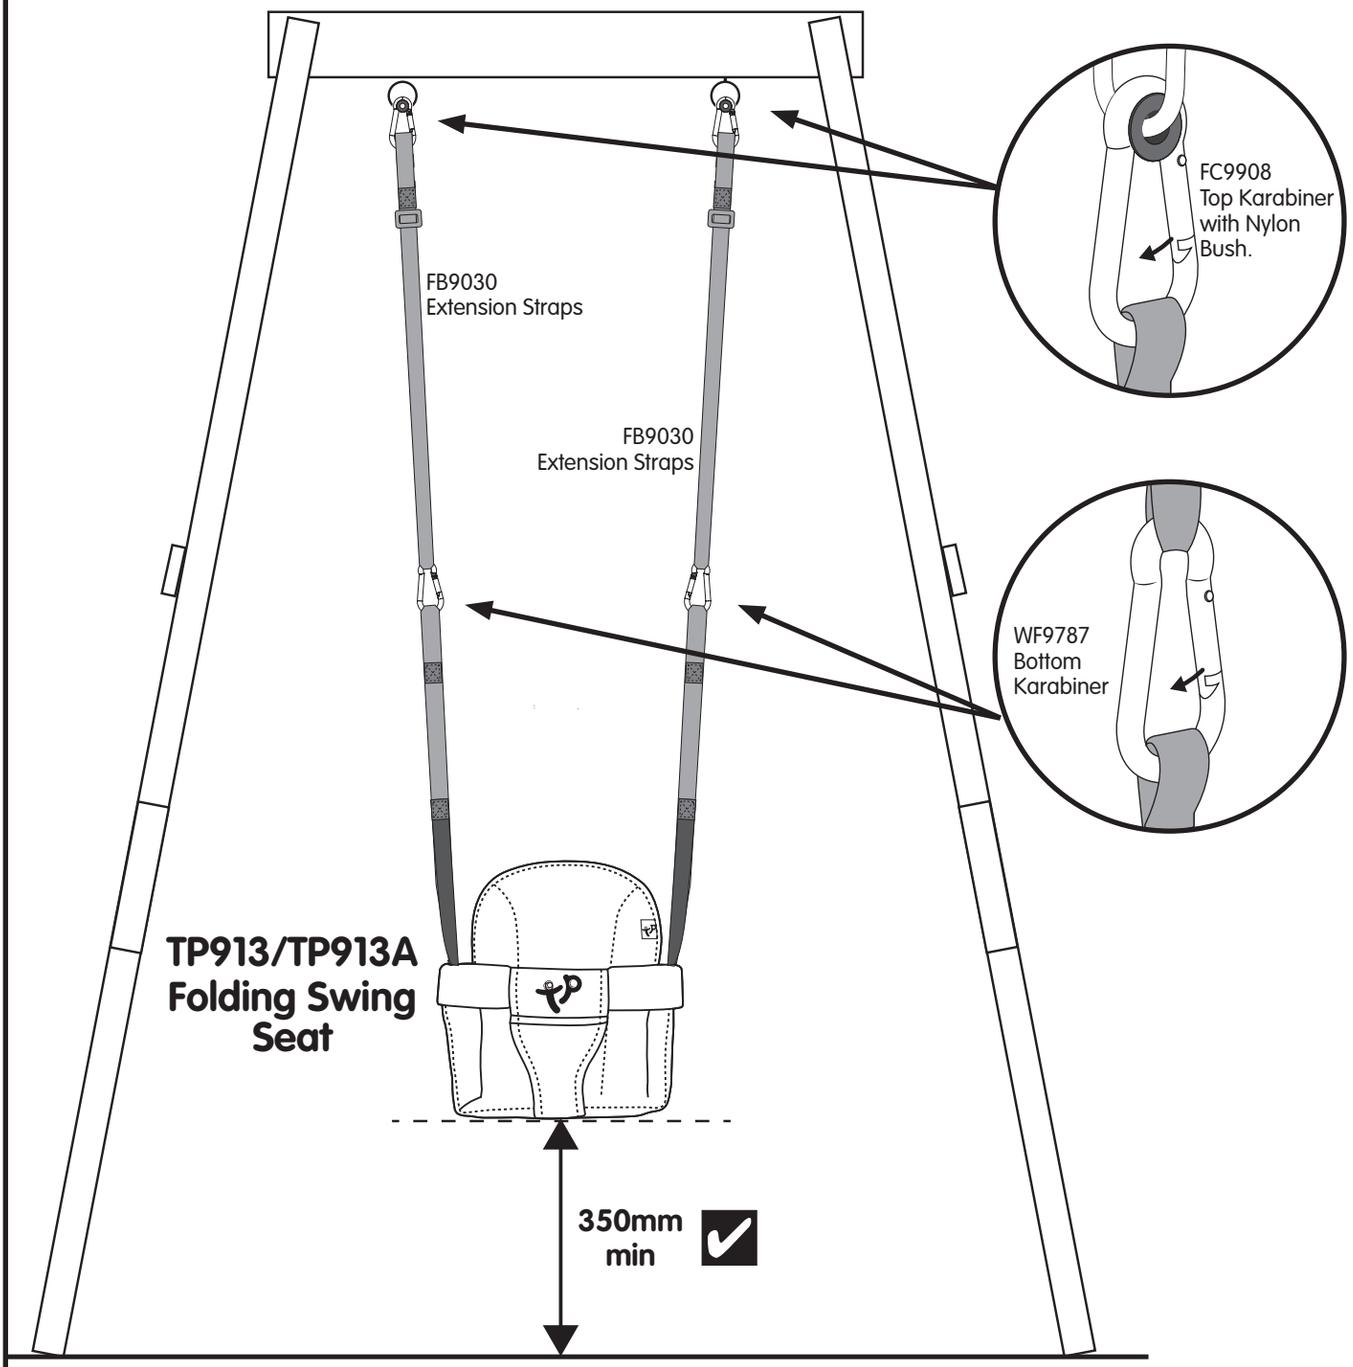


Stage
17


Seat assembly to Full Height Frames

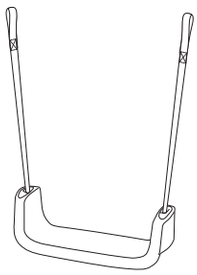


TP913/TP913A
Folding Swing Seat
x1

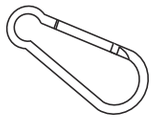


Bottom Karabiner
WF9787
x2



Extension Straps
FB9030
x2

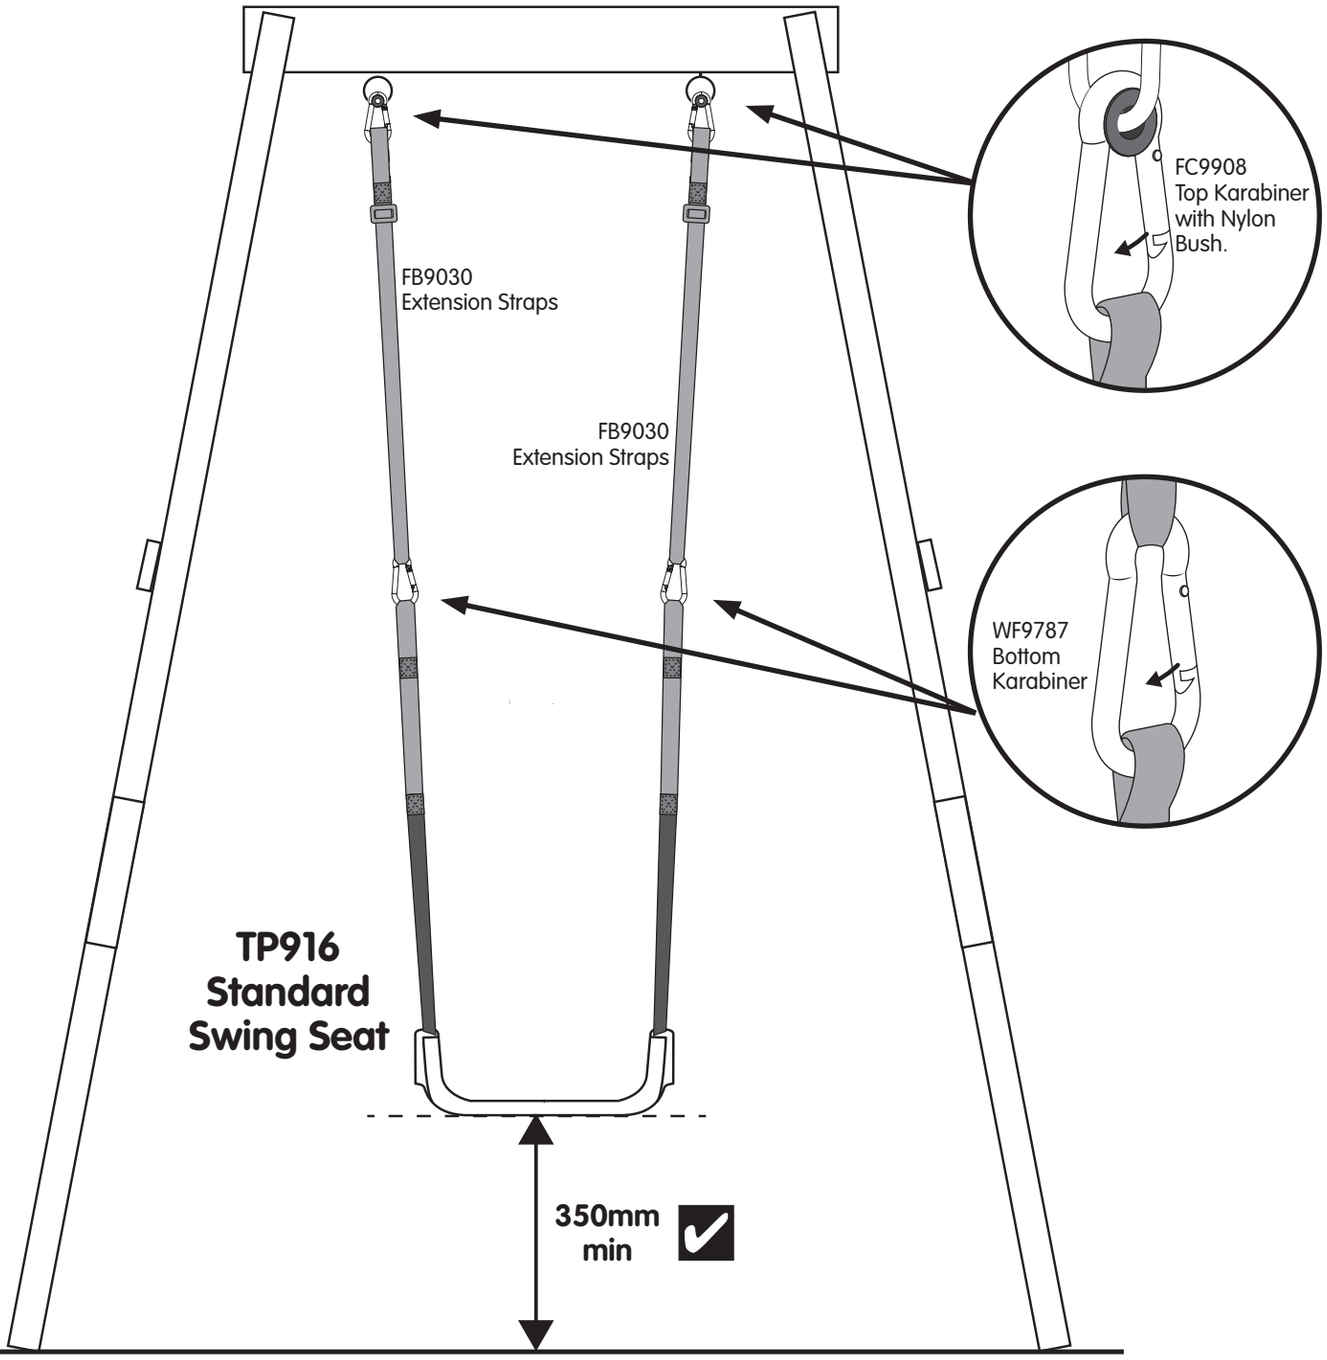


18 How to adjust the height of your Folding Swing Seat

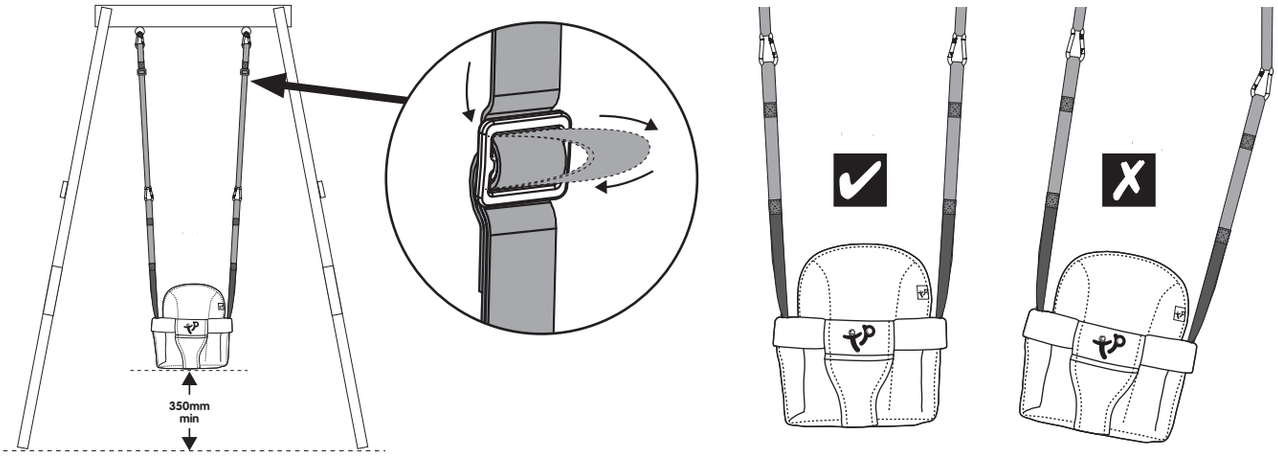

19 How to position your Folding swing correctly on your swing frame

TP913/TP913A
Folding Swing Seat

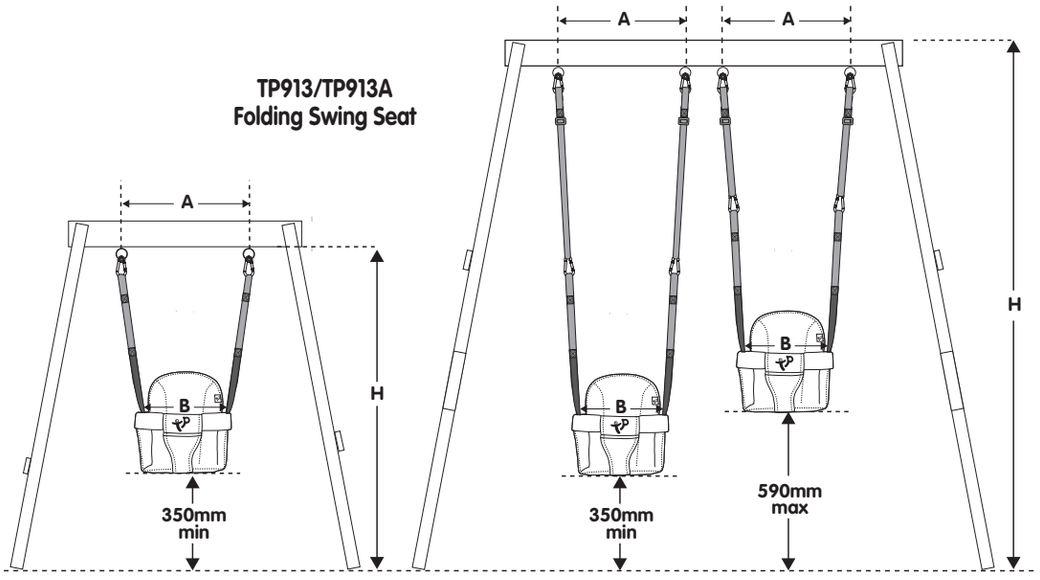

Low Height Swing Frame

High Height Swing Frame

The maximum height of the swing frame shall not exceed 2500mm.

The maximum fall height for the swing can be determined by measuring the distance between the pivot points and the ground.


The minimum distance between the suspension points is calculated as follows: A=0.04h+B where

A is the distance between suspension points along the crossbeam.

B is the distance between the junction points of the swing element and the means of suspension.

h is the distance from the ground to the lower side of the crossbeam.


TP916
Standard
Swing Seat

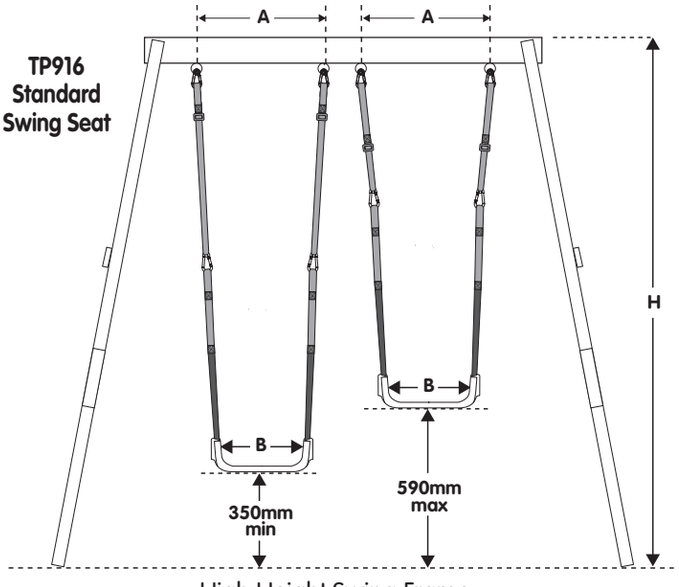


High Height Swing Frame

20 Recommended safe play area

The Safe Play Area refers to the zone extending 2m beyond the play set on all sides, including the space above the apparatus. Additional accessories may increase the size of the Safe Play Area. The ground surface must be level. Installing your playset on sloping ground can cause it to lean or 'rack'. This puts additional stress on all the connections and joints and in time will cause them to fail. The Safe Play Area must be free from all structures, landscaping, trees and branches, rocks, wires, sprinkler heads and other similar obstacles to safe play. Children can be seriously injured running or swinging into these obstacles.

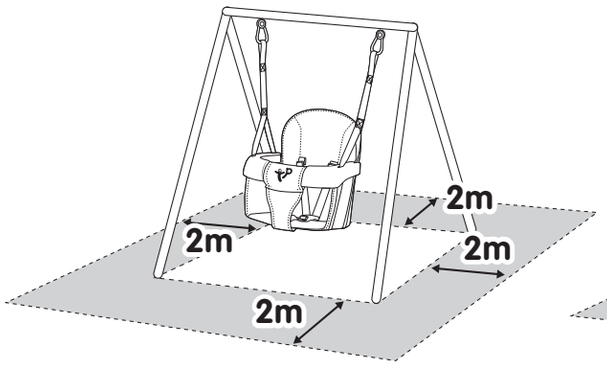

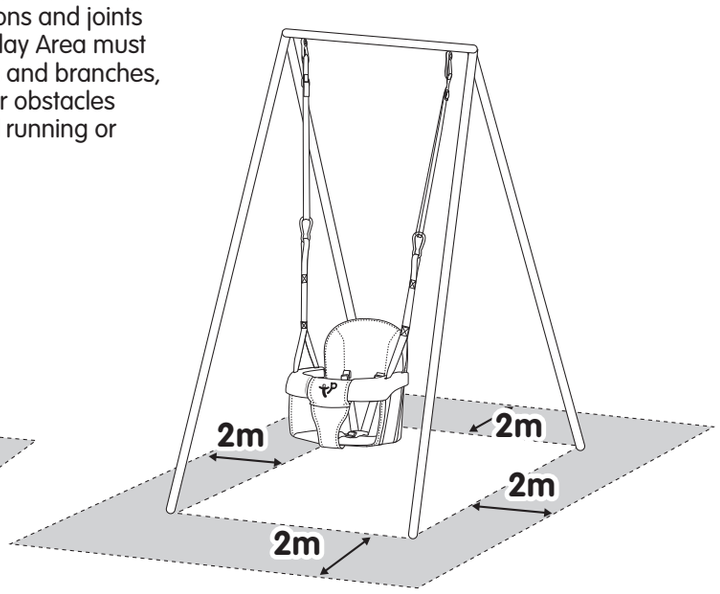


21 Care and Maintenace of your swing Seat

The TP Folding swing seat is designed with maximum comfort for your child. Due to the soft materials, we do not recommend leaving it outside for long periods. Please look after if by taking it inside when not in use.

To remove light stains, we recommend using a damp cloth.

22 Dimensions

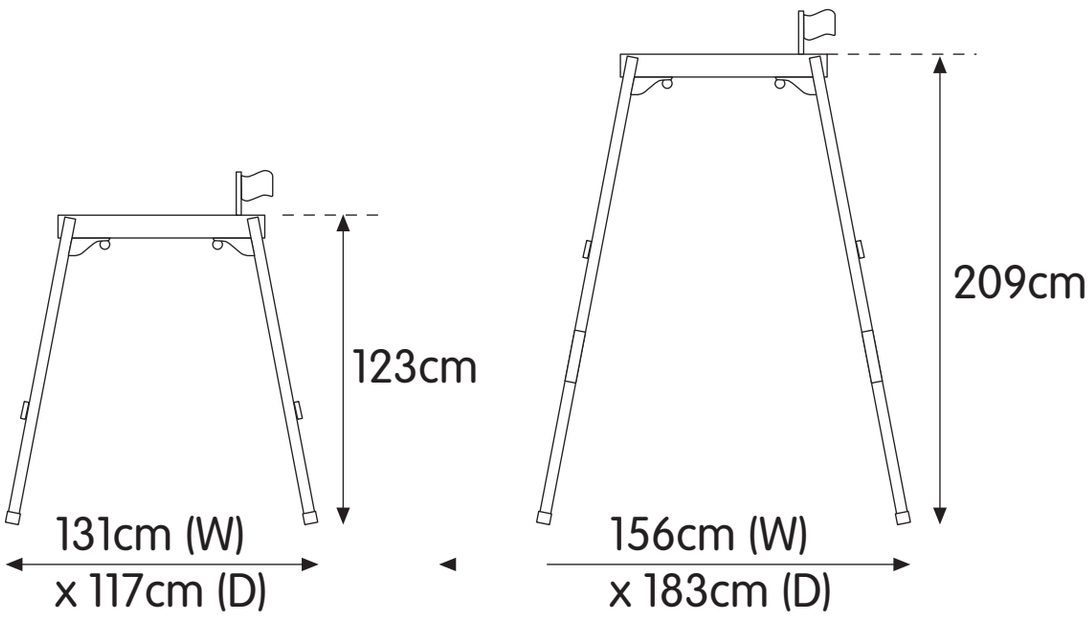

Low Height **Full Height**

Register your new TP product online now at **www.tptoys.com/productregistration**

Thank you for purchasing this TP product. To find out all about your product guarantee and register your purchase, please visit **www.tptoys.com/productregistration**

We want to give you the very best service. By registering your purchase now, we will be able to deal with any guarantee issues very quickly and efficiently in the future. Thank you.

Your TP Guarantee Number/Product Batch No is

Designed in the UK by **Robovision Ltd t/a TP Toys**
Unit 11, Enterprise Way, Flitwick, Bedfordshire, MK45 5BX England

www.tptoys.com

Instruction Part No: IN0332 Issue-A 31.01.2017