




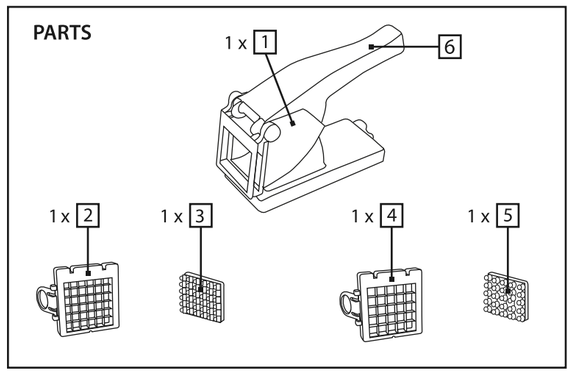


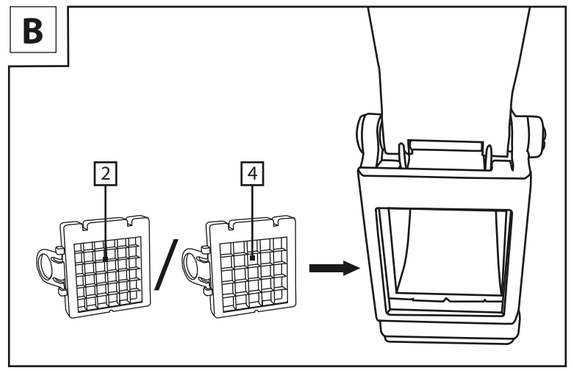


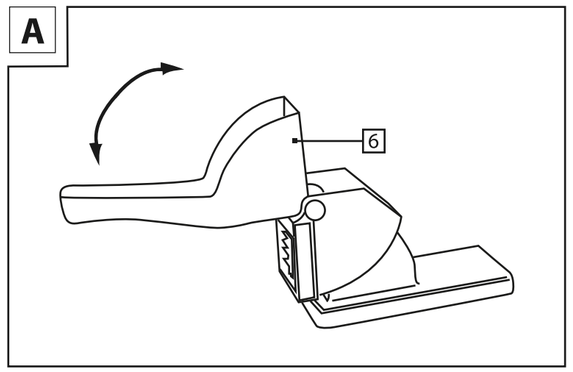

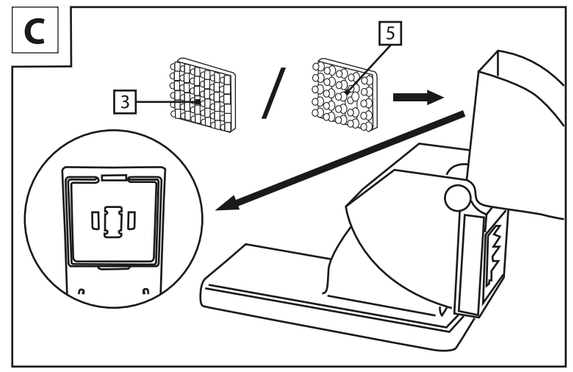

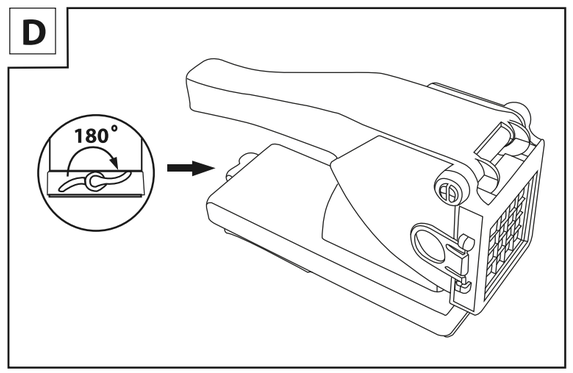

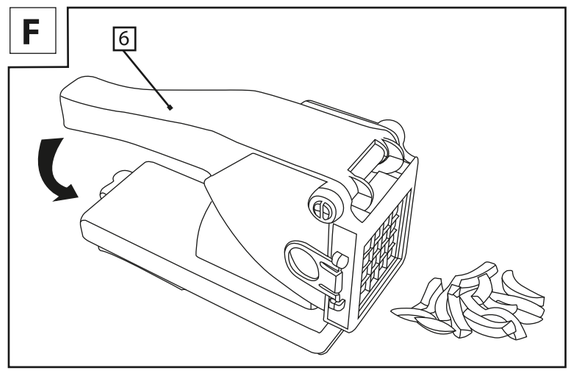

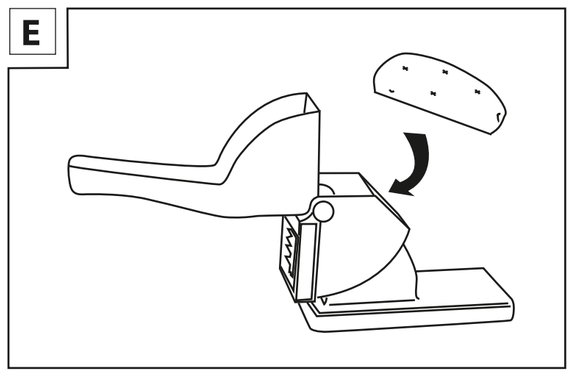

French Fries Cutter

Instruction



Safety guidelines

KEEP ALL SAFETY GUIDELINES AND INSTRUCTIONS FOR FUTURE USE!

- **WARNING! RISK OF DEATH OR ACCIDENT FOR INFANTS AND CHILDREN! Never leave children** unattended with the packaging materials. There is a danger of suffocation from the packaging. Children frequently underestimate the dangers. Always keep packaging materials away from children.
- This device is not a toy, it should be kept away from children. Children are not able to recognise the risks associated with using the device.
  CAREFUL! DANGER OF INJURY! Do not use the device if you notice any damage.
- Make sure that all parts are properly installed. There is a risk of injury is parts are improperly installed.
  CAREFUL! DANGER OF INJURY! The cutters are very sharp! When putting the device together, using it, or cleaning it, never touch the blades.
- Use the product on a smooth, stable surface.
- Do not expose the device to extreme temperatures or heavy mechanical stresses. Otherwise the product may be deformed.

- **FOOD-SAFE!** Taste and odour are not affected by this product.
- The device is only for culinary use. Keep all parts clean, because they may come in contact with food. Only use the accompanying accessories.
- Do not use the product to cut frozen foods.
- Do not use the product to cut nuts, stone or pome fruits. Otherwise the product may be damaged.

Initial operation

Before the first use

- Before the first use, clean all parts with warm water and a mild washing-up liquid. If necessary, remove any labels. Dry all parts carefully.

Introduction for Use

- Remove parts stored under chip cutter.
- Place handle .6 horizontially as fig. A and leave in this position to add the pusher and cutting unit.
- Insert the desired cutting unit 2 , 4 into carry frame. Make sure cutting unit matches pusher 3 , 5 respectively as Fig. B.
- Place pusher 3 , 5 on holder as shown in fig. C. Make sure the matching cutting unit is used 2 , 4 respectively.
- This item has a suction pad to stablise it. Place chip cutter 1 onto flat surface. Push down on base and turn lever 180° clockwise as fig. D
- Cut potato to size so it fits into container as fig. E.
- Push handle .6 clockwise to cut and make chips as Fig. F.

Disposal

The packaging is made from environmentally friendly materials which you can dispose of at your local recycling centre.

You can learn how to dispose of worn-out products from your local council.