Electric mill

(1) Requires 4 x AA batteries (not supplied). For best results we recommend alkaline batteries

(2) Always keep the mill clean and avoid contact with water

(3) Suitable for all kinds of pepper

Instructions for use

(1) Open the top cover by turning anti-clockwise, see diagram below. Move the arrow on the top cover from alignment with the left arrow on the base to the right arrow on the base
Lift the motor from the base compartment. Remove the white plastic ring
Insert 4 x AA batteries as indicate on the battery compartment of the motor.
Replace the white plastic ring over the batteries

(2) Connect the motor back to the base compartment, placing the plastic pegs into the holes, where the arrows are marked

(3) After connecting the motor to the base, place the top cover back onto the mill. Align the arrow on the top cover to the right arrow on the base and turn it clockwise towards the left arrow to lock it


(4) It is recommended to keep the mill 80% full of pepper or salt for smooth functioning

(5) The screw under the base is used to choose how fine the pepper needs to be ground. Turn clockwise for fine pepper and anti-clockwise for coarse pepper. Please adjust the screw below the base according to your requirements

(6) If the mill gets stuck during use, gently shake the pepper mill as sometimes the pepper can get stuck in the grinder

(7) Press the top button to activate the mill, ensuring to position the grinder over what you wish to dispense the pepper onto

(8) Please retain these instructions for future reference

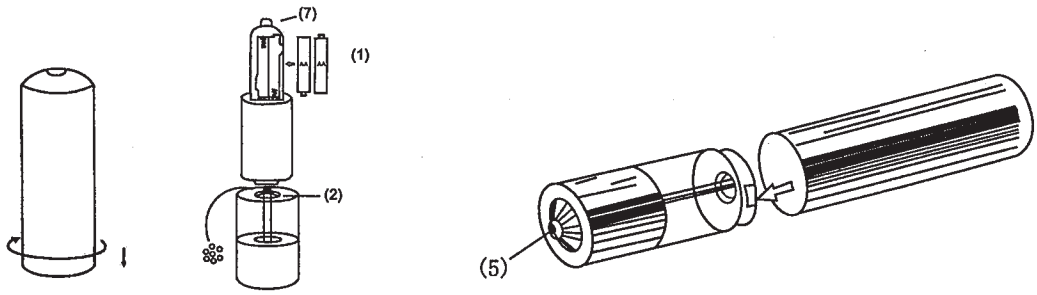

Warnings

If the instructions below are not followed, the batteries may overheat, catch fire or leak

Battery leakage can cause corrosion and damage to this product and may result in personal injury

- Remove exhausted batteries from this product immediately
- Remove the batteries from product during periods of non-use
- Replace only with batteries of the same type
- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries
- Batteries should be inserted with the polarity indicated on the battery compartment
- Avoid short circuiting the terminals of the batteries
- Non-rechargeable batteries should not be recharged
- Dispose of batteries safely. Do not attempt to burn them. Use collection points where available
- Make sure battery compartments are secure
- Rechargeable batteries are only to be charged under adult supervision
- Not suitable for use with salt due to risk of corrosion

This symbol is known as the 'Crossed-out Wheelie Bin Symbol'. When this symbol is marked on a product, it means that the product should not be disposed of with your general household waste. Only discard electrical/electronic items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment.