
ASSEMBLY INSTRUCTIONS

Harrogate Multimedia CD760

Easy Assembly Instructions

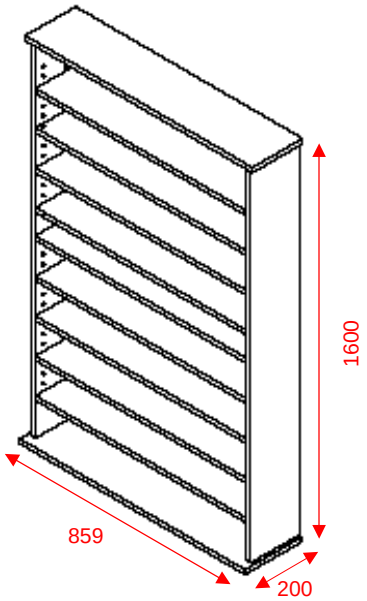


Help Line : 08456 400 800

Before you start, here is some helpful advice

1. We suggest that you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. This item should be attached to the wall with the enclosed strap for safety reasons before use. Due to the wide variety in types of walls, the necessary wall screw & rawl plug are not provided.Please read and follow the enclosed wall fixing guide carefully so that you can be sure you use the appropriate screw and rawl plug for your type of wall.
3. Do not discard any of the packaging until you have checked that you have all the components and fittings needed for assembly and in case the product is returned to the supplier for whatever reason.
4. Assemble the unit on a carpet, to avoid scratching the unit.
5. Keep all fittings and glue out of reach of children.
6. All you need to assemble the unit is an appropriate screwdriver.

Components parts and fittings contained in the box

Component Parts List

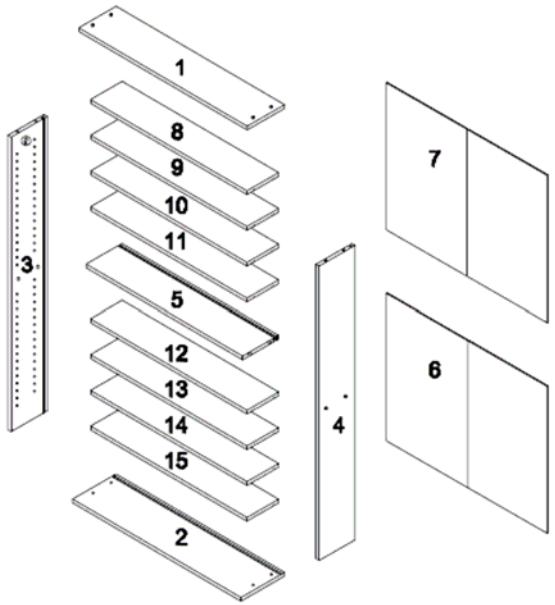

1 – Top
2 – Base
3 – Left Side
4 – Right Side
5 – Centre Shelf
6-7 – Back Panels
8-15 – Adjustable Shelves

Fittings

A Large screw x 12



B Small screw x 8



C Shelf support x 32



D Stability brackets x 8



F Screw covers x 8




E Wall Fixing Pack x 1




X 2 X 2 X 2 X 2

ASSEMBLY INSTRUCTIONS


Harrogate Multimedia CD760

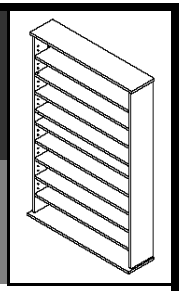

1. Attach the two sides (part 3 & 4) to the base (part 2) using four large screws (part A). Ensure that the removable arrows on the two sides are pointing up and the grooves for the back are as per the diagram.

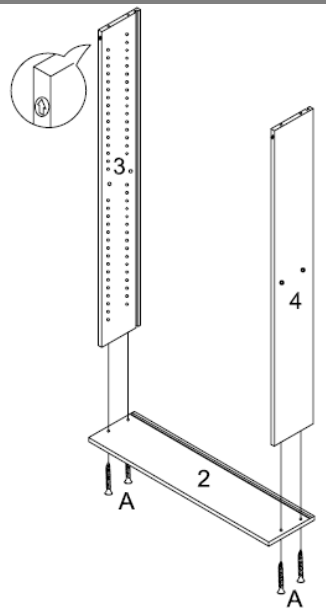


2. Slide the back (part 6) into place ensuring the oak surface is visible from the front of the unit.

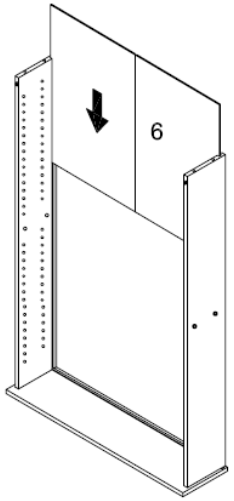


ASSEMBLY INSTRUCTIONS


Harrogate Multimedia CD760

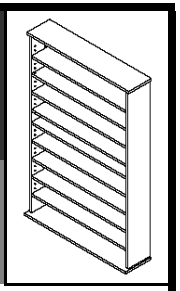

3. Attach the center shelf (part 5) to the unit using four large screws (part A). Ensure that the back (part 6) fits neatly into all of the grooves.

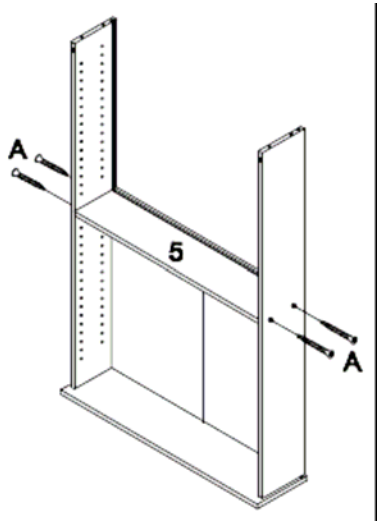


4. Slide the other back (part 7) into position, ensuring it too fits neatly into all of the grooves.

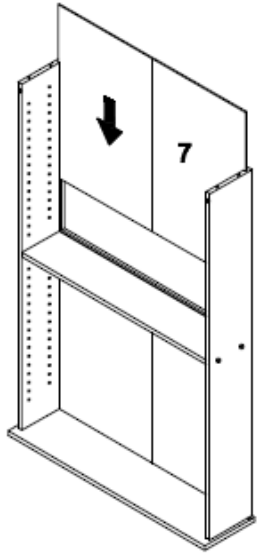


ASSEMBLY INSTRUCTIONS


Harrogate Multimedia CD760

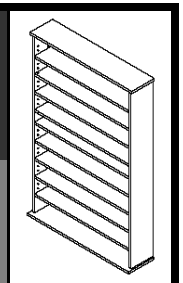

5. Attach the top (part 1) to the unit using the remaining four large screws (part A).

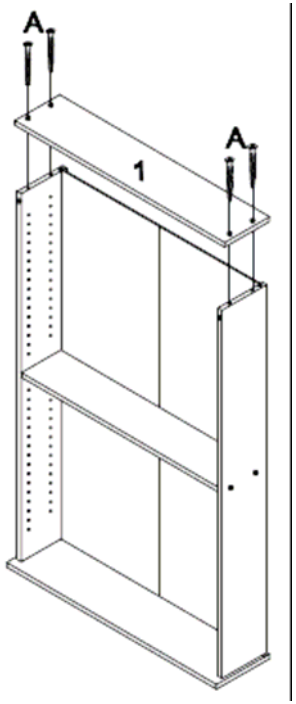


Attach the screw covers (part F) to the 8 visible screw heads

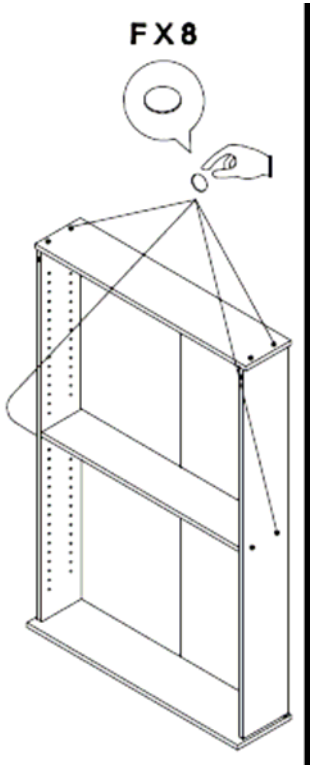


ASSEMBLY INSTRUCTIONS


Harrogate Multimedia CD760

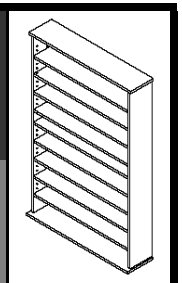

6. Attach the adjustable shelves (part 8~15) using the shelf supports (part C).

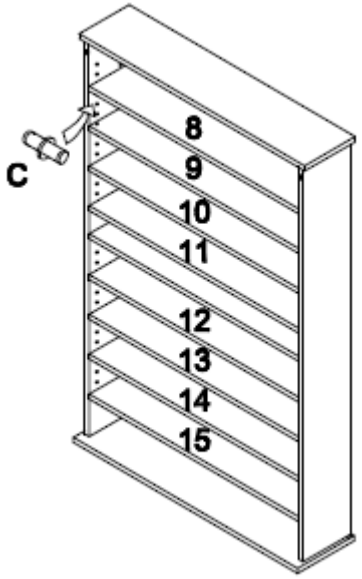


ASSEMBLY INSTRUCTIONS

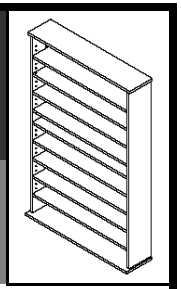


Harrogate Multimedia CD760

7. Attach the stability brackets (part D) to the unit using the small screws (part B). Attach the screw covers (part F) to the 8 visible screw heads.

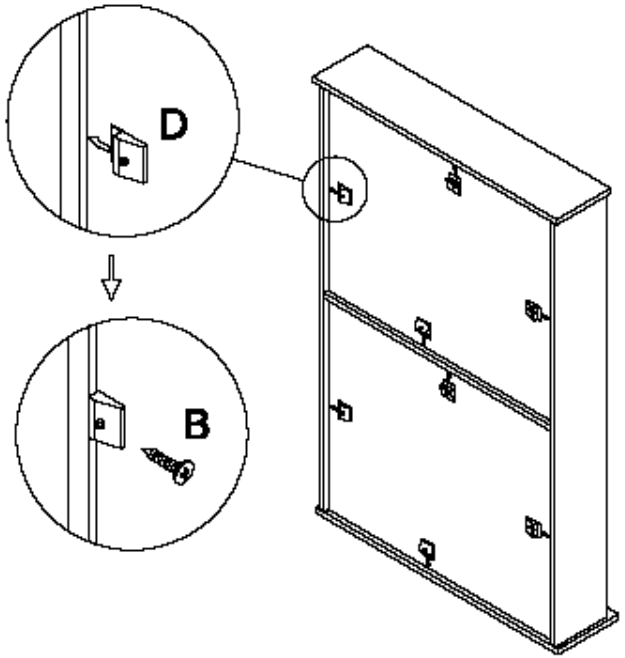


ASSEMBLY INSTRUCTIONS

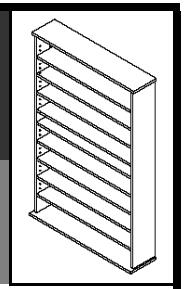

Harrogate Multimedia CD760


8. We strongly recommend that the unit is attached to the wall using the Fixing Pack (E) provided. Place the unit against the wall in its final desired location, note where the wall screw will need to fixed into the wall. Attach the wall strap to the unit using the small screw as per the diagram. Using a suitable drill bit attach the strap to the wall using the screw and rawl plug provided (make sure the rawl plug supplied is suitable for the wall, if not please use a suitable rawl plug).

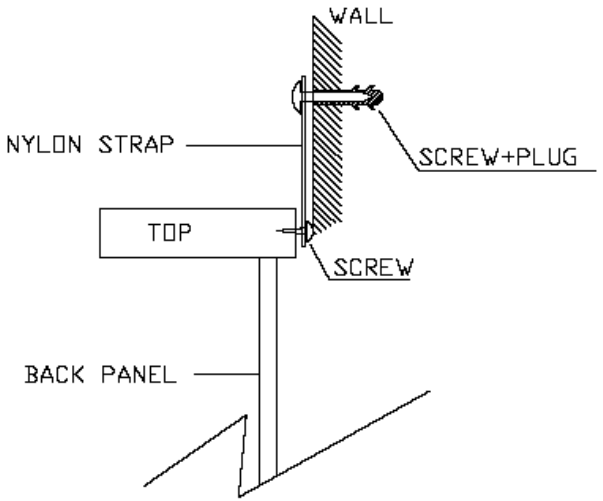

A Guide to
Wall Mounting & Fixings

IMPORTANT:

When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

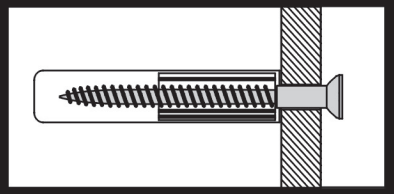


HINTS:

1) General Rule ⚠ Always use a larger screw and wall plug if you are not sure.
2) Ensure you use the recommended drill bit to match the wall plug and hole size.
3) Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4) Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic tile to avoid splitting or cracking.
5) Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plaster board.

No.1 "Standard" Wall Plug
General Wall Materials

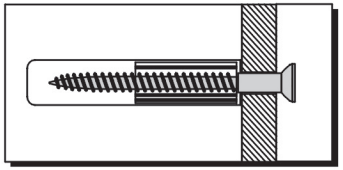

These come in various sizes and are made from plastic or sometimes wood fiber.


No.2 "General Purpose" Wall Plug
Aerated / Breeze Block

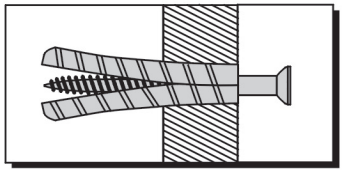

Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case.
For light loads, a General Purpose Plug can be used.


A Guide to
Wall Mounting & Fixings

No.3 "Shield Anchor" Wall Plug
Heavy Loads

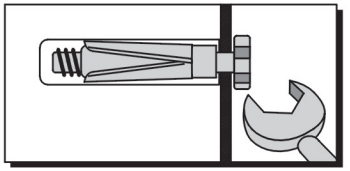


For use with heavier loads such as TV & HiFi Speakers and Satellite Dishes etc.

No.4 "Cavity Fixing" Wall Plug

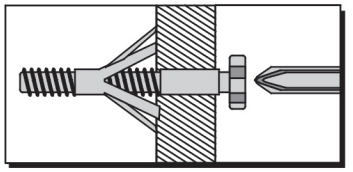


For use with plaster board partitions or hollow wooden doors.

No.5 "Cavity Fixing - Heavy Duty" Wall Plug

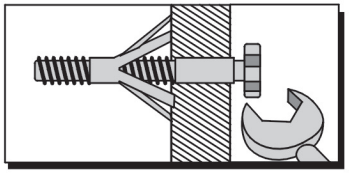

For use when fitting or supporting heavy loads such as shelving, wall cabinets, coat racks.

No.6 "Hammer Fixing" Wall Plug

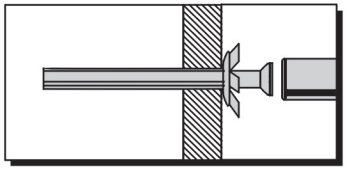

For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

CARE & MAINTENANCE

⚠ **SAFETY**


Always check the fitting and location to ensure your safety in and around the home.

⚠ **FITTING**

From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Harrogate Multimedia CD760

Assembly Instructions - Please keep for future reference | 875/1935

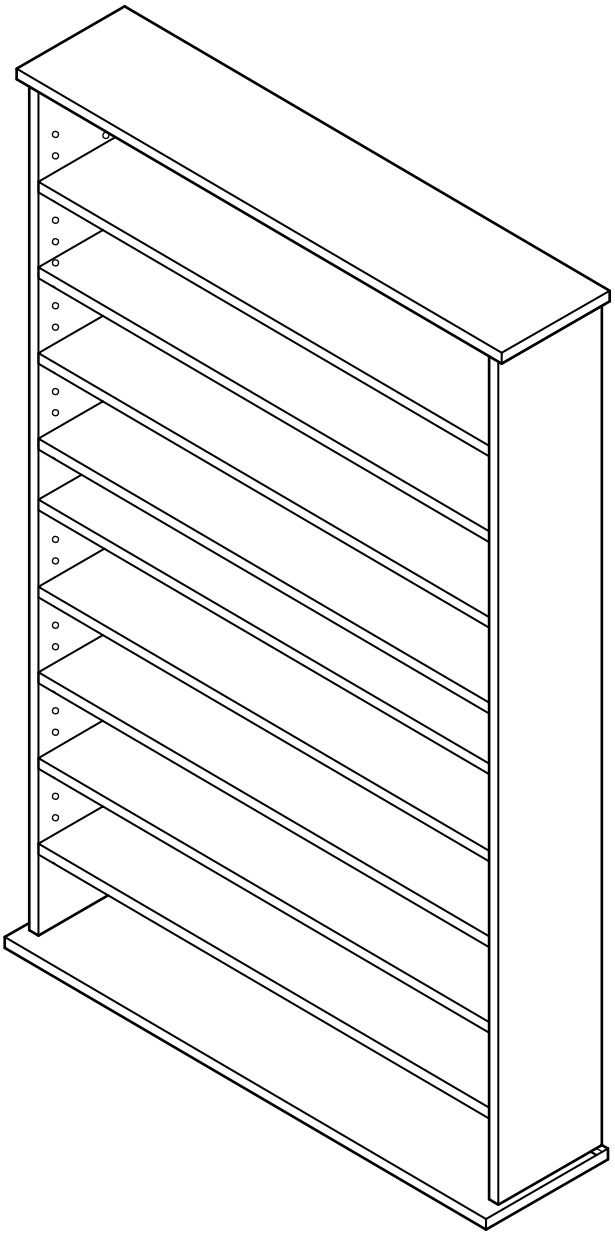

Dimensions

Width - 85.9cm
Depth - 20cm
Height - 160cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 9/07/08

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Glue safety - Take care when using glue, please follow the advice below

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the panels listed below

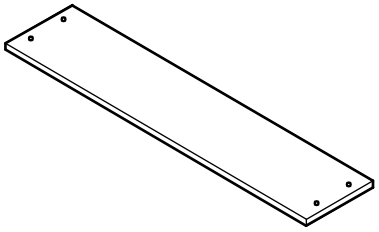


1 Top
(16.1 x 86cm)

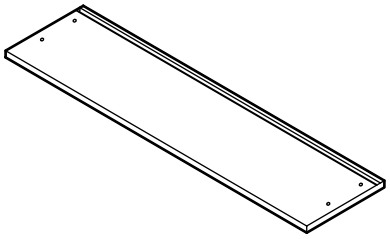


2 Base
(20 x 86cm)

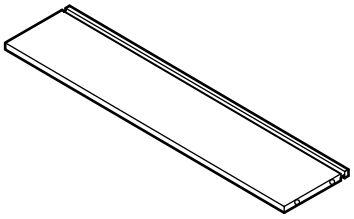


5 Centre Shelf
(15.85 x 80.7cm)




3 Left side panels
(16 x 157cm)



4 Right side panels
(16 x 157cm)

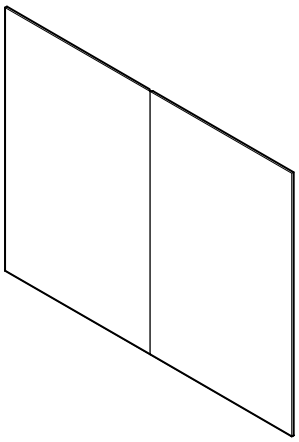

6~7 Back board x 2
(78.5 x 81.4cm)






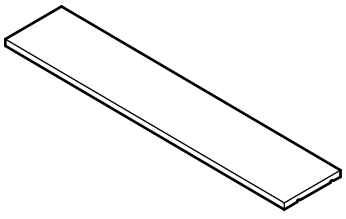


8~15 Adjustable Shelves x 8
(13.8 x 80.5cm)


Components - Fittings


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


A  38mm Large screw x 12	**B**  14mm Small screw x 8	**C**  Shelf support x 32
D  Stability brackets x 8	**F**  Screw covers x 8	
E  Wall Strap x 2	 12mm Screw x 2	
 Plug x 2	 32mm Screw x 2	

Tools required



Phillips screwdriver (medium & large)



Flatblade screwdriver (medium)

7mm Suitable drill bit (for use with wall plug)

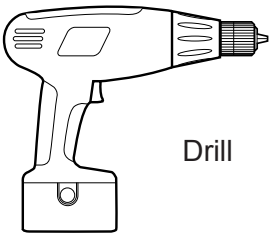
Drill


Small hammer


Ruler/tape measure

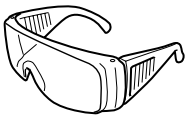
Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Bottom assembly


Attach the two sides [3] & [4] to the base [2] using four large screws Ⓐ. Ensure that the removable arrows on the two sides are pointing up and the grooves for the back are as per the diagram.

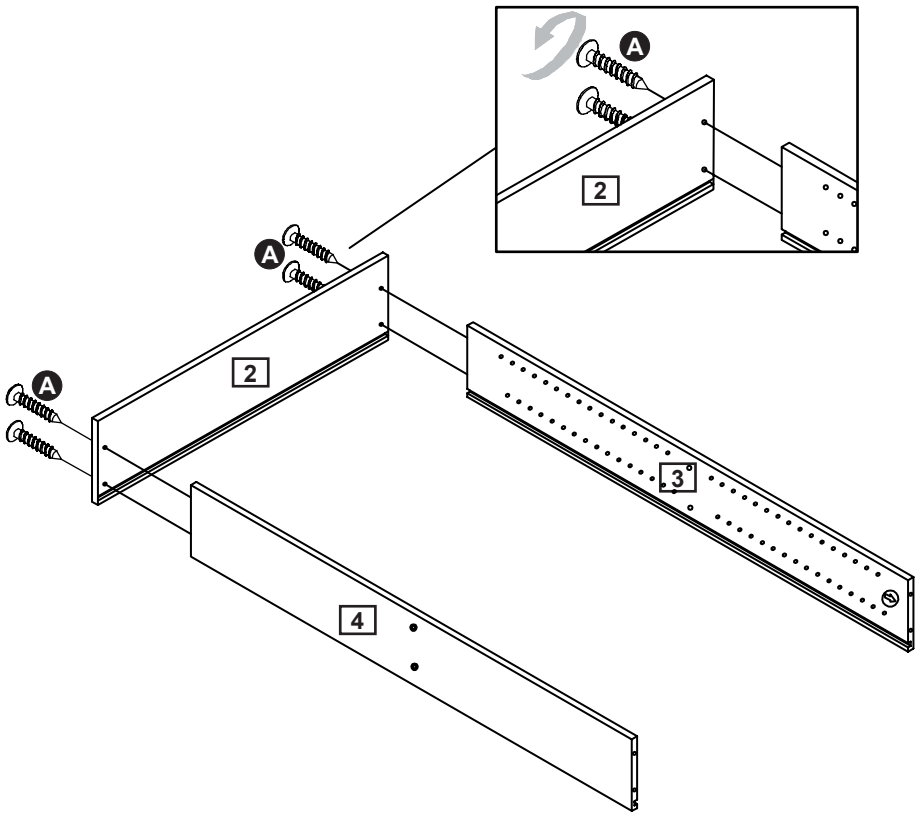

Step 2

Attaching back panel


Slide the back [6] into place ensuring the oak surface is visible from the front of the unit.

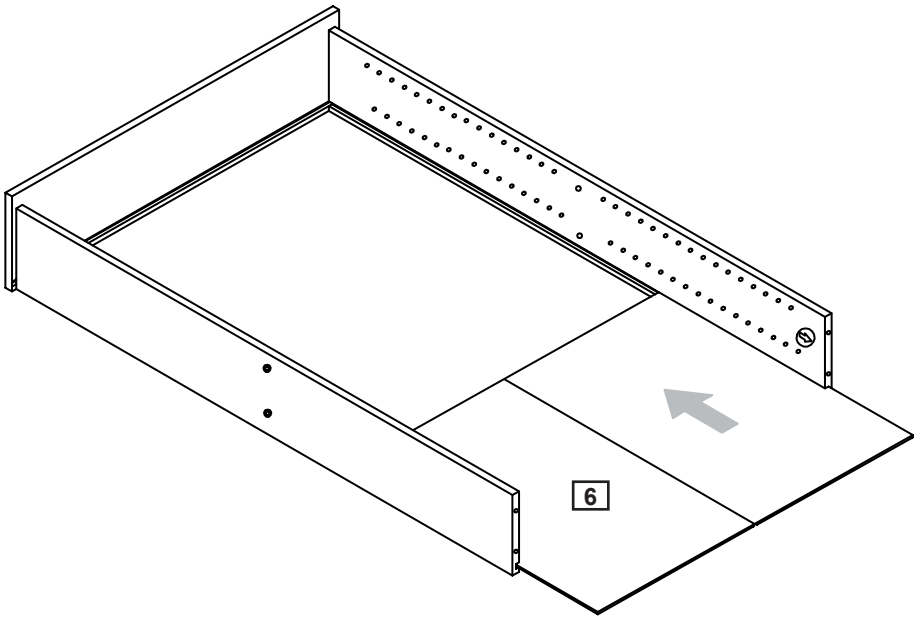

Step 3

Shelf assembly


Attach the center shelf 5 to the unit using four large screws A. Ensure that the back 6 fits neatly into all of the grooves.

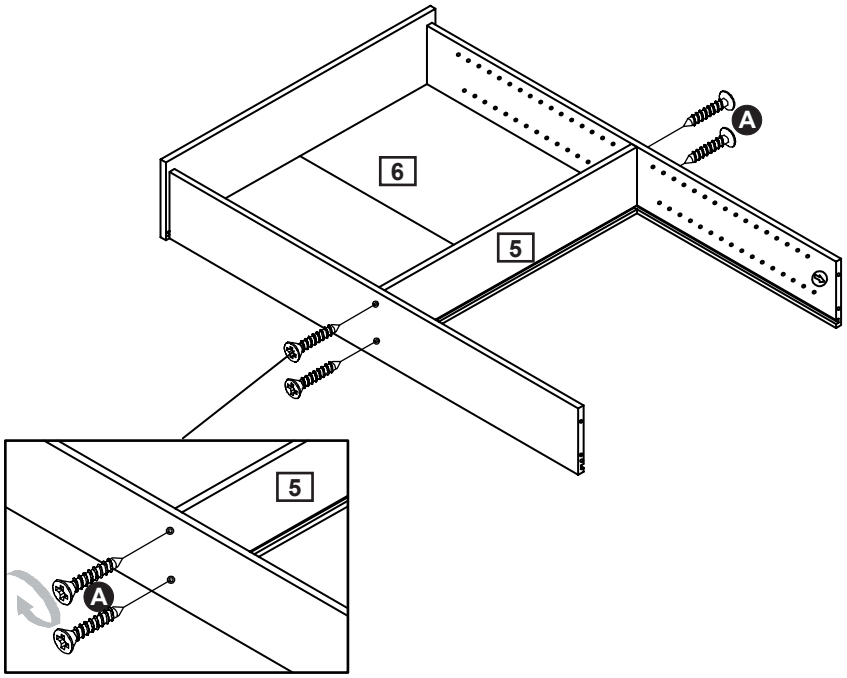

Step 4

Attaching back panel

Slide the other back 7 into position, ensuring it too fits neatly into all of the grooves.

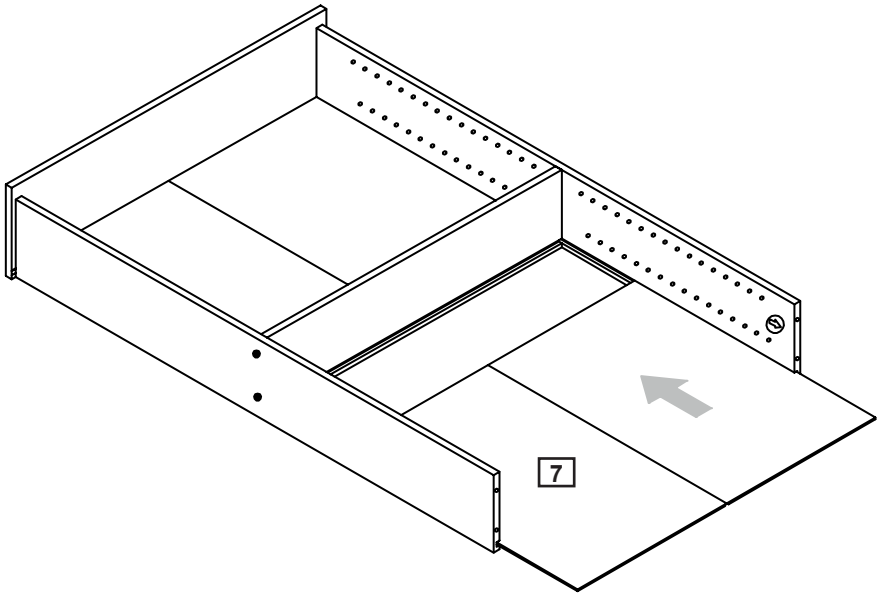


Assembly Instructions

Step 5


Top assembly

Attach the top 1 to the unit using the remaining four large screws A. Attach the screw covers F to the eight visible screw heads.

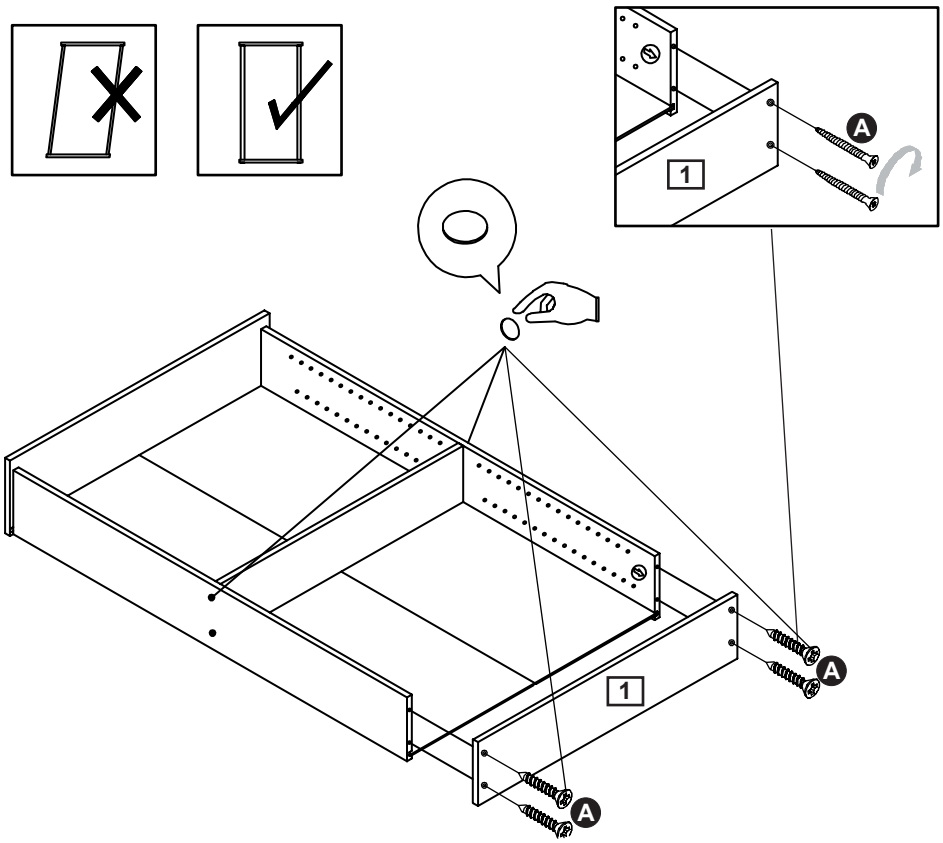

Step 6


Attach the stability brackets D to the unit using the small screws B .

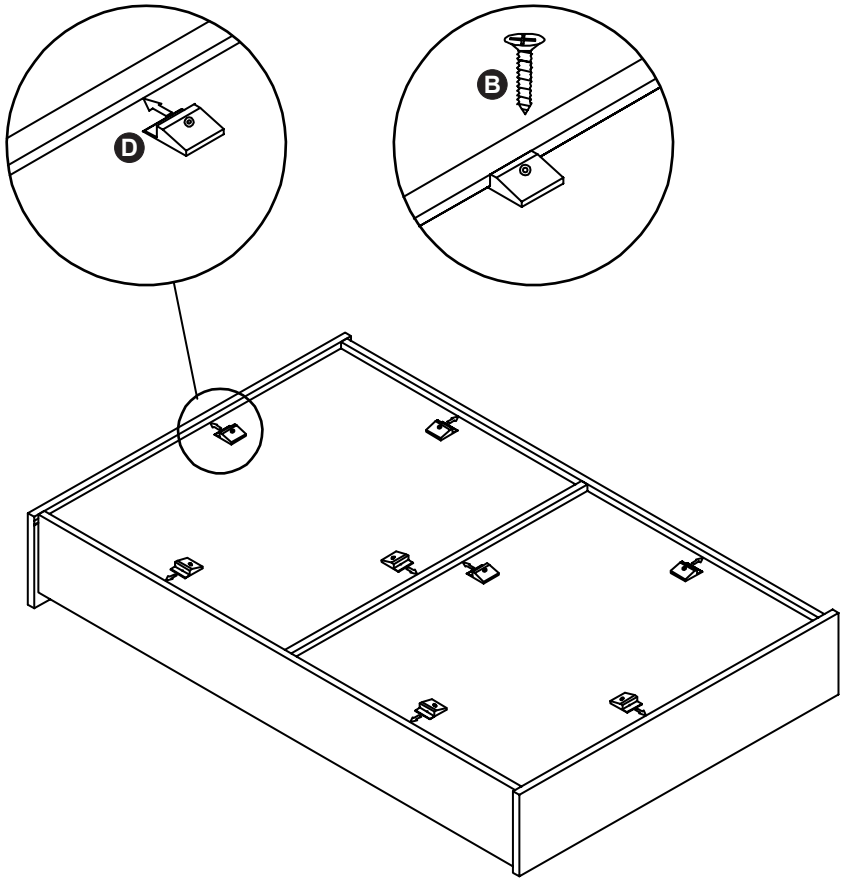

Assembly Instructions

Step 7

Attach the adjustable shelves 8 ~ 15 using the shelf supports C .

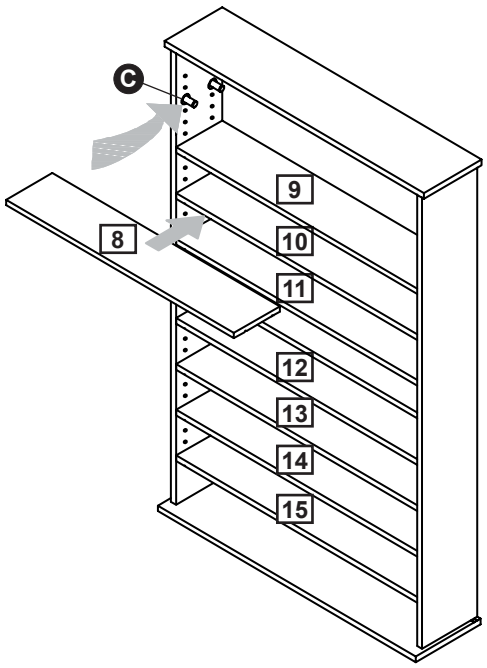

Step 8

Finishing the unit

NOTE: It would be useful to ask someone to help you at this stage.


It is strongly recommended that the unit is attached to the wall using Wall Strap E .

Drill a hole in the wall at an appropriate position and insert a suitable Wall plug .

Warning: Before drilling, check wall for hidden pipes and cables.

To secure the unit, fix wall Strap E to the wall using a suitable Screw .

Assembly is complete.

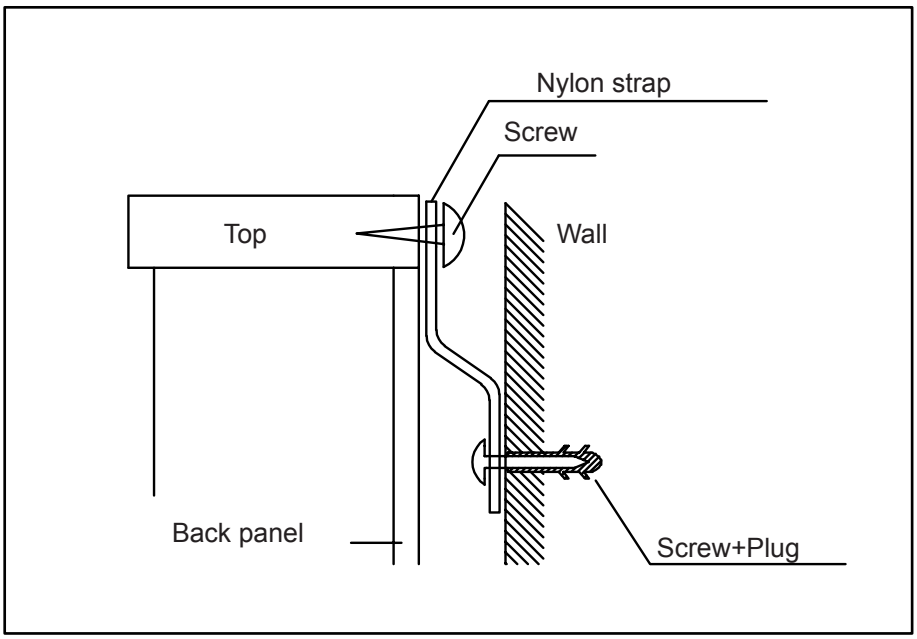

Note: Wall plugs supplied are for solid walls only.

The correct type of fixing must be used for your wall, seek professional advice if in doubt.

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

⚠ *Important:* When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: General rule: ⚠ Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

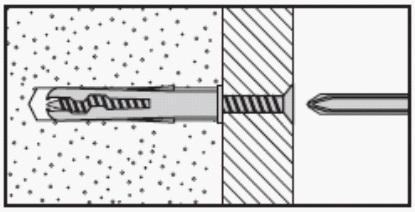


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

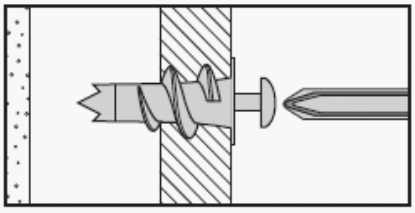


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

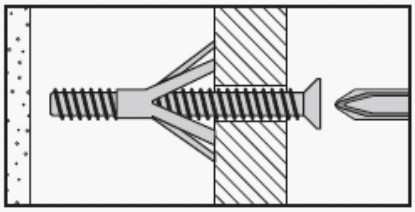


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

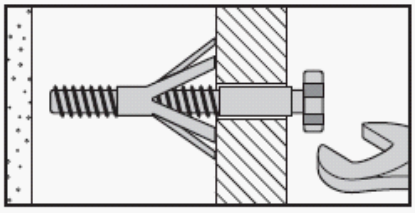


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

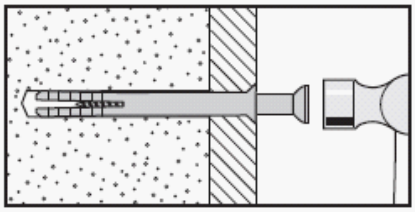

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

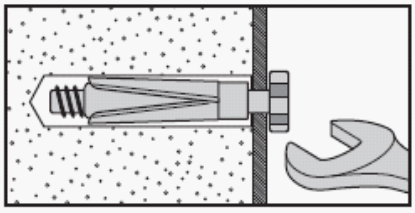

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

⚠ Care & Maintenance


Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Revision 2 - 7/10/09

Harrogate CD DVD Media Unit

Assembly Instructions - Please keep for future reference | 875/1935

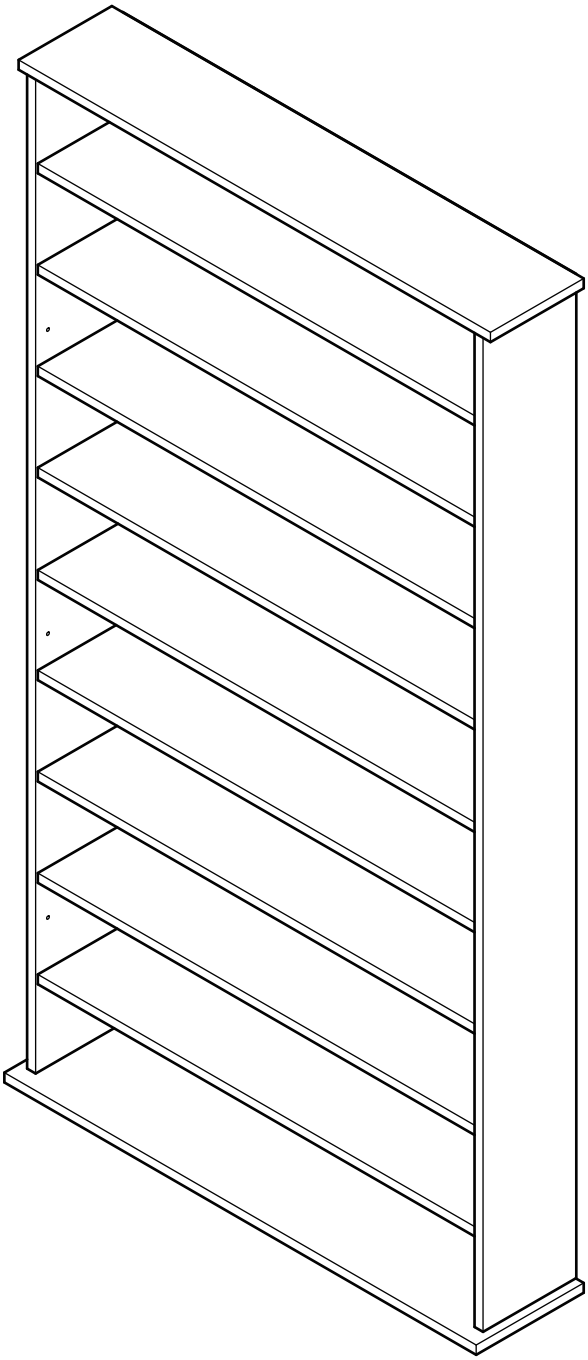

Dimensions

Width - 86cm

Depth - 20cm

Height - 160cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Version 2 Date: 26/03/13

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not use this item if any components are missing or damaged.

• Do not stand on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

Please check you have all the panels listed below

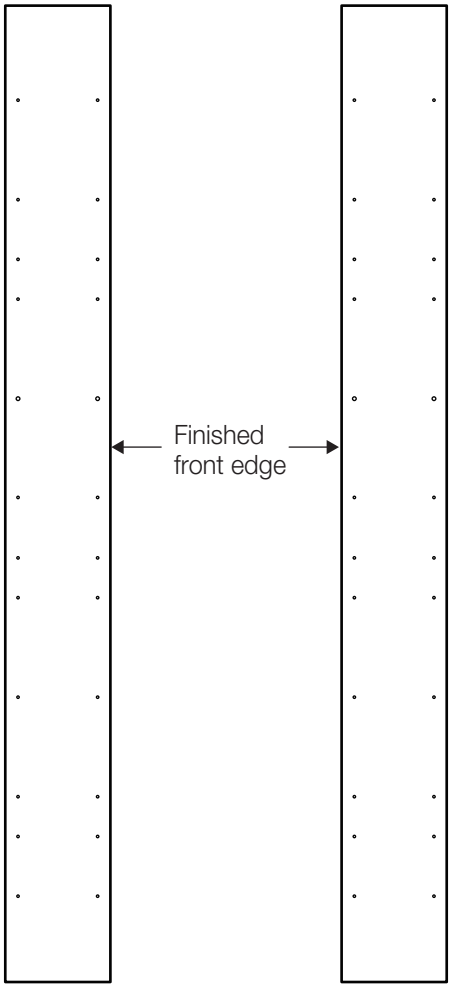

1 Right side panel (16.9 x 157cm)

2 Left side panel (16.9 x 157cm)



3 Top panel (86 x 17cm)




4 Bottom panel (86 x 19.6cm)



5 Middle panel (80 x 16.5cm)



6 Shelf x 8 (80 x 16.5cm)



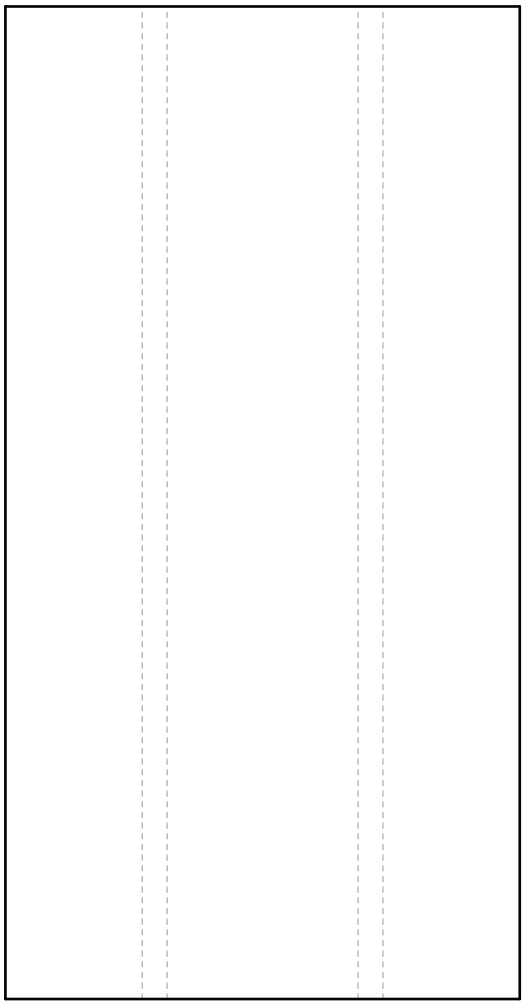


7 Back panel (82.7x 159.6cm)

Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  50mm Screw x 12	**B**  Screw cover x 8	**C**  Nail x 36
D  Shelf support x 32	**E**  Wall strap x 1 (This screw is included in the wall strap bag)  x 1	**F**  14mm Screw x 1
G  Wall plug x 1		

Tools required




Phillips screwdriver (medium & large)

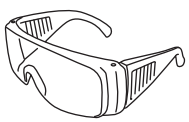

Eye protection (when using a hammer or glue)




Small hammer



Ruler/tape measure

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


Step 1

Attaching side panels

a: Use Screws Ⓐ to fix Middle panel 5 onto the Left side panel 2 .

Use Screw covers Ⓑ to cover the screw heads.


a:

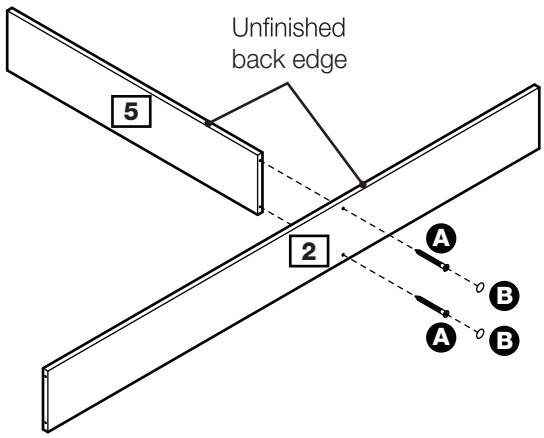

b: Use Screws Ⓐ to fix Right side panel 1 onto the Middle panel 5 .

Use Screw covers Ⓑ to cover the screw heads.


b:

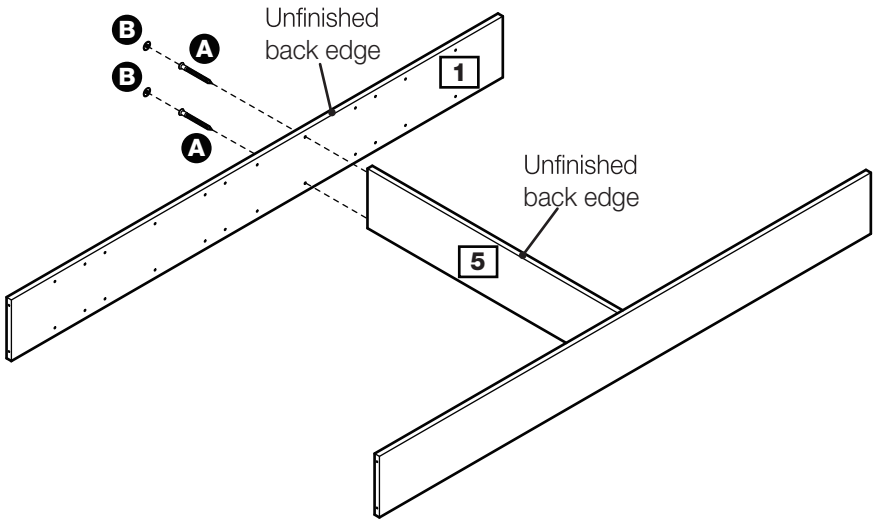

Step 2

Attaching bottom panel

Use Screws Ⓐ to fix Bottom panel 4 onto the unit.

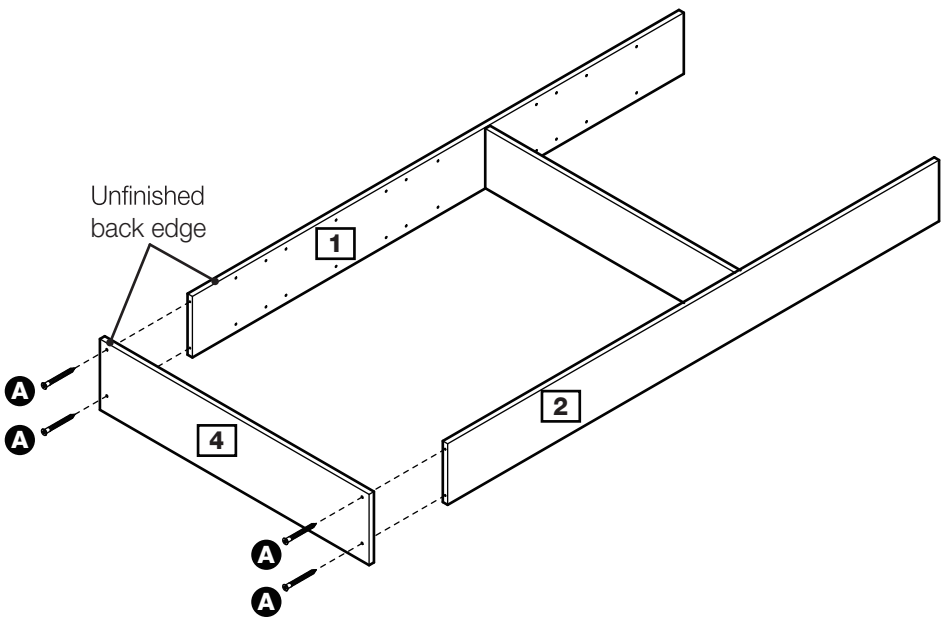


Assembly Instructions

Step 3

Attaching top panel

Use Screws Ⓐ to fix Top panel 3 onto the unit.

Use Screw covers Ⓑ to cover the screw heads.

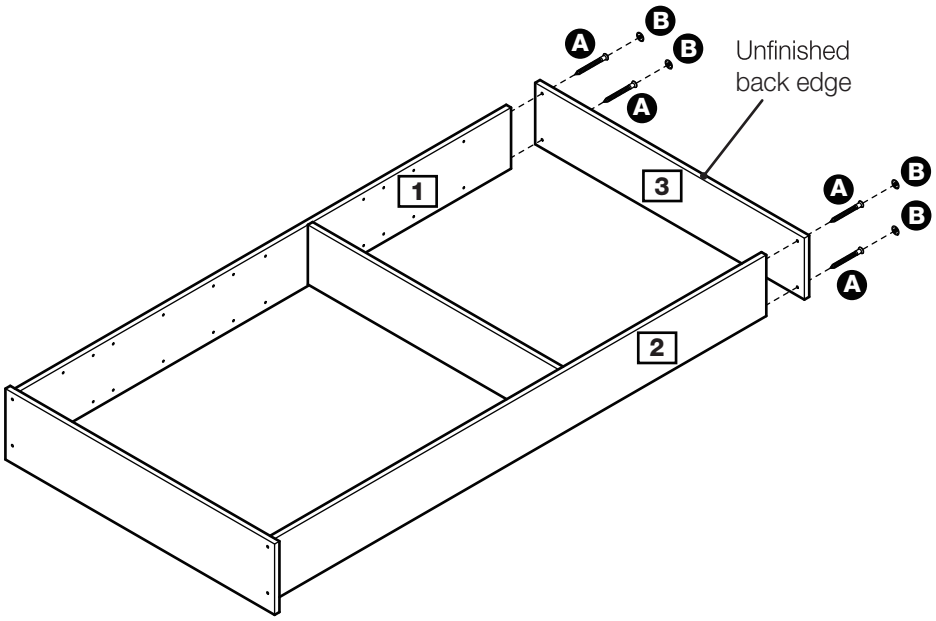



Step 4

Fixing back panel

Attach Back panel 7 onto the unit using Nails Ⓒ.

Important:
The unit **MUST** be 'square' when back is attached.

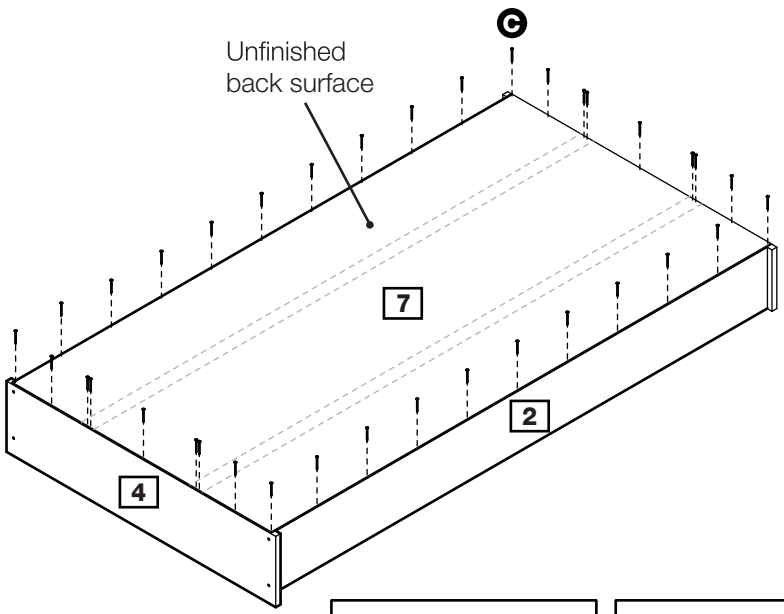

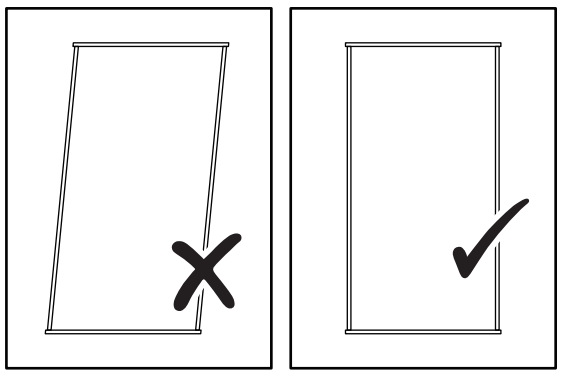

Assembly Instructions

Step 5

Attaching shelves


With help, carefully stand media unit upright.


Warning:
The media unit is heavy.
Lift with care.

a: Insert Shelf supports D into the unit. Ensure they are well fitted before inserting the shelves.

Note: Set the shelf supports to the desired height.


a:

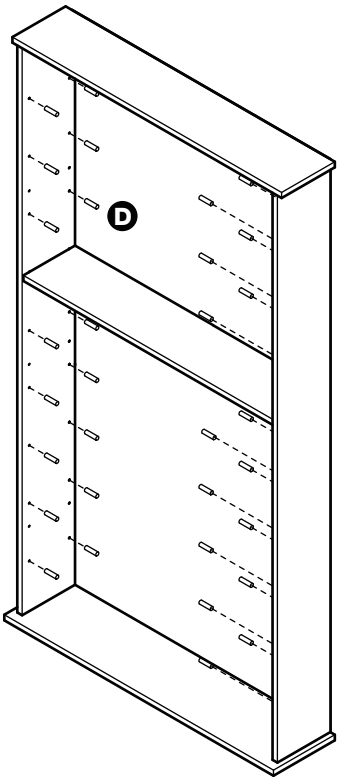


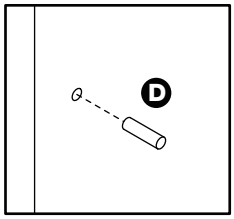

b: Slide the Shelves 6 into the unit.

b:

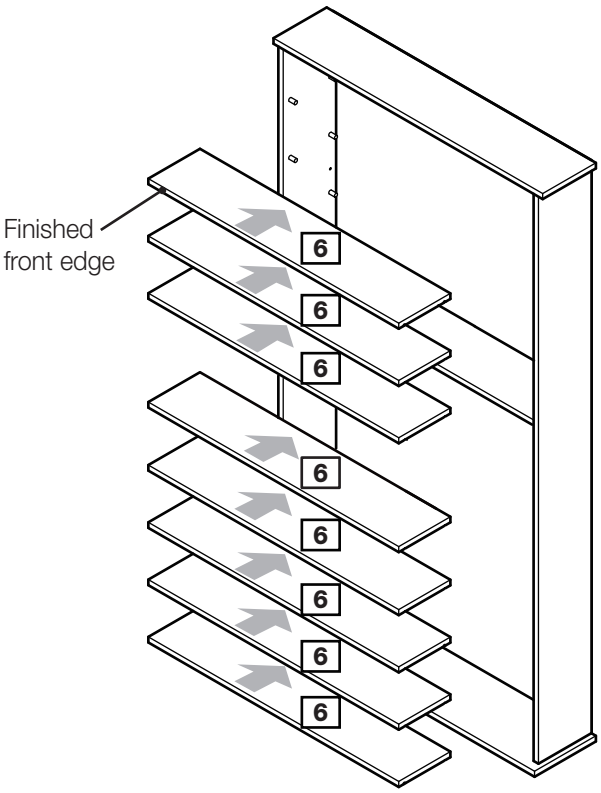

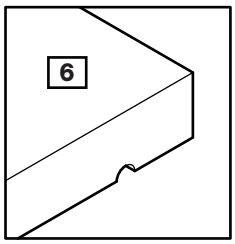

Assembly Instructions

Step 6

Fixing to wall

It is recommended that the media unit is fixed to a wall.

Fix Wall strap Ⓔ to top panel using Screw Ⓕ.

With help, move media unit into position.

Warning:
The media unit is heavy.
Lift with care.


Mark fixing hole on wall and remove media unit.

Drill a hole and insert Wall pulg Ⓖ.


Warning:
Before drilling, check wall for hidden pipes and cables.


Reposition media unit and fix wall strap using Screw Ⓔ.

Assembly is complete.

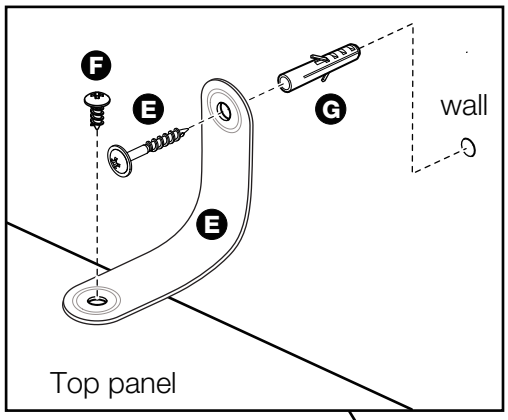

Note: Wall plugs supplied are for solid wall only.
The correct type of fixing must be used for your wall, seek professional advice if in doubt

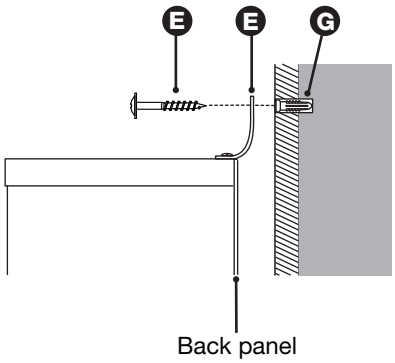

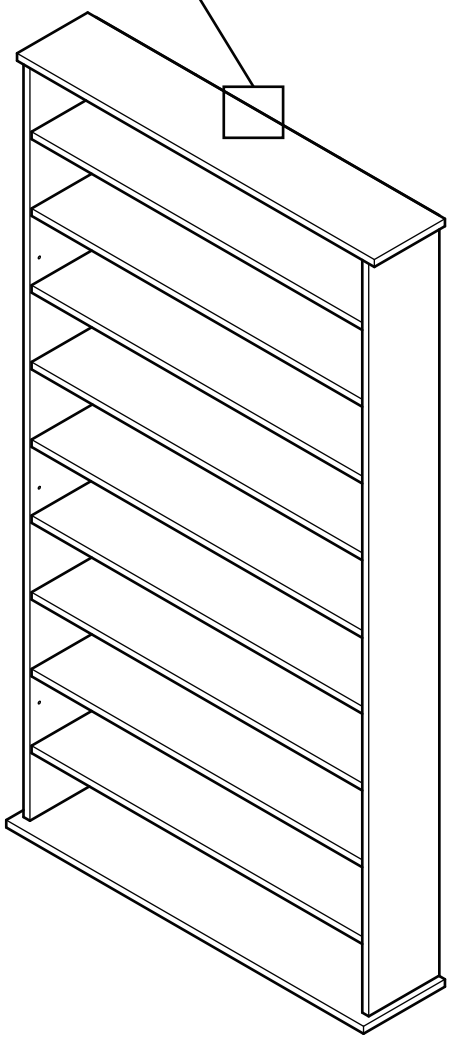

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: **When drilling into walls always check that there are no hidden wires or pipes etc.**

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

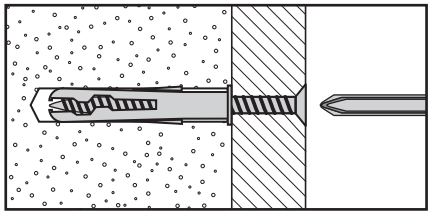


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

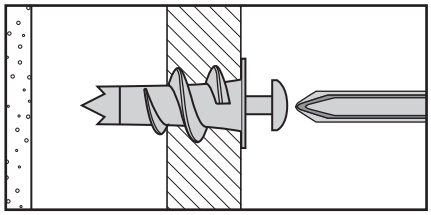


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

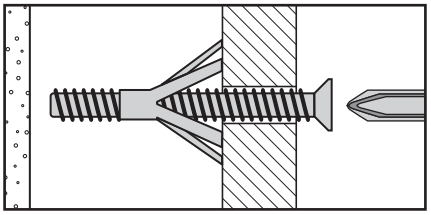


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

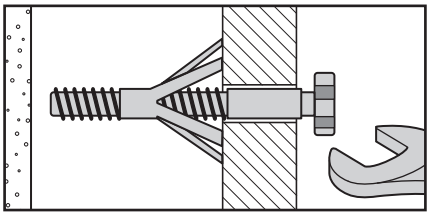


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

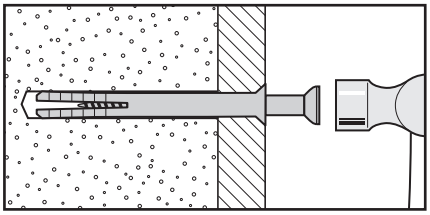

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

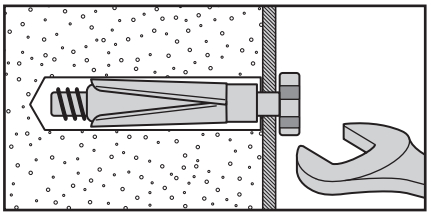

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.