
Chrome Tidy Rail

Assembly Instructions – Please keep for future reference

8757049

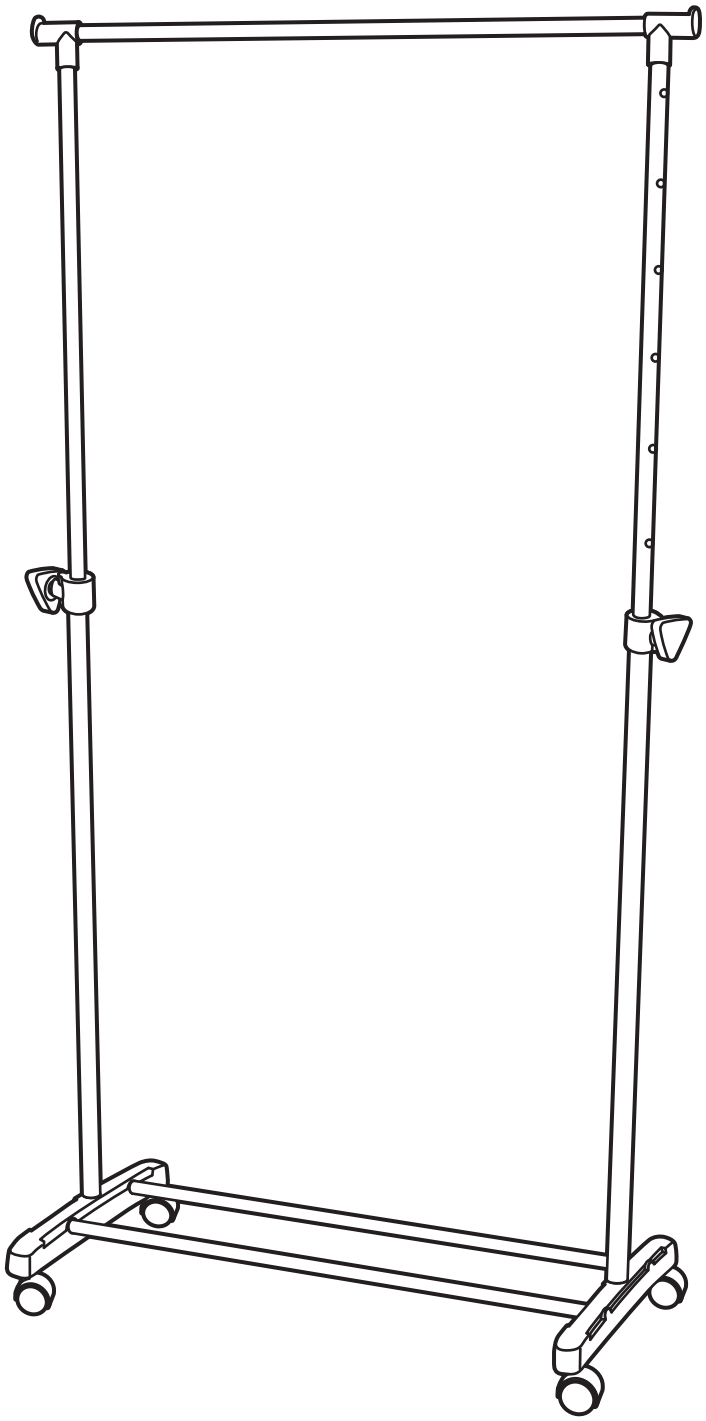

Dimensions

Width - 84.5cm
Depth - 42.5cm
Height - 99.5/167cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800

Safety and care advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Assemble the unit as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

• If using power tools, please follow the safety instructions supplied with the tools.



• We do not recommend the use of power drill/ drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: if required the next page can be cut out and used as a reference throughout the assembly. Keep this page with these instructions for future reference.

Components –Parts


Please check you have all the panels listed below




1 Rail x 1 (84cm)




2 Bottom Tube x 2 (78cm)




3 Lower Side Support x 2 (86cm)



4 Upper Side Support x 2 (78cm)



5 Foot x 2 (42cm)

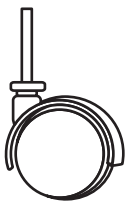


6 Castor x 4

Components – Fittings

If you have damaged or missing components, call the Customer Helpline: 08456 400800

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


A Connector x 2 	B Lock x 2 	

Tools required



Small hammer

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1


Fitting the Feet

NOTE: It would be useful to ask someone to help you at this stage.

a: Insert Bottom Tubes [2] into Feet [5] .

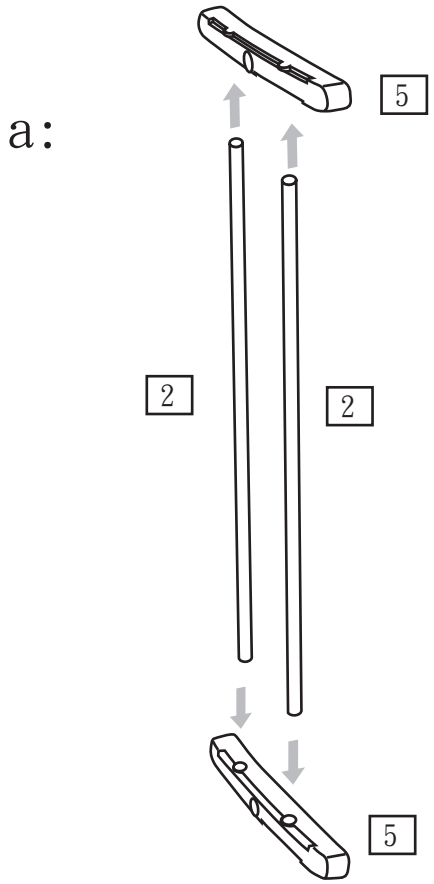

b: Insert Lower Side Supports [3] into Feet [5]

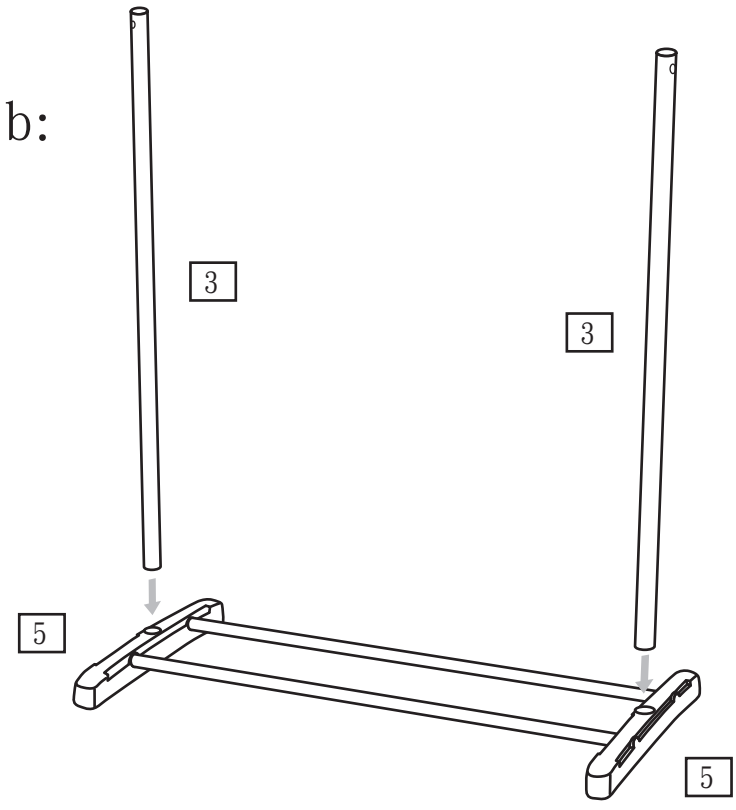

Assembly Instructions

Step 2

Fitting the Rail


NOTE: It would be useful to ask someone to help you at this stage.

a: Insert Rail 1 into Connectors A.


b: Insert Upper Side Supports 4 into Connectors A

c: Insert Castors 6 into Feet 5.


a:

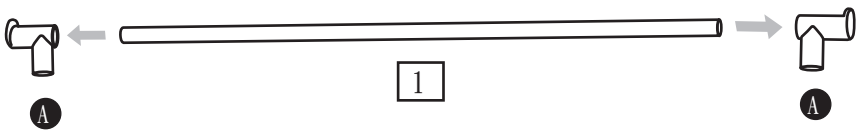

b:

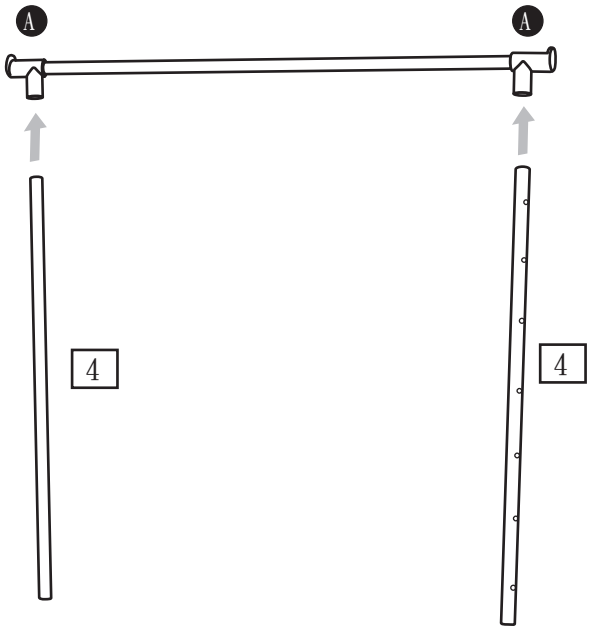

c:

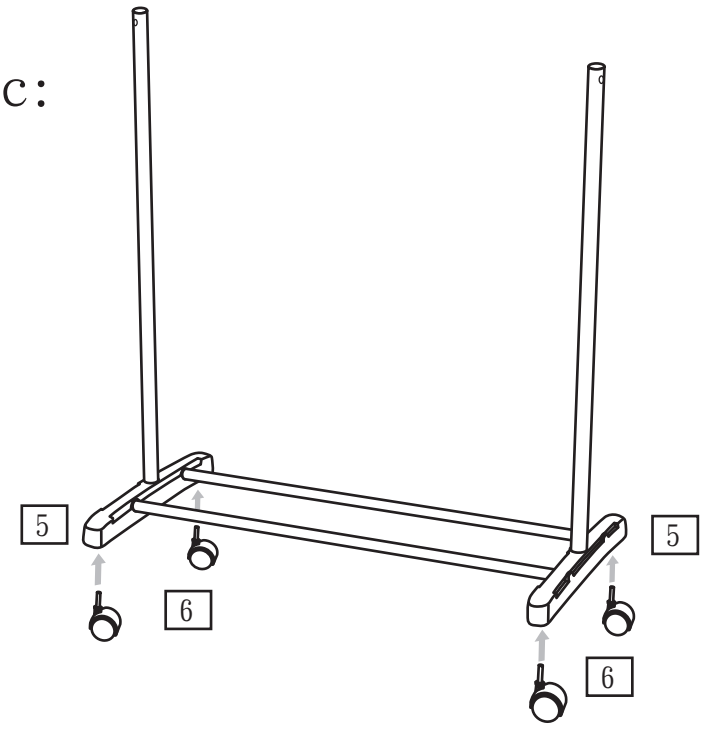

Assembly Instructions

Step 3

Finishing the Unit

NOTE: It would be useful to ask someone to help you at this stage.

a: Insert Locks Ⓑ onto the Top of Lower Side Support [3] . Align the Screw on Lock Ⓑ into the hole on Lower Side Support [3] .

Insert Upper Side Support [4] into the Locks Ⓑ.

b: Set the height of the unit using the Upper Side Support [4]. Ensuring the Locks Ⓑ are loosened, slide the tubes to the desired height and tighten the Locks to fix in position.


Adjustment Range: 99.5-167cm.

Note:Please hold Upper Side Support and pull dowmward. It will be fixed if locked or will be glided downward if unlocked.


c: With help, place the unit in the intended position.

The assembly is now complete.

a:

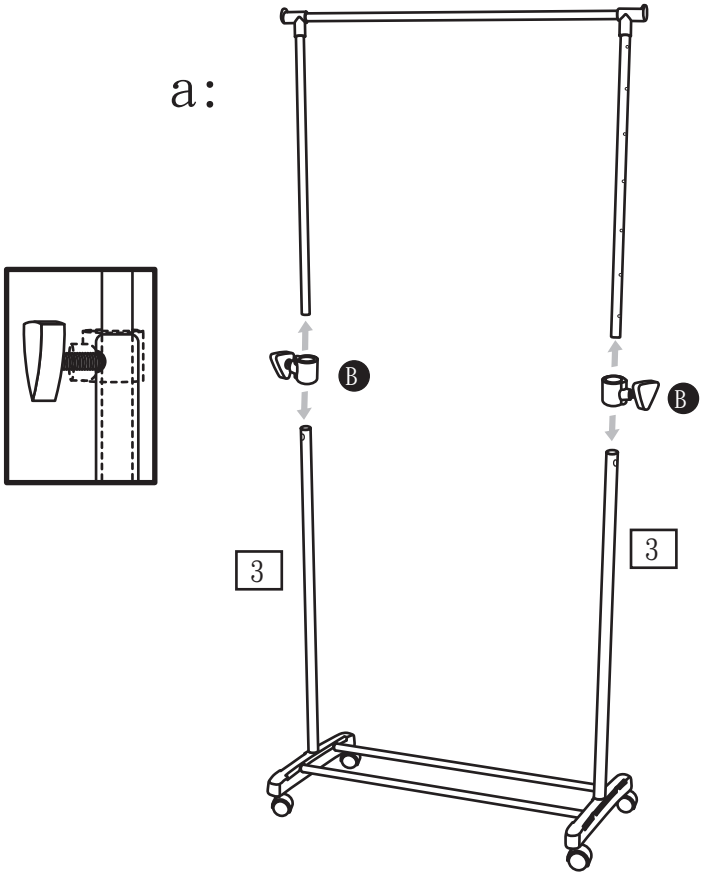


b:

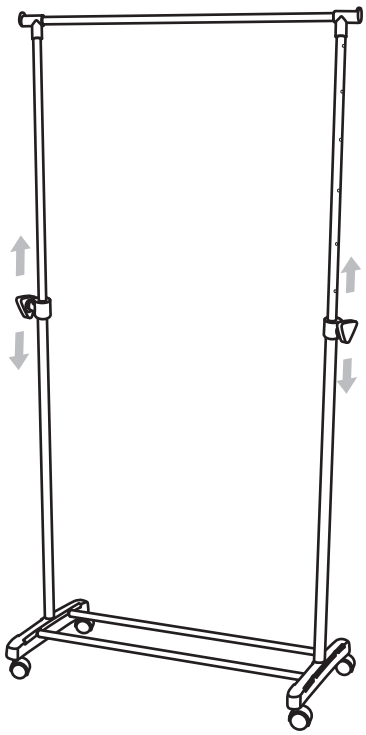

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800

TIDY RAIL (TWO SETS)

Simple Assembly Instructions - Please keep for future reference

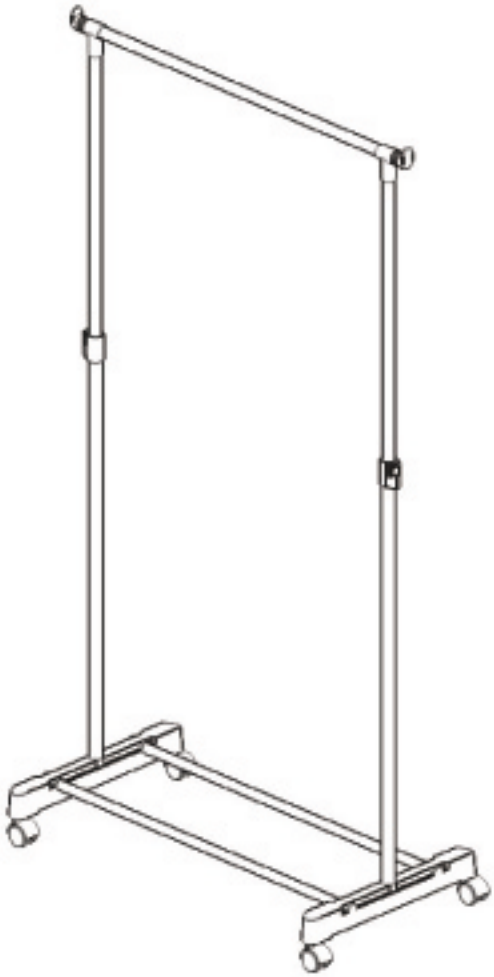

Component parts and fittings

TIDY RALL = 5 parts

Note: The parts are for two sets of product.

Ⓐ Leg section x 4(2 for each set)



Ⓑ Bottom crossbar x 4(2 for each set)

Ⓒ Lower side support x 4(2 for each set)



Ⓓ Upper side support x 4(2 for each one)



Ⓔ Upper crossbar x 2(1 for each set)



USEFUL TIPS

1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
2. Assemble this product on a carpet.
3. Keep fittings out of children's reach.
4. We suggest you retain these instructions for future reference.

FITTINGS = 3 parts

Ⓕ Height Adjuster x 4 (2 for each set)



Ⓖ Corner Bracket x 4 (2 for each set)




Ⓗ Castor x 8 (4 for each set)



Chrome Tidy Rail

Assembly Instructions - Please keep for future reference

875/7049

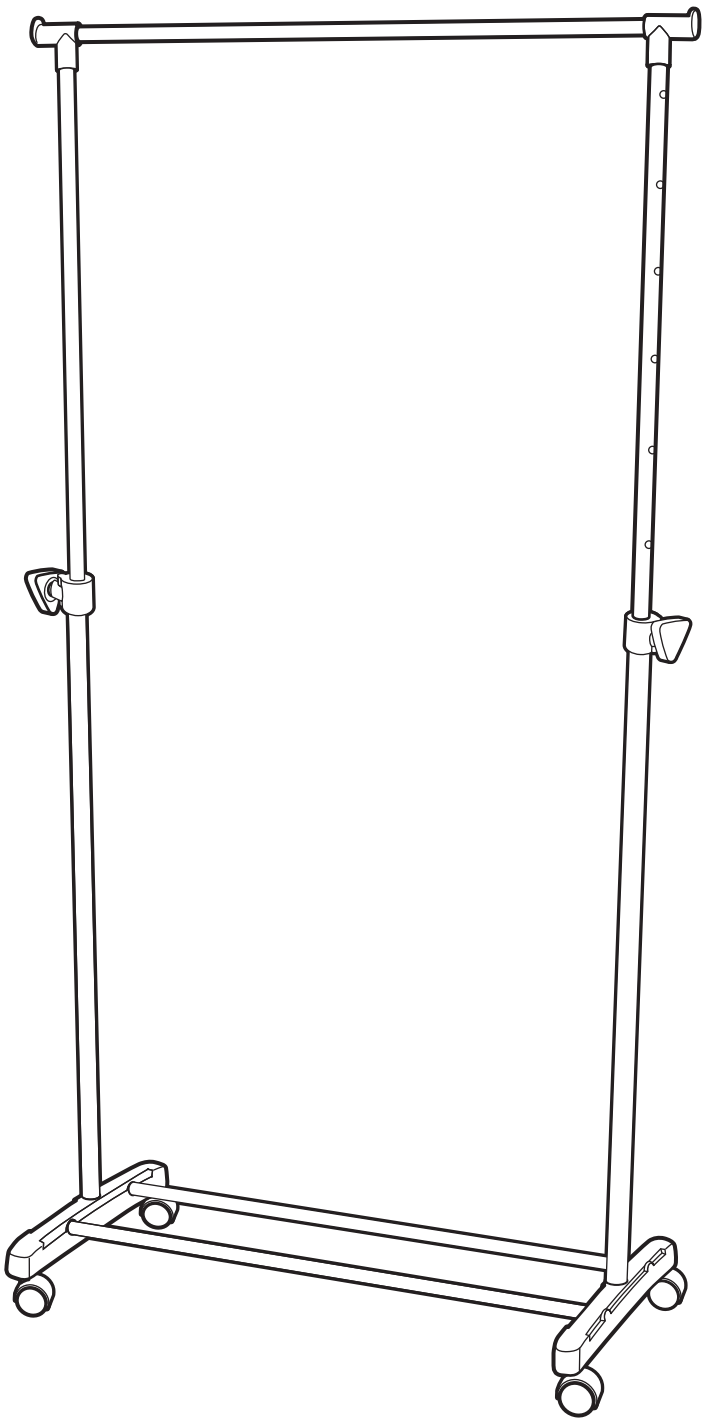

Dimensions

Width - 84.5cm
Depth - 42.5cm
Height - 99.5/167cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 02/06/10

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on page 2.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts are a chokong hazard.

• Make sure you have enough space to layout the parts before starting.

• Assemble on a pad to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

• If using power tools, please follow the safety instructions supplied with the tools.

• Assemble the unit as close to its final position (in the same room) as possible.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the panels listed below




1 Rail x 1 (84cm)



2 Bottom tube x 2 (78cm)



3 Lower side support x 2 (86cm)




4 Upper side support x 2 (78cm)

Components – Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Connector x 2	B  Lock x 2	C  Leg section x 2 (42cm)
D  Castor x 4		


Assembly Instructions

Step 1

Note: It would be useful to ask someone to help you at this stage.


a: Insert Bottom tubes 2 into Leg section C.

a:

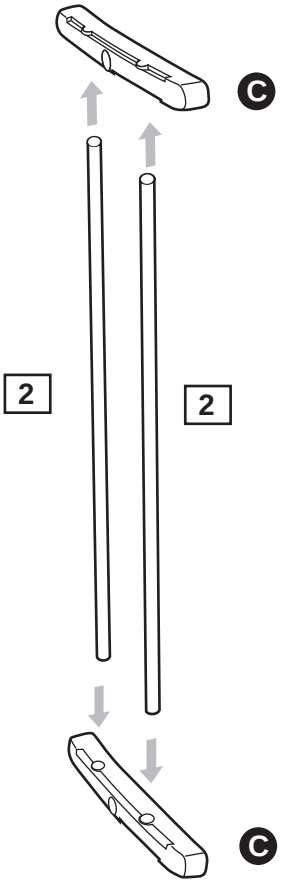

b: Insert Lower side supports 3 into Leg section C.

b:

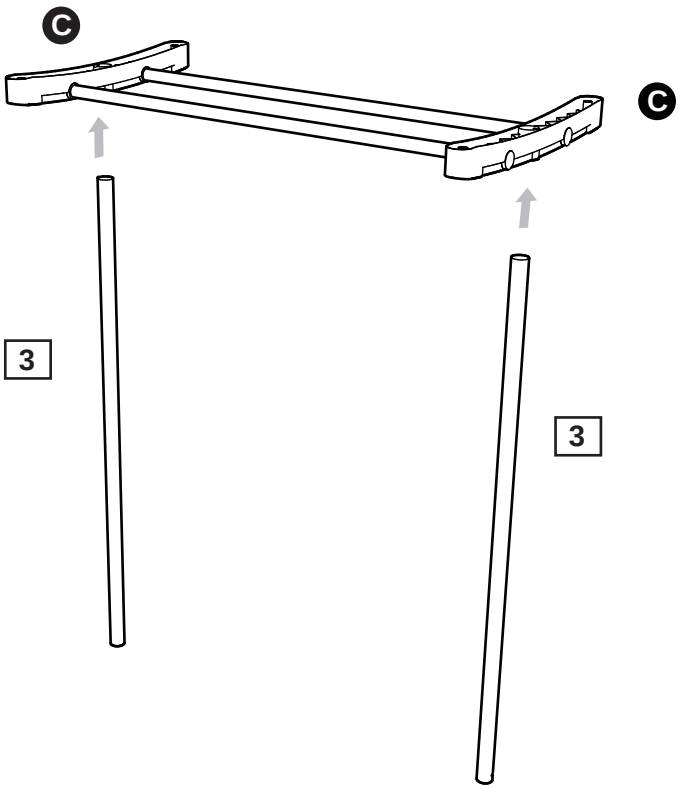


Assembly Instructions

Step 2

Note: It would be useful to ask someone to help you at this stage.


a: Insert Rail 1 into Connectors A.

a:

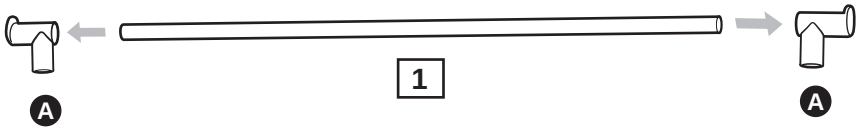


b: Insert Upper side support 4 into Connectors A.

b:

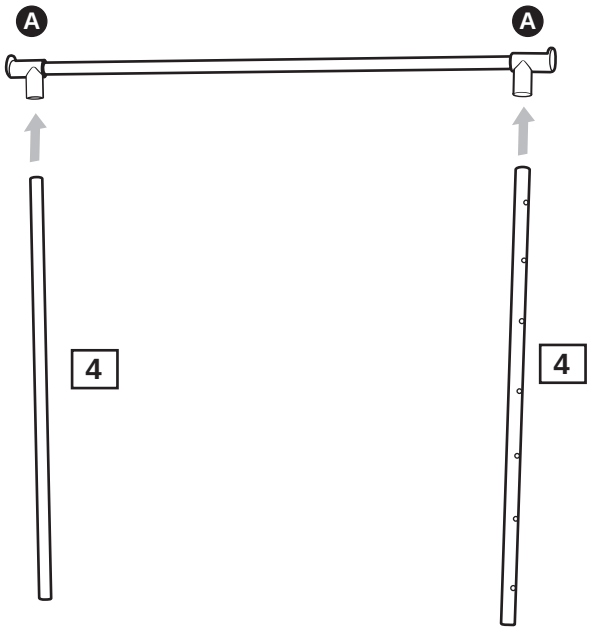

c: Insert Castors D into Leg section C.

c:

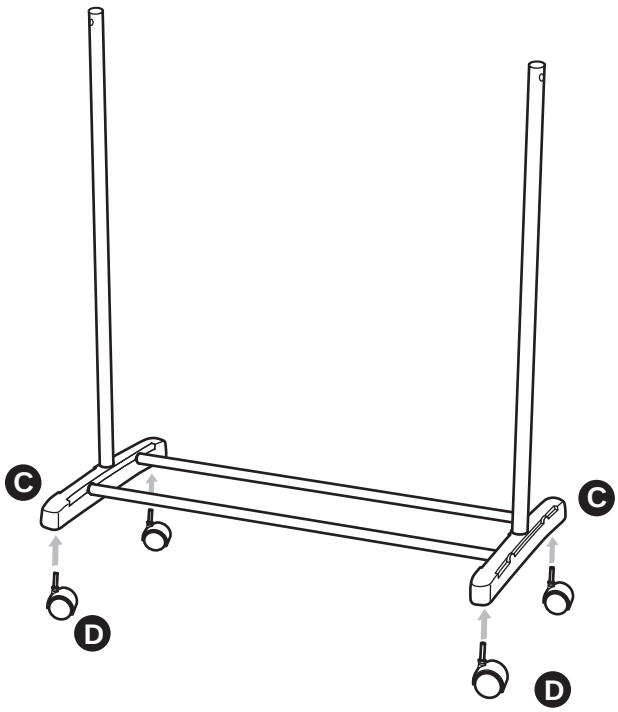


Assembly Instructions

Step 3

Note: It would be useful to ask someone to help you at this stage.

a: Insert Locks Ⓑ into the top of Lower side support 3.
Insert Upper side support 4 into the Locks Ⓑ.
Don't tighten the Locks Ⓑ until the next step of height setting.

a:

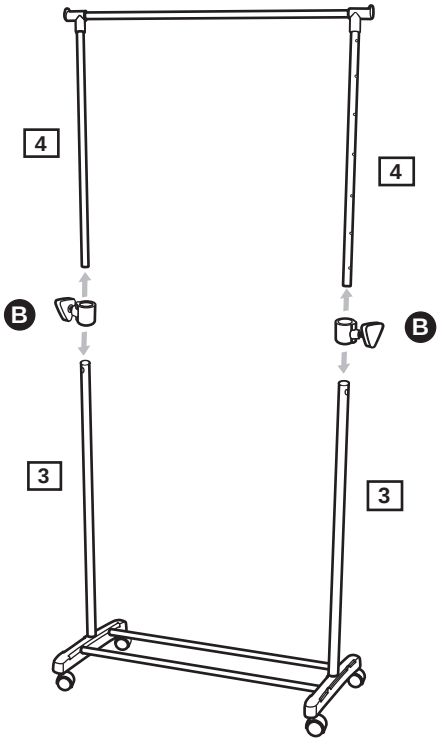

b: Set the height of the unit.
Ensuring the Locks Ⓑ are loosened, slide the Upper side support 4 to the desired height and tighten the Locks Ⓑ to affix in position as shown in fig.1.

Adjustment Range: 99.5-167cm.

Note: Please hold Upper side support 4 and pull downward. It will be fixed if locked or will glide downward if unlocked.

Assembly is complete.

b:

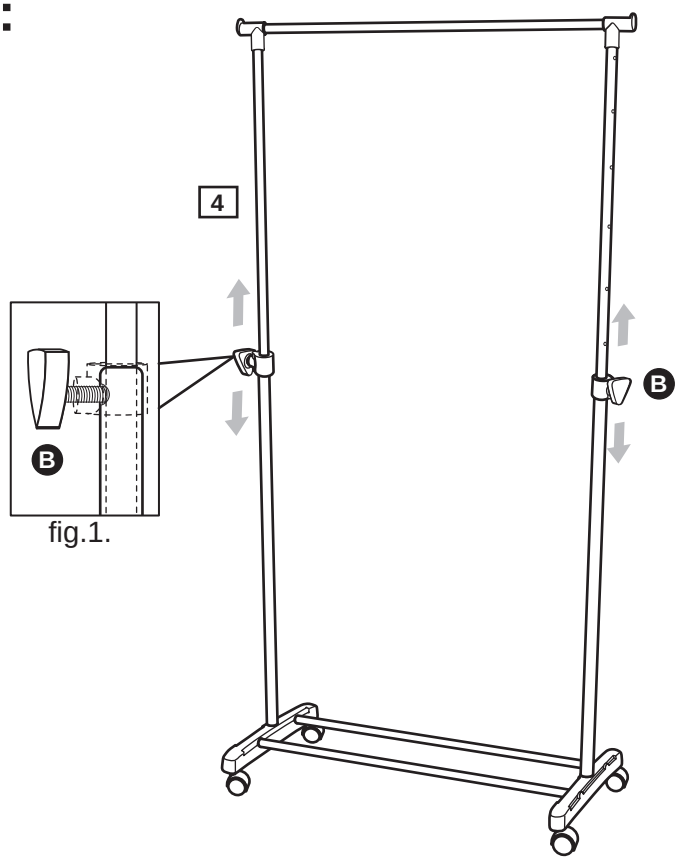


fig.1.

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**