
Black Wide CD DVD Multimedia Unit

Assembly Instructions - Please keep for future reference | 900/2566

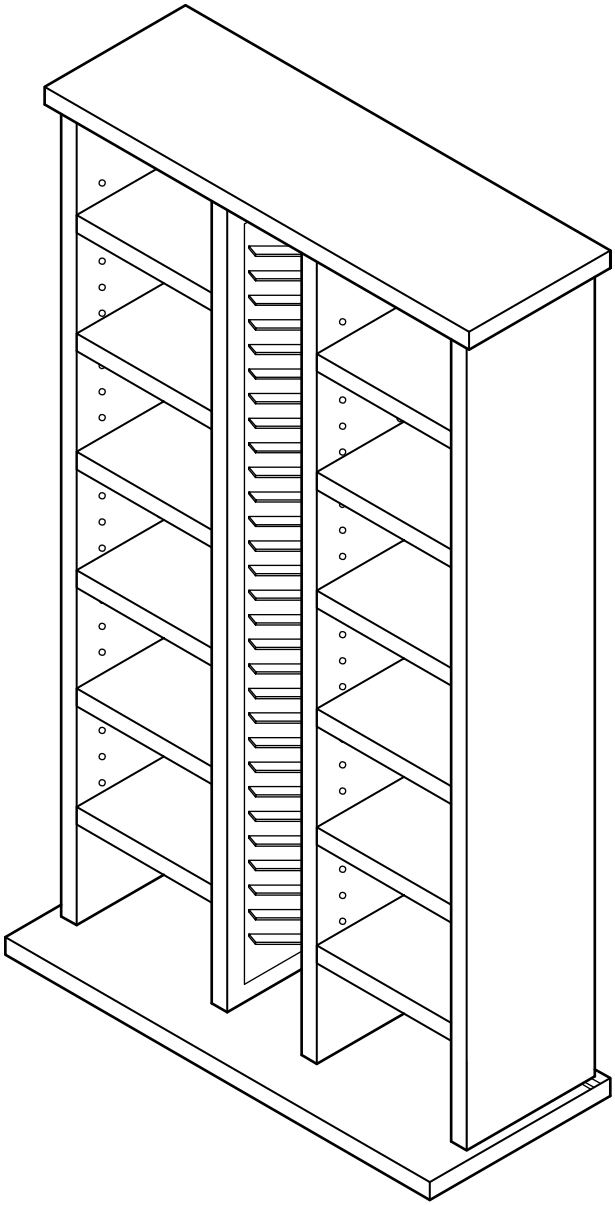

Dimensions

Width - 63.3cm
Depth - 20cm
Height - 113.1cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 9/07/08

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Glue safety - Take care when using glue, please follow the advice below

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the panels listed below

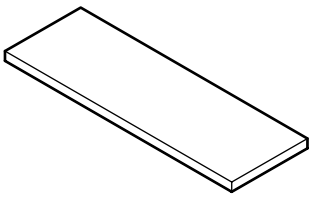


1 Top
(13.2 x 60.6cm)

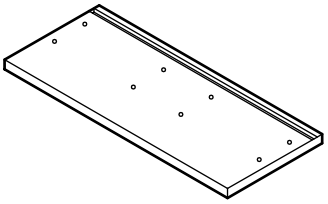


2 Base
(20 x 63.3cm)




7 Adjustable Shelves x 12
(10.6 x 20.85cm)




3 Left side panels
(13.1 x 110.8cm)




4 Right side panels
(13.1 x 110.8cm)




8 Back board x 2
(21.6 x 111.3cm)



5 Centre Section (Left)
(13.1 x 110.8cm)



6 Centre Section (Right)
(13.1 x 110.8cm)









9 Centre Back Board
(13.35 x 111.5cm)


Components - Fittings


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


A  38mm Screw x 8	**B**  Dowel x 8	**C**  Glue x 1
D  Stability brackets x 8	**E**  14mm Screw x 8	**F**  Shelf support x 48
G  Wall Strap x 2	 10mm Screw x 2	
 Plug x 2	 32mm Screw x 2	

Tools required



Phillips screwdriver (medium & large)



Flatblade screwdriver (medium)

7mm Suitable drill bit (for use with wall plug)

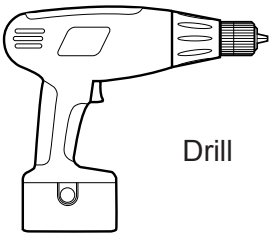
Drill


Small hammer


Ruler/tape measure


Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Top assembly


Using a drop of glue attach eight dowels B to the underside of the top 1 .
Attach the sides 3 & 4 and centre sections 5 & 6 to the top ensuring that they are the right way up (as per the diagram) and the grooves cut into the panels for the back boards are all to the rear of the unit.

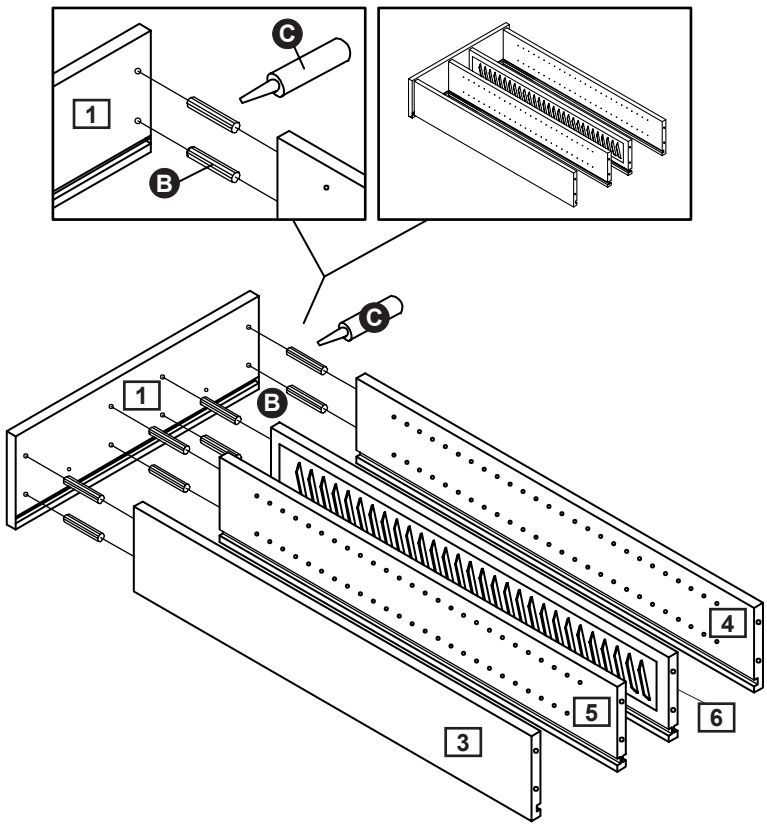

Step 2

Attaching back panel


Slide the back boards 8 & 9 down the grooves in the sides & centre sections taking care to ensure that the cut-out in the top of part 8 for the wall fixing strap is adjoining the top 1 when in place.

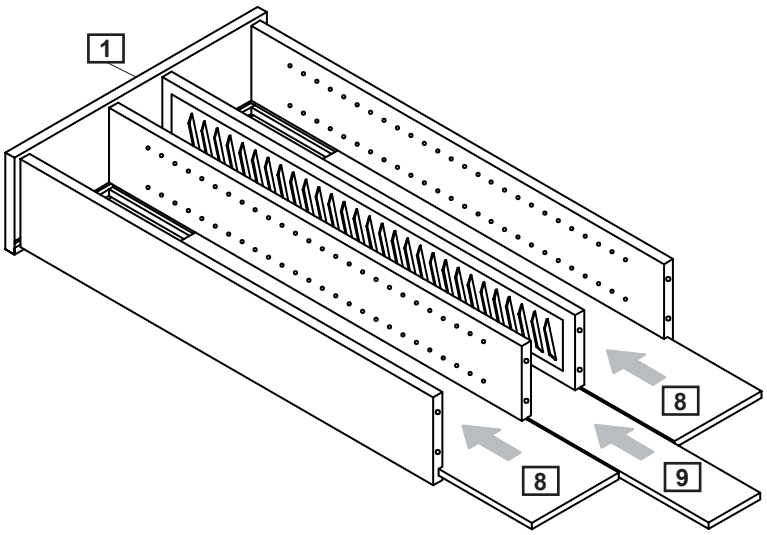

Step 3


Bottom assembly

Attach the base 2 using eight screws A .
Before tightening ensure the back boards locate correctly in the groove cut into the base.

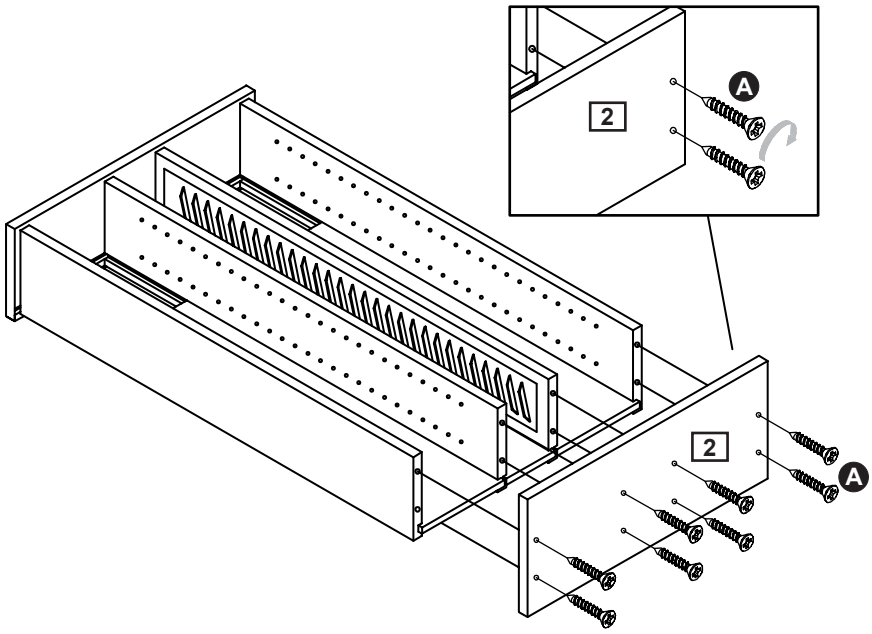

Step 4


Using the screws E attach the Stability brackets D in the approximate positions shown in the diagram to ensure the assembled unit is stable and rigid.

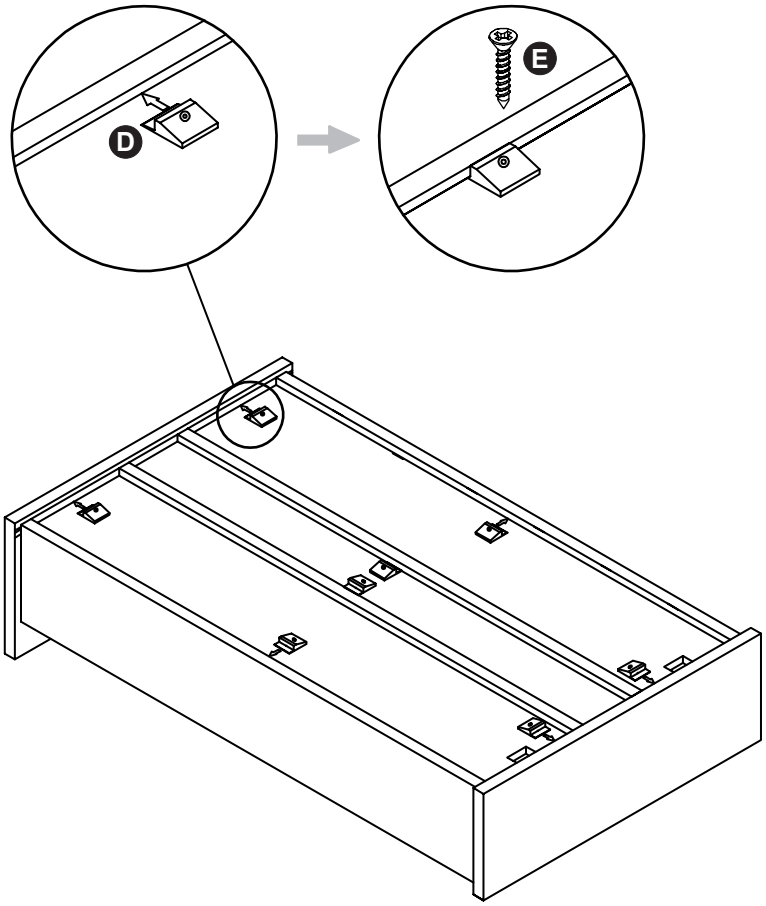

Assembly Instructions

Step 5

Carefully turn the unit the correct way up.
Insert the shelf supports pins (F) at the appropriate level for the media you wish to store and then insert the shelves [7].

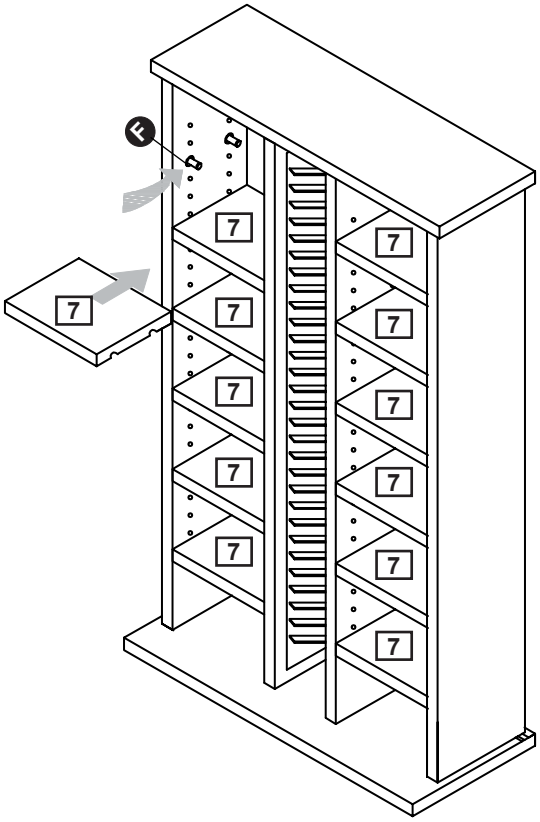


Step 6


Setting CD or DVD Compartments

For CD: CD is partitioned into 7 compartments.

For DVD: DVD is partitioned into 4 compartments.

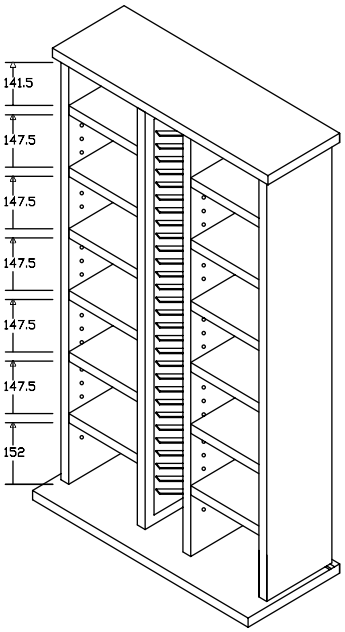

For CD

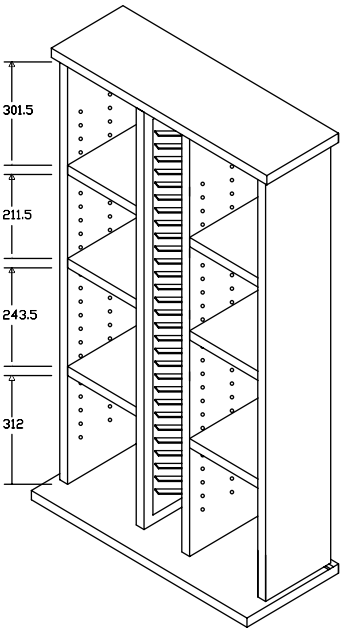

For DVD

Assembly Instructions

Step 7

Finishing the unit

NOTE: It would be useful to ask someone to help you at this stage.


It is strongly recommended that the unit is attached to the wall using Wall Strap G.

Drill a hole in the wall at an appropriate position and insert a suitable Wall plug .

Warning: Before drilling, check wall for hidden pipes and cables.

To secure the unit, fix wall Strap G to the wall using a suitable Screw .

Assembly is complete.

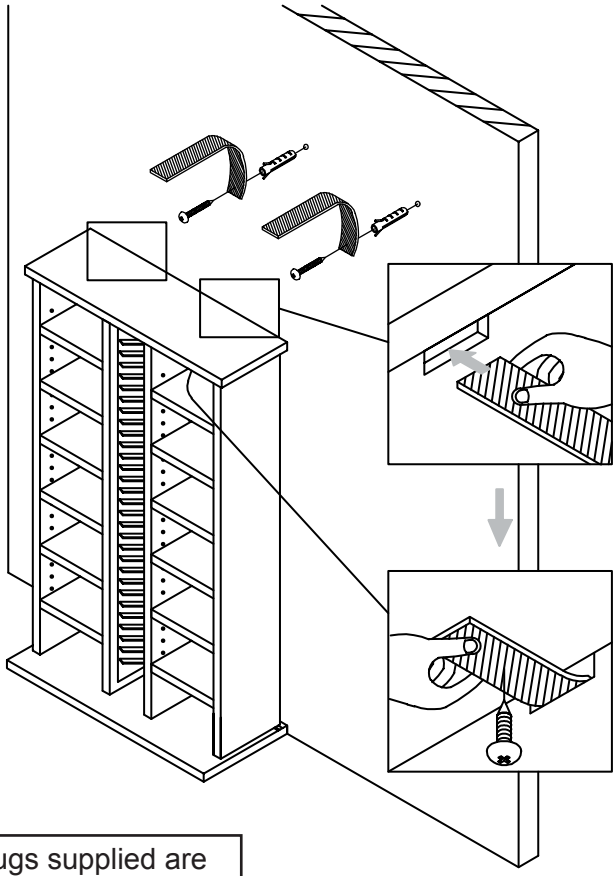

Note: Wall plugs supplied are for solid walls only.

The correct type of fixing must be used for your wall, seek professional advice if in doubt.

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: **When drilling into walls always check that there are no hidden wires or pipes etc.**

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: **General rule:** ⚠ Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

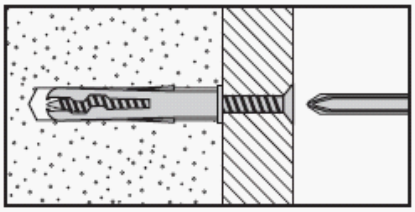


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

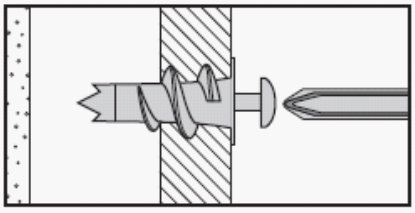


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

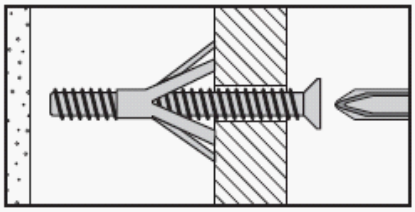


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

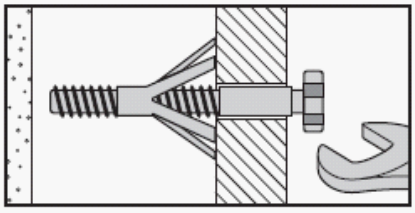


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

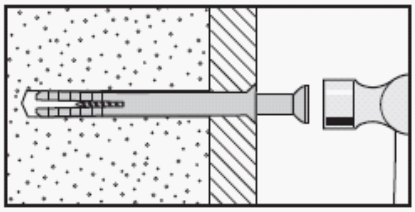

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

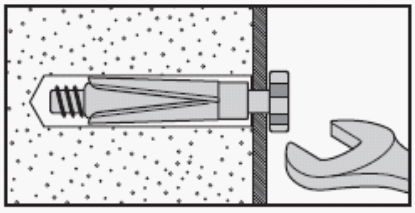

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance


Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Revision 2 - 7/10/09

Wide DVD and CD Multimedia Storage Unit

Assembly Instructions - Please keep for future reference | 900/2566

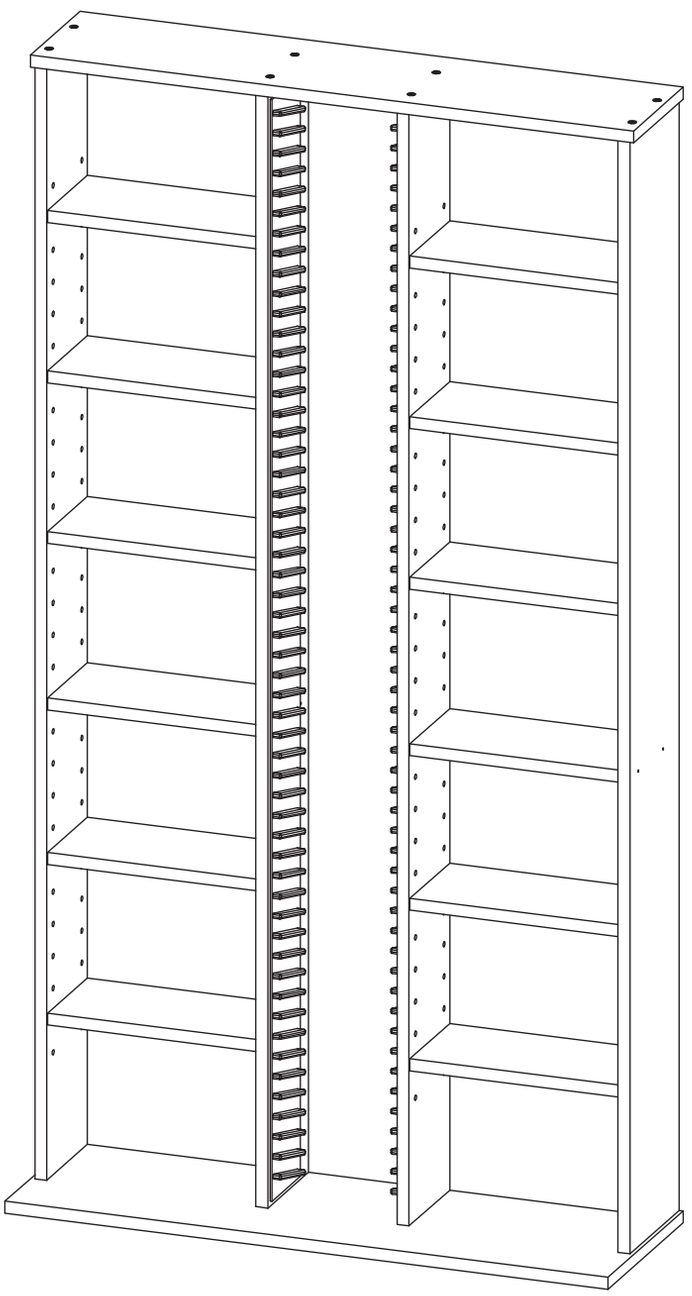

Dimensions

Width - 63.3cm
Depth - 20cm
Height - 113.2cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 3/07/13

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its fnal position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers ***for inserting screws ,*** as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the panels listed below

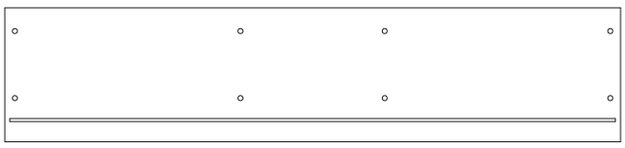


1 Top(13.2x60.6cm)

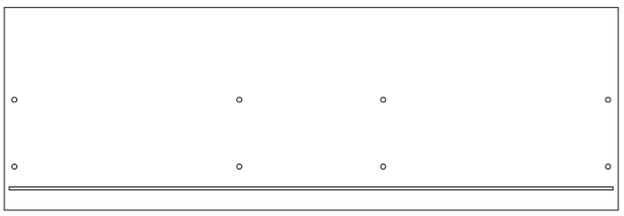


2 Base (20x63.3cm)

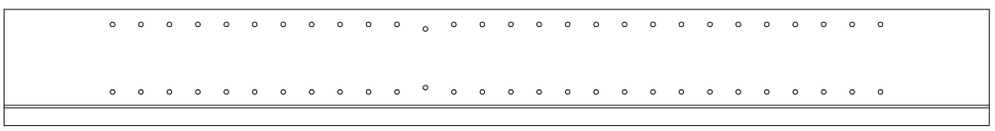


3 Left side panel (13.1x110.8cm)

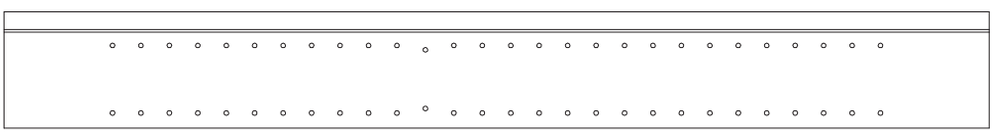


4 Right side panel (13.1x110.8cm)

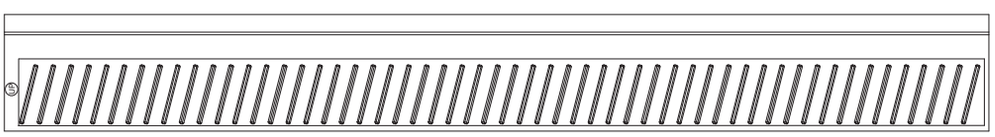


5 Left center panel (13.1x110.8cm)

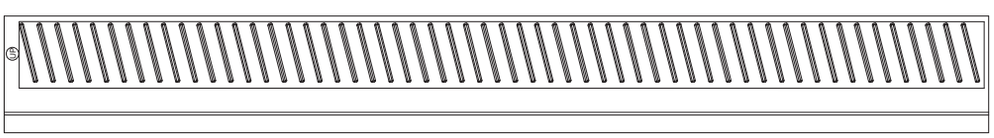


6 Right center panel (13.1x110.8cm)

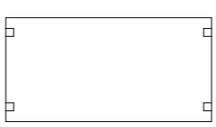


7 Adjustable shelf x 10
(10.6x20.8cm)

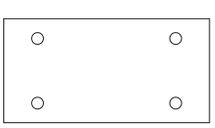

8 Fixed shelf x 2
(10.6x20.8cm)

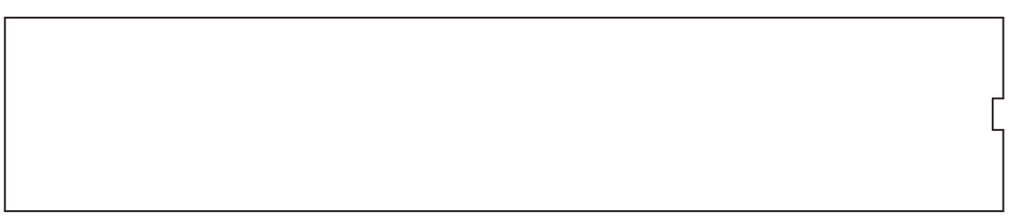

9 Back board x 2 (21.4x111.4cm)








10 Centre Back board (13.6x111.4cm)


Components - Fittings


Please check you have all the fttings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fttings may be supplied than are required.


A  38mm Screw x 16	**B**  15mm Screw x 8	**C**  Stability bracket x 8
D  Shelf support x 40	**E**  Cam bolt x 8	**F**  Cam lock x 8
G  Cap x 8	**H**  Wall plug x 2	**I**  Wall strap x 2
J  25mm Screw x 2	**K**  12mm Screw x 2	

Tools required



Phillips screwdriver (medium & large)



Flatblade screwdriver (medium)

7mm Suitable drill bit (for use with wall plug)

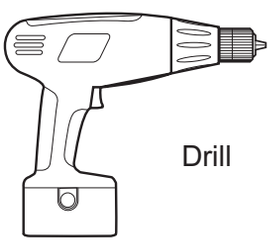

Drill


Small hammer


Ruler/tape measure

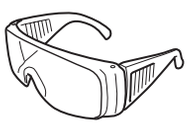
Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Fitting Cam bolt

Screw the Cam bolts (E) into the panel 3 4 & 5 6 .

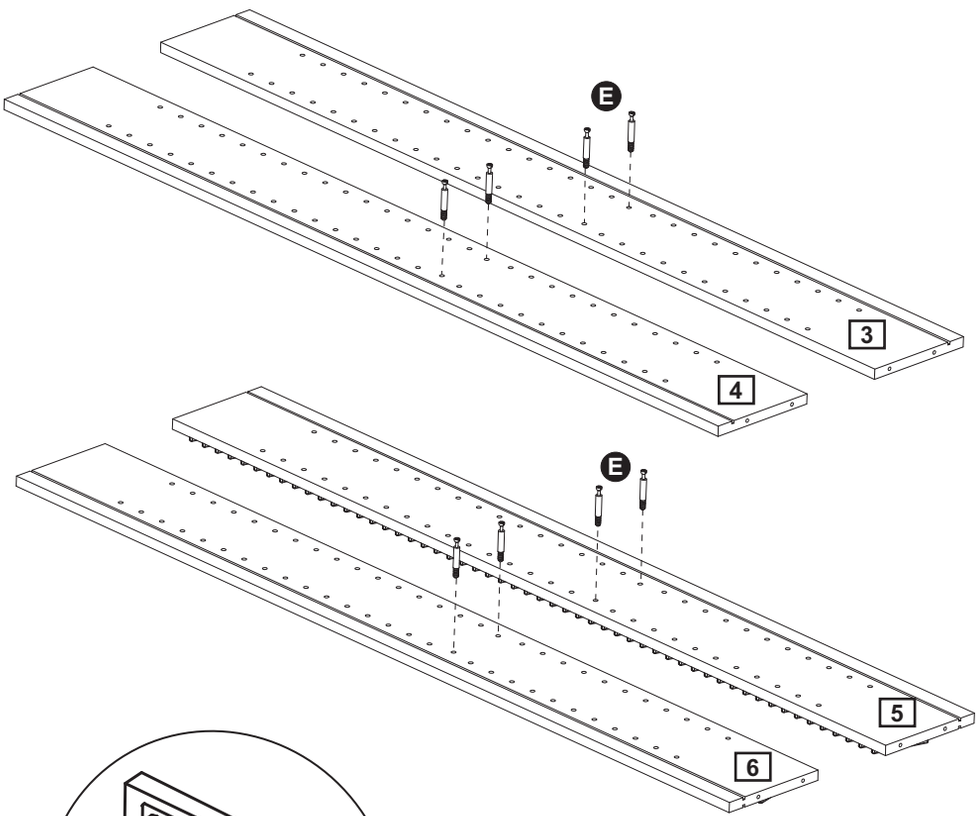


Step 2

Fitting Cam lock

NOTE: Ensure center panel 5 & 6 are in the right way up
(as per diagram).

Insert the Cam lock (F) into Fixed shelf 8.

Turn the Cam lock (F) clockwise until tightened. Be careful not to over tighten as this can break the Lock.

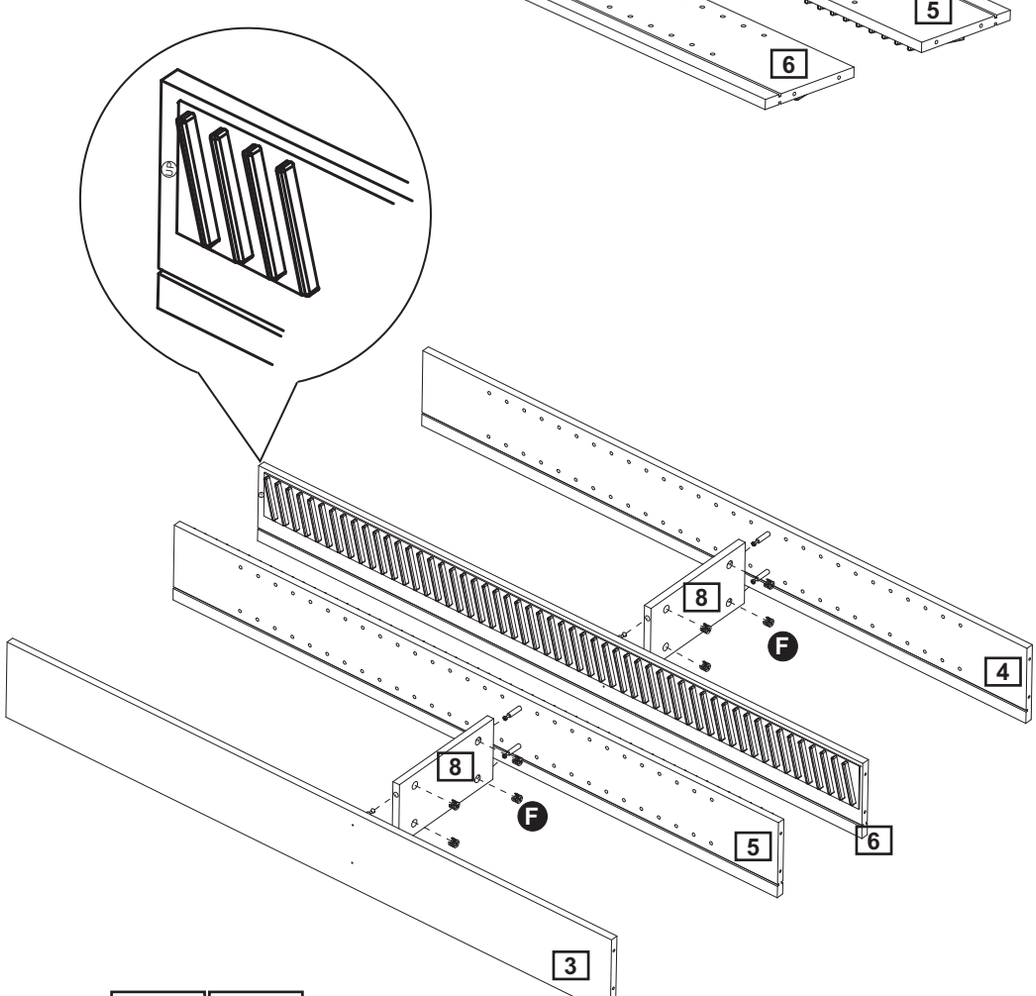



Assembly Instructions


Step 3

Fitting Top

Attach the Top [1] using Screws Ⓐ .


Before tightening ensure the grooves of the panels for the back boards are all in the rear of the unit.

Use Cap Ⓖ to cover the screw.

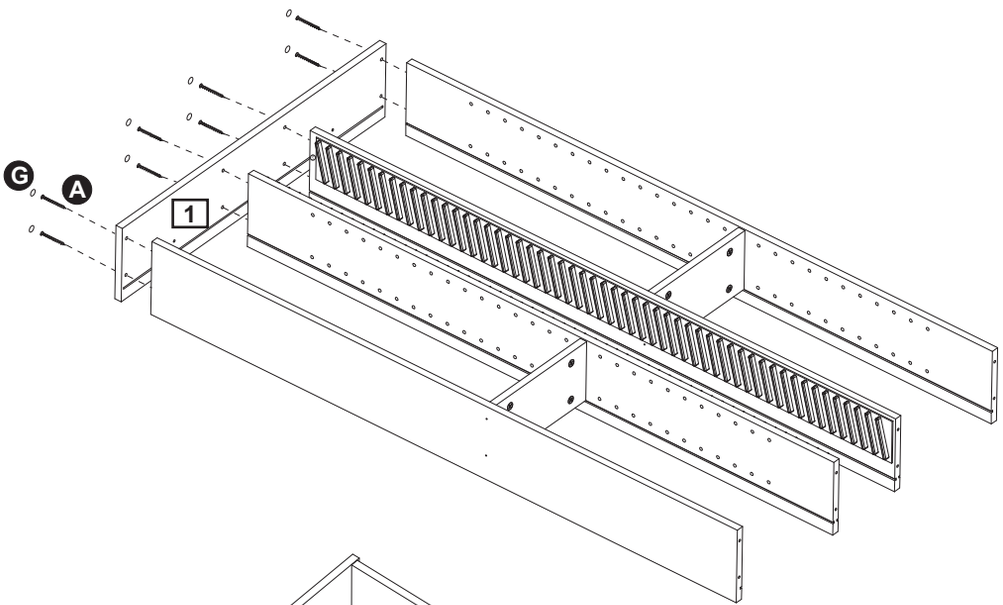

Step 4

Use 12mm Screw Ⓚ to fix Wall strap Ⓘ onto the unit.

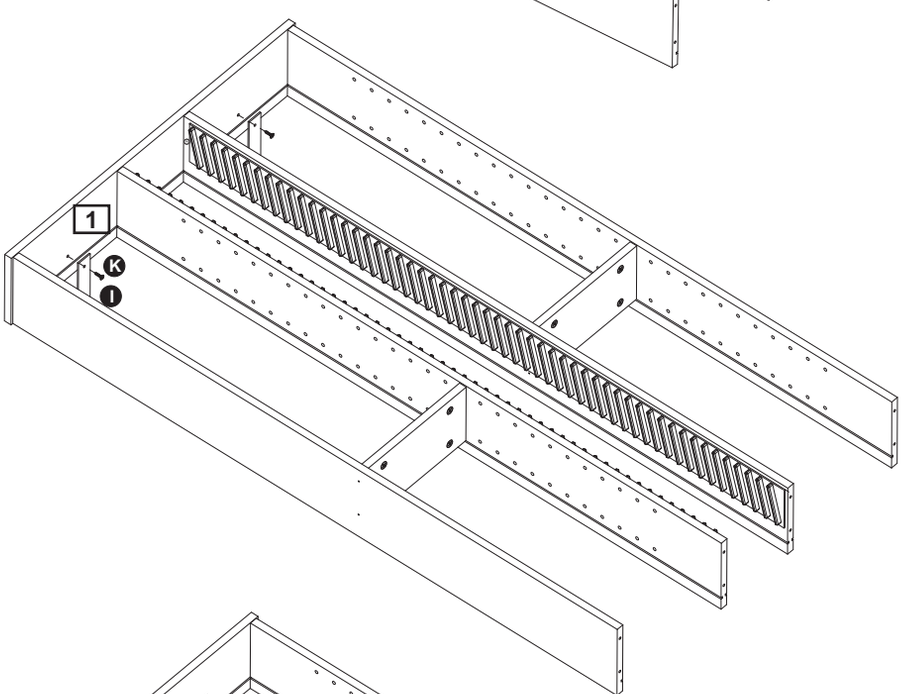


Step 5

Fitting Back

Slide the Back boards [9] & [10] into the grooves of the side & center panels.

Ensure that the cut-out in the top of part [9] for the wall fixing strap is adjoining theTop [1] in place.

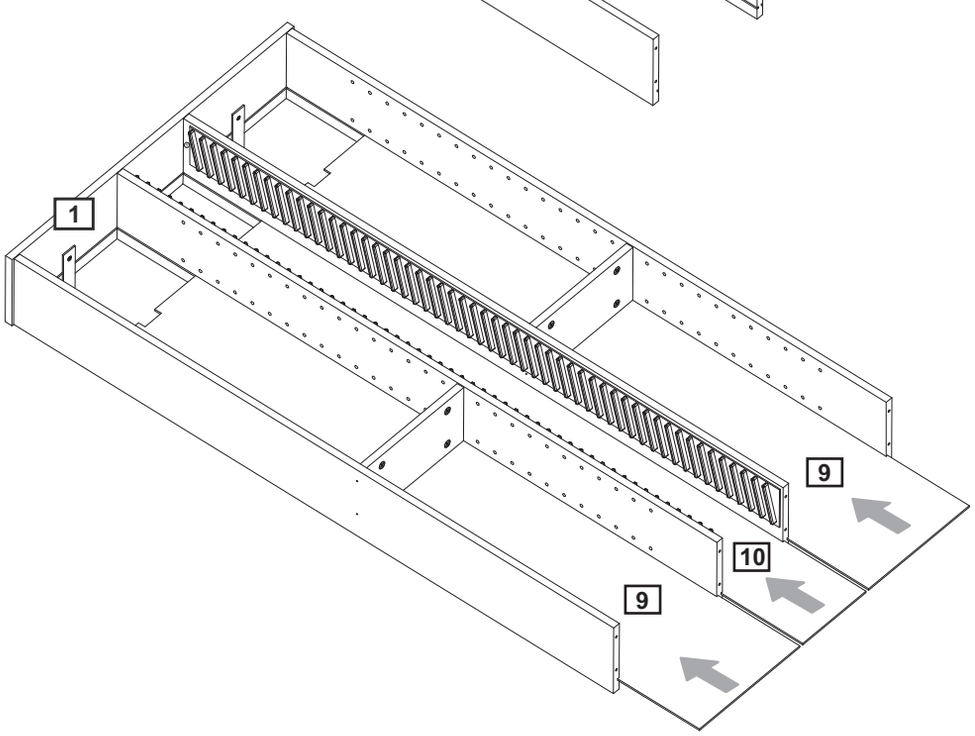


Assembly Instructions

Step 6


Fitting Base

Attach the Base 2 using Screw A.
Before tightening ensure the back boards locate correctly in the groove cut of the base.

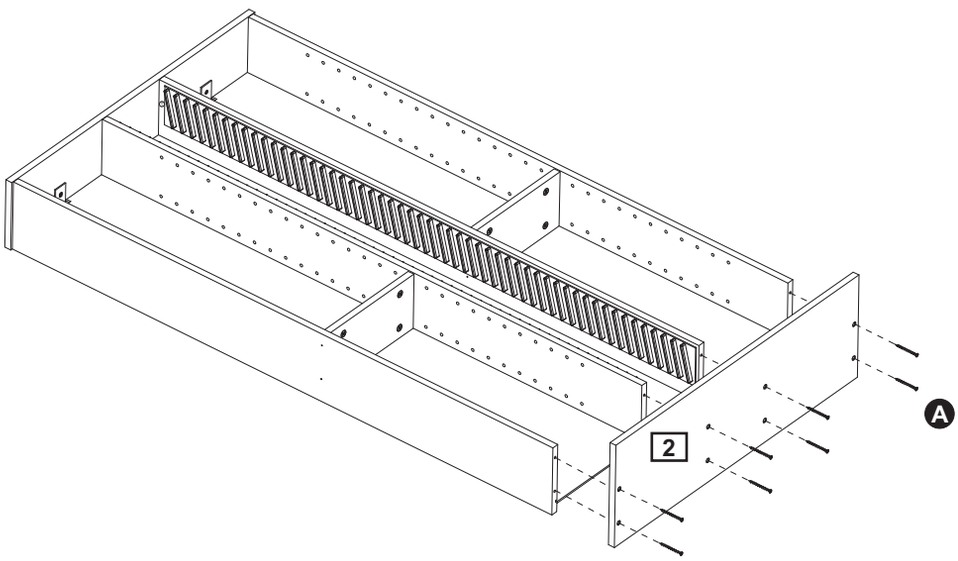

Step 7

Attached the Stability bracket C using Screw B in the approximate positions shown in the diagram to ensure the assembled unit is stable and rigid.

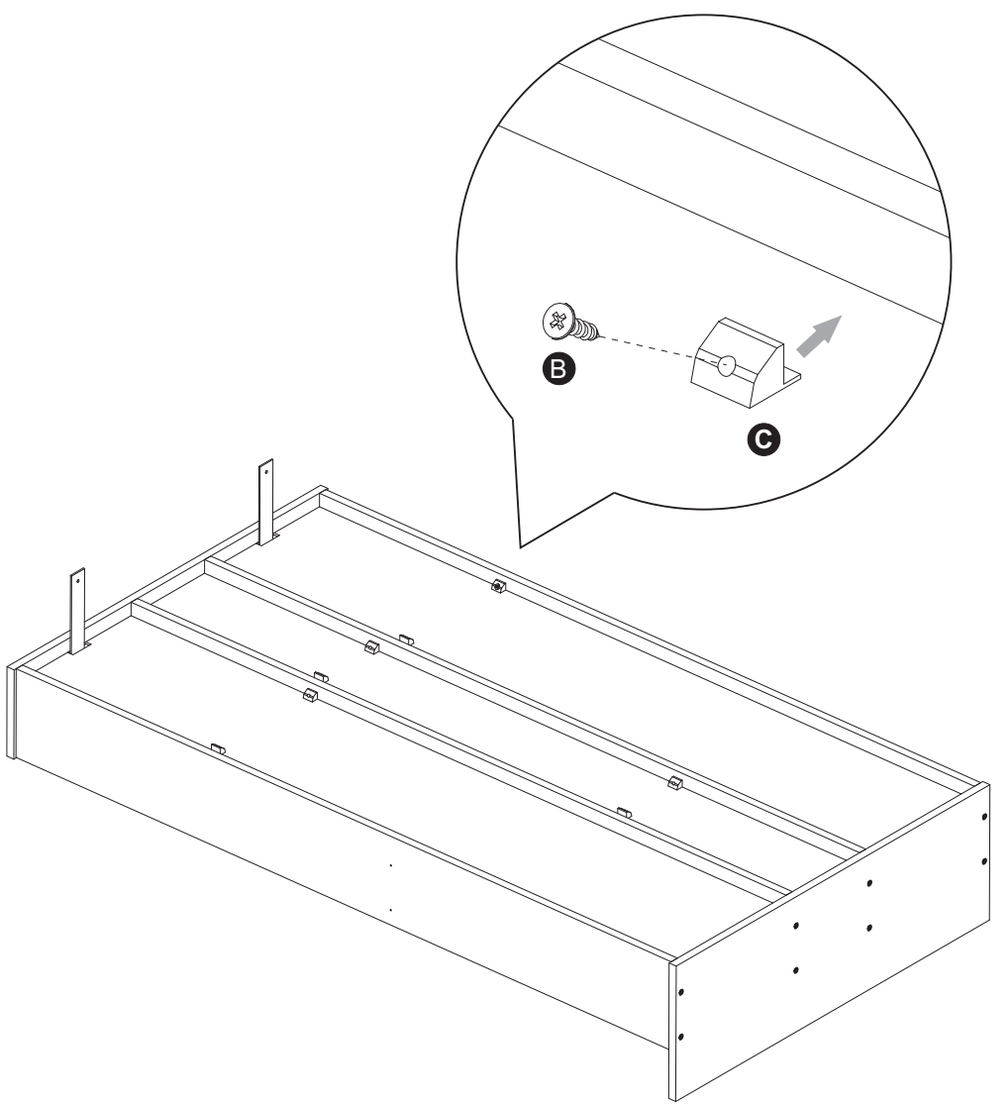


Assembly Instructions

Step 8

Fitting Shelf support


Insert Shelf support (D) at the appropriate level for the media you wish to store.

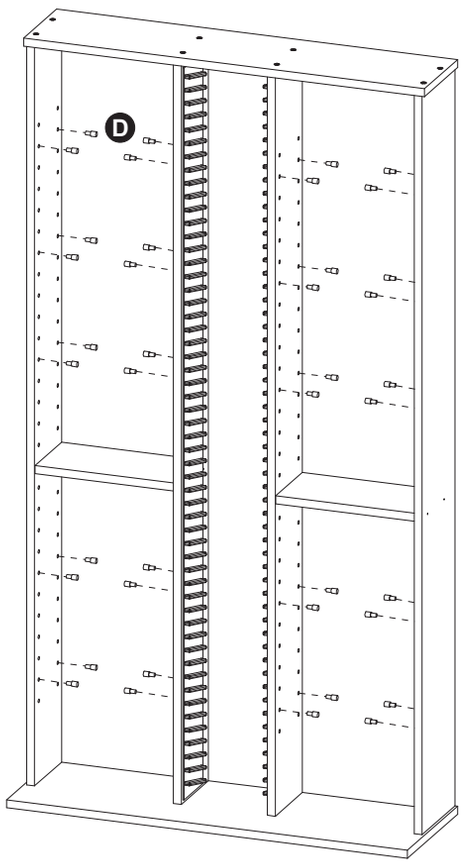

Step 9

Fitting Shelf

Carefully insert the Shelf [7] onto the unit.

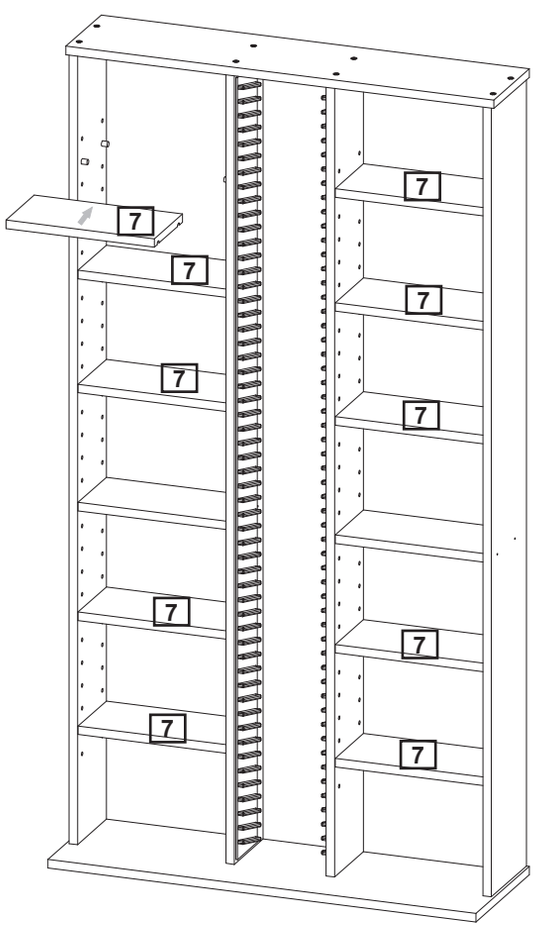

Assembly Instructions

Step 10

Fixing to wall

NOTE: It would be useful to ask someone to help you at this stage.


It is strongly recommended that the unit is attached to the wall using Wall strap ❶.

Drill a hole in the wall at an appropriate position and insert Wall plug ❽.

Warning:
Before drilling, check wall for hidden pipes and cables.

To secure the unit, fix Wall strap ❶ to the wall using Screw ❿.

Assembly is complete.

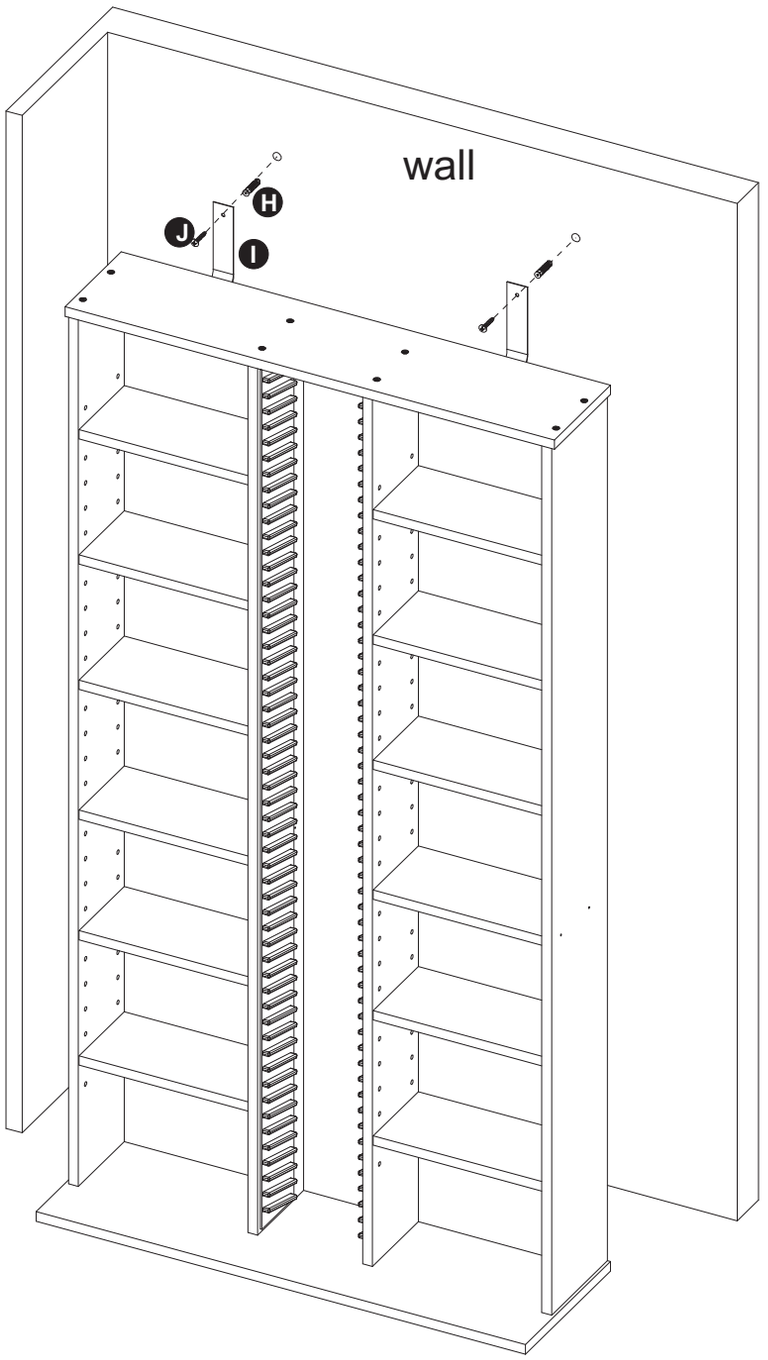

Note: Wall plug supplied are for solid walls only.

The correct type of fxing must be used for your wall, seek professional advice if in doubt.

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fxings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. **Consult a qualifed tradesperson if you are unsure**.

Hints:

1: ***General rule***: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well ftted and are a tight ft in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "**General Purpose**" **wall plug**

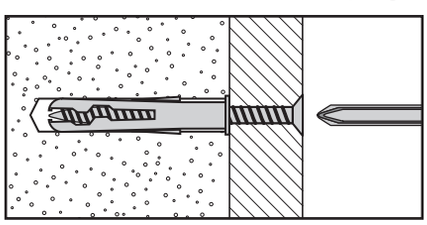


Generally aerated blocks should not be used to support heavy loads, use a specialist ftting in this case. For light loads, general purpose wall plugs can be used.

No.2 "**Plasterboard**" **wall plug**

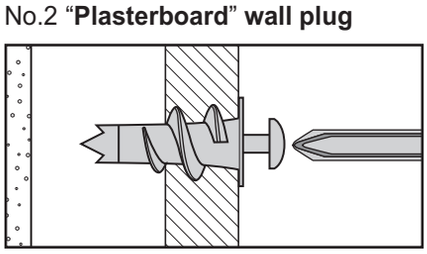


For use when attaching light loads on to plasterboard partitions.

No.3 "**Cavity Fixing**" **wall plug**

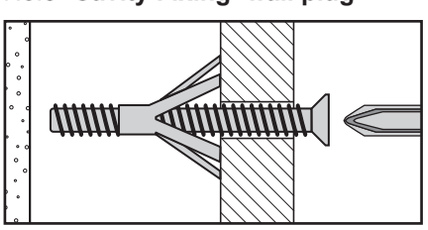


For use with plasterboard partitions or hollow wooden doors.

No.4 "**Cavity Fixing-Heavy Duty**" **wall plug**

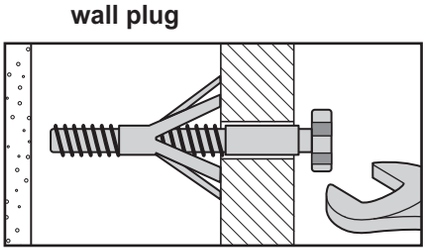


For use when ftting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "**Hammer Fixing**" **wall plug**

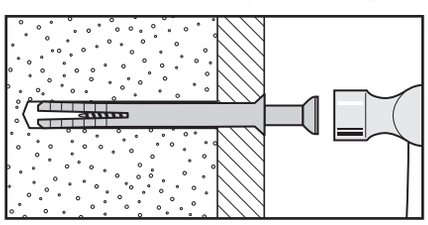

For use with walls stuck with plasterboard. The hammer fxing allows it to be fxed to the wall rather than the plasterboard. Always check the fxing is secure to the retaining wall.

No.6 "**Shield Anchor**" **wall plug Heavy loads**

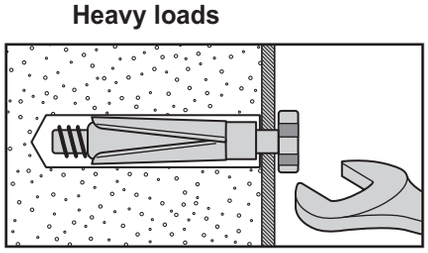

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the ftting and location to ensure your safety in and around the home.

Fitting: From time to time check the ftting to ensure the wall plugs or screws do not become loose.

Revision 2 - '12/09/03