21x29cm

FOLDING TABLE & STOOL - CAMPING ITEM - CAT NO. 927/8242

Important: Please read these instructions carefully and retain for future reference.



PRODUCT INFORMATION:

~ Lightweight folding table intended for camping use only.
~ The maximum load weight for this item is 30 kg.
~ Regularly check all fastenings or fixings to ensure that they are properly tightened or secured.

Made in China for HRG Plc, 488-499 Avebury Boulevard, Saxon Gate West, Central Milton Keynes, Bucks, MK9 2NW.
Tel: 0845 6403030 www.argos.co.uk

ASSEMBLY INSTRUCTIONS - IMPORTANT READ BEFORE USE

~ Assembly to be carried out by a competent adult only.
~ During assembly children should be kept away from the product due to possible risk of injury.
~ Do not use this item if any components are missing or damaged.
~ Plastic bags can be dangerous. To avoid danger of suffocation please keep plastic bags

(A)



Assembly - Setting up for use

1. Stand the case on its end with the handle at the top (A). Unlock the securing tabs and open.
2. Pull out the individual stool legs (B) and lock the Y-shaped support struts into place. Slide the leg locks up to prevent accidental folding (C).
3. Insert the table-top locking pins into the holes provided (D)- one on each side. The table-top pins are attached to the table by strings.
4. Holding both legs on one side, lift the stool unit (E) out and lock the safety clip into place, until it is fully extended. (F). Repeat on the opposite side. Keep fingers and hands clear of the folding mechanisms.
5. Turn the table into the upright position ensuring that the stool legs are place firmly on the ground - on a flat firm surface.

(B)



Assembly - folding down procedure

1. **Turn the table upside down - taking care not to scratch the surface.**
2. Release the safety clip/slide in Fig (F) - keeping hands and fingers clear of the folding mechanism. Repeat on the opposite side.
3. Fold stool units back into the table top.(E)
4. Unlock the table top pins from both sides.(D)
5. Unlock the leg locks of the Y-shaped support struts at all four positions.(C) Fold back into flat position.
6. Ensure that the locking pins for the table top are not sticking out.
7. Close the table top together and lock the securing tabs in the handle. - keeping fingers and hands free of the folding mechanisms.

(C)



CARE INSTRUCTIONS - IMPORTANT READ BEFORE USE

~ Clean the product with mild soap and water, rinse thoroughly. Dry completely. Do not use bleach, acid or solvents on the item. Store indoors when not in use.


(D)



WARNING - IMPORTANT READ BEFORE USE

~ To be used under adult supervision only.
~ Do not sit or stand on the table or allow children to play on or around the item.
~ Always ensure that the item is fully erected in its intended position before use, and that all parts are locked in place. Always use on a flat firm surface.
~ Care must be taken when opening or closing the item to ensure that you do not trap or pinch your fingers.
~ A separate parasol base should be used with this item, when used in conjunction with a parasol.

(E)

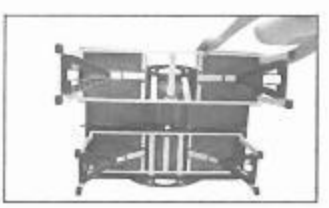

WARNING

KEEP FINGERS AWAY FROM EDGES WHEN FOLDING.
DO NOT ADOPT THE BELOW SEATING POSITIONS AS THIS COULD CAUSE INJURY.



(F)

